

TI-89 Titanium Graphing Calculator

Downloaded from www.Manualslib.com manuals search engine

Important Information

Texas Instruments makes no warranty, either express or implied, including but not limited to any implied warranties of merchantability and fitness for a particular purpose, regarding any programs or book materials and makes such materials available solely on an "as-is" basis. In no event shall Texas Instruments be liable to anyone for special, collateral, incidental, or consequential damages in connection with or arising out of the purchase or use of these materials, and the sole and exclusive liability of Texas Instruments, regardless of the form of action, shall not exceed the purchase price of this product. Moreover, Texas Instruments shall not be liable for any claim of any kind whatsoever against the use of these materials by any other party.

USA FCC Information Concerning Radio Frequency Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you can try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Downloaded from www.Manualslib.com manuals search engine

- Consult the dealer or an experienced radio/television technician for help.

Caution: Any changes or modifications to this equipment not expressly approved by Texas Instruments may void your authority to operate the equipment.

© 2005 Texas Instruments Incorporated
Windows and Macintosh are trademarks of their respective owners.

Downloaded from www.Manualslib.com manuals search engine


Getting Started

Initial start-up

Installing the AAA Batteries

The TI-89 Titanium uses four AAA alkaline batteries and a backup silver oxide battery (SR44SW or 303). The backup battery is already installed, and the AAA batteries are provided with the product.

1. Remove the battery cover from the back of the calculator.
2. Unwrap the four AAA batteries provided with your product and insert them in the battery compartment. Arrange the batteries according to the polarity (+ and –) diagram in the battery compartment.

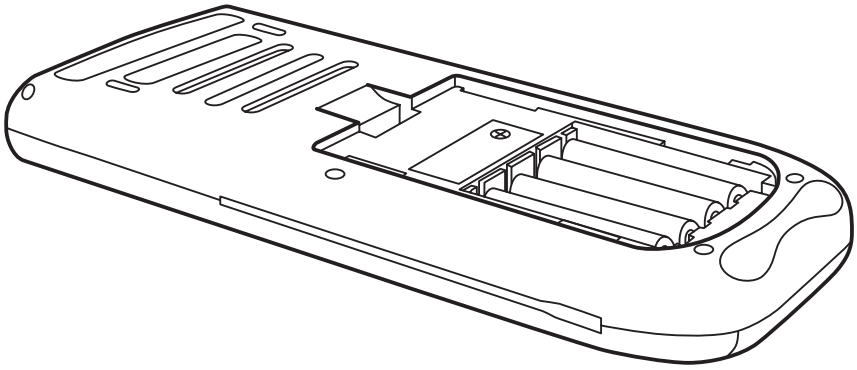

3. Replace the battery cover on the calculator. The cover should snap into place.

Downloaded from www.Manualslib.com manuals search engine

Turning on your TI-89 Titanium for the first time

After installing the batteries included with the calculator, press ON. The Apps desktop appears.


Note: If your calculator initializes the preinstalled Apps, a progress bar will appear with the message "`Installation in progress . . . Do not interrupt!`" instead of the Apps desktop. To avoid losing Apps, do not remove the batteries during initialization. (You can re-install Apps from either the Product CD-ROM or education.ti.com.)

Progress bar



Adjusting the contrast

- To lighten the display, press and hold ♦ and tap −.
- To darken the display, press and hold ♦ and tap +.

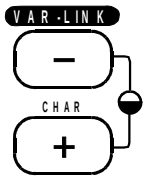


The Apps desktop

The Apps desktop is the starting point for operating your TI-89 Titanium. Your installed Apps appear on the Apps desktop as icons organized in categories for easy access. From the Apps desktop, you can:

- Open Apps.

Downloaded from www.Manualslib.com manuals search engine

- Select and edit categories of Apps.
- View all of the Apps installed on your calculator.
- View the full name of the highlighted App.
- View and edit the time and date.
- Check status line information.
- View split-screen mode information.

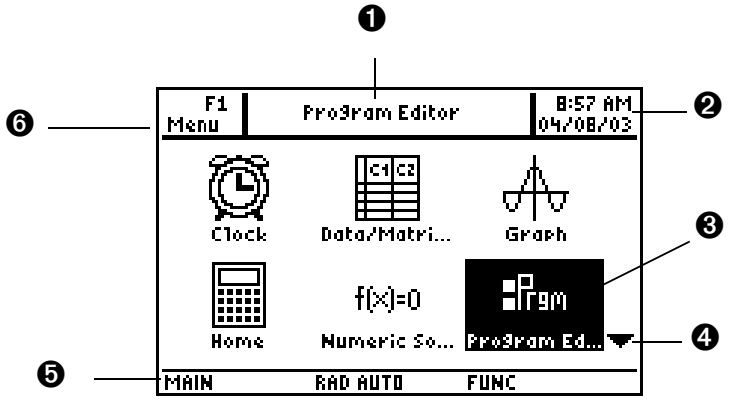

TI-89 Titanium Apps desktop

❶ View full name of highlighted App.

❷ View time and date.

❸ Press ENTER to open highlighted App.

❹ Scroll down to view additional Apps.

❺ Check status line information.

Downloaded from www.Manualslib.com manuals search engine

❻ Edit categories.

To return to the Apps desktop at any time, press [APPS]. The last category selected appears with the last open App highlighted.

Turning off the calculator

Press [2nd] [OFF]. The next time you turn on the calculator, the Apps desktop appears with the same settings and memory contents retained. (If you turned off the Apps desktop, the calculator Home screen appears.)

You can use either of the following keys to turn off the TI-89 Titanium.

Press:	Description
[2nd] [OFF] (press [2nd] and then press [OFF])	Settings and memory contents are retained by the Constant Memory™ feature. • You cannot, however, use [2nd] [OFF] if an error message is displayed. • When you turn the TI-89 Titanium on again, it displays either the Home screen or the Apps desktop (regardless of the last application you used).
[♦] [OFF] (press [♦] and then press [OFF])	Similar to [2nd] [OFF] except: • You can use [♦] [OFF] if an error message is displayed. • When you turn the TI-89 Titanium on again, it will be exactly as you left it.

Downloaded from www.Manualslib.com manuals search engine

Note: [OFF] is the second function of the [ON] key.


The calculator's Automatic Power Down™ (APD™) feature prolongs battery life by turning the calculator off automatically following several minutes of inactivity. When you turn on the calculator after APD:

- The display, cursor, and any error conditions are exactly the same as before APD.
- All settings and memory contents are retained.

Note: APD does not occur if a calculation or program is in progress, unless the program is paused. If a program is running but waiting for a key press, APD will occur after several minutes of inactivity.

Downloaded from www.Manualslib.com manuals search engine

TI-89 Titanium keys

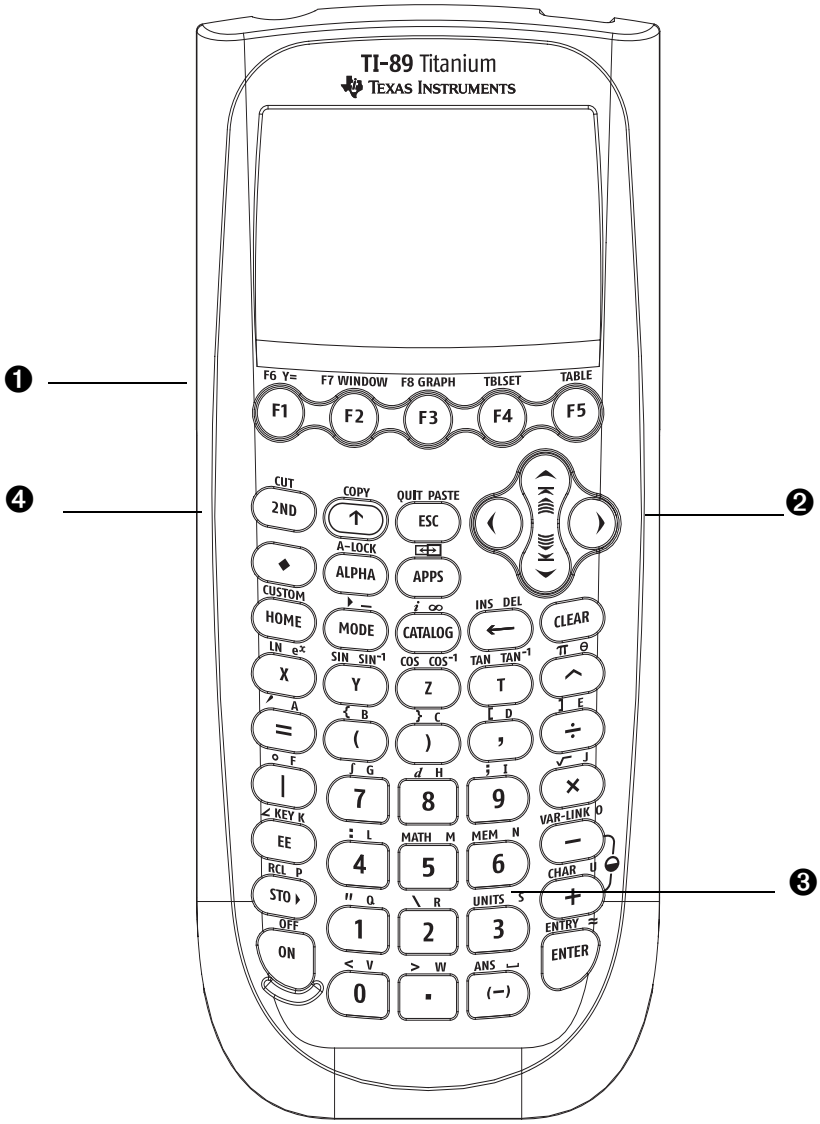

Downloaded from www.Manualslib.com manuals search engine

TI-89 Titanium keys

❶ Function keys (F1– F8) open toolbar menus, access Apps, and edit categories of Apps.

❷ Cursor keys (◀, ▶, ▲, ▼) move the cursor.

❸ Numeric keypad performs math and scientific functions.

❹ Modifier keys (2nd, ♦, ⬆) add features by increasing the number of key commands.

Entering special characters


Use the CHAR (Character) menu and key commands to enter special characters. The CHAR menu lets you access Greek, math, international, and other special characters. An on-screen keyboard map shows the locations of shortcuts used to enter other commonly used characters.

To select characters from the CHAR menu:

1. Press 2nd [CHAR]. The CHAR menu appears.
2. Use the cursor keys to select a category. A submenu lists the characters in that category.
3. Use the cursor keys to select a character, and press ENTER.

Downloaded from www.Manualslib.com manuals search engine

Example: Enter the right arrow symbol (→) in the Text Editor.


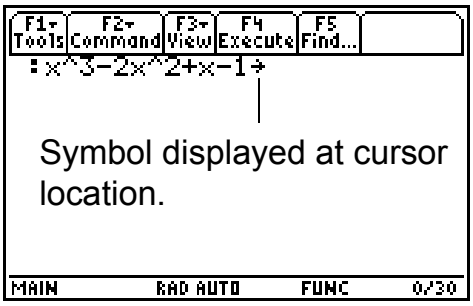
Press	Result
2nd [CHAR]	
4	 Scroll down for more characters.
9 – or – Press ⊙ repeatedly to select **9:**→ and press [ENTER]	

To open the keyboard map, press ◆ [KEY]. The keyboard map appears.

Downloaded from www.Manualslib.com manuals search engine

To type most characters, press ♦ and the corresponding key. Press ESC to close the map.

Example: Use the keyboard map to find the “not equal to” symbol (≠) shortcut and enter the symbol in the Program Editor.

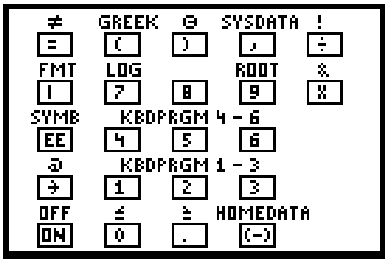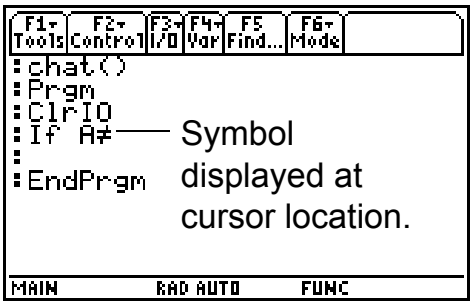Press	Result
♦ [KEY]	
♦ =	

Downloaded from www.Manualslib.com manuals search engine


Modifier keys

Modifier keys add features by increasing the number of keyboard operations at your fingertips. To access a modifier function, press a modifier key and then press the key for the corresponding operation.

Keys	Description
2nd (Second)	Accesses Apps, menu options, and other operations. Second functions are printed above their corresponding keys in the same color as the 2nd key.
♦ (Diamond)	Accesses Apps, menu options, and other operations. Diamond functions are printed above their corresponding keys in the same color as the ♦ key.
↑ (Shift)	Types an uppercase character for the next letter key you press. Also used with ◀ and ▶ to highlight characters when editing.
alpha (Alpha)	Lets you type alphabetic characters without a QWERTY keypad. Alpha characters are printed above their corresponding keys in the same color as the alpha key.

Downloaded from www.Manualslib.com manuals search engine

Example: Access the VAR-LINK [All] screen, where you can manage variables and Apps.

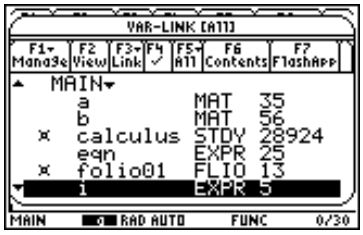Press	Result
2nd [VAR-LINK]	

Function keys

Use the function keys to perform the following operations:

- On the Apps desktop, open Apps and select or edit Apps categories.
- On the calculator Home screen, open toolbar menus to select math-related operations.
- Within Apps, open toolbar menus to select App options.

Numeric keypad

The numeric keypad lets you enter positive and negative numbers.

To enter a negative number, press (-) before typing the number.



Note: Don't confuse the negation key ((-)) with the subtraction key (−).

Downloaded from www.Manualslib.com manuals search engine

To enter a number in scientific notation:

1. Type the numbers that precede the exponent. (This value can be an expression.)
2. Press [EE]. The exponent symbol (E) follows the numbers you entered.
3. Type the exponent as an integer with up to three digits. (As the following example shows, you can use a negative exponent.)

Example: On the calculator Home screen, enter 0.00685 using scientific notation.

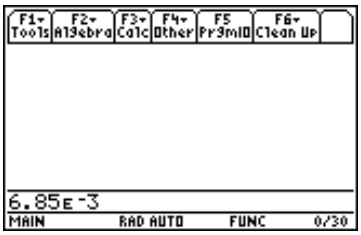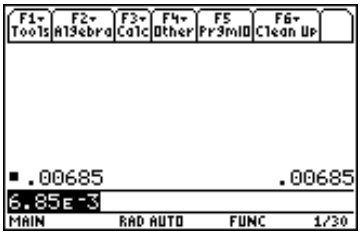Press	Result
6 [.] 8 5 [EE] **[(-)] 3**	
[ENTER]	

Other important keys

Key Command	Description
[◆] [Y=]	Displays the Y= Editor.

Downloaded from www.Manualslib.com manuals search engine

Key Command	Description
◆ [WINDOW]	Displays the Window Editor.
◆ [GRAPH]	Displays the Graph screen.
◆ [TBLSET]	Sets parameters for the Table screen.
◆ [TABLE]	Displays the Table screen.
◆ [CUT] ◆ [COPY] ◆ [PASTE]	These keys let you edit entered information by performing a cut, copy, or paste operation.
APPS	Displays the Apps desktop.
◆ APPS	With the Apps desktop off, displays the FLASH APPLICATIONS menu.
2nd [⇔]	Switches between the last two chosen Apps.
2nd [CUSTOM]	Turns the custom menu on and off.
2nd [▶]	Converts measurement units.
◆ [_]	Designates a measurement unit.
←	Deletes the character to the left of the cursor (backspace).
◆ [DEL]	Deletes the character to the right of the cursor.
2nd [INS]	Switches between insert and overwrite modes.

Downloaded from www.Manualslib.com manuals search engine

Key Command	Description
2nd [MEM]	Displays the MEMORY screen.
CATALOG	Displays a list of commands.
2nd [RCL]	Recalls the contents of a variable.
STO▸	Stores a value to a variable.
2nd [CHAR]	Displays the CHAR menu, which lets you select Greek letters, international accented characters, and other special characters..
2nd [QUIT]	• In full-screen mode, displays the Apps desktop. • In split-screen mode, displays the full-screen view of the active App. • With the Apps desktop off, displays the calculator Home screen.

Mode settings

Modes control how the TI-89 Titanium displays and interprets information. All numbers, including elements of matrices and lists, are displayed according to the current mode settings. When the TI-89 Titanium is turned off, the Constant Memory™ feature retains all of the mode settings you have selected.



To view the TI-89 Titanium mode settings:

Downloaded from www.Manualslib.com manuals search engine


1. Press MODE. Page 1 of the MODE dialog box appears.
2. Press F2 or F3 to display the modes listed on Page 2 or Page 3.

Note: Modes that are grayed out are available only if other required mode settings are selected. For example, the Custom Units mode listed on Page 3 is available only if the Unit System mode is set to CUSTOM.

Viewing mode settings

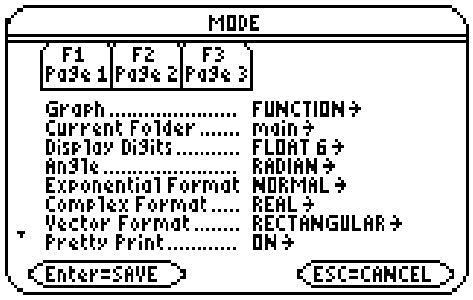
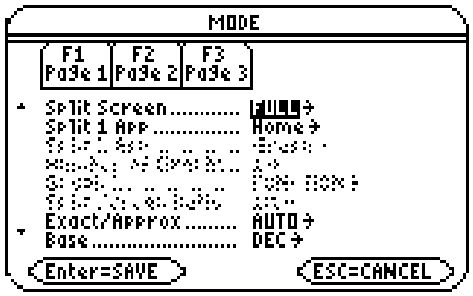
Press	Result
MODE	
F2	

Downloaded from www.Manualslib.com manuals search engine



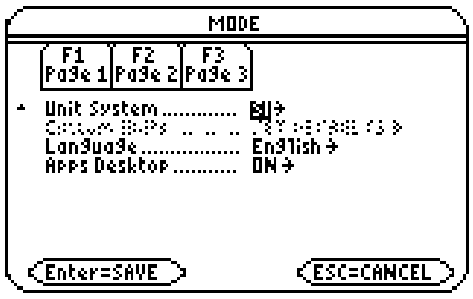
Press	Result
F3	

Changing mode settings


Example: Change the Language mode setting to Spanish (*Español*).

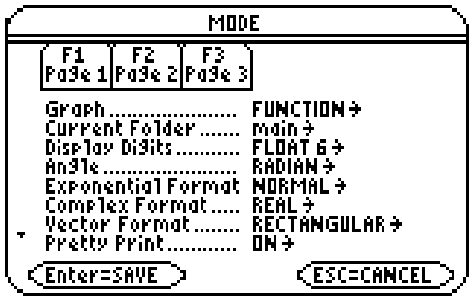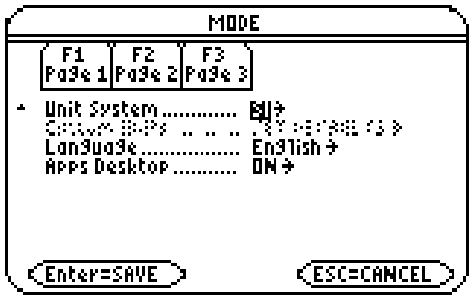Press	Result
MODE	
F3	

Downloaded from www.Manualslib.com manuals search engine

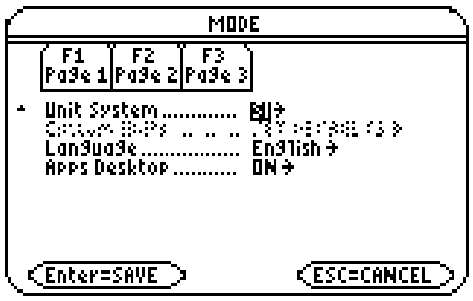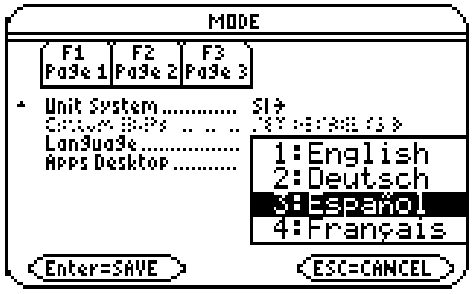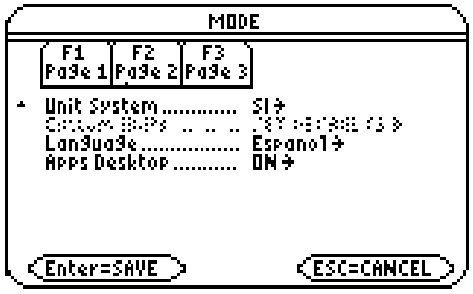Press	Result
Scroll down to the Language field. ▼	
Press ▶ and then press ▼ until **3:Español** is highlighted. **Note:** Your menu list might vary, depending on the languages installed.	
ENTER	

Downloaded from www.Manualslib.com manuals search engine

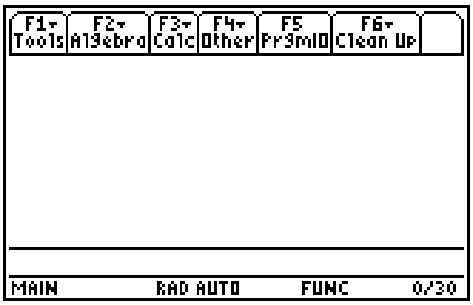Press	Result
ENTER **Note:** The previous open App appears (in this example, the calculator Home screen).	

To return the Language mode setting to English, repeat the steps, selecting **1:English** in the Language field.

Using the Catalog to access commands




Use the Catalog to access a list of TI-89 Titanium commands, including functions, instructions, and user-defined programs. Commands are listed alphabetically. Commands not beginning with a letter are found at the end of the list (&, /, +, –, etc.).

The Catalog Help App includes details about each command.

Options not currently valid are grayed out. For example, the Flash Apps (F3) menu option is grayed out if no Flash applications are installed on your TI-89 Titanium; the User-Defined (F4) menu option is grayed out if you have not created a function or program.

Downloaded from www.Manualslib.com manuals search engine

Note: Typing a letter takes you to the first command in the list starting with the same letter.

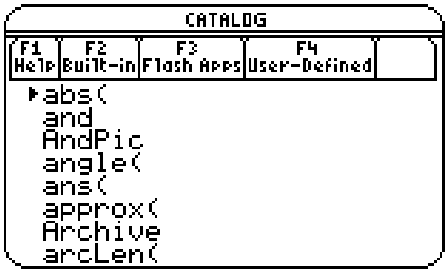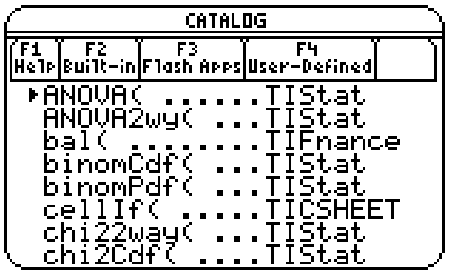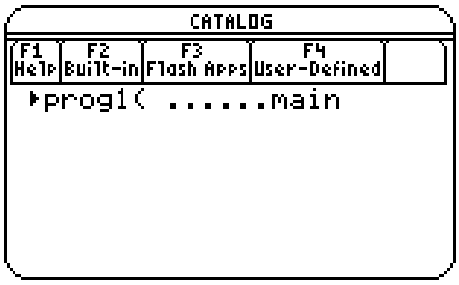Press	Result
CATALOG (displays Built-in commands)	
F3 (displays Flash Apps commands, if any)	
F4 (displays User-Defined commands, if any)	



Select commands from the Catalog and insert them onto the calculator Home screen entry line or paste them to other Apps, such as the Y= Editor, Text Editor, or CellSheet™ Apps.

Downloaded from www.Manualslib.com manuals search engine

Example: Insert the **comDenom(** command on the calculator Home screen entry line.

Note: Before selecting a command, position the cursor where you want the command to appear.


Pressing 2nd ▼ advances the Catalog list one page at a time.

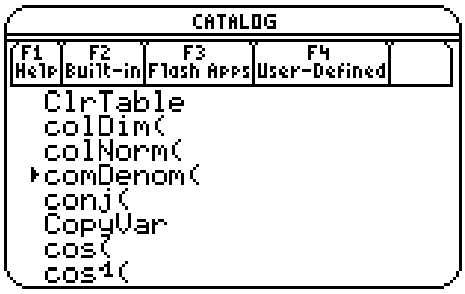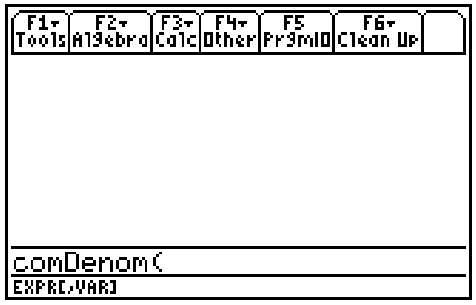Press	Result
CATALOG **C** 2nd ▼ Then press ▼ until the pointer is at the **comDenom(** function.	
ENTER	 F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up comDenom(EXPR(,VAR)

The status line displays any required and optional parameters for the selected command. Optional parameters appear in square brackets.

Note: Pressing F1 will also display the parameters for the selected command.

Downloaded from www.Manualslib.com manuals search engine

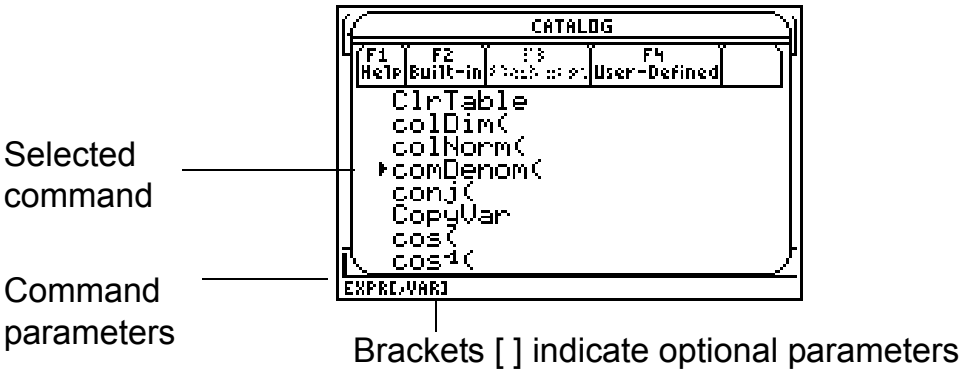

To exit the Catalog without selecting a command, press ESC.


Calculator Home screen

The calculator Home screen is the starting point for math operations, including executing instructions, evaluating expressions, and viewing results.

To display the calculator Home screen, press: HOME

You can also display the calculator Home screen from the Apps desktop by highlighting the Home icon and pressing ENTER.

Downloaded from www.Manualslib.com manuals search engine

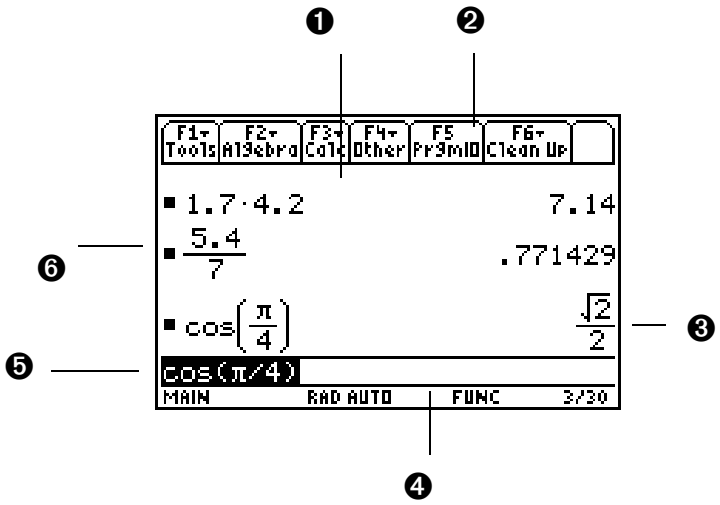

❶ History area lists the entry/answer pairs entered.

❷ Tabs display menus for selecting lists of operations. Press F1, F2, and so on to display menus.

❸ Result of last entry is displayed here. (Note that results are not displayed on the entry line.)

❹ Status line shows the current state of the calculator.

❺ Entry line displays your current entry.

❻ Your previous entry is displayed here.

To return to the Apps desktop from the calculator Home screen, press APPS.

Downloaded from www.Manualslib.com manuals search engine

About the history area

The history area displays up to eight entry/answer pairs, depending on the complexity and height of the expressions. When the display is filled, information scrolls off the top of the screen. Use the history area to:

- Review previous entries and answers. Use the cursor keys to view entries and answers that have scrolled off the screen.
- Recall or auto-paste a previous entry or answer onto the entry line to reuse or edit. (For more information, see the electronic *Operating the Calculator* chapter.)

The cursor, which normally rests on the entry line, can be moved into the history area. The following table shows you how to move the cursor around in the history area.


To	Do this
View entries/answers scrolled off the screen	From the entry line, press ▲ to highlight the last answer. Continue using ▲ to move the cursor from answer to entry through the history area.
Go to the oldest or newest entry/answer pair	If the cursor is in the history area, press ♦ ▲ or ♦ ▼.
View an entry or answer too long for one line ([DEL] is displayed at the end of the line)	Move the cursor to the entry or answer. Use ◀ or ▶ to scroll left or right and 2nd ◀ or 2nd ▶ to go to the beginning or end.
Return cursor to the entry line	Press ESC, or press ▼ until the cursor is back on the entry line.

Downloaded from www.Manualslib.com manuals search engine


Interpreting history information on the status line

Use the history indicator on the status line for information about the entry/answer pairs. For example:

If the cursor is on the entry line:



If the cursor is in the history area:

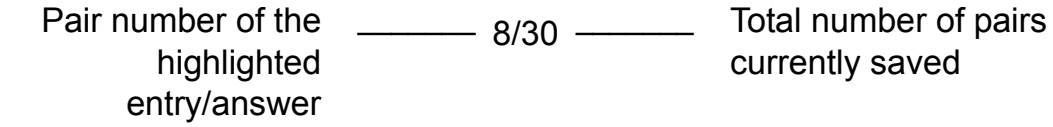

Modifying the history area

To change the number of pairs that can be saved:

1. From the calculator Home screen, press F1 and select **9:Format**.
2. Press ▶ and use ▲ or ▼ to highlight the new number.
3. Press ENTER ENTER.

To clear the history area and delete all saved pairs:

- From the calculator Home screen, press F1 and select **8:Clear Home**.

  – or –

Downloaded from www.Manualslib.com manuals search engine

- Enter **ClrHome** on the calculator Home screen entry line.

To delete an entry/answer pair, move the cursor to either the entry or answer, and press ← or CLEAR.

Working with Apps

The TI-89 Titanium organizes Apps by category on the Apps desktop. To select a category, press a function key (F2 through 2nd F8). The App icons for the selected category appear on the Apps desktop.

Note: If the name under an Apps desktop icon is truncated, use the cursor keys to highlight the icon. Now view the full name at the top of the Apps desktop.

Opening Apps

Use the cursor keys or press the first letter of the App name to highlight the Apps icon on the Apps desktop and press ENTER. The App either opens directly or displays a dialog box. The most common dialog box lists these options for the App:

Note: The TI-89 Titanium uses the general term *variable* to refer to the App data files that you create.


Option	Description
Current	Returns the screen displayed when you last viewed the App. If no current App variable exists, the New dialog box appears.
Open	Lets you open an existing file.

Downloaded from www.Manualslib.com manuals search engine




Option	Description
New	Creates a new file with the name typed in the field.

Select an option, enter any required information, and press ENTER. The App appears.

Example: Create a new program using the Program Editor.

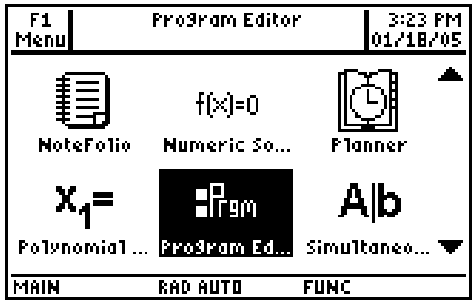Press	Result
Use cursor keys to highlight Prgm Program Ed...	
ENTER	
3	

Downloaded from www.Manualslib.com manuals search engine

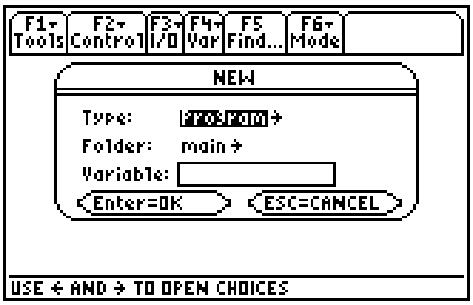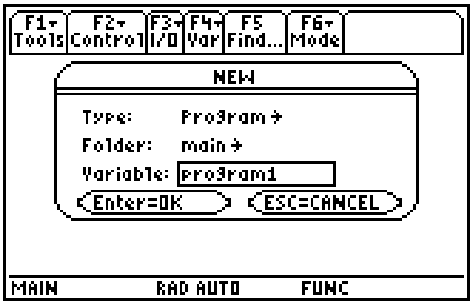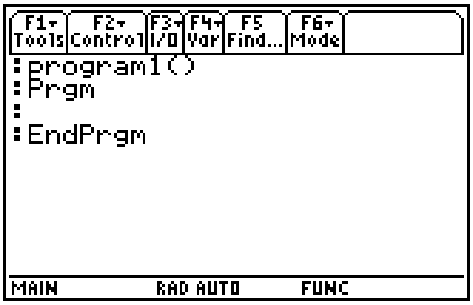Press	Result
ENTER	
▼ ▼ **p r o g r a m 1**	
ENTER ENTER	

The newly created program variable, *program1*, is saved to the Main folder.

Downloaded from www.Manualslib.com manuals search engine

Returning to the Apps desktop from within an App

Press [APPS]. The icons for the last Apps category selected appear on the Apps desktop with the icon for the last App opened highlighted.

You can also return to the Apps desktop by pressing [2nd] [QUIT] in full-screen mode. In split-screen mode, press [2nd] [QUIT] twice.

To return to the last open App from the Apps desktop, press [2nd] [⇔].

Selecting an Apps category

On the TI-89 Titanium, the Apps category names appear only in the **F1** Menu. To select an Apps category, press [F1] **2:Select Category** and use the cursor keys to highlight an Apps category, and then press [ENTER] to select the highlighted category. You can also use the function key shortcuts to select a category from the keypad (use the [2nd] key if necessary). The App icons for the selected category appear on the Apps desktop.


The App icons for the selected category appear on the Apps desktop.

Key	Description
[F2] All	Icons for all installed Apps displayed. Not customizable.
[F3] English	Customizable category. English is the default.
[F4] SocialSt	Customizable category. SocialSt (social studies) is the default.
[F5] Math	Customizable category. Math is the default.

Downloaded from www.Manualslib.com manuals search engine

Key	Description
2nd [F6] Graphing	Customizable category. Graphing is the default.
2nd [F7] Science	Customizable category. Science is the default.
2nd [F8] Organizr	Customizable category. Organizr (organizer) is the default.

Example: Select the All category.

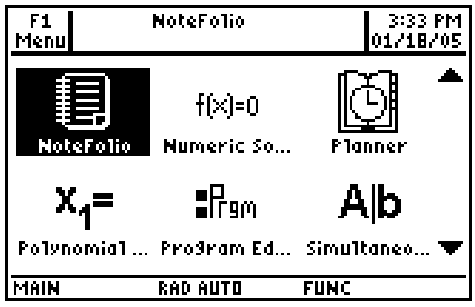Press	Result
F2	

If you select an Apps category containing no Apps, a message appears to confirm that the category is empty and point you to the F1 **1:Edit Categories** menu, where you can add App shortcuts to the category. (See “Customizing the Apps categories” on page 33.)

Press ENTER or ESC to clear the message and return to the Apps desktop.

Downloaded from www.Manualslib.com manuals search engine

Customizing the Apps categories

The TI-89 Titanium organizes your Apps into seven categories, six of which you can customize to fit your individual needs. (The All category contains every installed App and cannot be edited.)




To customize the F3 through 2nd F8 Apps categories:

1. Select F1 **1:Edit Categories**. A submenu displays the six customizable Apps category names. (The All category is not listed.)
2. Highlight an Apps category and press ENTER. The Edit Categories dialog box appears with a list of installed Apps and a text box with the category name highlighted.
3. To change the Apps category name, type the desired name.




   Note: Enter a name of up to eight characters, including letters with or without capitalization, numbers, punctuation, and accented characters.
4. To add or remove an App shortcut from the category, press ⊖ as required to highlight the box next to the App, then press ⊕ to add or remove the check mark (✓).
5. To save the changes and return to the Apps desktop, press ENTER.

Downloaded from www.Manualslib.com manuals search engine



Example: Replace the Social Studies category with the Business category and add the CellSheet™ and Finance App shortcuts.

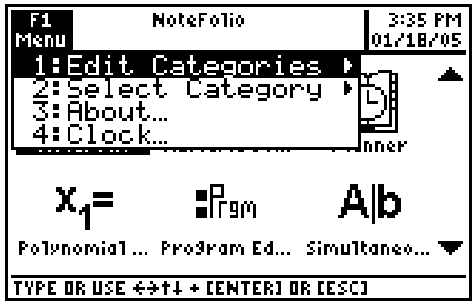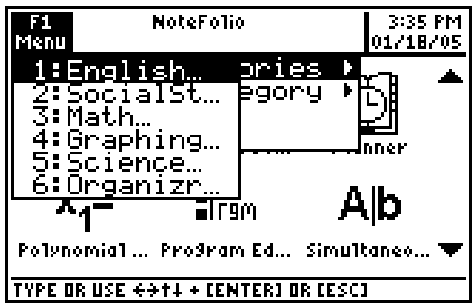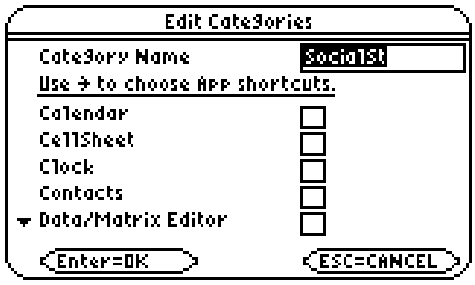Press	Result
F1	
▶	
2 – or – ▼ ENTER	

Downloaded from www.Manualslib.com manuals search engine

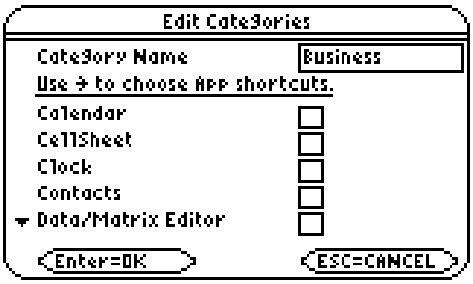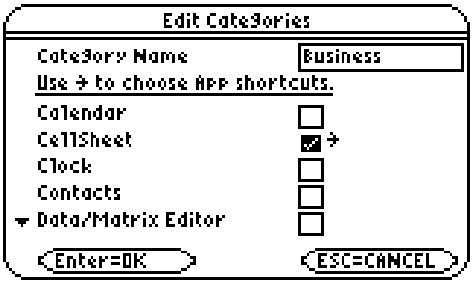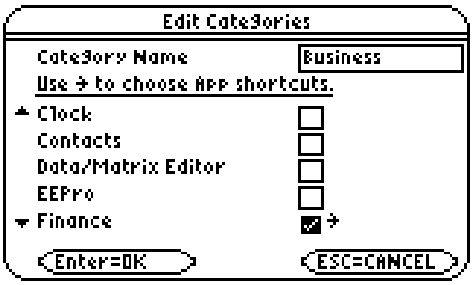Press	Result
2nd [a-lock] ↑ **B u s i n e s s**	
⊖ ⋮ ⊕	
⊖ ⋮ ⊕	

Downloaded from www.Manualslib.com manuals search engine

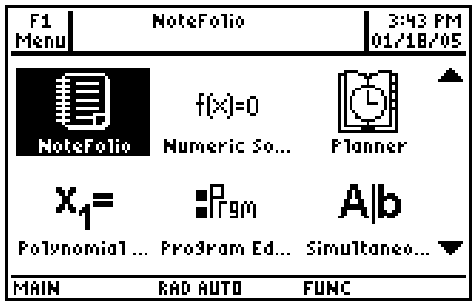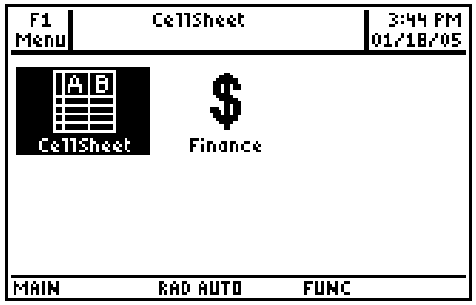Press	Result
ENTER	
F4	


Open Apps and split-screen status

Your TI-89 Titanium lets you split the screen to view two Apps simultaneously. For example, view the Y= Editor and Graph screens simultaneously to see the list of functions and how they are graphed.

Select the Split Screen mode from Page 2 of the MODE screen. The TI-89 Titanium displays the selected Apps in the split-screen view as shown. Split the screen horizontally (top-bottom) or vertically (left-right).

Downloaded from www.Manualslib.com manuals search engine

Top-bottom split screen

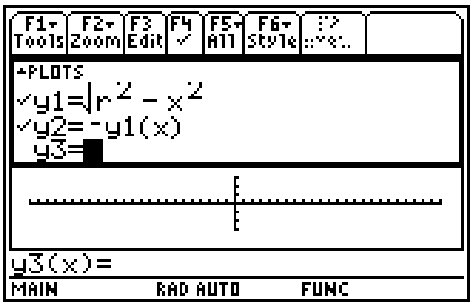


To return to the Apps desktop, press APPS. The split-screen status appears at the top of the Apps desktop with the names of the open Apps and the portions of the screen in which each is displayed. The highlighted numeral indicates the split-screen portion where the next App you open will appear.

Note: The Apps desktop always appears in the full-screen view.

Split-screen status (highlight indicates the portion where the next App selected will open.)

Names of open Apps

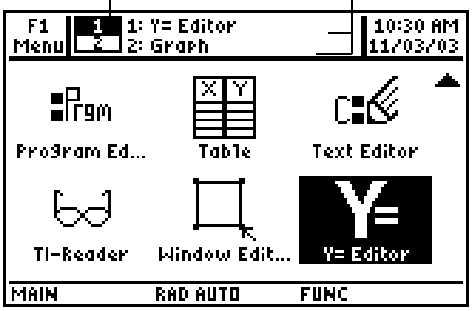


Downloaded from www.Manualslib.com manuals search engine

More information is available about using split screens. (For more information, see the electronic *Split Screens* chapter.)

Checking status information

Look to the status line, located at the bottom of the screen, for information about the current state of your TI-89 Titanium.

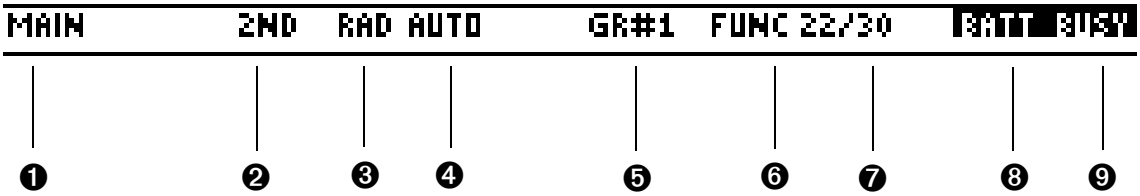

Indicator	Meaning
❶ Current folder	Name of the selected folder (MAIN is the default folder.)
❷ Modifier key	Selected modifier key ([2nd], [◆], [⬆]), if any.
❸ Angle mode	Selected units in which angle values are displayed and interpreted (RAD, DEG, GRAD)
❹ Exact/Approx mode	Mode in which answers are calculated and displayed (AUTO, EXACT, APPROX)
❺ Graph number	Active of two independent graphs in split-screen mode (GR#1, GR#2)
❻ Graph mode	Selected type of graph that can be plotted (FUNC, PAR, POL, SEQ, 3D, DE)


Downloaded from www.Manualslib.com manuals search engine

Indicator	Meaning
❼ Entry/Answer pairs	22/30–Number of entry/answer pairs (default is 30, maximum is 99) in the history area of the calculator Home screen.
❽ Replace batteries	Displayed when batteries are low (BATT). If BATT is highlighted with a black background, change the batteries as soon as possible (BATT).
❾ Busy/Pause, Locked/Archived variable	BUSY–Calculation or graph is in progress PAUSE–You paused a graph or program 🔒–Variable opened in the current editor is locked or archived and cannot be modified




Turning off the Apps desktop

You can turn off the Apps desktop from the MODE dialog box. If you do, open Apps from the APPLICATIONS menu. To open the APPLICATIONS menu, press APPS.

Example: Turn off the Apps desktop.

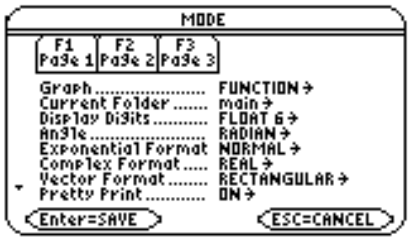Press	Result
MODE	

Downloaded from www.Manualslib.com manuals search engine

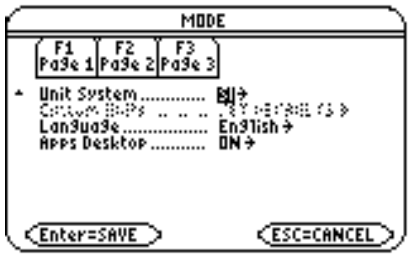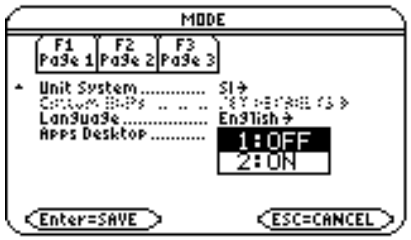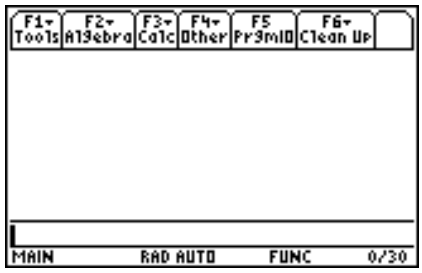Press	Result
F3	
⊖ ⊖ ⊕ ⊖	
ENTER ENTER **Note:** The previous open App appears (in this example, the calculator Home screen).	

To turn on the Apps desktop, repeat the procedure, selecting ON in the Apps Desktop mode field. To return to the Apps desktop from the calculator Home screen, press APPS.


Using the clock

Use the **CLOCK** dialog box to set the time and date, select the clock display format, and turn the clock off and on.

Downloaded from www.Manualslib.com manuals search engine

The clock is turned on by default. If you turn off the clock, all Clock dialog box options except Clock ON/OFF are grayed out.

▼ indicates you can scroll down for more options)

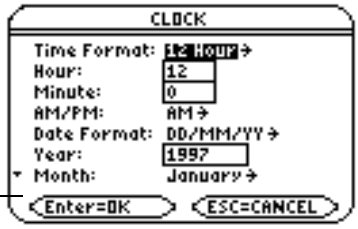

Displaying the CLOCK dialog box

1. Use the cursor keys to highlight the Clock icon on the Apps desktop.
2. Press ENTER. The CLOCK dialog box appears with the Time Format field highlighted.

Note: Because the CLOCK dialog box displays the settings current at the time you open the dialog box, you might need to update the time before exiting.

Setting the time

1. Press ▶ to open the list of time formats.
2. Press ▲ or ▼ to highlight an option, then press ENTER. The selected format appears in the Time Format field.
3. Press ▼ to highlight the Hour field.
4. Type the hour, then press ▼ to highlight the Minute field.
5. Type the minute(s).

Downloaded from www.Manualslib.com manuals search engine

6. If the time format is 24 hours, proceed to step 9.

   — or —

   If the time format is 12 hours, press ⊖ to highlight the AM/PM field.

7. Press ⊕ to open the list of AM/PM options.
8. Press ⊖ or ⊖ to highlight an AM/PM option, then press ENTER. The selected AM/PM option appears.
9. Set the date (for procedures, see *Setting the date*).

   — or —

   To save your settings and exit, press ENTER. The time is updated in the top right corner of the Apps desktop.




Setting the date

1. Press ⊖ or ⊖ as required to highlight the Date Format field.
2. Press ⊕ to open the list of date formats.
3. Press ⊖ or ⊖ to highlight an option, then press ENTER. The selected format appears in the Date Format field.
4. Press ⊖ to highlight the Year field.
5. Type the year, then press ⊖ to highlight the Month field.
6. Press ⊕ to open the list of months.
7. Press ⊖ or ⊖ to highlight an option, then press ENTER. The selected month appears in the Month field.
8. Press ⊖ to highlight the Day field.




Downloaded from www.Manualslib.com manuals search engine

9. Type the day, then press ENTER ENTER to save your settings and exit. The date is updated in the top right corner of the Apps desktop.




Example: Set the time and date to 19/10/02 (October 19, 2002) at 1:30 p.m.

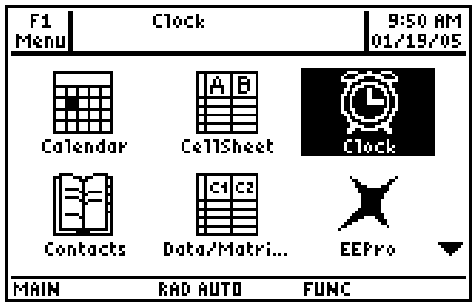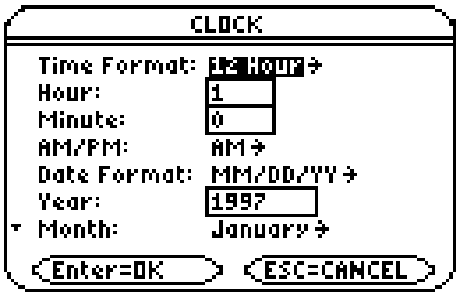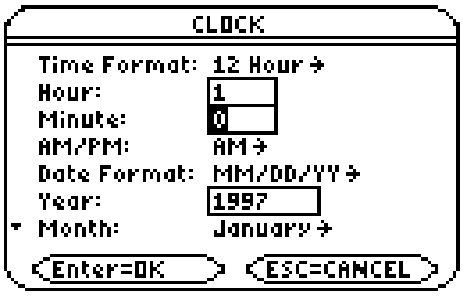Press	Result
Use cursor keys to highlight  	Time and date 
ENTER	
▼ 1 ▼	




Downloaded from www.Manualslib.com manuals search engine

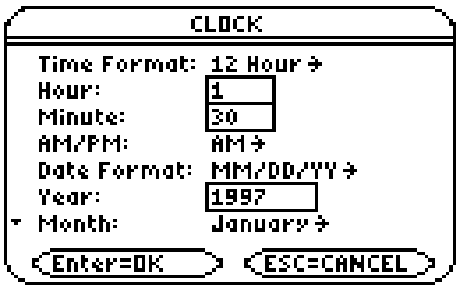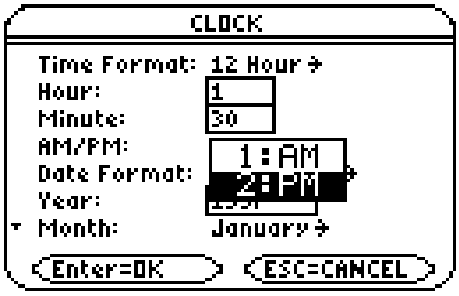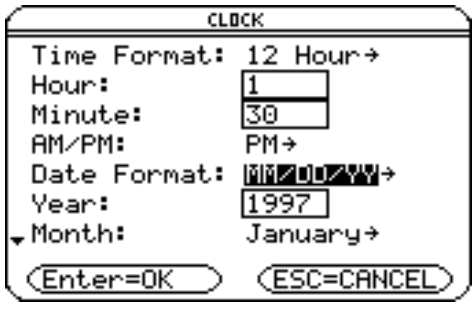Press	Result
3 0 ▼	
▶ ▼	
ENTER ▼	


Downloaded from www.Manualslib.com manuals search engine

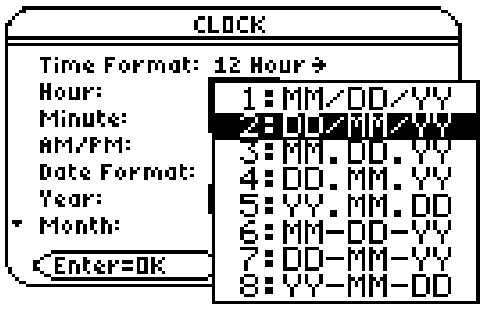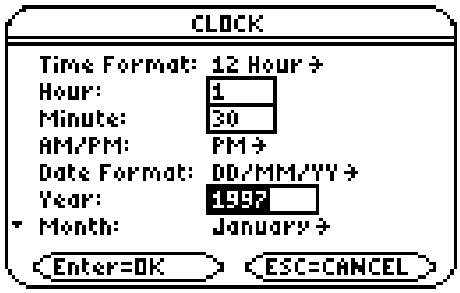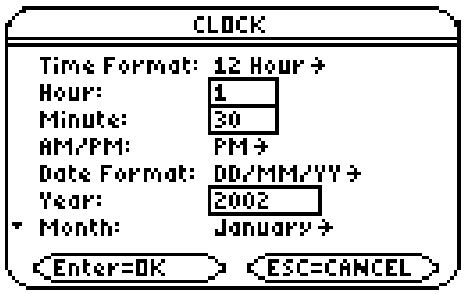Press	Result
▶ ▼	
ENTER ▼	
2 0 0 2	

Downloaded from www.Manualslib.com manuals search engine

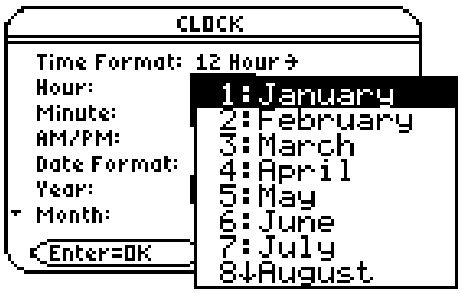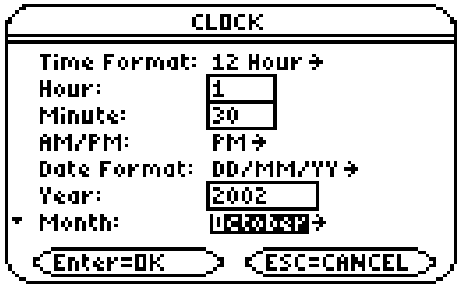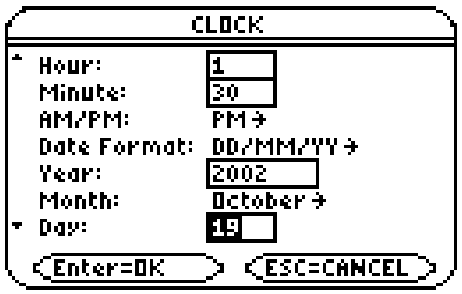Press	Result
⊖ ⊙	
Scroll down to October and press ENTER	
⊖ 1 9	


Downloaded from www.Manualslib.com manuals search engine

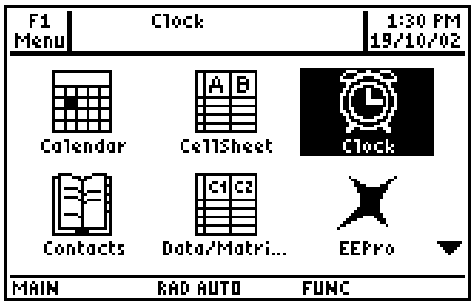Press	Result
ENTER ENTER	Revised time and date 




Turning off the clock

From the Apps desktop, open the CLOCK dialog box and select OFF in the Clock field.

Example: Turn off the clock.

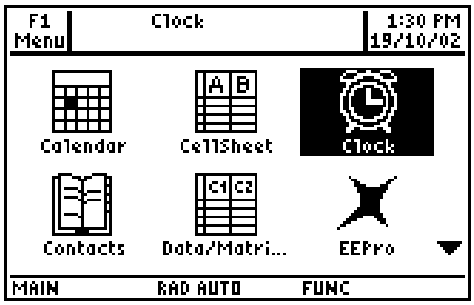Press	Result
Use cursor keys to highlight 	Clock on 

Downloaded from www.Manualslib.com manuals search engine

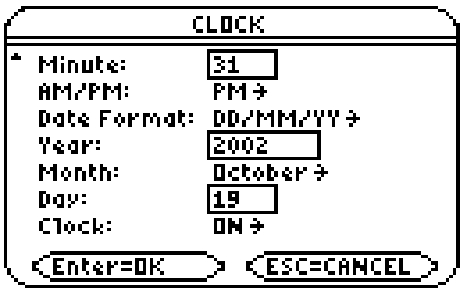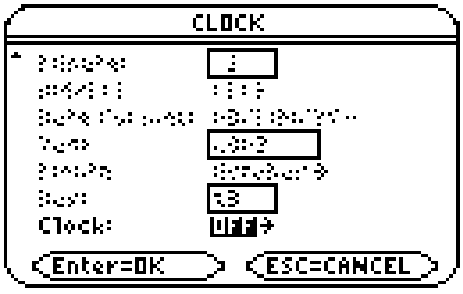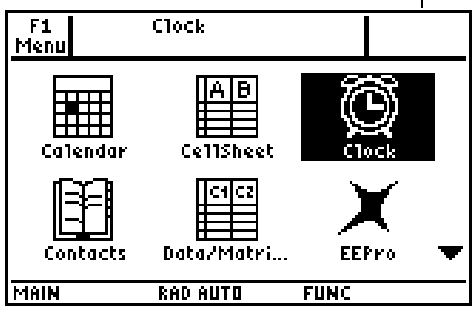Press	Result
ENTER Scroll down to the Clock field.	
▶ ▲ ENTER	
ENTER	Clock off 

To turn on the clock, repeat the procedure, selecting ON in the Clock field. Remember to reset the time and date.

Downloaded from www.Manualslib.com manuals search engine

Using menus

To select most TI-89 Titanium menus, press the function keys corresponding to the toolbars at the top of the calculator Home screen and most App screens. Select other menus using key commands.

Toolbar menus

The starting point for TI-89 Titanium math operations, the calculator Home screen displays toolbar menus that let you choose math-related options.

Toolbar menus also appear at the top of most App screens. These menus list common functions of the active App.

Other menus

Use key commands to select the following menus. These menus contain the same options regardless of the screen displayed or the active App.

Press	To display
2nd [CHAR]	CHAR menu. Lists characters not available on the keyboard; characters are organized by category (Greek, math, punctuation, special, and international).
2nd [MATH]	MATH menu. Lists math operations by category.

Downloaded from www.Manualslib.com manuals search engine

Press	To display
APPS	APPLICATIONS menu. Lists the installed Apps. (Menu is available only when the Apps desktop is turned off; Apps are normally accessed from the Apps desktop.)
◆ APPS	FLASH APPLICATIONS menu. Lists the installed Flash Apps. (Menu is available only when Apps desktop is turned off; Flash Apps are normally accessed from the Apps desktop.)

Selecting menu options

- Press the number or letter to the left of the option you want to select.



  — or —

- Press ⊖ or ⊕ to select the option, and press ENTER.

Note: If the first menu option is selected, press ⊖ to select the last option on the menu. If the last menu option is selected, press ⊕ to select the first option on the menu.

Downloaded from www.Manualslib.com manuals search engine


Example: Select **factor(** from the Algebra menu on the calculator Home screen.

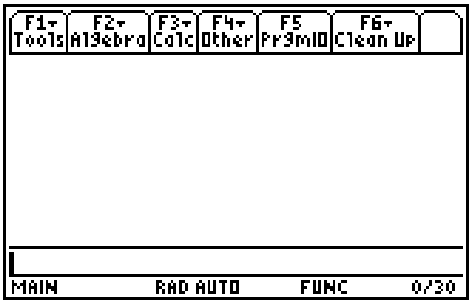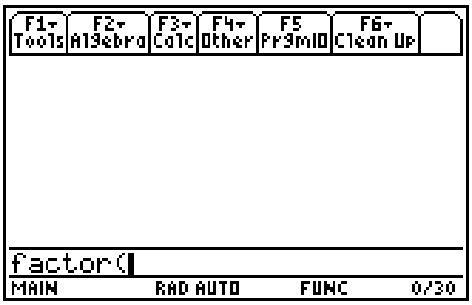Press	Result
Press: HOME – or – From the Apps desktop, use the cursor keys to highlight  Home and press ENTER	
F2	 ▼ indicates Algebra menu will open when you press F2.
2 – or – ▼ ENTER	

Downloaded from www.Manualslib.com manuals search engine


Selecting submenu options

A small arrow symbol (▶) to the right of a menu option indicates that selecting the option will open a submenu.


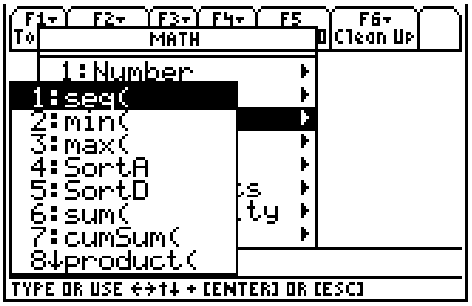


↓ points to additional options.

Example: Select **ord(** from the MATH menu on the calculator Home screen.

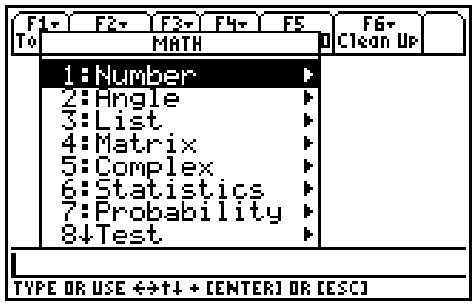
Press	Result
2nd [MATH]	

Downloaded from www.Manualslib.com manuals search engine

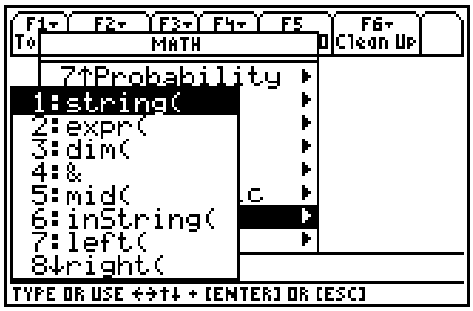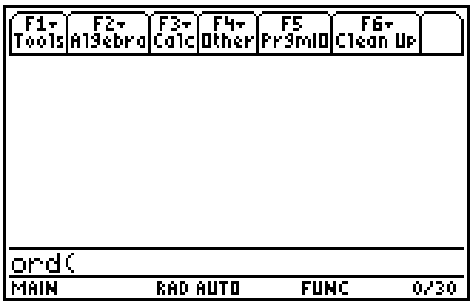Press	Result
D – or – ▲ ▲ ▶	
B – or – ▲ ENTER	





Using dialog boxes

An ellipsis (…) at the end of a menu option indicates that choosing the option will open a dialog box. Select the option and press ENTER.

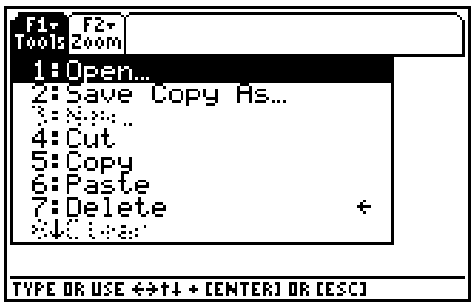

Downloaded from www.Manualslib.com manuals search engine

Example: Open the **SAVE COPY AS** dialog box from the Window Editor.

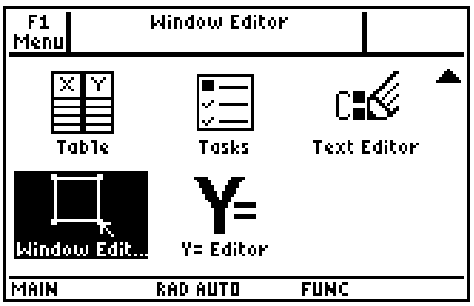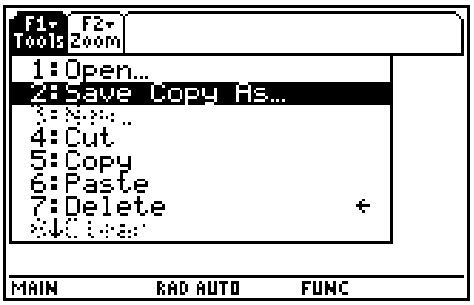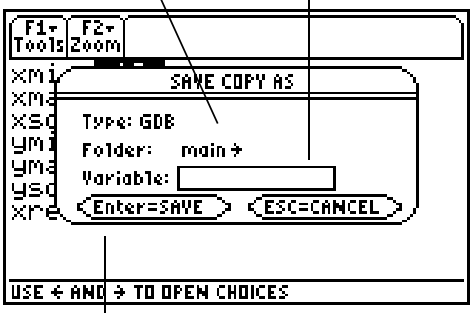Press	Result
APPS Use the cursor keys to highlight  and press ENTER	
F1	
2 – or – ▼ ENTER	Press ▶ to display a list of folders. Type the name of the variable.  Press ENTER twice to save and

Downloaded from www.Manualslib.com manuals search engine

Note: Pressing the ♦ S key shortcut also opens the SAVE COPY AS dialog box in most Apps.

Canceling a menu

To cancel a menu without making a selection, press ESC.

Moving among toolbar menus

To move among the toolbar menus without selecting a menu option:

- Press the function key (F1 through F8) of a toolbar menu.
- Press a function key, then press ▶ or ◀ to move from one toolbar menu to the next. Press ▶ from the last menu to move to the first menu. Press ◀ to move from the first menu to the last menu.

Note: If you press ▶ when a menu option with a submenu is selected, the submenu will appear instead of the next toolbar menu. Press ▶ again to move to the next menu.

More information is available about menus. (See the electronic *Operating the Calculator* chapter.)



Custom menu

The custom menu provides quick access to your most commonly used options. Use the default custom menu or create your own using the Program Editor. You can include any available TI-89 Titanium command or character.

Downloaded from www.Manualslib.com manuals search engine

The custom menu replaces the standard toolbar menu on the calculator Home screen. (For details on creating a custom menu, see the electronic *Programming* chapter.) More information is available about custom menus. (See the electronic *Operating the Calculator* chapter.)



Example: Turn on and turn off the custom menu from the calculator Home screen.

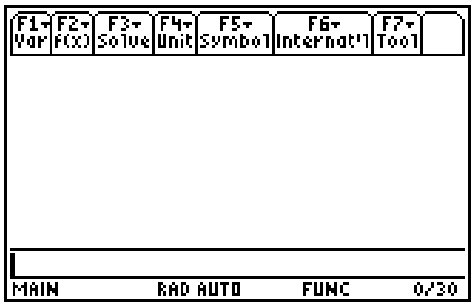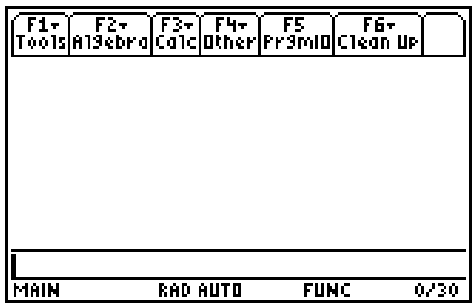Press	Result
2nd [CUSTOM]	Default custom menu 
2nd [CUSTOM]	Normal toolbar menu 


Example: Restore the default custom menu.

Downloaded from www.Manualslib.com manuals search engine

Note: Restoring the default custom menu erases the previous custom menu. If you created the previous custom menu with a program, you can run the program again to reuse the menu.

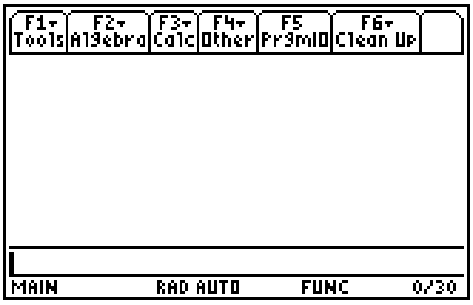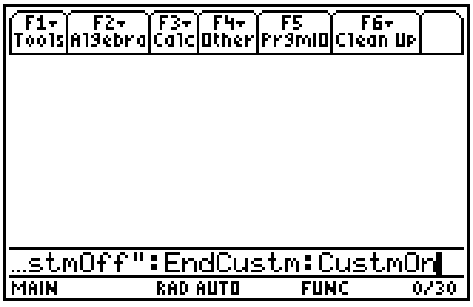Press	Result
2nd [CUSTOM] (to turn off the custom menu and turn on the standard toolbar menu)	
2nd [F6]	
3 – or – ▼ ▼ ENTER	

Downloaded from www.Manualslib.com manuals search engine

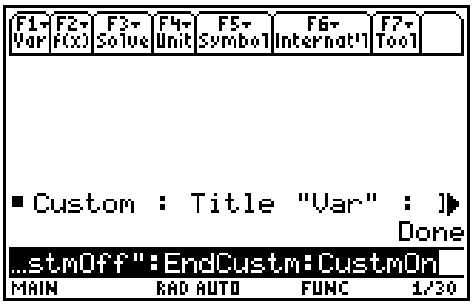Press	Result
ENTER	

Opening Apps with the Apps desktop turned off


If you turn off the Apps desktop, use the APPLICATIONS menu to open Apps. To open the APPLICATIONS menu with the Apps desktop off, press APPS.

Note: If you press APPS with the Apps desktop turned on, the Apps desktop will appear instead of the APPLICATIONS menu.

Example: With the Apps desktop turned off, open the Window Editor from the APPLICATIONS menu.

Press	Result
APPS	

Downloaded from www.Manualslib.com manuals search engine

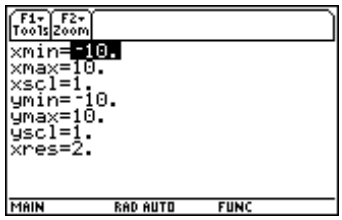Press	Result
3 – or – ▼ ▼ ENTER	

To access Apps not listed on the APPLICATIONS menu, select **1:FlashApps**.

Using split screens

The TI-89 Titanium lets you split the screen to show two Apps at the same time. For example, display both the Y= Editor and Graph screens to compare the list of functions and how they are graphed.




Setting split-screen mode

You can split the screen either top to bottom or left to right from the MODE dialog box. The split-screen setting stays in effect until you change it.



1. Press MODE to display the MODE dialog box.
2. Press F2 to display the Split Screen mode setting.
3. Press ▶ to open the Split Screen mode menu.
4. Press ▼ as required to highlight either TOP-BOTTOM or LEFT-RIGHT.
5. Press ENTER. The Split Screen mode setting displays the option you selected.
6. Press ENTER again to save this change and display the split screen.

Downloaded from www.Manualslib.com manuals search engine

Example: Set split-screen mode to TOP-BOTTOM.

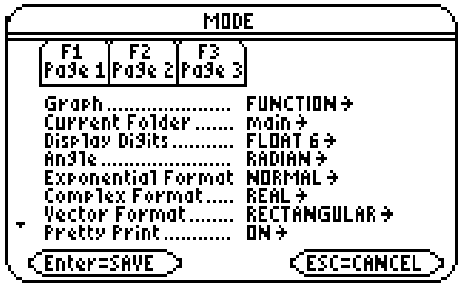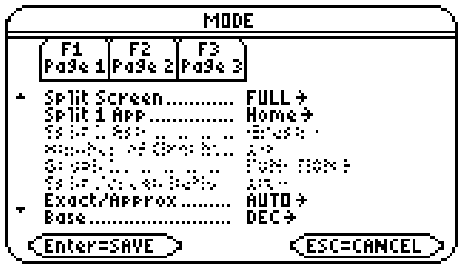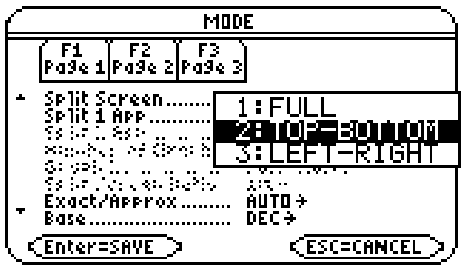Press	Result
MODE	
F2	
▶ ▼	


Downloaded from www.Manualslib.com manuals search engine

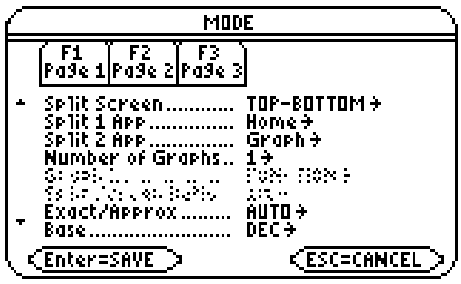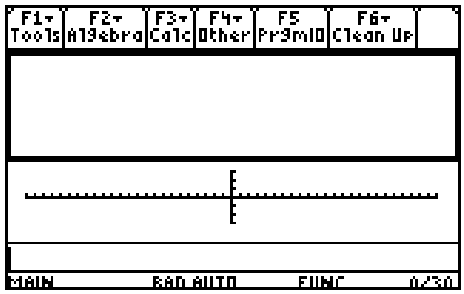Press	Result
ENTER	
ENTER	


Setting the initial Apps for split screen

After you select either TOP-BOTTOM or LEFT-RIGHT split-screen mode, additional mode settings become available.

Full-screen mode

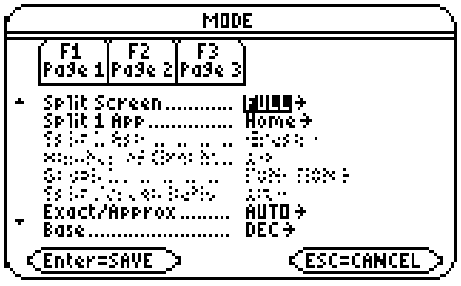

Split-screen mode

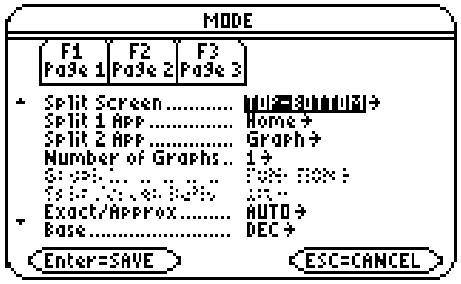


Downloaded from www.Manualslib.com manuals search engine

Mode	Description
Split 2 App	Lets you specify the App displayed in the bottom or right portion of the split screen. Works together with Split 1 App, which lets you specify the App displayed in the top or left portion of the split screen.
Number of Graphs	Lets you set up and display two independent graphs.





To set the initial App for each split-screen portion:

1. Select the Split 1 App mode setting and press ▶ to display a menu of available Apps. (See "Setting split-screen mode" on page 59.)
2. Press ▼ or ▲ to highlight the App and press ENTER.
3. Repeat steps 1 and 2 for the Split 2 App mode setting.

Example: Display the Y= Editor in the top screen and the Graph App in the bottom screen.

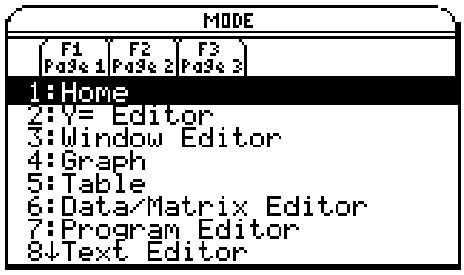Press	Result
▼ ▶	

Downloaded from www.Manualslib.com manuals search engine

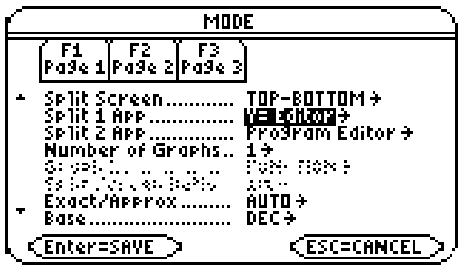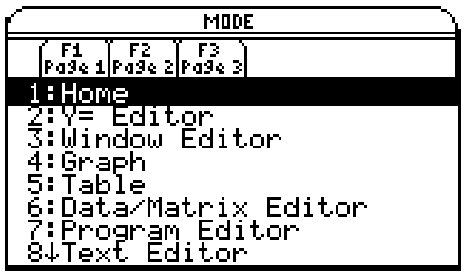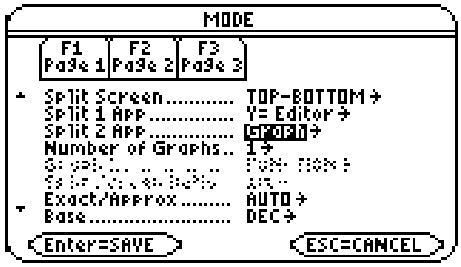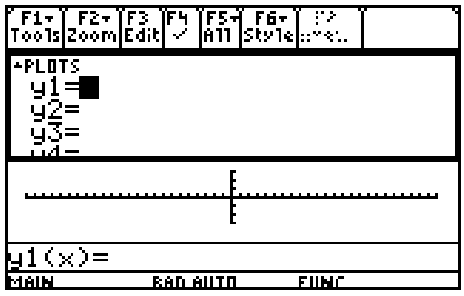Press	Result
2	
▼ ▶	
4	
ENTER	

Downloaded from www.Manualslib.com manuals search engine

If you set Split 1 App and Split 2 App to the same nongraphing App or to the same graphing App with Number of Graphs set to 1, the TI-89 Titanium exits split-screen mode and displays the App in full-screen mode.

Selecting the active App

In split-screen mode, only one App can be active at a time.

- To switch between active Apps, press 2nd [⇔].
- To open a third App, press APPS and select the App. This App replaces the active split-screen App.

Exiting split-screen mode

Exit split-screen mode in any of the following ways:

- Press 2nd [QUIT] to close the active App and display the full-screen view of the other open App.
- If the Apps desktop is turned off, pressing 2nd [QUIT] replaces the active split-screen App with the calculator Home screen. Pressing 2nd [QUIT] again turns off the split-screen mode and displays the calculator Home screen in full-screen mode.
- Select Split Screen on Page 2 of the MODE dialog box, set split-screen mode to FULL, and press ENTER.
- Press 2nd [QUIT] twice to display the Apps desktop

More information is available about using split screens. (See the electronic *Split Screens* chapter.)

Downloaded from www.Manualslib.com manuals search engine

Managing Apps and operating system (OS) versions

Using the TI-89 Titanium connectivity features, you can download Apps from:

- The TI Educational & Productivity Solutions (E&PS) Web site at: education.ti.com/latest
- The CD-ROM included with your TI-89 Titanium.
- A compatible graphing calculator.

Adding Apps to your TI-89 Titanium is like loading software on a computer. All you need is TI Connect™ software and the USB computer cable that came with your TI-89 Titanium.

For system requirements and instructions to link to compatible calculators and download TI Connect software, Apps, and OS versions, see the TI E&PS Web site.


Before downloading Apps to your TI-89 Titanium, please read the license agreement on the CD-ROM or TI Web site.

Finding the OS version and identification (ID) numbers

If you purchase software from the TI E&PS Web site or call the customer support number, you will be asked to provide information about your TI-89 Titanium. You will find this information on the ABOUT screen.

Downloaded from www.Manualslib.com manuals search engine

To display the ABOUT screen, press F1 **3:About** from the Apps desktop. The ABOUT screen displays the following information about your TI-89 Titanium:

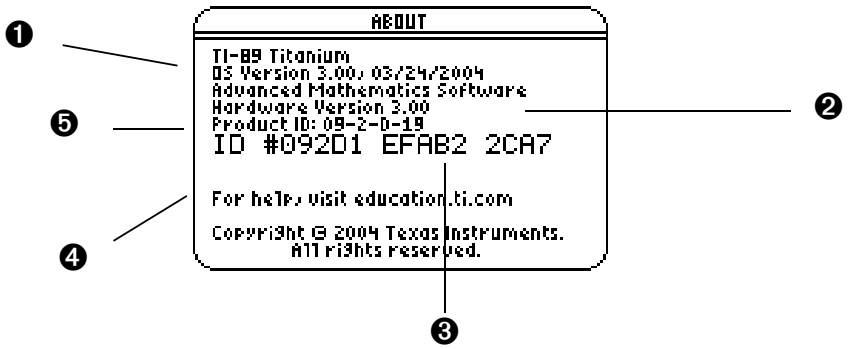

❶ OS version

❷ Hardware version

❸ Unit ID (required to obtain certificates for installing purchased Apps). Similar to a serial number. Write this number down and keep it in a safe place in case the calculator is ever lost or stolen.

❹ Apps certificate revision number (Cert. Rev.)

❺ Product identifier (Product ID). Similar to a model number.

Note that your screen will be different than the one shown above.

Downloaded from www.Manualslib.com manuals search engine

Deleting an Application

Deleting an application removes it from the TI-89 Titanium and increases space for other applications. Before deleting an application, consider storing it on a computer for reinstallation later.

1. Quit the application.
2. Press 2nd [VAR-LINK] to display the VAR-LINK (All) screen.
3. Press 2nd [F7] to display the list of installed applications.
4. Select the application you want to delete by pressing F4. (Press F4 again to deselect.)
5. Press F1 **1:Delete**. The VAR-LINK delete confirmation dialog box displays.
6. Press ENTER to delete the application.

Note: Only Flash Apps can be deleted.

Connecting your TI-89 Titanium to other devices

The TI-89 Titanium includes both a mini-USB port and a standard I/O port. Ports are used to link two compatible graphing calculators or connect to a computer or peripheral device.


In addition, the teacher model of the TI-89 Titanium includes an accessory port. This port is used to output visual data so that a classroom can view the calculator's display on a video device or overhead screen.

To connect your calculator to a computer – Connect your TI-89 Titanium using the USB port and the included USB computer cable.

Downloaded from www.Manualslib.com manuals search engine


To connect your calculator to another calculator – Use the USB unit-to-unit cable or an I/O unit-to-unit cable to connect the TI-89 Titanium to a compatible graphing calculator or peripheral device, such as a TI-89 or TI-92 Plus graphing calculator or the CBL 2™ and CBR™ systems.

To show your calculator's display to the classroom – Use the accessory port to connect the TI-Presenter™ video adapter to the teacher model of the TI-89 Titanium. The TI-Presenter video adapter provides a video interface between the calculator and video display or recording devices. Or use the accessory port to connect the TI ViewScreen™ overhead panel to your calculator. The TI ViewScreen overhead panel enlarges and projects the display so an entire class can view it. For more information about the TI-Presenter video adapter and TI ViewScreen panel, see the TI E&PS Web site at education.ti.com.

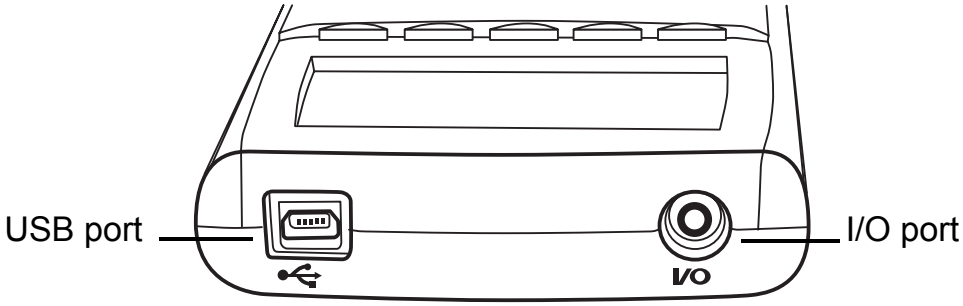

TI-89 Titanium ports

Downloaded from www.Manualslib.com manuals search engine

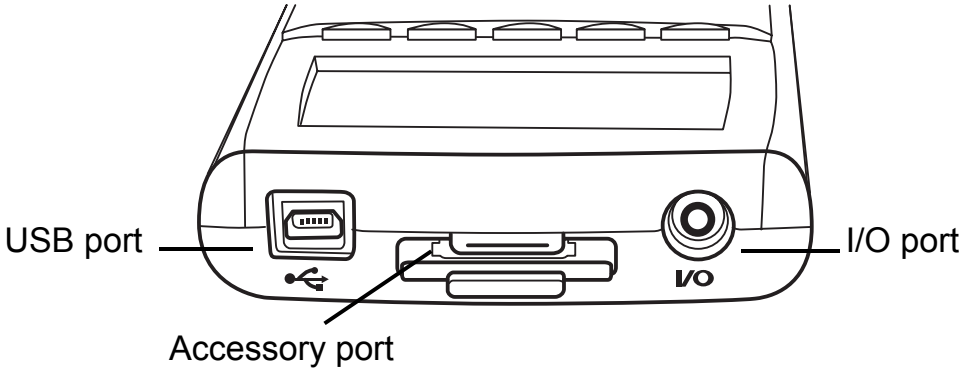

TI-89 Titanium ports (teacher model)

Batteries

The TI-89 Titanium uses four AAA alkaline batteries and a backup silver oxide battery (SR44SW or 303). The backup battery is already installed, and the AAA batteries are provided with your product.

Important OS download information

New batteries should be installed before beginning an OS download.

When in OS download mode, the APD™ feature does not function. If you leave your calculator in download mode for an extended time before you actually start the download, your batteries may become depleted. You will then need to replace the depleted batteries with new batteries before downloading.

Downloaded from www.Manualslib.com manuals search engine

You can also transfer the OS to another TI-89 Titanium using a USB unit-to-unit cable . If you accidentally interrupt the transfer before it is complete, you will need to reinstall the OS via a computer. Again, remember to install new batteries before downloading.

Please contact Texas Instruments as described in Service & Support Information, if you experience a problem.

Battery Precautions


Take these precautions when replacing batteries:

- Do not leave batteries within the reach of children.
- Do not mix new and used batteries. Do not mix brands (or types within brands) of batteries.
- Do not mix rechargeable and non-rechargeable batteries.
- Install batteries according to polarity (+ and –) diagrams.
- Do not place non-rechargeable batteries in a battery recharger.
- Properly dispose of used batteries immediately.
- Do not incinerate or dismantle batteries.

Installing the AAA Batteries

1. Remove the battery cover from the back of the calculator.
2. Unwrap the four AAA batteries provided with your product and insert them in the battery compartment. Arrange the batteries according to the polarity (+ and –) diagram in the battery compartment.

Downloaded from www.Manualslib.com manuals search engine

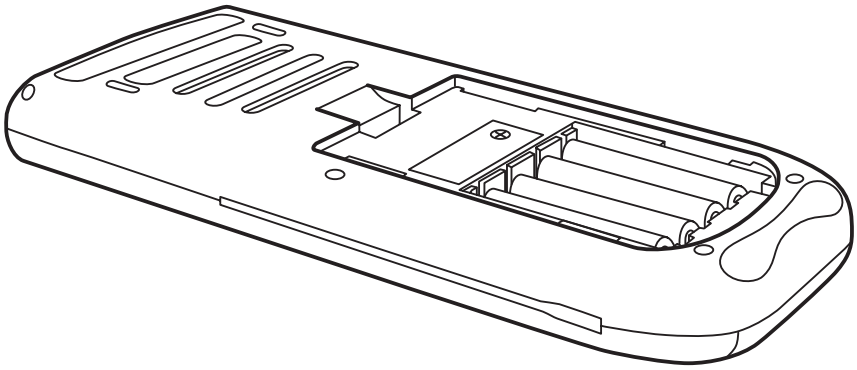

3. Replace the battery cover on the calculator. The cover should snap into place.

Replacing the AAA (alkaline) batteries

As the batteries lose power, the display begins to dim, especially during calculations. If you find yourself increasing the contrast frequently, replace the AAA alkaline batteries.

The status line also gives battery information.


Indicator	Meaning
BATT	Batteries are low.
BATT	Replace batteries as soon as possible.

Before replacing the batteries, turn off the TI-89 Titanium by pressing 2nd [OFF] to avoid losing information stored in memory. Do not remove both the back-up battery and the AAA alkaline batteries at the same time.

Downloaded from www.Manualslib.com manuals search engine

Replacing the backup (silver oxide) battery

1. To replace the silver oxide backup battery, remove the battery cover and unscrew the tiny screw holding the BACK UP BATTERY cover in place.

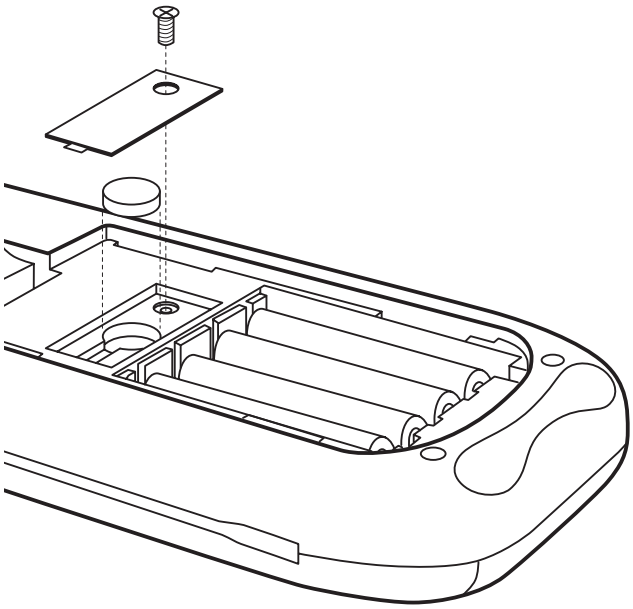

2. Remove the old battery and install a new SR44SW or 303 battery, positive (+) side up. Replace the cover and the screw.


Downloaded from www.Manualslib.com manuals search engine

Previews

Performing Computations


This section provides several examples for you to perform from the Calculator Home screen that demonstrate some of the computational features of the TI-89 Titanium. The history area in each screen was cleared by pressing F1 and selecting **8:Clear Home**, before performing each example, to illustrate only the results of the example's keystrokes.

Showing Computations

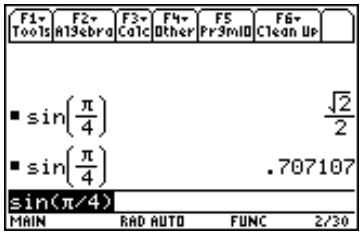
Steps and keystrokes	Display
Compute **sin(π/4)** and display the result in symbolic and numeric format. To clear the history area of previous calculations, press F1 and select **8:Clear Home**. Press 2nd [SIN] 2nd [π] ÷ 4) ENTER ◆ [≈]	

Downloaded from www.Manualslib.com manuals search engine

Finding the Factorial of Numbers

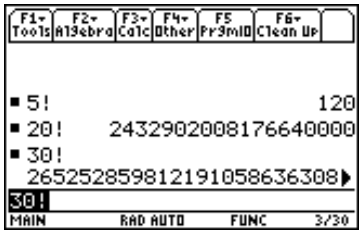
Steps and keystrokes	Display
Compute the factorial of several numbers to see how the TI-89 Titanium handles very large integers. To get the factorial operator (!), press 2nd [MATH], select **7:Probability**, and then select **1:!**. Press 5 2nd [MATH] 7 1 ENTER 20 2nd [MATH] 7 1 ENTER 30 2nd [MATH] 7 1 ENTER	

Expanding Complex Numbers

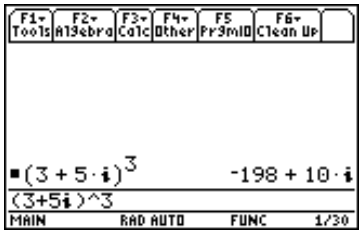
Steps and keystrokes	Display
Compute $(3+5i)^3$ to see how the TI-89 Titanium handles computations involving complex numbers. Press (3 + 5 2nd [i]) ^ 3 ENTER	

Downloaded from www.Manualslib.com manuals search engine

Finding Prime Factors

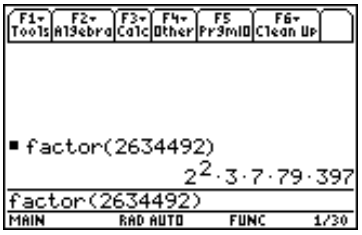
Steps and keystrokes	Display
Compute the factors of the rational number 2634492. You can enter “factor” on the entry line by typing **FACTOR** on the keyboard, or by pressing F2 and selecting **2:factor(**. Press F2 2 2634492) ENTER (*Optional*) Enter other numbers on your own.	

Finding Roots

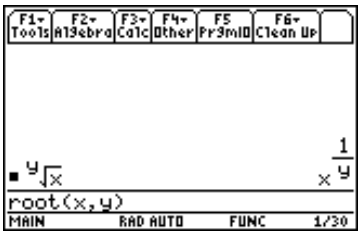
Steps and keystrokes	Display
Find the root of the expression (x,y). You can enter “root” on the entry line by typing **ROOT** on the keyboard, or by pressing ◆ 9. This example illustrates using the root function and how the expression is displayed in “pretty print” in the history area. Press ◆ 9 X , Y) ENTER	

Downloaded from www.Manualslib.com manuals search engine

Expanding Expressions

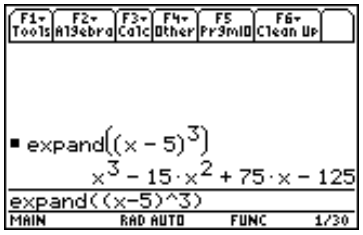
Steps and keystrokes	Display
Expand the expression $(x-5)^3$. You can enter "expand" on the entry line by typing **EXPAND** on the keyboard, or by pressing F2 and selecting **3:expand(**. Press F2 3 (X − 5) ^ 3) ENTER (*Optional*) Enter other expressions on your own.	

Reducing Expressions

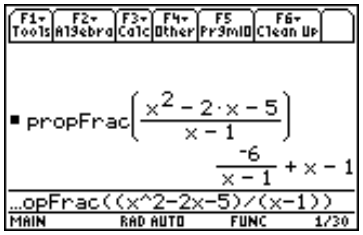
Steps and keystrokes	Display
Reduce the expression $(x^2-2x-5)/(x-1)$ to its simplest form. You can enter "propFrac" on the entry line by typing **PROPFRAC** on the keyboard, or by pressing F2 and selecting **7:propFrac(**. Press F2 7 (X ^ 2 − 2 X − 5) ÷ (X − 1)) ENTER	

Downloaded from www.Manualslib.com manuals search engine

Factoring Polynomials

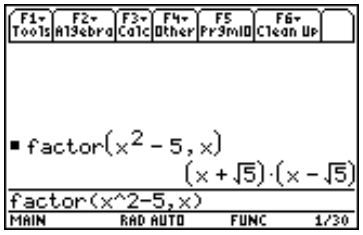
Steps and keystrokes	Display
Factor the polynomial (x^2-5) with respect to x. You can enter "factor" on the entry line by typing **FACTOR** on the keyboard or by pressing F2 and selecting **2:factor(**. Press F2 2 X ^ 2 − 5 , X) ENTER	

Solving Equations

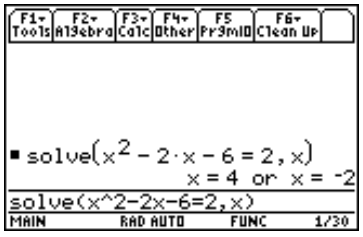
Steps and keystrokes	Display
Solve the equation $x^2-2x-6=2$ with respect to x. You can enter "**solve(**" on the entry line by selecting "**solve(**" from the Catalog menu, by typing **SOLVE(** on the keyboard, or by pressing F2 and selecting **1:solve(**. The status line area shows the required syntax for the marked item in the **Catalog** menu. Press F2 1 X ^ 2 − 2 X − 6 = 2 , X) ENTER	 

Downloaded from www.Manualslib.com manuals search engine

Solving Equations with a Domain Constraint

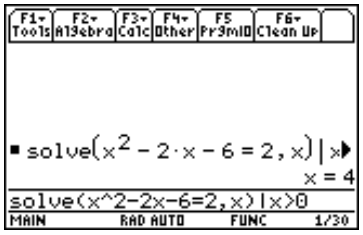
Steps and keystrokes	Display
Solve the equation $x^2-2x-6=2$ with respect to x where x is greater than zero. The "*with*" (|) operator provides domain constraint. Press F2 1 X ^ 2 − 2 X − 6 = 2 , X) | X 2nd [>] 0 ENTER	

Solving Inequalities

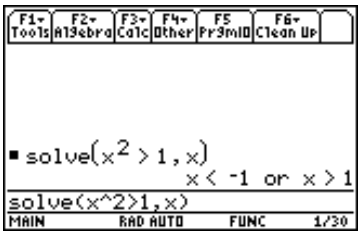
Steps and keystrokes	Display
Solve the inequality ($x^2>1$,x) with respect to x. Press F2 1 X ^ 2 2nd [>] 1) ENTER	

Downloaded from www.Manualslib.com manuals search engine

Finding the Derivative of Functions

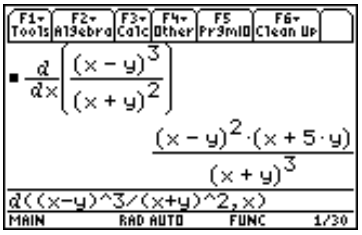
Steps and keystrokes	Display
Find the derivative of $(x-y)^3/(x+y)^2$ with respect to x. This example illustrates using the calculus differentiation function and how the function is displayed in “pretty print” in the history area. Press 2nd [d] (X − Y) ^ 3 ÷ (X + Y) ^ 2 , X) ENTER	

Finding Implicit Derivatives


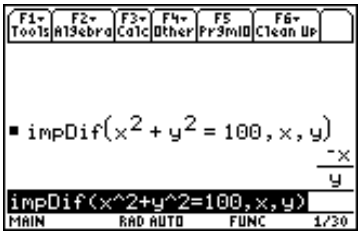
Steps and keystrokes	Display
Compute implicit derivatives for equations in two variables in which one variable is defined implicitly in terms of another. This example illustrates using the calculus implicit derivative function. Press F3 D X ^ 2 + Y ^ 2 = 100 , X , Y) ENTER	

Downloaded from www.Manualslib.com manuals search engine

Finding the Integral of Functions

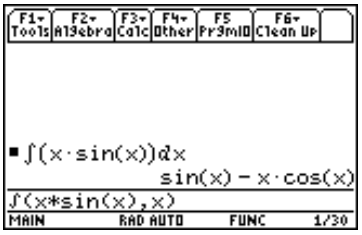
Steps and keystrokes	Display
Find the integral of **x∗sin(x)** with respect to x. This example illustrates using the calculus integration function. Press 2nd [∫] X × 2nd [SIN] X) , X) ENTER	

Solving Problems Involving Vectors

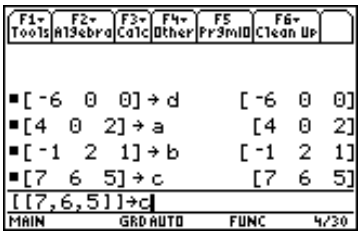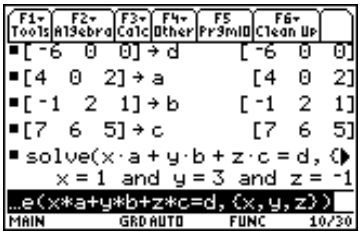
Steps and keystrokes	Display
1. Input a row or column of vectors. Press 2nd [[] (-) 6 , 0 , 0 2nd [] STO▸ alpha d ENTER 2nd [[] 4 , 0 , 2 2nd [] STO▸ alpha a ENTER 2nd [[] (-) 1 , 2 , 1 2nd [] STO▸ alpha b ENTER 2nd [[] 7 , 6 , 5 2nd [] STO▸ alpha c ENTER	
2. Solve (x* a+y*b+z*c=d {x,y,z}) Press F2 1 X × alpha a + y × alpha b + z × alpha c = alpha d , 2nd [{] X , Y , Z 2nd [}]) ENTER	

Downloaded from www.Manualslib.com manuals search engine


Log to Any Base

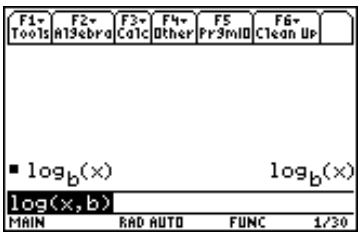Steps and keystrokes	Display
Find log (x,b). You can enter “log” on the entry line by typing **LOG** on the keyboard, or by pressing ◆ 7. Press ◆ 7 X , alpha b) ENTER	

Converting Angle Measures

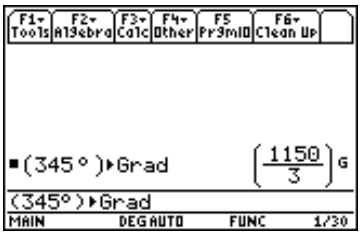Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Angle** mode select **DEGREE**. Convert 345 degrees to Gradian angle measure. You can enter “ ▶**Grad** ” on the entry line by selecting “ ▶**Grad** ” from the Catalog menu, or from the Math menu by pressing 2nd [MATH] and selecting **2:angle, A:▶Grad**. Press MODE ▼ ▼ ▼ ▶ 2 ENTER 345 2nd [°] 2nd [MATH] 2 alpha A ENTER	

Downloaded from www.Manualslib.com manuals search engine


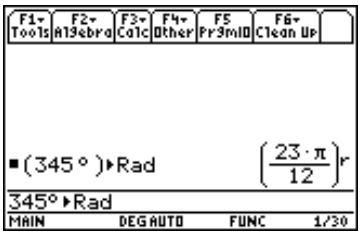
Steps and keystrokes	Display
2. Convert 345 degrees to Radian angle measure. You can enter " ▶**Rad** " on the entry line by selecting " ▶**Rad** " from the Catalog menu, or from the Math menu by pressing 2nd [MATH] and selecting **2:angle, B:▶Rad**. Press MODE ▼ ▼ ▼ ▶ 2 ENTER 345 2nd [°] 2nd [MATH] 2 alpha B ENTER **Note:** You can also use °, r, or G to override the angle mode setting temporarily.	

Symbolic Manipulation



Solve the system of equations 2x − 3y = 4 and −x + 7y = −12. Solve the first equation so that x is expressed in terms of y. Substitute the expression for x into the second

Downloaded from www.Manualslib.com manuals search engine

equation, and solve for the value of y. Then substitute the y value back into the first equation to solve for the value of x.

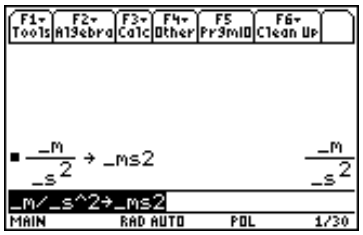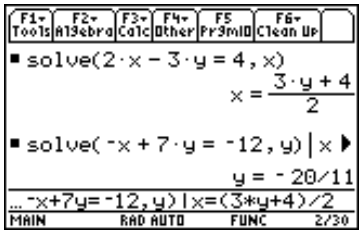Steps and keystrokes	Display
1. Display the Home screen and clear the entry line. Solve the equation 2x − 3y = 4 for x. F2 **1** selects **solve(** from the Algebra menu. You can also type **solve(** directly from the keyboard or select it from the **Catalog**. Press HOME CLEAR CLEAR F2 1 2 X − 3 Y = 4 , X) ENTER	
2. Begin to solve the equation −x + 7y = −12 for y, but do not press ENTER yet. Press F2 1 (-) X + 7 Y = (-) 12 , Y)	
3. Use the "*with*" operator to substitute the expression for x that was calculated from the first equation. This gives the value of y. The "*with*" operator is displayed as **|** on the screen. Use the auto-paste feature to highlight the last answer in the history area and paste it to the entry line. Press I ▲ ENTER ENTER	

Downloaded from www.Manualslib.com manuals search engine

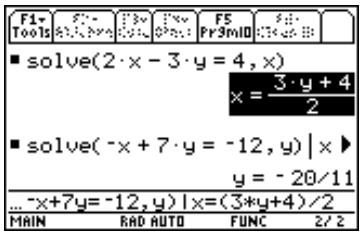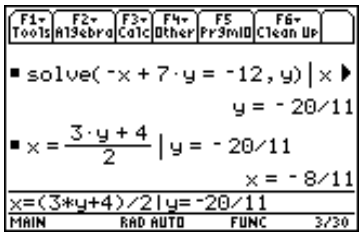Steps and keystrokes	Display
4. Highlight the equation for x in the history area. Press ▲ ▲ ▲	
5. Auto-paste the highlighted expression to the entry line. Then substitute the value of y that was calculated from the second equation. Press ENTER I ▲ ENTER ENTER The solution is: x = ⁻8/11 and y = ⁻20/11	




This example is a demonstration of symbolic manipulation. A one-step function is available for solving systems of equations.

Constants and Measurement Units




Using the equation f = m∗a, calculate the force when m = 5 kilograms and a = 20 meters/second^2. What is the force when a = 9.8 meters/second^2. (This is the

Downloaded from www.Manualslib.com manuals search engine

acceleration due to gravity, which is a constant named _g). Convert the result from newtons to kilograms of force.

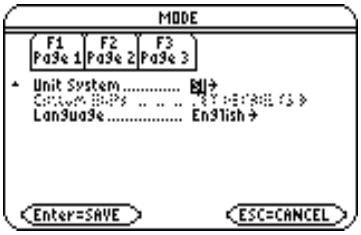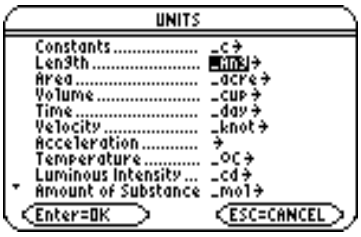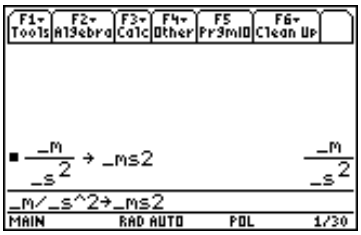Steps and keystrokes	Display
1. Display the **MODE** dialog box, Page 3. For **Unit System** mode, select **SI** for the metric system of measurements. Results are displayed according to these default units. Press [MODE] [F3] ▶ 1 [ENTER]	
2. Create an acceleration unit for meters/second^2 named _ms2. The **UNITS** dialog box lets you select units from an alphabetical list of categories. You can use [2nd] ▼ and [2nd] ▲ to scroll one page at a time through the categories. If you use the **UNITS** dialog box to select a unit, the _ is entered automatically. Now, instead of re-entering _m/_s^2 each time you need it, you can use _ms2. Also, you can now use the **UNITS** dialog box to select _ms2 from the Acceleration category. Press [2nd] [UNITS] ▼ ▶ M [ENTER] ÷ [2nd] [UNITS] ▼ ▼ ▼ ▼ ▶ S [ENTER] ^ 2 [STO▸] [◆] [_] [2nd] [a-lock] MS [alpha] 2 [ENTER]	 

Downloaded from www.Manualslib.com manuals search engine

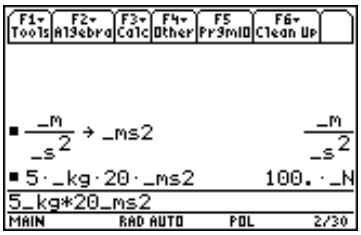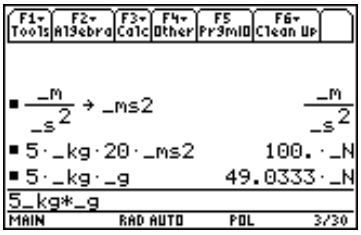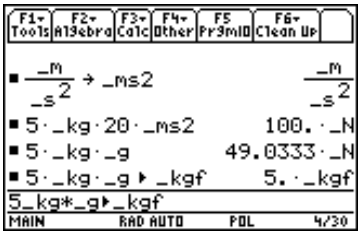Steps and keystrokes	Display
3. Calculate the force when m = 5 kilograms (_kg) and a = 20 meters/second^2 (_ms2). If you know the abbreviation for a unit, you can type it from the keyboard. Press 5 ◆ [_] 2nd [a-lock] KG alpha × 20 ◆ [_] 2nd [a-lock] MS alpha 2 ENTER	
4. Using the same m, calculate the force for an acceleration due to gravity (the constant _g). For *_g*, you can use the pre-defined constant available from the **UNITS** dialog box or you can type *_g*. Press 5 ◆ [_] 2nd [a-lock] KG alpha × 2nd [UNITS] ⊙ alpha G ENTER ENTER	
5. Convert to kilograms of force (_kgf). 2nd [▶] displays the ▶ conversion operator. Press ⊙ 2nd [▶] ◆ [_] 2nd [a-lock] KGF alpha ENTER	




Basic Function Graphing I

The example in this section demonstrates some of the graphing capabilities of the TI-89 Titanium keystrokes. It illustrates how to graph a function using the **Y= Editor**. You will





Downloaded from www.Manualslib.com manuals search engine

learn how to enter a function, produce a graph of the function, trace a curve, find a minimum point, and transfer the minimum coordinates to the Home screen.



Explore the graphing capabilities of the TI-89 Titanium by graphing the function $y=(|x^2-3|-10)/2$.

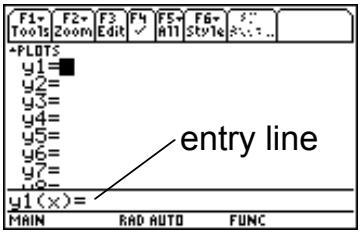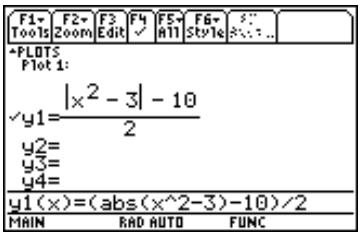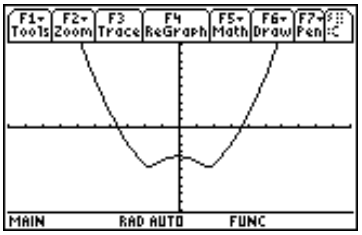Steps and keystrokes	Display
1. Display the **Y= Editor**. Press ◆ [Y=]	
2. Enter the function **(abs(x^2−3)−10)/2**. The screen shot shows the “pretty print” display at **y1=**. Press (CATALOG A ENTER X ^ 2 − 3) − 1 0) ÷ 2 ENTER	
3. Display the graph of the function. Select **6:ZoomStd** by pressing **6** or by moving the cursor to **6:ZoomStd** and pressing ENTER. Press F2 6	

Downloaded from www.Manualslib.com manuals search engine

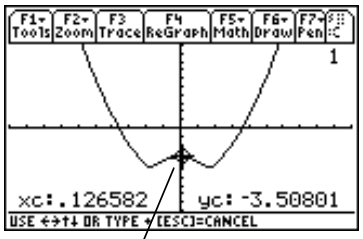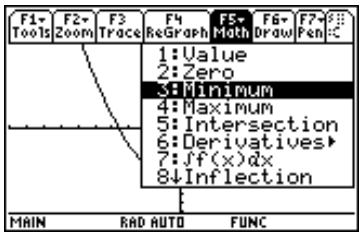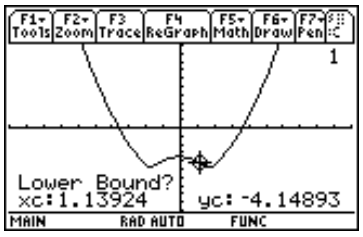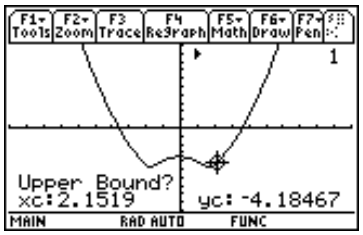
Steps and keystrokes	Display
4. Turn on **Trace**. The tracing cursor, and the x and y coordinates are displayed. Press [F3]	 tracing cursor
5. Open the **MATH** menu and select **3:Minimum**. Press [F5] ▼ ▼ [ENTER]	
6. Set the lower bound. Press ▶ (right cursor) to move the tracing cursor until the lower bound for x is just to the left of the minimum node before pressing [ENTER] the second time. Press ▶ ... ▶ [ENTER]	
7. Set the upper bound. Press ▶ (right cursor) to move the tracing cursor until the upper bound for x is just to the right of the minimum node. Press ▶ ... ▶	

Downloaded from www.Manualslib.com manuals search engine

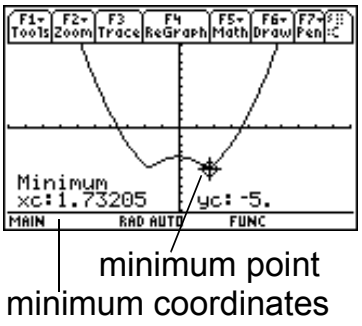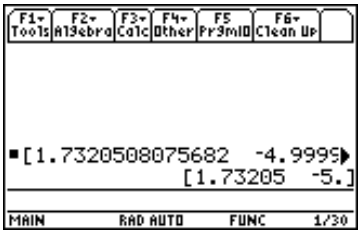
Steps and keystrokes	Display
8. Find the minimum point on the graph between the lower and upper bounds. Press ENTER	
9. Transfer the result to the Home screen, and then display the Home screen. Press ◆ (-) HOME	

Basic Function Graphing II



Graph a circle of radius 5, centered on the origin of the coordinate system. View the circle using the standard viewing window (**ZoomStd**). Then use **ZoomSqr** to adjust the viewing window.

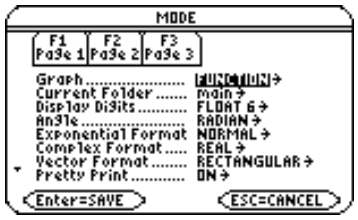Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **FUNCTION**. Press MODE ▷ 1 ENTER	

Downloaded from www.Manualslib.com manuals search engine

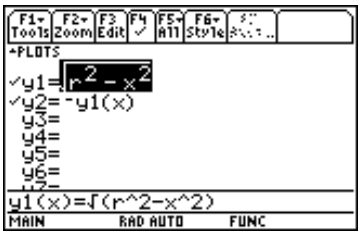Steps and keystrokes	Display
2. Display the Home screen. Then store the radius, 5, in variable r. Press [HOME] 5 [STO▸] [alpha] R [ENTER]	5→r
3. Display and clear the **Y= Editor**. Then define y1(x) = $\sqrt{(r^2 - x^2)}$, the top half of a circle. In function graphing, you must define separate functions for the top and bottom halves of a circle. Press [◆] [Y=] [F1] 8 [ENTER] [ENTER] [2nd] [√] [alpha] R [^] 2 [−] X [^] 2 [)] [ENTER]	
4. Define y2(x) = $-\sqrt{r^2 - x^2}$, the function for the bottom half of the circle. The bottom half is the negative of the top half, so you can define y2(x) = ⁻y1(x). Use the full function name **y1(x)**, not simply y1. Press [ENTER] [(-)] Y 1 [(] X [)] [ENTER]	

Downloaded from www.Manualslib.com manuals search engine


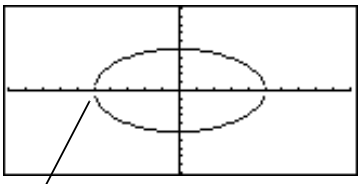
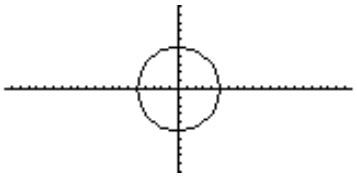
Steps and keystrokes	Display
5. Select the **ZoomStd** viewing window, which automatically graphs the functions. In the standard viewing window, both the x and y axes range from ⁻10 to 10. However, this range is spread over a longer distance along the x axis than the y axis. Therefore, the circle appears as an ellipse. Press F2 6	 Notice slight gap between top and bottom halves.
6. Select **ZoomSqr**. **ZoomSqr** increases the range along the x axis so that circles and squares are shown in correct proportion. Press F2 5	

Note: There is a gap between the top and bottom halves of the circle because each half is a separate function. The mathematical endpoints of each half are (⁻5,0) and (5,0). Depending on the viewing window, however, the *plotted* endpoints for each half may be slightly different from their *mathematical* endpoints.




Downloaded from www.Manualslib.com manuals search engine

Basic Function Graphing III

Use the “Detect Discontinuities” graph format to eliminate faux asymptotes and connections in a jump discontinuity.

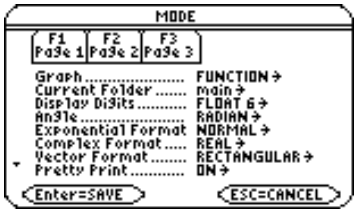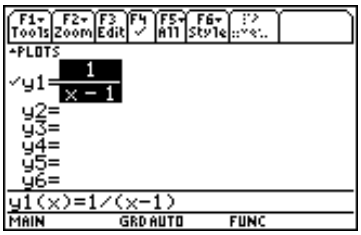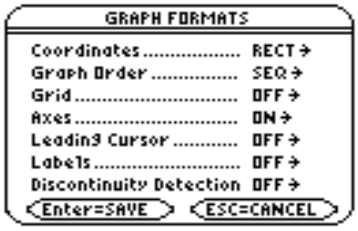Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **FUNCTION**. For **Angle** mode, select **RADIAN**. Press MODE ▶ 1 ▼ ▼ ▼ ▶ 1 ENTER	
2. Open the Y= Editor and enter y1(x)=1/(x-1). Press ◆ [Y=] 1 ÷ (X − 1) ENTER	
3. Display the Graph Formats dialog box and set “Detect Discontinuities” to OFF **Note:** The second item on the Graph Format dialog is not greyed out, which means it can be set to sequential “Seq” or simultaneous “Simul”. Press ◆ I ▼ ▼ ▼ ▼ ▼ ▼ ▶ 1 ENTER	


Downloaded from www.Manualslib.com manuals search engine

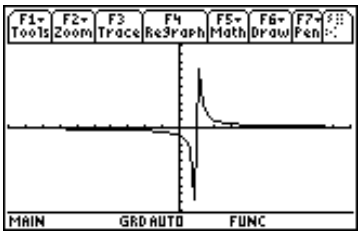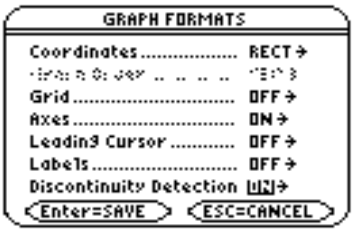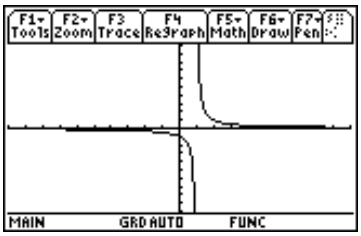Steps and keystrokes	Display
4. Execute the **Graph** command, which automatically displays the Graph screen. Observe the “faux” asymptotes contained in the graph. Press ♦ [GRAPH]	
5. Display the Graph Formats dialog box and set “Detect Discontinuities” to ON. **Note:** The second item on the Graph Format dialog is greyed out, which means the graph order is set to sequential “Seq”. Press ♦ I ▼ ▼ ▼ ▼ ▼ ▼ ▶ 2 ENTER	
6. Execute the **Graph** command, which automatically displays the Graph screen. No”faux” asymptotes are present on the graph. **Note:** Graphing speed may slow considerably when “Detect Discontinuities” is set to ON. Press ♦ [GRAPH]	





Downloaded from www.Manualslib.com manuals search engine

Parametric Graphing

Graph the parametric equations describing the path of a ball kicked at an angle (θ) of 60° with an initial velocity (v_0) of 15 meters/sec. The gravity constant g = 9.8 meters/sec^2. Ignoring air resistance and other drag forces, what is the maximum height of the ball and when does it hit the ground?

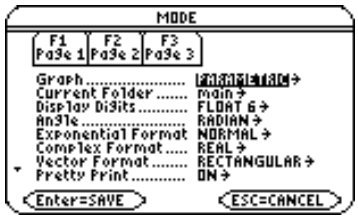Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **PARAMETRIC**. Press [MODE] ▶ 2 [ENTER]	
2. Display and clear the **Y= Editor**. Then define the horizontal component xt1(t) = v_0t cos θ. Enter values for v_0 and θ. Press [◆] [Y=] [F1] 8 [ENTER] [ENTER] 15T [×] [2nd] [COS] 60 [2nd] [°] [)] [ENTER] Type T [×] [2nd] [COS], not T [2nd] [COS]. Enter a ° symbol by typing either [2nd] [°] or [2nd] [MATH] 2 1. This ensures a number is interpreted as degrees, regardless of the angle mode.	xt1(t)=15t∗cos(60°)



Downloaded from www.Manualslib.com manuals search engine

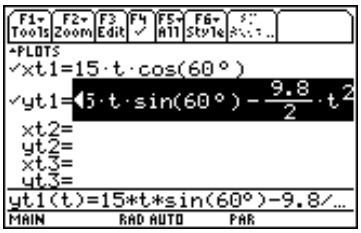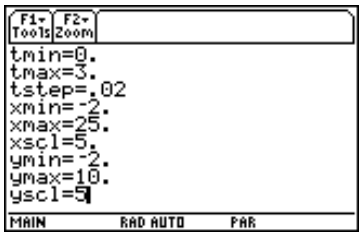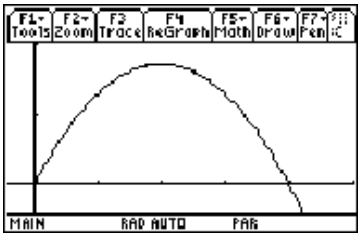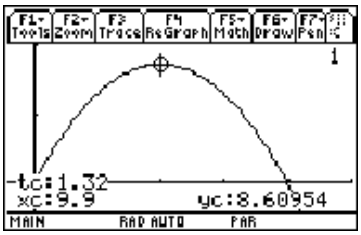Steps and keystrokes	Display
3. Define the vertical component $yt1(t) = v_0 t \sin \theta - (g/2)t^2$. Enter values for v_0, θ, and g. Press [ENTER] 15T [×] [2nd] [SIN] 60 [2nd] [°] [)] [−] [(] 9.8 [÷] 2 [)] T [^] 2 [ENTER]	
4. Display the **Window Editor**. Enter Window variables appropriate for this example. You can press either ▼ or [ENTER] to enter a value and move to the next variable. Press [◆] [WINDOW] 0 ▼ 3 ▼ .02 ▼ [(-)] 2 ▼ 25 ▼ 5 ▼ [(-)] 2 ▼ 10 ▼ 5	
5. Graph the parametric equations to model the path of the ball. Press [◆] [GRAPH]	
6. Select **Trace**. Then move the cursor along the path to find the: • y value at maximum height. • t value where the ball hits the ground. Press [F3] ▶ or ◀ as necessary	



Downloaded from www.Manualslib.com manuals search engine

Polar Graphing


The graph of the polar equation r1(θ) = A sin Bθ forms the shape of a rose. Graph the rose for A=8 and B=2.5. Then explore the appearance of the rose for other values of A and B.

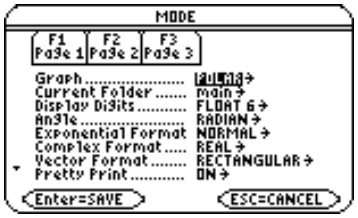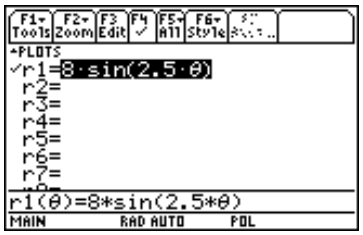Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **POLAR**. For **Angle** mode, select **RADIAN**. Press MODE ▶ 3 ▼ ▼ ▼ ▶ 1 ENTER	
2. Display and clear the **Y= Editor**. Then define the polar equation r1(θ) = A sin Bθ. Enter 8 and 2.5 for A and B, respectively. Press ◆ [Y=] F1 8 ENTER ENTER 8 2nd [SIN] 2.5 ◆ [θ]) ENTER	

Downloaded from www.Manualslib.com manuals search engine

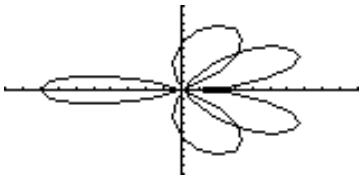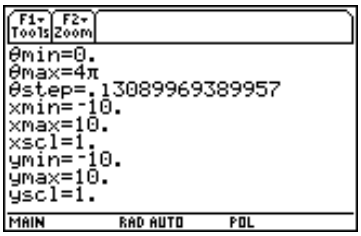Steps and keystrokes	Display
3. Select the **ZoomStd** viewing window, which graphs the equation. • The graph shows only five rose petals. - In the standard viewing window, the Window variable θmax = 2π. The remaining petals have θ values greater than 2π. • The rose does not appear symmetrical. - Both the x an y axes range from ⁻10 to 10. However, this range is spread over a longer distance along the x axis than the y axis. Press F2 6	
4. Display the **Window Editor**, and change θmax to 4π. 4π will be evaluated to a number when you leave the **Window Editor**. Press ◆ [WINDOW] ▼ 4 2nd [π]	

Downloaded from www.Manualslib.com manuals search engine


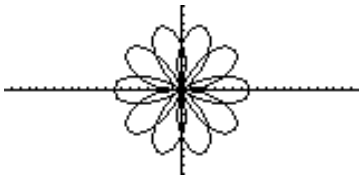
Steps and keystrokes	Display
5. Select **ZoomSqr**, which regraphs the equation. **ZoomSqr** increases the range along the x axis so that the graph is shown in correct proportion. Press F2 5	
You can change values for *A* and *B* as necessary and regraph the equation.	

Sequence Graphing



A small forest contains 4000 trees. Each year, 20% of the trees will be harvested (with 80% remaining) and 1000 new trees will be planted. Using a sequence, calculate the number of trees in the forest at the end of each year. Does it stabilize at a certain number?

Initially	After 1 Year	After 2 Years	After 3 Years	. . .
4000	.8 x 4000 + 1000	.8 x (.8 x 4000 + 1000) + 1000	.8 x (.8 x (.8 x 4000 + 1000) + 1000) + 1000	. . .

Downloaded from www.Manualslib.com manuals search engine

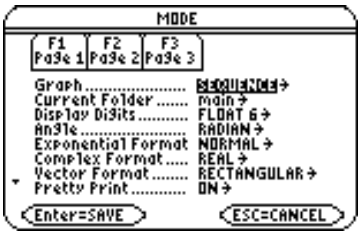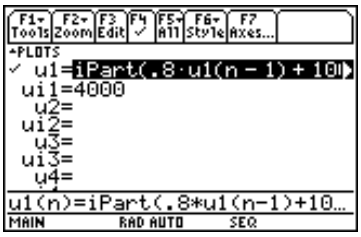Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **SEQUENCE**. Press [MODE] ▶ 4 [ENTER]	
2. Display and clear the **Y= Editor**. Then define the sequence as u1(n) = iPart(.8∗u1(n−1)+1000). Use **iPart** to take the integer part of the result. No fractional trees are harvested. To access **iPart(**, you can use [2nd] [MATH], simply type it, or select it from the **CATALOG**. Press [♦] [Y=] [F1] 8 [ENTER] [ENTER] [2nd] [MATH] 1 4 . 8 [alpha] U1 [(] [alpha] N [−] 1 [)] [+] 1000 [)] [ENTER]	
3. Define ui1 as the initial value that will be used as the first term. Press [ENTER] 4000 [ENTER]	
4. Display the **Window Editor**. Set the n and plot Window variables. **nmin=0** and **nmax=50** evaluate the size of the forest over 50 years. Press [♦] [WINDOW] 0 ▼ 50 ▼ 1 ▼ 1 ▼	nmin=0. nmax=50. plotStrt=1. plotStep=1. xmin=0. xmax=50. xscl=10. ymin=0. ymax=6000. yscl=1000.




Downloaded from www.Manualslib.com manuals search engine

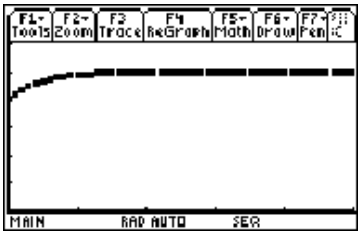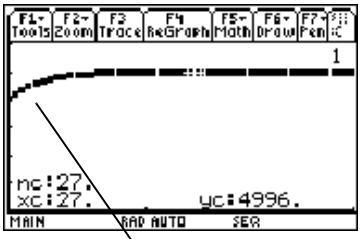Steps and keystrokes	Display
5. Set the x and y Window variables to appropriate values for this example. Press 0 ▼ 50 ▼ 10 ▼ 0 ▼ 6000 ▼ 1000	
6. Display the Graph screen. Press ♦ [GRAPH]	
7. Select **Trace**. Move the cursor to trace year by year. How many years (nc) does it take the number of trees (yc) to stabilize? Trace begins at nc=0. nc is the number of years. xc = nc since n is plotted on the x axis. yc = u1(n), the number of trees at year n. Press F3 ▶ and ◀ as necessary	 By default, sequences use the Square display style.




Downloaded from www.Manualslib.com manuals search engine

3D Graphing





Graph the 3D equation $z(x,y) = (x^3y - y^3x) / 390$. Animate the graph by using the cursor to interactively change the eye Window variable values that control your viewing angle. Then view the graph in different graph format styles.

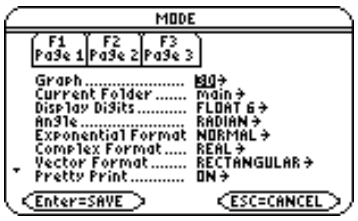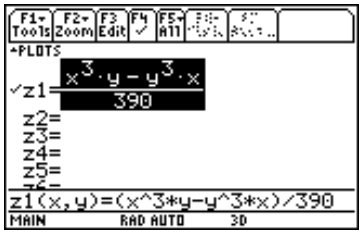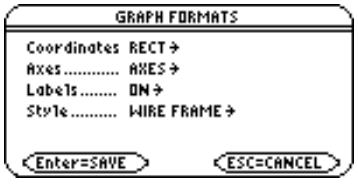Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **3D**. Press MODE ▶ 5 ENTER	
2. Display and clear the **Y= Editor**. Then define the 3D equation $z1(x,y) = (x^3y - y^3x) / 390$. Notice that implied multiplication is used in the keystrokes. Press ◆ [Y=] F1 8 ENTER ENTER (X ^ 3 Y − Y ^ 3 X) ÷ 390 ENTER	
3. Change the graph format to display and label the axes. Also set **Style = WIRE FRAME**. You can animate any graph format style, but **WIRE FRAME** is fastest. Press ◆ I ▼ ▶ 2 ▼ ▶ 2 ▼ ▶ 1 ENTER	

Downloaded from www.Manualslib.com manuals search engine

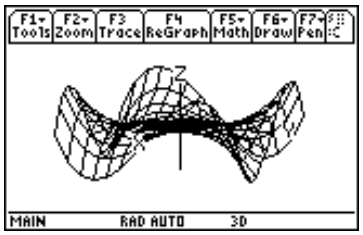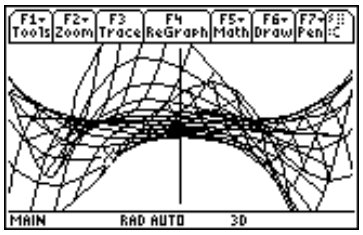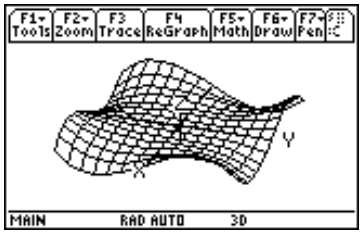Steps and keystrokes	Display
4. Select the **ZoomStd** viewing cube, which automatically graphs the equation. As the equation is evaluated (before it is graphed), “evaluation percentages” are shown in the upper-left part of the screen. Press F2 6 **Note:** If you have already used 3D graphing, the graph may be shown in expanded view. When you animate the graph, the screen returns to normal view automatically. (Except for animation, you can do the same things in normal and expanded view.) Press × (press × to switch between expanded and normal view)	 
5. Animate the graph by decreasing the eyeϕ Window variable value. ⊖ or ⊕ may affect eyeθ and eyeψ, but to a lesser extent than eyeϕ**.** To animate the graph continuously, press and hold the cursor for about 1 second and then release it. To stop, press ENTER. Press ⊖ eight times	

Downloaded from www.Manualslib.com manuals search engine

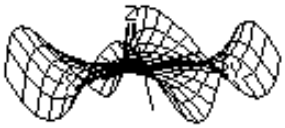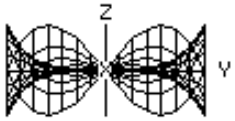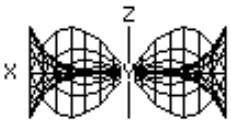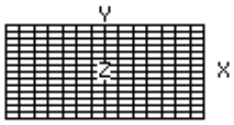Steps and keystrokes	Display
6. Return the graph to its initial orientation. Then move the viewing angle along the “viewing orbit” around the graph. Press 0 (zero, not the letter O) ◀ ◀ ◀	
7. View the graph along the x axis, the y axis, and then the z axis. Press X This graph has the same shape along the y axis and x axis. Press Y Press Z	  
8. Return to the initial orientation. Press 0 (zero)	

Downloaded from www.Manualslib.com manuals search engine


Steps and keystrokes	Display
9. Display the graph in different graph format styles. Press [I] (press [I] to switch from each style to the next)	 HIDDEN SURFACE  CONTOUR LEVELS (may require extra time to calculate contours)  WIRE AND CONTOUR  WIRE FRAME

Downloaded from www.Manualslib.com manuals search engine



Note: You can also display the graph as an implicit plot by using the **GRAPH FORMATS** dialog box (◆ I). If you press I to switch between styles, the implicit plot is not displayed.

Differential Equation Graphing




Graph the solution to the logistic 1st-order differential equation y' = .001y∗(100−y). Start by drawing only the slope field. Then enter initial conditions in the **Y= Editor** and interactively from the Graph screen.

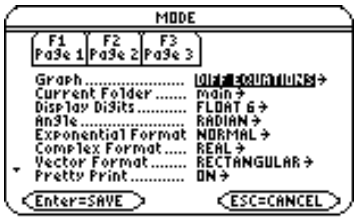Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **DIFF EQUATIONS**. Press MODE ▶ 6 ENTER	



Downloaded from www.Manualslib.com manuals search engine

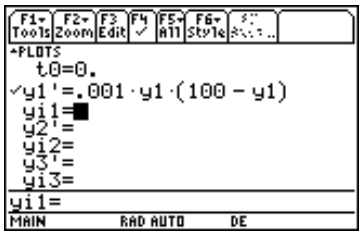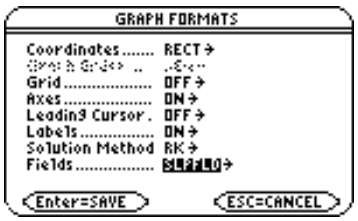Steps and keystrokes	Display
2. Display and clear the **Y= Editor**. Then define the 1st-order differential equation: y1'(t)=.001y1∗(100−y1) Press [×] to enter the ∗ shown above. Do not use implied multiplication between the variable and parentheses. If you do, it is treated as a function call. Leave the initial condition **yi1** blank. **Note:** With y1' selected, the device will graph the **y1** solution curve, not the derivative y1'. Press [♦] [Y=] [F1] 8 [ENTER] [ENTER] .001 Y1 [×] [(] 100 [−] Y1 [)] [ENTER]	
3. Display the **GRAPH FORMATS** dialog box. Then set **Axes = ON**, **Labels = ON**, **Solution Method = RK**, and **Fields = SLPFLD**. **Note:** To graph one differential equation, *Fields* must be set to **SLPFLD** or **FLDOFF**. If **Fields=DIRFLD**, an error occurs when you graph. Press [♦] [I] ▼ ▼ ▶ 2 ▼ ▼ ▶ 2 ▼ ▶ 1 ▼ ▶ 1 [ENTER]	



Downloaded from www.Manualslib.com manuals search engine

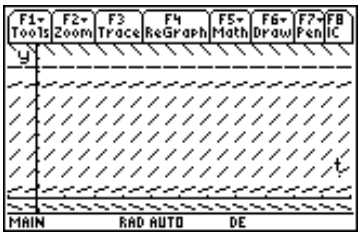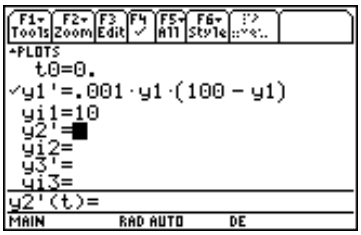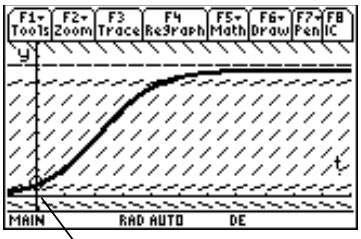Steps and keystrokes	Display
4. Display the **Window Editor**, and set the Window variables as shown to the right. Press ♦ [WINDOW] 0 ▼ 10 ▼ .1 ▼ 0 ▼ (-) 10 ▼ 110 ▼ 10 ▼ (-) 10 ▼ 120 ▼ 10 ▼ 0 ▼ .001 ▼ 20	t0=0. tmax=10. tstep=.1 tplot=0. xmin=-10. xmax=110. xscl=10. ymin=-10. ymax=120. yscl=10. ncurves=0. diftol=.001 fldres=20.
5. Display the Graph screen. Because you did not specify an initial condition, only the slope field is drawn (as specified by **Fields=SLPFLD** in the **GRAPH FORMATS** dialog box). Press ♦ [GRAPH]	
6. Return to the **Y= Editor** and enter an initial condition: **yi1=10** Press ♦ [Y=] ENTER 10 ENTER	
7. Return to the Graph screen. Initial conditions entered in the **Y= Editor** always occur at t_0. The graph begins at the initial condition and plots to the right. Then it plots to the left. Press ♦ [GRAPH]	 The initial condition is marked with a circle.

Downloaded from www.Manualslib.com manuals search engine

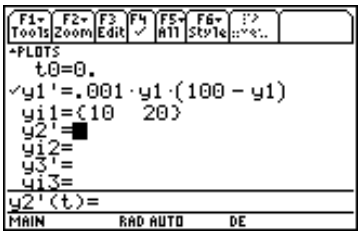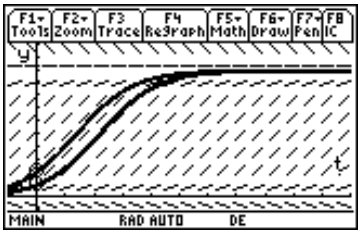Steps and keystrokes	Display
8. Return to the **Y= Editor** and change **yi1** to enter two initial conditions as a list: **yi1={10,20}** Press ◆ [Y=] ▲ ENTER 2nd [{] 10 [,] 20 2nd [}] ENTER	
9. Return to the Graph screen. Press ◆ [GRAPH]	



Downloaded from www.Manualslib.com manuals search engine

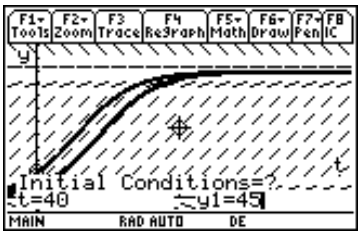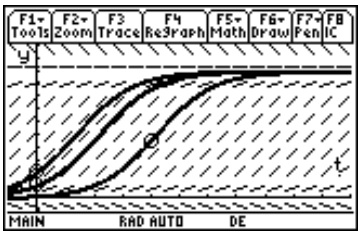Steps and keystrokes	Display
10. To select an initial condition interactively, press: 2nd [F8] When prompted, enter t=40 and y1=45. When selecting an initial condition interactively, you can specify a value for t other than the t_0 value entered in the **Y= Editor** or **Window Editor**. Instead of entering **t** and **y1** after pressing 2nd [F8] you can move the cursor to a point on the screen and then press ENTER. You can use F3 to trace curves for initial conditions specified in the **Y= Editor**. However, you cannot trace the curve for an initial condition selected interactively. Press 2nd [F8] 40 ENTER 45 ENTER	 




Downloaded from www.Manualslib.com manuals search engine

Additional Graphing Topics



From the Home screen, graph the piecewise defined function: y = ⁻x when x < 0 and y = 5 cos(x) when x ≥ 0. Draw a horizontal line across the top of the cosine curve. Then save a picture of the displayed graph.

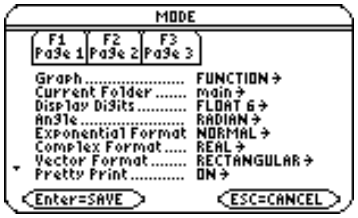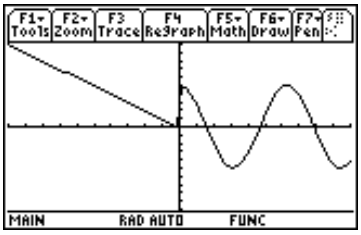Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **FUNCTION**. For **Angle** mode, select **RADIAN**. Press MODE ▶ 1 ▼ ▼ ▼ ▶ 1 ENTER	
2. Display the Home screen. Use the **Graph** command and the **when** function to specify the piecewise defined function. F4 **2** selects **Graph** from the **Other** toolbar menu and automatically adds a space. Press HOME F4 2 2nd [a-lock] WHEN alpha (X 2nd [<] 0 , (-) X , 5 × 2nd [COS] X))	Graph when(x<0,⁻x, 5∗cos(x))
3. Execute the **Graph** command, which automatically displays the Graph screen. The graph uses the current Window variables, which are assumed to be their standard values (F2 **6**) for this example. Press ENTER	

Downloaded from www.Manualslib.com manuals search engine

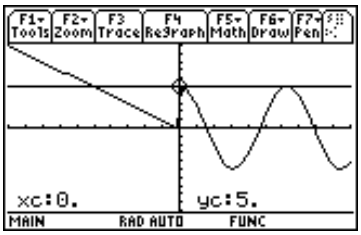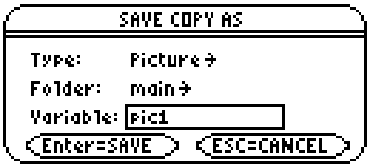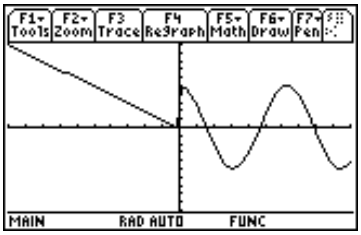
Steps and keystrokes	Display
4. Draw a horizontal line across the top of the cosine curve. The calculator remains in “horizontal” mode until you select a different operation or press [ESC]. Press [2nd] [F7] 5 ▲ (until the line is positioned) [ENTER]	
5. Save a picture of the graph. Use **PIC1** as the variable name for the picture. Be sure to set **Type = Picture**. By default, it is set to **GDB**. Press [F1] 2 ▶ 2 ▼ ▼ PIC [alpha] 1 [ENTER] [ENTER]	
6. Clear the drawn horizontal line. You can also press [F4] to regraph. Press [2nd] [F6] 1	

Downloaded from www.Manualslib.com manuals search engine



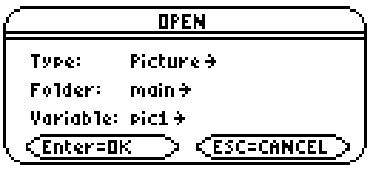
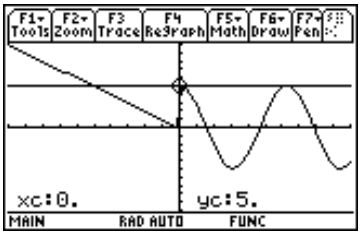
Steps and keystrokes	Display
7. Open the saved picture variable to redisplay the graph with the line. Be sure to set **Type = Picture**. By default, it is set to **GDB**. Press [F1] 1 ▶ 2 (if not already shown, also set Variable = pic1) [ENTER]	 

Tables


Evaluate the function $y=x^3-2x$ at each integer between -10 and 10. How many sign changes are there, and where do they occur?

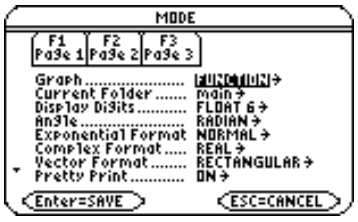Steps and keystrokes	Display
1. Display the **MODE** dialog box. For the **Graph** mode, select **FUNCTION**. Press [MODE] ▶ 1 [ENTER]	

Downloaded from www.Manualslib.com manuals search engine

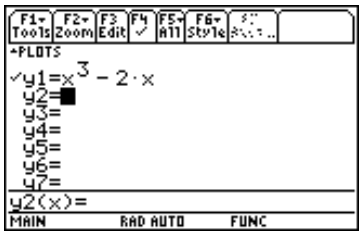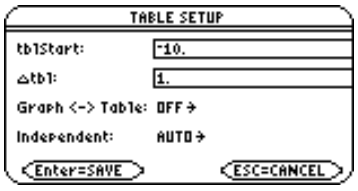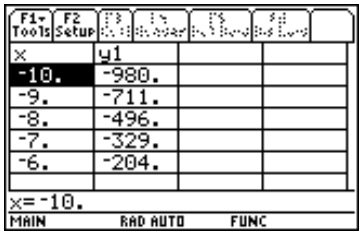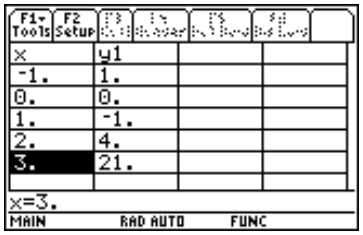
Steps and keystrokes	Display
2. Display and clear the **Y= Editor**. Then define y1(x) = $x^3 - 2x$. Press ♦ [Y=] F1 8 ENTER ENTER X ^ 3 − 2 X ENTER	
3. Set the table parameters to: **tblStart = ⁻10** **Δtbl = 1** **Graph < - > Table = OFF** **Independent = AUTO** Press ♦ [TBLSET] (-) 10 ▼ 1 ▼ ▶ 1 ▼ ▶ 1 ENTER	
4. Display the Table screen. Press ♦ [TABLE]	
5. Scroll through the table. Notice that **y1** changes sign at x = ⁻1, 1, and 2. To scroll one page at a time, use 2nd ▼ and 2nd ▲. Press ▼ and ▲ as necessary.	

Downloaded from www.Manualslib.com manuals search engine


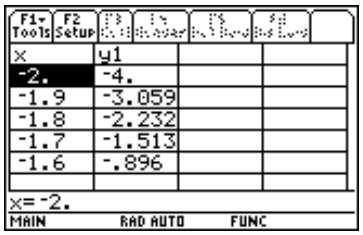
Steps and keystrokes	Display
6. Zoom in on the sign change between x = ⁻2 and x = ⁻1 by changing the table parameters to: **tblStart = ⁻2** **Δtbl = .1** Press F2 (-) 2 ▼ .1 ENTER ENTER	

Split Screens



Split the screen to show the **Y= Editor** and the Graph screen. Explore the behavior of a polynomial as its coefficients change.

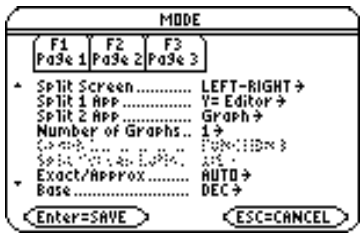Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph**, select **FUNCTION**. For **Split Screen**, select **LEFT-RIGHT**. For **Split 1 App**, select **Y= Editor**. For **Split 2 App**, select **Graph**. Press MODE ▶ 1 F2 ▶ 3 ▼ ▶ 2 ▼ ▶ 4 ENTER	

Downloaded from www.Manualslib.com manuals search engine

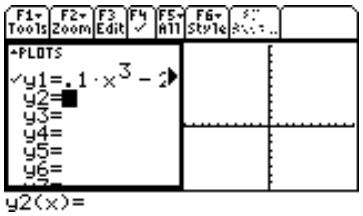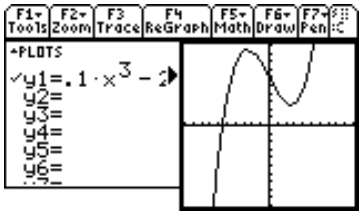Steps and keystrokes	Display
2. Clear the **Y= Editor** and turn off any stat data plots. Define y1(x) = .1x^3−2x+6. A thick border around the **Y= Editor** indicates it is active. When active, its entry line goes all the way across the display. Press [F1] 8 [ENTER] [F5] 5 [ENTER] .1 X [^] 3 [−] 2 X [+] 6 [ENTER]	
3. Select the **ZoomStd** viewing window, which switches to the Graph screen and graphs the function. The thick border is now around the Graph screen. Press [F2] 6	
4. Switch to the **Y= Editor** and edit **y1(x)** to change .1x^3 to .5x^3. [2nd] [⊞] is the second function of [APPS]. The thick border is around the **Y= Editor**. Press [2nd] [⊞] ▲ [ENTER] ◀ ▶ ▶ ← 5 [ENTER]	



Downloaded from www.Manualslib.com manuals search engine

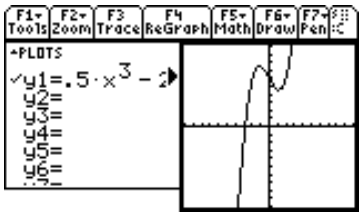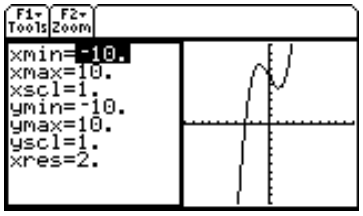Steps and keystrokes	Display
5. Switch to the Graph screen, which regraphs the edited function. The thick border is around the Graph screen. Press 2nd [⊞]	
6. Switch to the **Y= Editor** and open the **Window Editor** in its place. Press 2nd [⊞] ◆ [WINDOW]	
7. Open the Home screen and then exit to a full-sized Home screen. Press: 2nd [QUIT] HOME	




Downloaded from www.Manualslib.com manuals search engine

Data/Matrix Editor

Use the **Data/Matrix Editor** to create a one-column list variable. Then add a second column of information. Notice that the list variable (which can have only one column) is automatically converted into a data variable (which can have multiple columns).

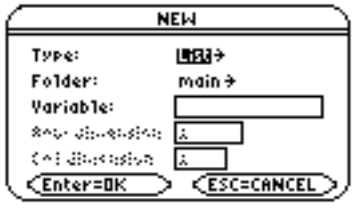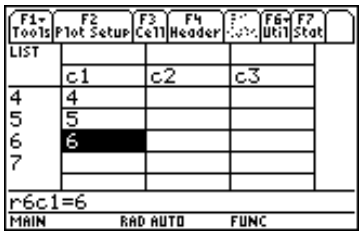Steps and keystrokes	Display
1. Use APPS to display the **Data/Matrix Editor.** Create a new list variable named **TEMP**. Press 3 ▶ 3 ▼ ▼ TEMP ENTER ENTER	
2. Enter a column of numbers. Then move the cursor up one cell (just to see that a highlighted cell's value is shown on the entry line). **LIST** is shown in the upper-left corner to indicate a list variable. You can use ▼ instead of ENTER to enter information in a cell. Press 1 ENTER 2 ENTER 3 ENTER 4 ENTER 5 ENTER 6 ENTER ▲	

Downloaded from www.Manualslib.com manuals search engine

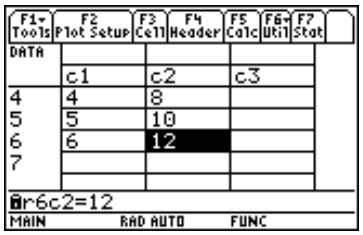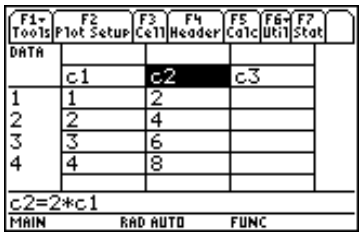
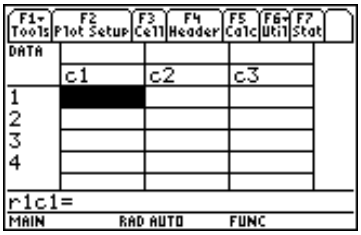
Steps and keystrokes	Display
3. Move to column 2, and define its column header so that it is twice the value of column 1. **DATA** is shown in the upper-left corner to indicate that the list variable was converted to a data variable. Press ▶ F4 2 × alpha C 1 ENTER	 🔒 means the cell is in a defined column.
4. Move to the column 2 header cell to show its definition in the entry line. When the cursor is on the header cell, you do not need to press F4 to define it. Simply begin typing the expression. Press 2nd ▲ ▲	
5. Clear the contents of the variable. Simply clearing the data does not convert the data variable back into a list variable. Press F1 8 ENTER	

Note: If you don't need to save the current variable, use it as a *scratchpad*. The next time you need a variable for temporary data, clear the current variable and re-use it. This lets you enter temporary data without wasting memory by creating a new variable each time.



Downloaded from www.Manualslib.com manuals search engine

Statistics and Data Plots





Based on a sample of seven cities, enter data that relates population to the number of buildings with more than 12 stories. Using Median-Median and linear regression calculations, find and plot equations to fit the data. For each regression equation, predict how many buildings of more than 12 stories you would expect in a city of 300,000 people.

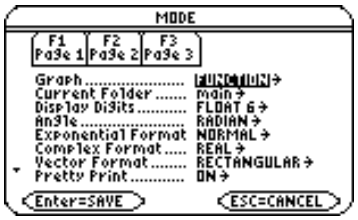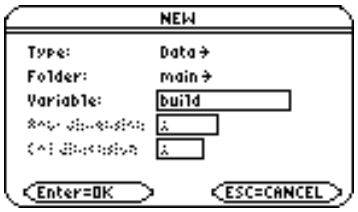Steps and keystrokes	Display
1. Display the **MODE** dialog box. For **Graph** mode, select **FUNCTION**. Press [MODE] ▶ 1 [ENTER]	
2. Use [APPS] to display the **Data/Matrix Editor**. Create a new data variable named **BUILD**. Press 3 ▼ ▼ BUILD [ENTER] [ENTER]	




Downloaded from www.Manualslib.com manuals search engine

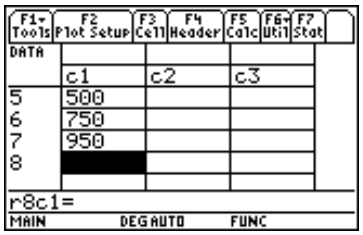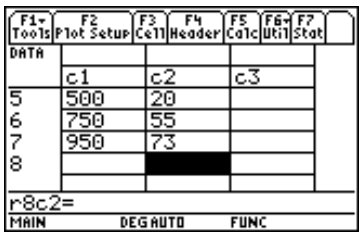Steps and keystrokes	Display
3. Using the sample data below, enter the population in column 1. Pop. (in 1000s) — Bldgs > 12 stories 150 — 4 500 — 31 800 — 42 250 — 9 500 — 20 750 — 55 950 — 73 Press 150 ENTER 500 ENTER 800 ENTER 250 ENTER 500 ENTER 750 ENTER 950 ENTER	
4. Move the cursor to row 1 in column 2 (r1c2). Then enter the corresponding number of buildings. ◆ ▲ moves the cursor to the top of the page. After typing data for a cell, you can press ENTER or ▼ to enter the data and move the cursor down one cell. Pressing ▲ enters the data and moves the cursor up one cell. Press ▶ ◆ ▲ 4 ENTER 31 ENTER 42 ENTER 9 ENTER 20 ENTER 55 ENTER 73 ENTER	



Downloaded from www.Manualslib.com manuals search engine

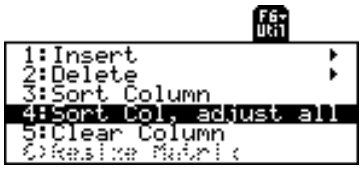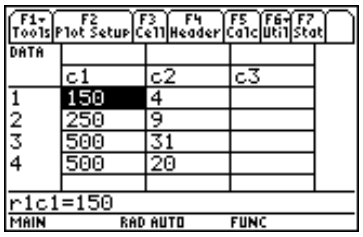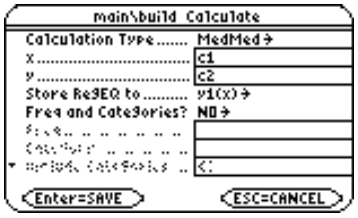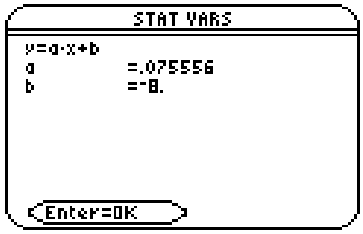Steps and keystrokes	Display
5. Move the cursor to row 1 in column 1 (r1c1). Sort the data in ascending order of population. This sorts column 1 and then adjusts all other columns so that they retain the same order as column 1. This is critical for maintaining the relationships between columns of data. To sort column 1, the cursor can be anywhere in column 1. This example has you press ◆ ▲ so that you can see the first four rows. Press ◀ ◆ ▲ 2nd [F6] 4	 
6. Display the **Calculate** dialog box. Set **Calculation Type = MedMed** **x = C1** **y = C2** **Store RegEQ to = y1(x)** Press F5 ▶ 7 ▼ C alpha 1 ▼ alpha C2 ▼ ▶ ▼ ENTER	
7. Perform the calculation to display the MedMed regression equation. As specified on the **Calculate** dialog box, this equation is stored in **y1(x)**. Press ENTER	




Downloaded from www.Manualslib.com manuals search engine

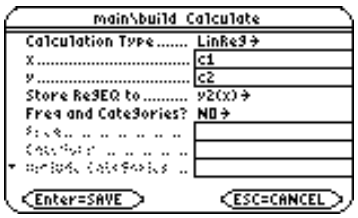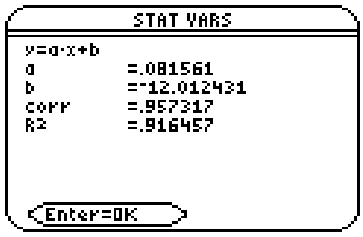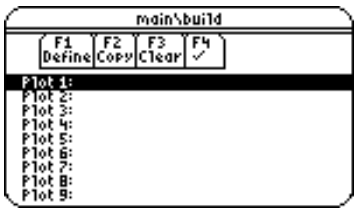Steps and keystrokes	Display
8. Close the **STAT VARS** screen. The **Data/Matrix Editor** displays. Press ENTER	
9. Display the **Calculate** dialog box. Set: **Calculation Type = LinReg** **x = C1** **y = C2** **Store RegEQ to = y2(x)** Press F5 ▶ 5 ▼ ▼ ▼ ▶ ▼ ENTER	
10. Perform the calculation to display the LinReg regression equation. This equation is stored in **y2(x)**. Press ENTER	
11. Close the **STAT VARS** screen. The **Data/Matrix Editor** displays. Press ENTER	
12. Display the Plot Setup screen. **Plot 1** is highlighted by default. F3 lets you clear highlighted Plot settings. Press F2	


Downloaded from www.Manualslib.com manuals search engine

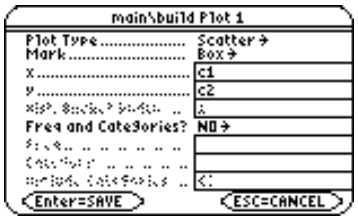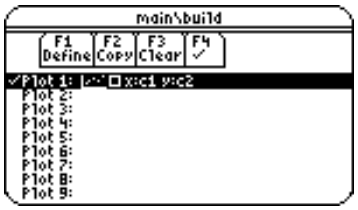Steps and keystrokes	Display
13. Define **Plot 1** as: **Plot Type = Scatter** **Mark = Box** **x = C1** **y = C2** Notice the similarities between this and the **Calculate** dialog box. Press [F1] ▶ 1 ▼ ▶ 1 ▼ C [alpha] 1 ▼ [alpha] C2	
14. Save the plot definition and return to the Plot Setup screen. Notice the shorthand notation for **Plot 1's** definition. Press [ENTER] twice	

Downloaded from www.Manualslib.com manuals search engine

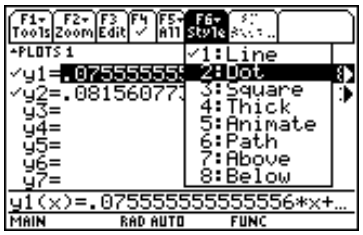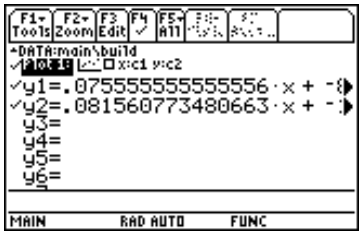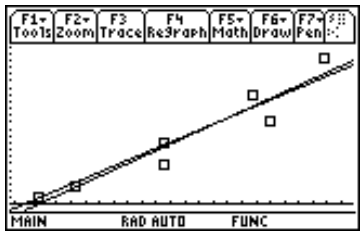Steps and keystrokes	Display
15. Display the **Y= Editor**. For **y1(x)**, the MedMed regression equation, set the display style to **Dot**. **Note:** Depending on the previous contents of your **Y= Editor**, you may need to move the cursor to **y1**. **PLOTS 1** at the top of the screen means that **Plot 1** is selected. Notice that **y1(x)** and **y2(x)** were selected when the regression equations were stored. Press ◆ [Y=] 2nd [F6] 2	
16. Scroll up to highlight **Plot 1**. The displayed shorthand definition is the same as on the Plot Setup screen. Press ▲	
17. Use **ZoomData** to graph **Plot 1** and the regression equations **y1(x)** and **y2(x)**. **ZoomData** examines the data for all selected stat plots and adjusts the viewing window to include all points. Press F2 9	

Downloaded from www.Manualslib.com manuals search engine

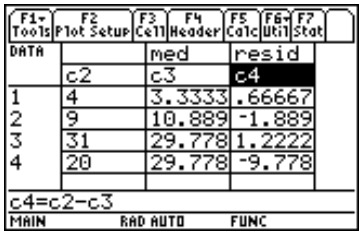
Steps and keystrokes	Display
18. Return to the current session of the **Data/Matrix Editor**. Press [APPS] D [ENTER] [ENTER]	
19. Enter a title for column 3. Define column 3's header as the values predicted by the MedMed line. To enter a title, the cursor must highlight the title cell at the very top of the column. [F4] lets you define a header from anywhere in a column. When the cursor is on a header cell, pressing [F4] is not required. Press ▷ ▷ △ △ [2nd] [a-lock] MED [alpha] [ENTER] [F4] Y1 [(] [alpha] C1 [)] [ENTER]	
20. Enter a title for column 4. Define column 4's header as the residuals (difference between observed and predicted values) for MedMed. Press ▷ △ [2nd] [a-lock] RESID [alpha] [ENTER] [alpha] C2 [−] [alpha] C3 [ENTER]	
21. Enter a title for column 5. Define column 5's header as the values predicted by the LinReg line. Press ▷ △ △ [2nd] [a-lock] LIN [alpha] [ENTER] [F4] Y2 [(] [alpha] C1 [)] [ENTER]	

Downloaded from www.Manualslib.com manuals search engine

Steps and keystrokes	Display

22. Enter a title for column 6. Define column 6's header as the residuals for LinReg.

    Press ▶ ▲ 2nd [a-lock] RESID alpha ENTER F4 alpha C2 − alpha C5 ENTER

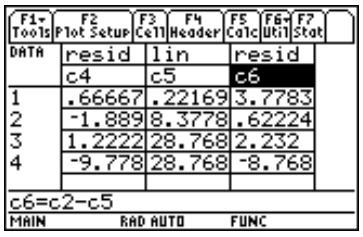


23. Display the Plot Setup screen and deselect **Plot 1**.

    Press F2 F4


24. Highlight **Plot 2** and define it as:
    Plot Type = Scatter
    Mark = Box
    x = C1
    y = C4 (MedMed residuals)

    Press ▼ F1 ▼ ▼ C alpha 1 ▼ alpha C4 ENTER ENTER



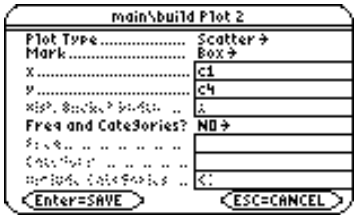


25. Highlight **Plot 3** and define it as:
    Plot Type = Scatter
    Mark = Plus
    x = C1
    y = C6 (LinReg residuals)

    Press ▼ F1 ▼ ▶ 3 ▼ C alpha 1 ▼ alpha C6 ENTER ENTER

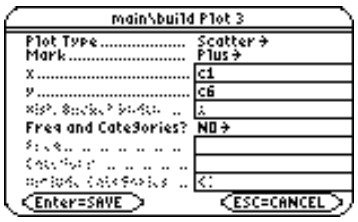


Downloaded from www.Manualslib.com manuals search engine

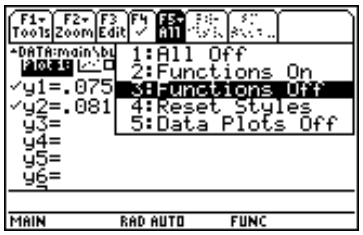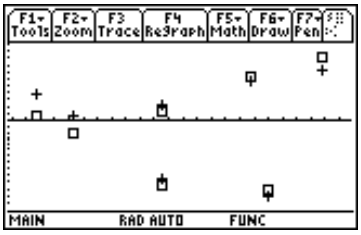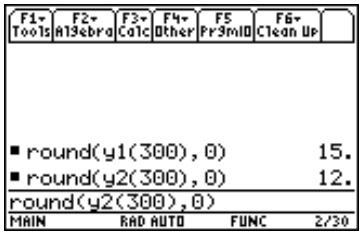Steps and keystrokes	Display
26. Display the **Y= Editor** and turn all the **y(x)** functions off. From F5, select **3:Functions Off**, not **1:All Off**. Plots 2 and 3 are still selected. Press ◆ [Y=] F5 3	
27. Use **ZoomData** to graph the residuals. □ marks the MedMed residuals; + marks the LinReg residuals. Press F2 9	
28. Display the Home screen. Press HOME	
29. Use the MedMed (**y1(x)**) and LinReg (**y2(x)**) regression equations to calculate values for x = 300 (300,000 population). The **round** function (2nd [MATH] 1 3) ensures that results show an integer number of buildings. After calculating the first result, edit the entry line to change **y1** to **y2**. Press 2nd [MATH] 1 3 Y1 (300) , 0) ENTER ▶ ◀ (eight times) ← 2 ENTER	

Downloaded from www.Manualslib.com manuals search engine

Programming


Write a program that prompts the user to enter an integer, sums all integers from 1 to the entered integer, and displays the result.

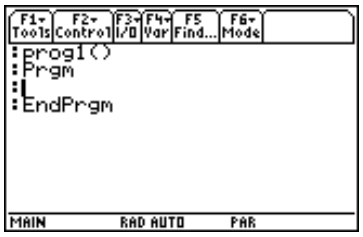Steps and keystrokes	Display
1. Use APPS to display the **Program Editor**. Create a new program. Press 3	
2. Type **PROG1** (with no spaces) as the name of the new program variable. Press ▼ ▼ PROG alpha 1	
3. Display the "template" for a new program. The program name, **Prgm**, and **EndPrgm** are shown automatically. After typing in an input box such as Variable, you must press ENTER twice. Press ENTER twice.	

Downloaded from www.Manualslib.com manuals search engine

Steps and keystrokes	Display

4. Type the following program lines.

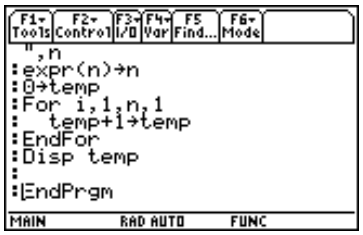

`Request "Enter an integer",n`

Displays a dialog box that prompts "Enter an integer", waits for the user to enter a value, and stores it (as a string) to variable n.

`expr(n)→n`

Converts the string to a numeric expression.

`0→temp`

Creates a variable named temp and initializes it to **0**.

`For i,1,n,1`

Starts a *For loop* based on variable i. First time through the loop, i = 1. At end of loop, i is incremented by 1. Loop continues until i > n.

`temp+i→temp`

Adds current value of i to temp.

`EndFor`



Marks the end of the *For loop*.

`Disp temp`


Displays the final value of temp.

Type the program lines as shown. Press ENTER at the end of each line.

Downloaded from www.Manualslib.com manuals search engine

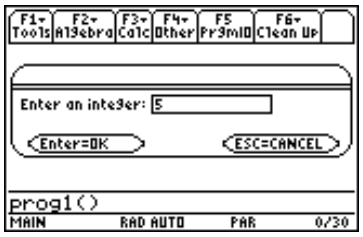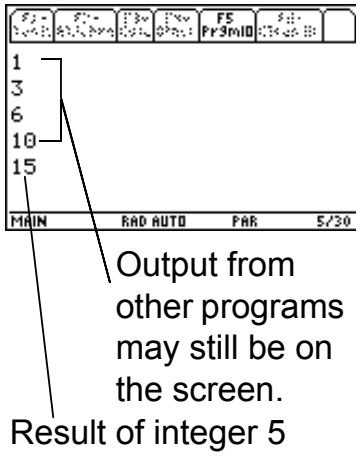
Steps and keystrokes	Display
5. Go to the Home screen. Enter the program name, followed by a set of parentheses. You must include ( ) even when there are no arguments for the program. The program displays a dialog box with the prompt specified in the program. Press HOME 2nd [a-lock] PROG alpha 1 ( ) ENTER	prog1()
6. Type 5 in the displayed dialog box. Press 5	
7. Continue with the program. The **Disp** command displays the result on the Program I/O screen. The result is the sum of the integers from 1 through 5. Although the Program I/O screen looks similar to the Home screen, it is for program input and output only. You cannot perform calculations on the Program I/O screen. Press ENTER twice	

Downloaded from www.Manualslib.com manuals search engine

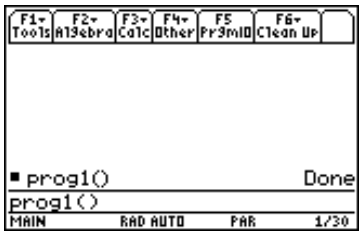
Steps and keystrokes	Display
8. Leave the Program I/O screen and return to the Home screen. You can also press [ESC], [2nd] [QUIT], or [HOME] to return to the Home screen. Press [F5]	

Text Operations

Start a new **Text Editor** session. Then practice using the **Text Editor** by typing whatever text you want. As you type, practice moving the text cursor and correcting any typos you may enter.

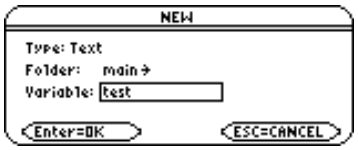Steps and keystrokes	Display
1. Start a new session of the **Text Editor**. Press 3	
2. Create a text variable called **TEST**, which will automatically store any text you enter in the new session. Use the **MAIN** folder, shown as the default on the **NEW** dialog box. After typing in an input box such as **Variable**, you must press [ENTER] twice. Press ▼ TEST [ENTER] [ENTER]	

Downloaded from www.Manualslib.com manuals search engine


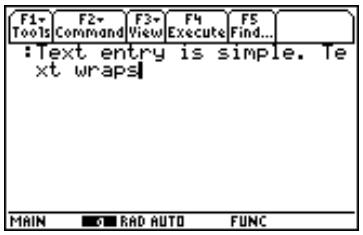
Steps and keystrokes	Display
3. Type some sample text. • To type a single uppercase letter, press [⬆] and then the letter. - To type a space, press [alpha] [␣] (alpha function of the [(-)] key). - To type a period, press [alpha] to turn alpha-lock off, press [.], and then press [2nd] [a-lock] to turn alpha-lock on again. Practice editing your text by using: • The cursor pad to move the text cursor. • [←] or [◆] [DEL] to delete the character to the left or right of the cursor, respectively. Press [2nd] [a-lock] and type anything you want.	
4. Leave the **Text Editor** and display the Home screen. Your text session was stored automatically as you typed. Therefore, you do not need to save the session manually before exiting the **Text Editor**. Press [HOME]	

Downloaded from www.Manualslib.com manuals search engine




Steps and keystrokes	Display
5. Return to the current session on the **Text Editor**. Notice that the displayed session is exactly the same as you left it. Press 2nd [⊞]	

Numeric Solver


Consider the equation a=(m2−m1)/(m2+m1)∗g, where the known values are m2=10 and g=9.8. If you assume that a=1/3 g, find the value of m1.

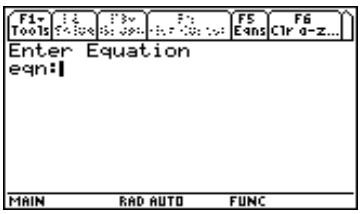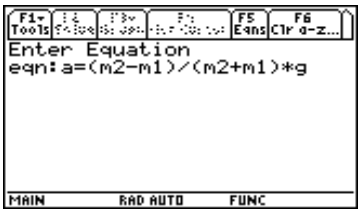Steps and keystrokes	Display
1. Use APPS to display the **Numeric Solver**.	
2. Enter the equation. When you press ENTER or ⊙, the screen lists the variables used in the equation. Press alpha A = (alpha M2 − alpha M1) ÷ (alpha M2 + alpha M1) × alpha G ENTER	

Downloaded from www.Manualslib.com manuals search engine

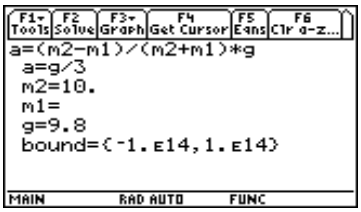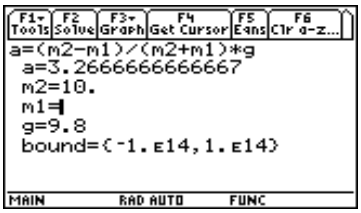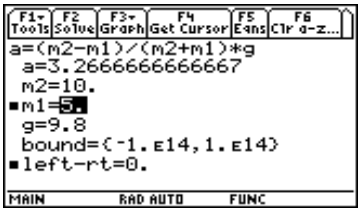Steps and keystrokes	Display
3. Enter values for each variable, except the unknown variable m1. Define m2 and g first. Then define a. (You must define g before you can define a in terms of g.) Accept the default for bound. If a variable has been defined previously, its value is shown as a default. Press ▼ 10 ▼ ▼ 9.8 ▲ ▲ ▲ alpha G ÷ 3	
4. Move the cursor to the unknown variable m1. Optionally, you can enter an initial guess for m1. Even if you enter a value for all variables, the Numeric Solver solves for the variable marked by the cursor. Press ▼ ▼	 g/3 is evaluated when you move the cursor off the line.
5. Solve for the unknown variable. To check the solution's accuracy, the left and right sides of the equation are evaluated separately. The difference is shown as left-rt. If the solution is precise, left-rt=0. Press F2	 ■ marks the calculated values.



Downloaded from www.Manualslib.com manuals search engine

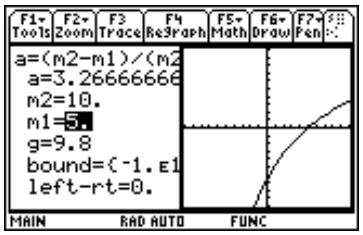Steps and keystrokes	Display
6. Graph the solution using a **ZoomStd** viewing window. The graph is displayed in a split screen. You can explore the graph by tracing, zooming, etc. The variable marked by the cursor (unknown variable m1) is on the x axis, and left-rt is on the y axis. Press [F3] 3	
7. Return to the **Numeric Solver** and exit the split screen. You can press [ENTER] or ⊖ to redisplay the list of variables. Press [2nd] [⇔] [F3] 2	



Downloaded from www.Manualslib.com manuals search engine

Number Bases


Calculate 10 binary (base 2) + F hexadecimal (base 16) + 10 decimal (base 10). Then, use the ▸ operator to convert an integer from one base to another. Finally, see how changing the Base mode affects the displayed results.

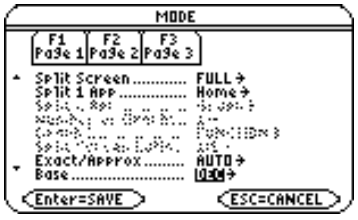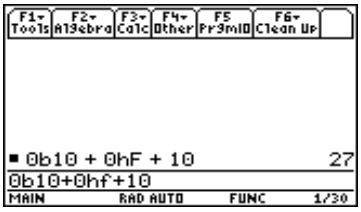Steps and keystrokes	Display
1. Display the **MODE** dialog box, Page 2. For **Base** mode, select **DEC** as the default number base. Integer results are displayed according to the **Base** mode. Fractional and floating-point results are always displayed in decimal form. Press MODE F2 (use ▾ to move to **Base** mode) ▸ 1 ENTER	
2. Calculate 0b10+0hF+10. To enter a binary or hex number, you must use the 0b or 0h prefix (zero and the letter B or H). Otherwise, the entry is treated as a decimal number. **Note:** The 0b or 0h prefix is a zero, not the letter O, followed by B or H. Press 0 alpha B 10 + 0 2nd [a-lock] HF alpha + 10 ENTER	

Downloaded from www.Manualslib.com manuals search engine

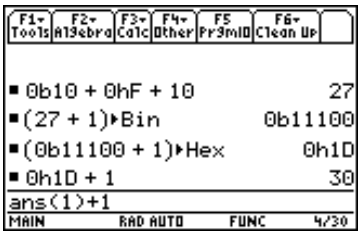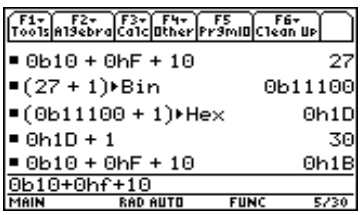Steps and keystrokes	Display
3. Add 1 to the result and convert it to binary. 2nd [▶] displays the ▶ conversion operator. Press + 1 2nd [▶] 2nd [a-lock] BIN alpha ENTER	
4. Add 1 to the result and convert it to hexadecimal. Press + 1 2nd [▶] 2nd [a-lock] HEX alpha ENTER	
5. Add 1 to the result and leave it in the default decimal base. Results use the 0b or 0h prefix to identify the base. Press + 1 ENTER	
6. Change the **Base** mode to **HEX**. When **Base = HEX** or **BIN**, the magnitude of a result is restricted to certain size limitations. Press MODE F2 (use ▼ to move to **Base** mode) ▶ 2 ENTER	
7. Calculate 0b10+0hF+10. Press 0 alpha B 10 + 0 2nd [a-lock] HF alpha + 10 ENTER	

Downloaded from www.Manualslib.com manuals search engine



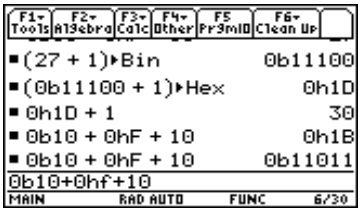
Steps and keystrokes	Display
8. Change the **Base** mode to **BIN**. Press MODE F2 (use ⊙ to move to **Base** mode) ⊙ 3 ENTER	
9. Re-enter 0b10+0hF+10. Press ENTER	

Memory and Variable Management



Assign values to a variety of variable data types. Use the **VAR-LINK** screen to view a list of the defined variables. Then move a variable to the user data archive memory and explore the ways in which you can and cannot access an archived variable. (Archived

Downloaded from www.Manualslib.com manuals search engine

variables are locked automatically.) Finally, unarchive the variable and delete the unused variables so that they will not take up memory.

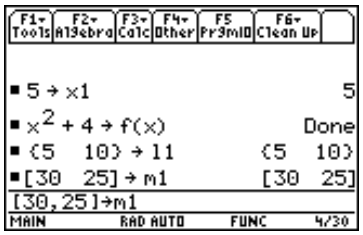

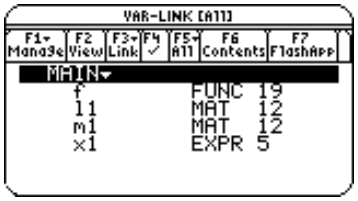
Steps and keystrokes	Display
1. From the Home screen, assign variables with the following variable types. Expression: 5 →x1 Function: x^2+4 →f(x) List: {5,10} →L1 Matrix: [30,25] →m1 Press HOME CLEAR 5 STO▸ X1 ENTER X ^ 2 + 4 STO▸ alpha F (X) ENTER 2nd [{] 5 , 10 2nd [}] STO▸ alpha L1 ENTER 2nd [[] 30 , 25 2nd []] STO▸ alpha M1 ENTER	
2. Suppose you start to perform an operation using a function variable but can't remember its name. Press 5 ×	
3. Display the **VAR-LINK** screen. This example assumes that the variables assigned above are the only ones defined. Press 2nd [VAR-LINK]	

Downloaded from www.Manualslib.com manuals search engine

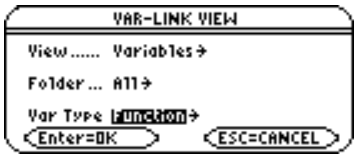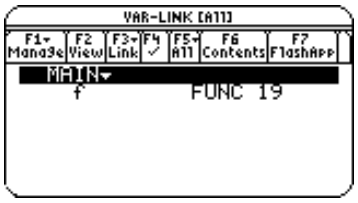
Steps and keystrokes	Display
4. Change the screen's view to show only function variables. Although this may not seem particularly useful in an example with four variables, consider how useful it could be if there were many variables of all different types. Press F2 ▼ ▼ ▶ 5 ENTER	 
5. Highlight the **f** function variable, and view its contents. Notice that the function was assigned using **f(x)** but is listed as **f** on the screen. Press ▼ 2nd [F6]	
6. Close the Contents window. Press ESC	
7. With the **f** variable still highlighted, close **VAR-LINK** to paste the contents of the variable to the entry line. Notice that "(" is pasted. Press ENTER	5∗f(
8. Complete the operation. Press 2) ENTER	5∗f(2)

Downloaded from www.Manualslib.com manuals search engine

Archiving a variable

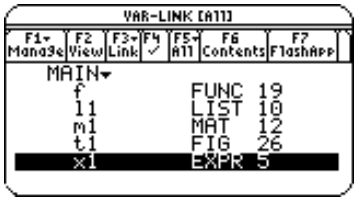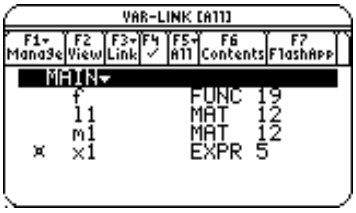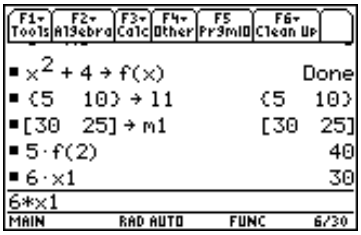
Steps and keystrokes	Display
1. Redisplay **VAR-LINK**, and highlight the variable you want to archive. The previous change in view is no longer in effect. The screen lists all defined variables. Press 2nd [VAR-LINK] (use ▼ to highlight **x1**)	
2. Use the F1 **Manage** toolbar menu to archive the variable. ⌑ indicates the variable is archived. Press F1 8	 
3. Return to the Home screen and use the archived variable in a calculation. Press HOME 6 × X1 ENTER	

Downloaded from www.Manualslib.com manuals search engine

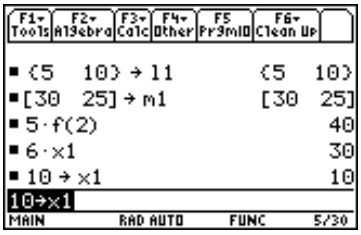
Steps and keystrokes	Display
4. Attempt to store a different value to the archived variable. Press 10 [STO▸] X1 [ENTER]	
5. Cancel the error message. Press [ESC]	
6. Use **VAR-LINK** to unarchive the variable. Press [2nd] [VAR-LINK] (use ⊙ to highlight **x1**) [F1] 9	
7. Return to the Home screen and store a different value to the unarchived variable. Press [HOME] [ENTER]	

Downloaded from www.Manualslib.com manuals search engine

Deleting variables

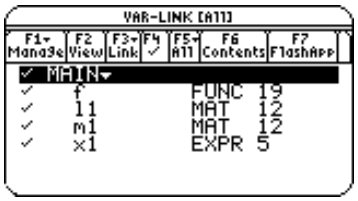Steps and keystrokes	Display
1. Display **VAR-LINK**, and use the F5 **All** toolbar menu to select all variables. A ✓ mark indicates items that are selected. Notice that this also selected the **MAIN** folder. **Note:** Instead of using F5 (if you don't want to delete all your variables), you can select individual variables. Highlight each variable to delete and press F4. Press F5 1	 
2. Use F1 to delete. **Note:** You can press ← (instead of F1 **1**) to delete the marked variables. Press F1 1	
3. Confirm the deletion. Press ENTER	

Downloaded from www.Manualslib.com manuals search engine

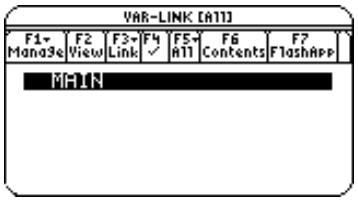Steps and keystrokes	Display
4. Because F5 **1** also selected the **MAIN** folder, an error message states that you cannot delete the **MAIN** folder. Acknowledge the message. When **VAR-LINK** is redisplayed, the deleted variables are not listed. Press ENTER	
5. Close **VAR-LINK** and return to the current application (Home screen in this example). When you use ESC (instead of ENTER) to close **VAR-LINK**, the highlighted name is not pasted to the entry line. Press ESC	

Downloaded from www.Manualslib.com manuals search engine

Operating the Calculator

Turning the Calculator On and Off

You can turn your graphing calculator on and off manually by using the [ON] and [2nd] [OFF] (or [♦] [OFF]) keys. To prolong battery life, the APD™ (Automatic Power Down™) feature lets the calculator turn itself off automatically.

Turning the Calculator On

Press [ON].

- If you turned the unit off by pressing [2nd] [OFF], the unit returns to either the Apps desktop or the Home screen.
- If you turned the unit off by pressing [♦] [OFF] or if the unit turned itself off through APD, the unit returns to whichever application you used last.

Downloaded from www.Manualslib.com manuals search engine

Turning the Calculator Off

You can use either of the following keys to turn off your graphing calculator.

Press:	Description
2nd [OFF] (press 2nd and then press [OFF])	Settings and memory contents are retained by the Constant Memory™ feature. However: • You cannot use 2nd [OFF] if an error message is displayed. • When you turn the calculator on again, it displays either the Home screen or the Apps desktop (regardless of the last application you used).
♦ [OFF] (press ♦ and then press [OFF])	Similar to 2nd [OFF] except: • You can use ♦ [OFF] if an error message is displayed. • When you turn the calculator on again, it will be exactly as you left it.

Note: [OFF] is the second function of the ON key.

APD (Automatic Power Down)

After several minutes without any activity, the calculator turns itself off automatically. This feature is called APD.

When you press ON, the calculator will be exactly as you left it.

- The display, cursor, and any error conditions are exactly as you left them.
- All settings and memory contents are retained.

Downloaded from www.Manualslib.com manuals search engine

APD does not occur if a calculation or program is in progress, unless the program is paused. If a program is running, but waiting for a key press, APD will occur after several minutes of inactivity.


Setting the Display Contrast

The brightness and contrast of the display depend on room lighting, battery freshness, viewing angle, and the adjustment of the display contrast. The contrast setting is retained in memory when the graphing calculator is turned off.

Adjusting the Display Contrast

You can adjust the display contrast to suit your viewing angle and lighting conditions.

To:	Press and hold both:
Decrease (lighten) the contrast	♦ and −
Increase (darken) the contrast	♦ and +

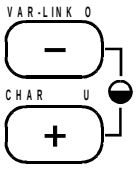

Contrast keys

If you press and hold ♦ − or ♦ + too long, the display may go completely black or blank. To make finer adjustments, hold ♦ and then tap − or +.

Downloaded from www.Manualslib.com manuals search engine

When to Replace Batteries

As the batteries get low, the display begins to dim (especially during calculations) and you must increase the contrast. If you have to increase the contrast frequently, replace the four alkaline batteries.

Note: The display may be very dark after you change batteries. Use ◆ − to lighten the display.


The status line along the bottom of the display also gives battery information.

Indicator in status line	Description
LOW BATT	Batteries are low.
LOW BATT	Replace batteries as soon as possible.

The TI-89 Titanium Keyboard

Most keys can perform two or more functions, depending on whether you first press a modifier key.

Downloaded from www.Manualslib.com manuals search engine

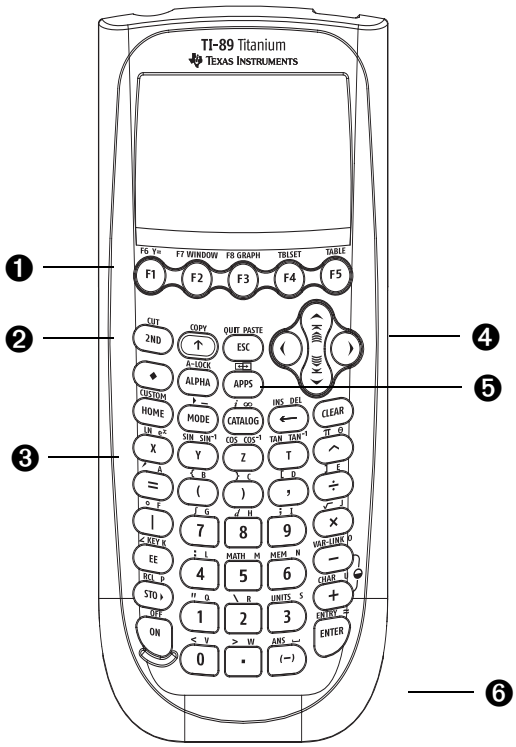

❶ [F1] – [2nd] [F8] open toolbar menus. Select applications (when used with [◆])
❷ [2nd], [◆], [⬆], and [alpha] add functionality by increasing the available key commands.
❸ X, Y, and Z are often used in symbolic calculations.

❹ ◖, ◗, ◠, and ◡ move the cursor.
❺ [APPS] lets you select an application.
❻ [ENTER] evaluates an expression, executes an instruction, selects a menu item, etc.

Downloaded from www.Manualslib.com manuals search engine

Modifier Keys

Modifier Keys

Modifier	Description
[2nd] (second)	Accesses the second function of the next key you press. On the keyboard, these are printed in the same color as the [2nd] key.
[♦] (diamond)	Activates keys that select certain applications, menu items, and other operations from the keyboard. On the keyboard, these are printed in the same color as the [♦] key.
[↑] (shift)	Types an uppercase character for the next letter key you press. [↑] is also used with ▶ and ◀ to highlight characters in the entry line for editing purposes.
[alpha]	Used to type alphabetic letters, including a space character. On the keyboard, these are printed in the same color as the [alpha] key.


Note: Information is available about using [↑] and [alpha].

Examples of [2nd] and [diamond] Modifiers


The [ESC] key is one of several keys that can perform three operations, depending on whether you first press [2nd] or [♦].

The following TI-89 Titanium example shows using the [2nd] or [♦] modifier key with the [ESC] key.

Downloaded from www.Manualslib.com manuals search engine

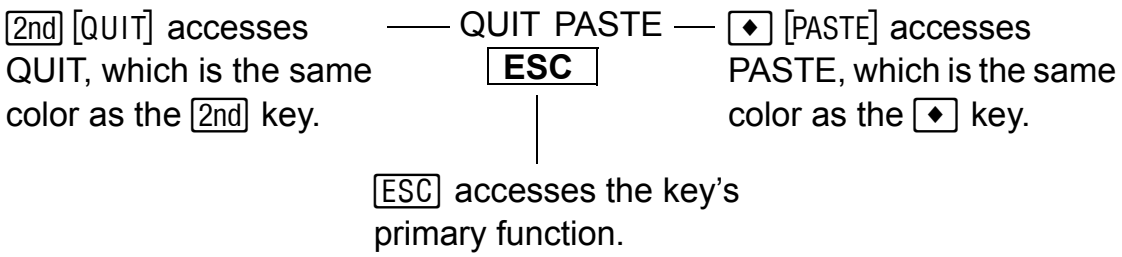
2nd [QUIT] accesses QUIT, which is the same color as the 2nd key.
QUIT PASTE
ESC
[PASTE] accesses PASTE, which is the same color as the key.
ESC accesses the key's primary function.

Some keys perform only one additional operation, which may require either 2nd or , depending on the color in which the operation is printed on the keyboard and where it is positioned above the key.

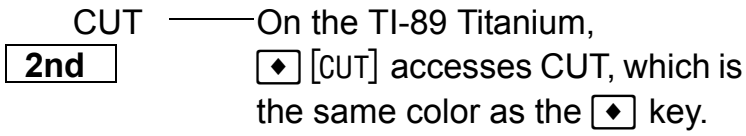

When you press a modifier such as 2nd or , a 2ND or ◆ indicator appears in the status line at the bottom of the display. If you press a modifier by accident, press it again (or press ESC) to cancel its effect.

Other Important Keys You Need to Be Familiar With

Key	Description
[Y=]	Displays the Y= Editor.
[WINDOW]	Displays the Window Editor.
[GRAPH]	Displays the Graph screen.
[TBLSET]	Sets parameters for the Table screen.

Downloaded from www.Manualslib.com manuals search engine

Key	Description
◆ [TABLE]	Displays the Table screen.
: ◆ [CUT] ◆ [COPY] ◆ [PASTE]	These keys let you edit entered information by performing a cut, copy, or paste operation.
2nd [⇆]	Toggles between the last two chosen Apps or between split screen portions.
2nd [CUSTOM]	Toggles the custom menu on and off.
2nd [▶]	Converts measurement units.
◆ [_]	Designates a measurement unit.
←	Deletes the character to the left of the cursor (backspaces).
2nd [INS]	Toggles between insert and overtype mode for entering information.
◆ [DEL]	Deletes the character to the right of the cursor.
[|]	Enters the "*with*" operator, which is used in symbolic calculations.
2nd [∫], 2nd [d]	Performs integrations and derivatives.
2nd [∠]	Designates an angle in polar, cylindrical, and spherical coordinates.
2nd [MATH]	Displays the MATH menu.

Downloaded from www.Manualslib.com manuals search engine

Key	Description
2nd [MEM]	Displays the MEMORY screen.
2nd [VAR-LINK]	Displays the VAR-LINK screen for managing variables and Flash applications.
2nd [RCL]	Recalls the contents of a variable.
2nd [UNITS]	Displays the UNITS dialog box.
2nd [CHAR]	Displays the CHAR menu, which lets you select Greek letters, international accented characters, etc.
2nd [ENTRY], 2nd [ANS]	Recalls the previous entry and the last answer, respectively.

Entering Alphabetic Characters

Alphabetic characters are used in expressions such as $\mathbf{x^2+y^2}$ to enter variable names and in the Text Editor (*Text Editor* module).

Entering a Letter Character on the TI-89 Titanium


The letters x, y, z, and t are commonly used in algebraic expressions. So that you can type them quickly, these letters are primary keys on the TI-89 Titanium keyboard.

X Y Z T

Downloaded from www.Manualslib.com manuals search engine

Other letters are available as the [alpha] function of another key, similar to the [2nd] and [♦] modifiers described in the previous section. For example:

[2nd] [′] types ′, which is the same color as the [2nd] key.



[alpha] [A] displays an A, which is the same color as the [alpha] key.

Typing Alphabetic Characters on the TI-89 Titanium

To:	Press:
Type a single lowercase alpha character.	[alpha] and then the letter key (status line shows)
Type a single uppercase alpha character.	[⬆] and then the letter key (status line shows ⬟)
Type a space.	[alpha] [␣] (alpha function of the [(-)] key)
Turn on lowercase alpha-lock.	[2nd] [a-lock] (status line shows)
Turn on uppercase ALPHA-lock.	[⬆] [a-lock] (status line shows)
Turn off alpha-lock.	[alpha] (turns off upper- and lowercase lock)

Notes:

Downloaded from www.Manualslib.com manuals search engine

- On the TI-89 Titanium, you do not need alpha or alpha-lock to type x, y, z, or t. But you must use ↑ or uppercase ALPHA-lock for X, Y, Z, or T.
- On the TI-89 Titanium, alpha-lock is always turned off when you change applications, such as going from the Text Editor to the Home screen.

On the TI-89 Titanium, while either type of alpha-lock is on:

- To type a period, comma, or other character that is the primary function of a key, you must turn alpha-lock off.
- To type a second function character such as 2nd [{], you do not need to turn alpha-lock off. After you type the character, alpha-lock remains on.

Automatic Alpha-Lock in TI-89 Titanium Dialog Boxes

There are certain times when you do not need to press alpha or 2nd [a-lock] to type alphabetic characters on the TI-89 Titanium. Automatic alpha-lock is turned on whenever a dialog box is first displayed. The automatic alpha-lock feature applies to these dialog boxes:

Dialog box	Alpha-lock
Catalog dialog box	All commands are listed in alphabetical order. Press a letter to go to the first command that begins with that letter.
Units dialog box	In each unit category, type the first letter of a unit or constant. See *Constants and Measurement Units* for more information.
Dialog boxes with entry fields	These include, but are not limited to: Create New Folder, Rename, and Save Copy As.

Downloaded from www.Manualslib.com manuals search engine

Note: To type a number, press [alpha] to turn alpha-lock off. Press [alpha] or [2nd] [a-lock] to resume typing letters.

Alpha-lock is *not* turned on in dialog boxes that require numeric-only entries. The dialog boxes that accept only numeric entries are: Resize Matrix, Zoom Factors, and Table Setup.

For Special Characters

Use the [2nd] [CHAR] menu to select from a variety of special characters. For more information, refer to “Entering Special Characters” in the *Text Editor* module.

Entering Numbers

The keypad lets you enter positive and negative numbers for your calculations. You can also enter numbers in scientific notation.

Entering a Negative Number


1. Press the negation key [(-)]. (Do not use the subtraction key [−].)
2. Type the number.

To see how your graphing calculator evaluates a negation in relation to other functions, refer to the Equation Operating System (EOS™) hierarchy in the *Technical Reference*

Downloaded from www.Manualslib.com manuals search engine

module. For example, it is important to know that functions such as x^2 are evaluated before negation.

Use [(] and [)] to include parentheses if you have any doubt about how a negation will be evaluated.

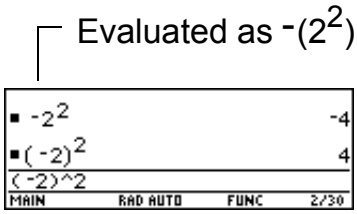

If you use [−] instead of [(-)] (or vice versa), you may get an error message or you may get unexpected results. For example:

- 9 [×] [(-)] 7 = -63
  – but –
  9 [×] [−] 7 displays an error message.
- 6 [−] 2 = 4
  – but –
  6 [(-)] 2 = -12 since it is interpreted as 6(-2), implied multiplication.
- [(-)] 2 [+] 4 = 2
  – but –
  [−] 2 [+] 4 subtracts 2 from the previous answer and then adds 4.

Important: Use [−] for subtraction and use [(-)] for negation.

Entering a Number in Scientific Notation


1. Type the part of the number that precedes the exponent. This value can be an expression.

Downloaded from www.Manualslib.com manuals search engine

2. Press:
   EE
   E appears in the display.
3. Type the exponent as an integer with up to 3 digits. You can use a negative exponent.

Entering a number in scientific notation does not cause the answers to be displayed in scientific or engineering notation.

The display format is determined by the mode settings and the magnitude of the number.



Represents 123.45×10^{-2}

Entering Expressions and Instructions

You perform a calculation by evaluating an expression. You initiate an action by executing the appropriate instruction. Expressions are calculated and results are displayed according to the mode settings.

Downloaded from www.Manualslib.com manuals search engine

Definitions

Expression	Consists of numbers, variables, operators, functions, and their arguments that evaluate to a single answer. For example: πr^2+3. • Enter an expression in the same order that it normally is written. • In most places where you are required to enter a value, you can enter an expression.
Operator	Performs an operation such as +, –, ✳, ^. • Operators require an argument before and after the operator. For example: 4+5 and 5^2.
Function	Returns a value. • Functions require one or more arguments (enclosed in parentheses) after the function. For example: $\sqrt{}(5)$ and **min(5,8)**.
Instruction	Initiates an action. • Instructions cannot be used in expressions. • Some instructions do not require an argument. For example: ClrHome. • Some require one or more arguments. For example: **Circle 0,0,5**. **Note:** For instructions, do not put the arguments in parentheses.

Notes:

- The *Technical Reference* module describes all of the built-in functions and instructions.

Downloaded from www.Manualslib.com manuals search engine

- This guidebook uses the word command as a generic reference to both functions and instructions.

Implied Multiplication

The graphing calculator recognizes implied multiplication, provided it does not conflict with a reserved notation.

	If you enter:	The calculator interprets it as:
Valid	2π	2∗π
	4 sin(46)	4∗sin(46)
	5(1+2) or (1+2)5	5∗(1+2) or (1+2)∗5
	[1,2]a	[a 2a]
	2(a)	2∗a
Invalid	xy	Single variable named xy
	a(2)	Function call
	a[1,2]	Matrix index to element a[1,2]

Parentheses

Expressions are evaluated according to the Equation Operating System (EOS™) hierarchy described in the *Technical Reference* module. To change the order of evaluation or just to ensure that an expression is evaluated in the order you require, use parentheses.

Calculations inside a pair of parentheses are completed first. For example, in 4(1+2), EOS first evaluates (1+2) and then multiplies the answer by 4.

Downloaded from www.Manualslib.com manuals search engine

Entering an Expression

Type the expression, and then press [ENTER] to evaluate it. To enter a function or instruction name on the entry line, you can:

- Press its key, if available. For example, press:[2nd] [SIN]

  – or –

- Select it from a menu, if available. For example, select **2:abs** from the Number submenu of the MATH menu.

  – or –

- Type the name letter-by-letter from the keyboard. (On the TI-89 Titanium, use [alpha] and [2nd] [a-lock] to type letters.) You can use any mixture of uppercase or lowercase letters. For example, type **sin(** or **Sin(**.


Example

Calculate $3.76 \div (-7.9 + \sqrt{5}) + 2\log 45$.

Type the function name in this example.

Downloaded from www.Manualslib.com manuals search engine

TI-89 Titanium

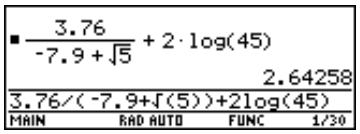
Press	Display
3.76 [÷] [(] [(-)] 7.9 [+] [2nd] [√]	3.76/(⁻7.9+√([2nd] [√] inserts √(because its argument must be in parentheses.
5 [)] [)]	3.76/(⁻7.9+√(5)) Use [)] once to close √(5) and again to close (⁻7.9 + √5).
[+] 2 [2nd] [a-lock] LOG [alpha] [(] 45 [)]	3.76/(⁻7.9+√(5))+2log(45) log requires ( ) around its argument.
[ENTER]	

Note: You can also select **log** by using [CATALOG]

Downloaded from www.Manualslib.com manuals search engine

Entering Multiple Expressions on a Line

To enter more than one expression or instruction at a time, separate them with a colon by pressing 2nd [:].

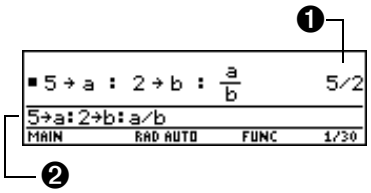


❶ Displays last result only.
❷ → is displayed when you press STO▶ to store a value to a variable.

If an Entry or Answer Is Too Long for One Line

In the history area, if both the entry and its answer cannot be displayed on one line, the answer is displayed on the next line.

If an entry or answer is too long to fit on one line, ▶ is displayed at the end of the line.

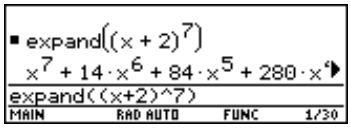


To view the entire entry or answer:

1. Press ▲ to move the cursor from the entry line up into the history area. This highlights the last answer.

Downloaded from www.Manualslib.com manuals search engine

2. As necessary, use ▲ and ▼ to highlight the entry or answer you want to view. For example, ▲ moves from answer to entry, up through the history area.

3. Use ▶ and ◀ or 2nd ▶ and 2nd ◀ to scroll right and left.

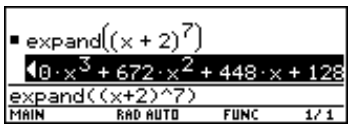

   Note: When you scroll to the right, ◀ is displayed at the beginning of the line.

4. To return to the entry line, press ESC.

Continuing a Calculation

When you press ENTER to evaluate an expression, the graphing calculator leaves the expression on the entry line and highlights it. You can continue to use the last answer or enter a new expression.


If you press:	The calculator:
+, −, ×, ÷, ^, or STO▸	Replaces the entry line with the variable **ans(1)**, which lets you use the last answer as the beginning of another expression.
Any other key	Erases the entry line and begins a new entry.

Example

Calculate 3.76 ÷ (-7.9 + √5). Then add 2 log 45 to the result.

Downloaded from www.Manualslib.com manuals search engine


TI-89 Titanium

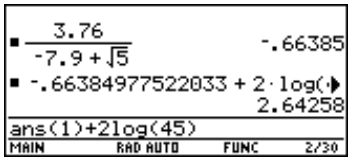Press	Display
3.76 [÷] [(] [(-)] 7.9 [+] [2nd] [√] 5 [)] [)] [ENTER] [+] 2 [2nd] [a-lock] LOG [alpha] [(] 45 [)] [ENTER]	 When you press [+], the entry line is replaced with the variable **ans(1)**, which contains the last answer.

Stopping a Calculation

When a calculation is in progress, BUSY appears on the right end of the status line. To stop the calculation, press [ON].

There may be a delay before the Break message is displayed.

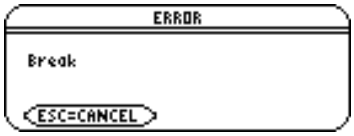

Press [ESC] to return to the current application.

Formats of Displayed Results

A result may be calculated and displayed in any of several formats. This section describes the modes and their settings that affect the display formats. You can check or change your current mode settings.

Downloaded from www.Manualslib.com manuals search engine

Pretty Print Mode

By default, **Pretty Print = ON**. Exponents, roots, fractions, etc., are displayed in the same form in which they are traditionally written. You can use MODE to turn pretty print off and on.

Pretty Print	
ON	**OFF**
π^2, $\frac{\pi}{2}$, $\sqrt{\frac{x-3}{2}}$	π^2, π/2, √((x–3)/2)

The entry line does not show an expression in pretty print. If pretty print is turned on, the history area will show both the entry and its result in pretty print after you press ENTER.

Exact/Approx Mode


By default, **Exact/Approx = AUTO**. You can use MODE to select from three settings.

Because AUTO is a combination of the other two settings, you should be familiar with all three settings.




Downloaded from www.Manualslib.com manuals search engine

EXACT — Any result that is not a whole number is displayed in a fractional or symbolic form (1/2, π, $\sqrt{2}$, etc.).

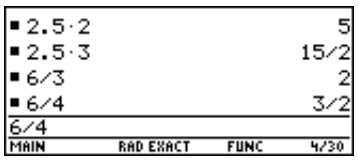


Shows whole-number results.

Shows simplified fractional results.

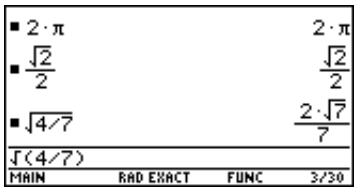

Shows symbolic π.

Shows symbolic form of roots that cannot be evaluated to a whole number.

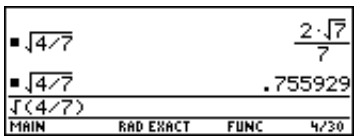


Press ♦ ENTER to temporarily override the EXACT setting and display a floating-point result.

Note: By retaining fractional and symbolic forms, EXACT reduces rounding errors that could be introduced by intermediate results in chained calculations.


Downloaded from www.Manualslib.com manuals search engine

APPROXIMATE — All numeric results, where possible, are displayed in floating-point (decimal) form.

Note: Results are rounded to the precision of your graphing calculator and displayed according to current mode settings.

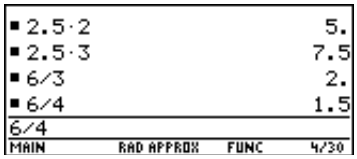


Fractional results are evaluated numerically.

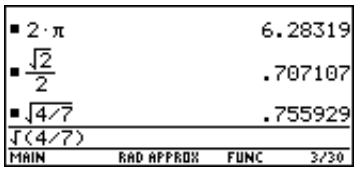

Symbolic forms, where possible, are evaluated numerically

Because undefined variables cannot be evaluated, they are treated algebraically. For example, if the variable r is undefined, $\pi r^2 = 3.14159 \cdot r^2$.

AUTO — Uses the EXACT form where possible, but uses the APPROXIMATE form when your entry contains a decimal point. Also, certain functions may display APPROXIMATE results even if your entry does not contain a decimal point.

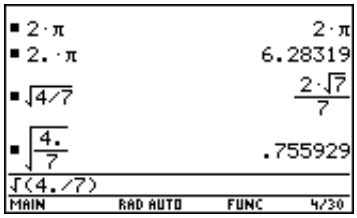

A decimal in the entry forces a floating-point result.

Downloaded from www.Manualslib.com manuals search engine

Note: To retain an EXACT form, use fractions instead of decimals. For example, use 3/2 instead of 1.5.

The following chart compares the three settings.

Entry	Exact Result	Approximate Result	Auto Result
8/4	2	2.	2
8/6	4/3	1.33333	4/3
8.5∗3	51/2	25.5	25.5
√(2)/2	$\frac{\sqrt{2}}{2}$	.707107	$\frac{\sqrt{2}}{2}$
π∗2	2·π	6.28319	2·π
π∗2.	2·π	6.28319	6.28319

— A decimal in the entry forces a floating-point result in AUTO.

Note: To evaluate an entry in APPROXIMATE form, regardless of the current setting, press ◆ ENTER.

Display Digits Mode

By default, **Display Digits = FLOAT 6**, which means that results are rounded to a maximum of six digits. You can use MODE to select different settings. The settings apply to all exponential formats.

Downloaded from www.Manualslib.com manuals search engine

Internally, the calculator calculates and retains all decimal results with up to 14 significant digits (although a maximum of 12 are displayed).

Setting	Example		Description
FIX (0–12)	123. 123.5 123.46 123.457	(FIX 0) (FIX 1) (FIX 2) (FIX 3)	Results are rounded to the selected number of decimal places.
FLOAT	123.456789012		Number of decimal places varies, depending on the result.
FLOAT (1–12)	1.E 2 1.2E 2 123. 123.5 123.46 123.457	(FLOAT 1) (FLOAT 2) (FLOAT 3) (FLOAT 4) (FLOAT 5) (FLOAT 6)	Results are rounded to the total number of selected digits.

Notes:

- Regardless of the **Display Digits** setting, the full value is used for internal floating-point calculations to ensure maximum accuracy.
- A result is automatically shown in scientific notation if its magnitude cannot be displayed in the selected number of digits.

Exponential Format Mode

By default, **Exponential Format = NORMAL**. You can use MODE to select from three settings.



Downloaded from www.Manualslib.com manuals search engine

Setting	Example	Description
NORMAL	12345.6	If a result cannot be displayed in the number of digits specified by the Display Digits mode, the calculator switches from NORMAL to SCIENTIFIC for that result only.
SCIENTIFIC	1.23456E 4 ❶ ❷	1.23456×10^4
ENGINEERING	1.23456E 3 ❸ ❹	12.3456×10^3

❶ Always 1 digit to the left of the decimal point.
❷ Exponent (power of 10).

❸ May have 1, 2, or 3 digits to the left of the decimal point.
❹ Exponent is a multiple of 3.

Note: In the history area, a number in an entry is displayed in SCIENTIFIC if its absolute value is less than .001.

Editing an Expression in the Entry Line


Knowing how to edit an entry can be a real time-saver. If you make an error while typing an expression, it's often easier to correct the mistake than to retype the entire expression.

Downloaded from www.Manualslib.com manuals search engine

Removing the Highlight from the Previous Entry

After you press ENTER to evaluate an expression, the calculator leaves that expression on the entry line and highlights it. To edit the expression, you must first remove the highlight; otherwise, you may clear the expression accidentally by typing over it.

To remove the highlight, move the cursor toward the side of the expression you want to edit.

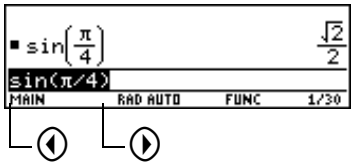

◀ moves the cursor to the beginning.
▶ moves the cursor to the end of the expression.

Moving the Cursor

After removing the highlight, move the cursor to the applicable position within the expression.

To move the cursor:	Press:	
Left or right within an expression.	◀ or ▶	Hold the pad to repeat the movement.
To the beginning of the expression.	2nd ◀	
To the end of the expression.	2nd ▶	

Note: If you accidentally press ▲ instead of ◀ or ▶, the cursor moves up into the history area. Press ESC or press ▼ until the cursor returns to the entry line.

Downloaded from www.Manualslib.com manuals search engine

Deleting a Character

To delete:	Press:	
The character to the left of the cursor.	←	Hold ← to delete multiple characters.
The character to the right of the cursor.	◆ ←	
All characters to the right of the cursor.	CLEAR (once only)	If there are no characters to the right of the cursor, CLEAR erases the entire entry line.

Clearing the Entry Line

To clear the entry line, press:

- CLEAR if the cursor is at the beginning or end of the entry line.



  – or –

- CLEAR CLEAR if the cursor is not at the beginning or end of the entry line. The first press deletes all characters to the right of the cursor, and the second clears the entry line.

Downloaded from www.Manualslib.com manuals search engine

Inserting or Overtyping a Character

The calculator has both an insert and an overtype mode. By default, the calculator is in the insert mode. To toggle between the insert and overtype modes, press [2nd] [INS].

If in:	The next character you type:
	Will be inserted at the cursor.
	Will replace the highlighted character.

Note: Look at the cursor to see if you're in insert or overtype mode.


Replacing or Deleting Multiple Characters

First, highlight the applicable characters. Then, replace or delete all the highlighted characters.

Downloaded from www.Manualslib.com manuals search engine


To highlight multiple characters:

1. Move the cursor to either side of the characters you want to highlight.



To replace **sin(** with **cos(**, place the cursor beside **sin**.


2. Hold ⇧ and press ◀ or ▶ to highlight characters left or right of the cursor.



Hold ⇧ and press ▶ ▶ ▶ ▶.

To replace or delete the highlighted characters:

1. Type the new characters.
2. Press ←.



Note: When you highlight characters to replace, remember that some function keys automatically add an open parenthesis.

Menus

To leave the keyboard uncluttered, the calculator uses menus to access many operations. This section gives an overview of how to select an item from any menu. Specific menus

Downloaded from www.Manualslib.com manuals search engine

are described in the appropriate modules.

Displaying a Menu

Press:	To display:
F1, F2, etc.	A toolbar menu — Drops down from the toolbar at the top of most application screens. Lets you select operations useful for that application.
APPS	**Apps desktop** or **APPLICATIONS** menu — Lets you select from a list of applications.
2nd [CHAR]	**CHAR** menu — Lets you select from categories of special characters (Greek, math, etc.).
2nd [MATH]	**MATH** menu — Lets you select from categories of math operations.
CATALOG	**CATALOG** menu — Lets you select from a complete, alphabetic list of built-in functions and instructions. Also lets you select user-defined functions or Flash application functions (if any have been defined or loaded).
2nd [CUSTOM]	**CUSTOM** menu — Lets you access a menu that you can customize to list any available function, instruction, or character. The calculator includes a default custom menu, which you can modify or redefine. Refer to the *Calculator Home Screen* and/or the *Programming* module for more information on the custom menu.

Downloaded from www.Manualslib.com manuals search engine

Selecting an Item from a Menu

To select an item from the displayed menu, either:

- Press the number or letter shown to the left of that item. For a letter on the TI-89 Titanium, press [alpha] and then a letter key.

  – or –

- Use the cursor pad ⊖ and ⊕ to highlight the item, and then press [ENTER]. (Note that pressing ⊕ from the first item moves the highlight to the last item, and vice versa.)



▼ indicates that a menu will drop down from the toolbar when you press [F2].


To select **factor**, press 2 or ⊖ [ENTER]. This closes the menu and inserts the function at the cursor location.

factor(


Items Ending with ▶ (Submenus)

If you select a menu item ending with ▶, a submenu is displayed. You then select an item from the submenu.

Downloaded from www.Manualslib.com manuals search engine

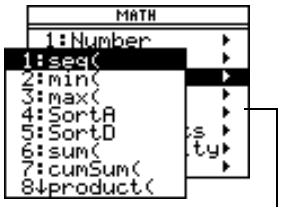

Because of limited screen size, the TI-89 Titanium overlaps these menus.

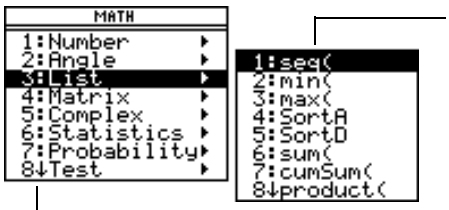

For example, List displays a submenu that lets you select a specific List function.

↓ indicates that you can use the cursor pad to scroll down for additional items.

For items that have a submenu, you can use the cursor pad as described below.

- To display the submenu for the highlighted item, press ▶. (This is the same as selecting that item.)
- To cancel the submenu without making a selection, press ◀. (This is the same as pressing ESC.)
- To wrap to the last menu item directly from the first menu item, press ▲. To wrap to the first menu item directly from the last menu item, press ▼.

Downloaded from www.Manualslib.com manuals search engine

Items Containing “. . .” (Dialog Boxes)

If you select a menu item containing “...” (ellipsis marks), a dialog box is displayed for you to enter additional information.



For example, **Save Copy As ...** displays a dialog box that prompts you to select a folder name and type a variable name.

→ indicates that you can press ▶ to display and select from a menu.

An input box indicates that you must type a value. (Alpha-lock is automatically turned on for the TI-89 Titanium.)

After typing in an input box such as Variable, you must press ENTER twice to save the information and close the dialog box.

Canceling a Menu

To cancel the current menu without making a selection, press ESC. Depending on whether any submenus are displayed, you may need to press ESC several times to cancel all displayed menus.

Downloaded from www.Manualslib.com manuals search engine

Moving from One Toolbar Menu to Another

To move from one toolbar menu to another without making a selection, either:

- Press the key (F1, F2, etc.) for the other toolbar menu.

  – or –

- Use the cursor pad to move to the next (press ▶) or previous (press ◀) toolbar menu. Pressing ▶ from the last menu moves to the first menu, and vice versa.

When using ▶, be sure that an item with a submenu is not highlighted. If so, ▶ displays that item's submenu instead of moving to the next toolbar menu.

Example: Selecting a Menu Item


Round the value of π to three decimal places. Starting from a clear entry line on the Home screen:


1. Press 2nd [MATH] to display the **MATH** menu.

2. Press **1** to display the **Number** submenu. (Or press ENTER since the first item is automatically highlighted.)

3. Press **3** to select **round**. (Or press ▼ ▼ and ENTER.)

4. Press 2nd [π] , **3**) and then ENTER to evaluate the expression.

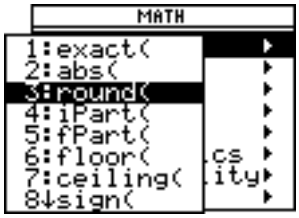

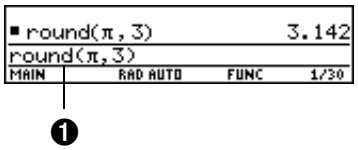

❶

❶ Selecting the function in Step 3 automatically typed **round(** on the entry line.

Downloaded from www.Manualslib.com manuals search engine

Selecting an Application

The graphing calculator has different applications that let you solve and explore a variety of problems. You can select an application from a menu, the Apps desktop, or you can access commonly used applications directly from the keyboard.

From the APPLICATIONS Menu

1. If the Apps desktop is off, press [APPS] to display a menu that lists the applications.

   Note: To cancel the menu without making a selection, press [ESC].

2. Select an application. Either:

   - Use the cursor pad ▼ or ▲ to highlight the application and then press [ENTER].

     – or –

   - Press the number or letter for that application.




Application:	Lets you:
FlashApps	Display a list of Flash applications, if any.
Y= Editor	Define, edit, and select functions or equations for graphing.
Window Editor	Set window dimensions for viewing a graph.
Graph	Display graphs.

Downloaded from www.Manualslib.com manuals search engine

Application:	Lets you:
Table	Display a table of variable values that correspond to an entered function.
Data/Matrix Editor	Enter and edit lists, data, and matrices. You can perform statistical calculations and graph statistical plots.
Program Editor	Enter and edit programs and functions.
Text Editor	Enter and edit a text session.
Numeric Solver	Enter an expression or equation, define values for all but one variable, and then solve for the unknown variable.
Home	Enter expressions and instructions, and perform calculations.

From the Apps Desktop

Press the first letter of the application name, or use the cursor keys to highlight an application icon on the Apps desktop and press ENTER. (If you press the first letter of the application and more than one application begins with that letter, the first one alphabetically is highlighted). The application either opens directly or displays a dialog box. (Your Apps desktop may vary from the one shown below.)

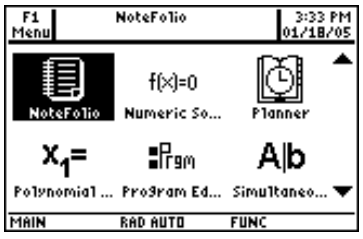

Downloaded from www.Manualslib.com manuals search engine

The most common dialog box lists these options for the application:

Option	Description
Current	Returns the screen displayed when you last viewed the App. (If there is no current file/variable for the selected App, this option defaults to New if you press [ENTER].)
Open	Lets you select an existing file.
New	Creates a new file with the name typed in the field.

Select an option and press [ENTER]. The application appears.

Note: The general term *variable* is used to refer to the application data files that you create.


Use any of these methods to return to the Apps desktop from within an application:

- Press [APPS].
- In full-screen mode, press [2nd] [QUIT].
- In split-screen mode, press [2nd] [QUIT] to open the full-screen view of the active application, then press [2nd] [QUIT] again.

To return to the last open application from the Apps desktop, press [2nd] [⇔].

Downloaded from www.Manualslib.com manuals search engine


From the Keyboard

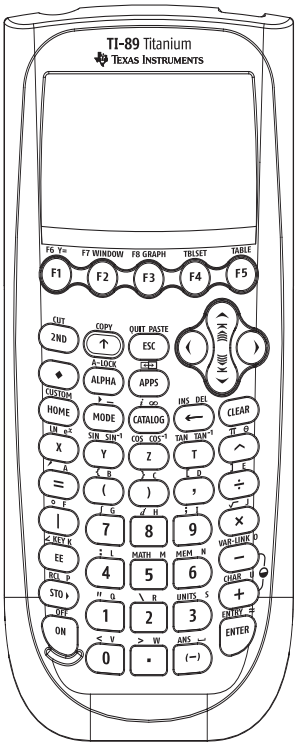

Downloaded from www.Manualslib.com manuals search engine

You can access commonly used applications from the keyboard. On the TI-89 Titanium for example, ♦ [Y=] is the same as pressing ♦ and then F1. This guidebook uses the notation ♦ [Y=], similar to the notation used in second functions.

Application:	Press:
Home	HOME [CALC HOME]
Y= Editor	♦ [Y=]
Window Editor	♦ [WINDOW]
Graph	♦ [GRAPH]
Table Setup	♦ [TBLSET]
Table Screen	♦ [TABLE]

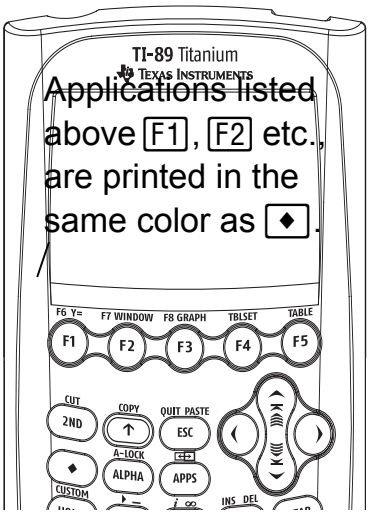


Setting Modes

Modes control how numbers and graphs are displayed and interpreted. Mode settings are retained by the Constant Memory™ feature when the graphing calculator is turned off. All numbers, including elements of matrices and lists, are displayed according to the current mode settings.

Checking Mode Settings

Press MODE to display the MODE dialog box, which lists the modes and their current settings.

Downloaded from www.Manualslib.com manuals search engine

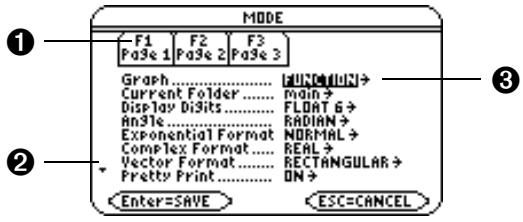

❶ There are three pages of mode listings. Press F1, F2, or F3 to quickly display a particular page.
❷ Indicates you can scroll down to see additional modes.
❸ → indicates that you can press ▶ or ◀ to display and select from a menu.

Note: Modes that are not currently valid are dimmed. For example, on **Page 2, Split 2 App** is not valid when **Split Screen = FULL**. When you scroll through the list, the cursor skips dimmed settings.

Changing Mode Settings

From the MODE dialog box:

1. Highlight the mode setting you want to change. Use ▼ or ▲ (with F1, F2, or F3) to scroll through the list.
2. Press ▶ or ◀ to display a menu that lists the valid settings. The current setting is highlighted.
3. Select the applicable setting. Either:
   - Use ▼ or ▲ to highlight the setting and press ENTER.

     – or –

Downloaded from www.Manualslib.com manuals search engine

- Press the number or letter for that setting.

Note: To cancel a menu and return to the **MODE** dialog box without making a selection, press ESC.

4. Change other mode settings, if necessary.
5. When you finish all your changes, press ENTER to save the changes and exit the dialog box.

Important: If you press ESC instead of ENTER to exit the **MODE** dialog box, any mode changes you made will be canceled.

Overview of the Modes

Note: For detailed information about a particular mode, look in the applicable section of this guidebook.

Mode	Description
Graph	Type of graphs to plot: FUNCTION, PARAMETRIC, POLAR, SEQUENCE, 3D, or DE.
Current Folder	Folder used to store and recall variables. Unless you have created additional folders, only the MAIN folder is available. Refer to “Using Folders to Store Independent Sets of Variables” in *Calculator Home Screen.*
Display Digits	Maximum number of digits (FLOAT) or fixed number of decimal places (FIX) displayed in a floating-point result. Regardless of the setting, the total number of displayed digits in a floating-point result cannot exceed 12.
Angle	Units in which angle values are interpreted and displayed: RADIAN, DEGREE or GRADIAN.

Downloaded from www.Manualslib.com manuals search engine

Mode	Description
Exponential Format	Notation used to display results: NORMAL, SCIENTIFIC, or ENGINEERING.
Complex Format	Format used to display complex results, if any: REAL (complex results are not displayed unless you use a complex entry), RECTANGULAR, or POLAR.
Vector Format	Format used to display 2- and 3-element vectors: RECTANGULAR, CYLINDRICAL, or SPHERICAL.
Pretty Print	Turns the pretty print display feature OFF or ON.
Split Screen	Splits the screen into two parts and specifies how the parts are arranged: FULL (no split screen), TOP-BOTTOM, or LEFT-RIGHT. Refer to the *Split Screens* module.
Split 1 App	Application in the top or left side of a split screen. If you are not using a split screen, this is the current application.
Split 2 App	Application in the bottom or right side of a split screen. This is active only for a split screen.
Number of Graphs	For a split screen, lets you set up both sides of the screen to display independent sets of graphs.
Graph 2	If **Number of Graphs = 2**, selects the type of graph in the Split 2 part of the screen. Refer to *Calculator Home Screen.*
Exact/Approx	Calculates expressions and displays results in numeric form or in rational/symbolic form: AUTO, EXACT, or APPROXIMATE.
Base	Lets you perform calculations by entering numbers in decimal (DEC), hexadecimal (HEX), or binary (BIN) form.

Downloaded from www.Manualslib.com manuals search engine

Mode	Description
Unit System	Lets you select from three systems of measurement to specify the default units for displayed results: **SI** (metric or MKS); **Eng/US** (feet, pounds, etc.); or **Custom**.
Custom Units	Lets you select custom defaults. The mode is dimmed until you select Unit System, **3:CUSTOM**.
Language	Lets you localize the calculator into one of several languages, depending on which language Flash applications are installed.
Apps Desktop	Turns the Apps desktop ON or OFF.

Using the Clean Up Menu to Start a New Problem

On the Home screen, the **Clean Up** toolbar menu lets you start a new calculation from a cleared state without resetting the memory.

Clean Up Toolbar Menu

To display the **Clean Up** menu from the Home screen, press:
2nd [F6]



Downloaded from www.Manualslib.com manuals search engine

Menu Item	Description
Clear a–z	Clears (deletes) all single-character variable names in the current folder, unless the variables are locked or archived. You will be prompted to press ENTER to confirm the action. Single-character variable names are often used in symbolic calculations such as: **solve(a•x^2+b•x+c=0,x)** If any of the variables have already been assigned a value, your calculation may produce misleading results. To prevent this, you can select **1:Clear a–z** before beginning the calculation.
NewProb	Places **NewProb** in the entry line. You must then press ENTER to execute the command. **NewProb** performs a variety of operations that let you begin a new problem from a cleared state without resetting the memory: • Clears all single-character variable names in the current folder (same as **1:Clear a–z**), unless the variables are locked or archived. • Turns off all functions and stat plots (**FnOff** and **PlotsOff**) in the current graphing mode. • Performs **ClrDraw**, **ClrErr**, **ClrGraph**, **ClrHome**, **ClrIO**, and **ClrTable**.
Restore custom default	If a custom menu other than the default is in effect, this lets you restore the default. Refer to the *Calculator Home Screen* module for information on the custom menu.

Notes:

Downloaded from www.Manualslib.com manuals search engine

- When defining a variable that you want to retain, use more than one character in the name. This prevents it from being deleted inadvertently by **1:Clear a–z**.
- For information about checking and resetting memory or other system defaults, refer to *Memory and Variable Management*.


Using the Catalog Dialog Box

The CATALOG provides a way to access any built-in command (functions and instructions) from one convenient list. In addition, the CATALOG dialog box lets you select functions used in Flash applications or user-defined functions (if any have been loaded or defined).

Displaying the CATALOG

To display the CATALOG dialog box, press:
CATALOG

The CATALOG defaults to F2 **Built-in**, which displays an alphabetic list of all pre-installed commands (functions and instructions).

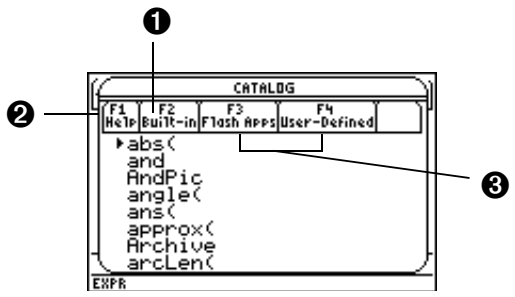

Downloaded from www.Manualslib.com manuals search engine


❶ Defaults to F2 Built-in.
❷ F1 Help displays a command's parameters in a dialog box.
❸ F3 and F4 allow access to Flash application functions and User-Defined functions and programs.

Note: Options that are not currently valid are dimmed. For example, F3 **Flash Apps** is dimmed if you have not installed a Flash application. F4 **User-Defined** is dimmed if you have not created a function or a program.

Selecting a Built-in Command from the CATALOG

When you select a command, its name is inserted in the entry line at the cursor location. Therefore, you should position the cursor as necessary before selecting the command.

1. Press:
   CATALOG
2. Press F2 **Built-in**.

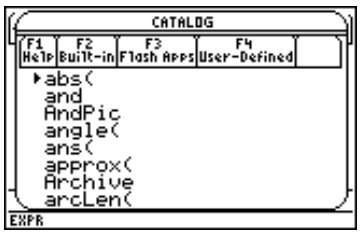

- Commands are listed in alphabetical order. Commands that do not start with a letter (+, %, √, Σ, etc.) are at the end of the list.
- To exit the **CATALOG** without selecting a command, press ESC.

Note: The first time you display the **Built-in** list, it starts at the top of the list. The next time you display the list, it starts at the same place you left it.

Downloaded from www.Manualslib.com manuals search engine


3. Move the ▶ indicator to the command, and press [ENTER].

To move the ▶ indicator:	Press or type:
One function or program at a time	⊖ or ⊕
One page at a time	[2nd] ⊖ or [2nd] ⊕
To the first function that begins with a specified letter	The letter key. (On the TI-89 Titanium, do *not* press [alpha] first. If you do, you need to press [alpha] or [2nd] [a-lock] again before you can type a letter.)

Note: From the top of the list, press ⊕ to move to the bottom. From the bottom, press ⊖ to move to the top.

Information about Parameters

For the command indicated by ▶, the status line shows the required and optional parameters, if any, and their type.

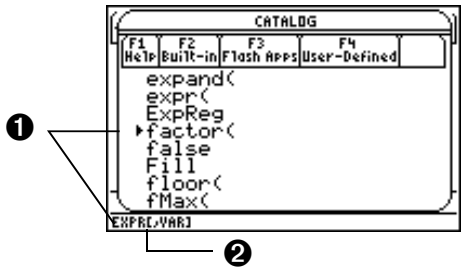

❶ Indicated command and its parameters
❷ Brackets [ ] indicate optional parameters

Downloaded from www.Manualslib.com manuals search engine

From the example above, the syntax for **factor** is:

factor(*expression***)**	required
– or –	
factor(*expression,variable***)**	optional

Note: For details about the parameters, refer to that command's description in the *Technical Reference* module.

Viewing CATALOG Help

You can display a command's parameters in a dialog box by pressing F1 **Help**. The parameters are the same as those displayed on the status line.

Indicated command and its parameters.



Some commands, such as **ClrDraw**, do not require parameters. If you select one of these commands, parameters will not display on the status line and you will see Unavailable if you press F1 **Help.**


Press ESC to exit the CATALOG Help dialog box.

Downloaded from www.Manualslib.com manuals search engine

Selecting a Flash Application Function

A Flash application may contain one or more functions. When you select a function, its name is inserted in the entry line at the cursor location. Therefore, you should position the cursor as necessary before selecting the function.

1. Press:
   CATALOG
2. Press F3 **Flash Apps**. (This option is dimmed if no Flash applications are installed.)

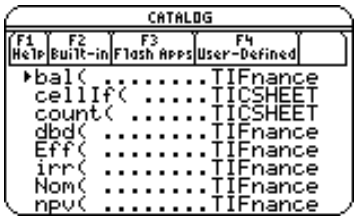

- The list is alphabetized by function name. The left column lists functions. The right column lists the Flash application that contains the function.
- Information about a function is displayed in the status line.
- To exit without selecting a function, press ESC.

3. Move the ▶ indicator to the function, and press ENTER.

To move the ▶ indicator:	Press or type:
One function or program at a time	⊙ or ⊙
One page at a time	2nd ⊙ or 2nd ⊙
To the first function that begins with a specified letter	The letter key. (On the TI-89 Titanium, do *not* press alpha first. If you do, you need to press alpha or 2nd [a-lock] again before you can type a letter.)


Downloaded from www.Manualslib.com manuals search engine

Selecting a User-Defined Function or Program

You can create your own functions or programs and then use F4 **User-Defined** to access them. For instructions on how to create functions, see “Creating and Evaluating User-Defined Functions” in *Calculator Home Screen*, and “Overview of Entering a Function” in the *Programming* module. See *Programming* for instructions on how to create and run a program.

When you select a function or program, its name is inserted in the entry line at the cursor location. Therefore, you should position the cursor as necessary before selecting the function or program.

1. Press:
   CATALOG
2. Press F4 **User-Defined**. (This option is dimmed if you have not defined a function or created a program.)

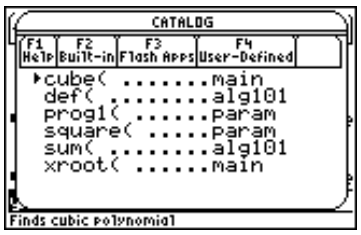

- The list is alphabetized by function / program name. The left column lists functions and programs. The right column lists the folder that contains the function or program.
- If the function or program’s first line is a comment, the comment text is displayed in the status line.
- To exit without selecting a function or program, press ESC.

Note: Use the **VAR-LINK** screen to manage variables, folders, and Flash applications. See the *Memory and Variable Management* module.

Downloaded from www.Manualslib.com manuals search engine

3. Move the ▶ indicator to the function or program, and press [ENTER].

To move the ▶ indicator:	Press or type:
One function or program at a time	⊖ or ⊕
One page at a time	[2nd] ⊖ or [2nd] ⊕
To the first function or program that begins with a specified letter	The letter key. (On the TI-89 Titanium, do *not* press [alpha] first. If you do, you need to press [alpha] or [2nd] [a-lock] again before you can type a letter.)

Storing and Recalling Variable Values

When you store a value, you store it as a named variable. You can then use the name instead of the value in expressions. When the calculator encounters the name in an expression, it substitutes the variable's stored value.

Rules for Variable Names

A variable name:

- Can use 1 to 8 characters consisting of letters and digits. This includes Greek letters (but not π), accented letters, and international letters.
  - Do not include spaces.
  - The first character cannot be a digit.
- Can use uppercase or lowercase letters. The names **AB22**, **Ab22**, **aB22**, and **ab22** all refer to the same variable.

Downloaded from www.Manualslib.com manuals search engine

- Cannot be the same as a name that is preassigned by the calculator. Preassigned names include:
  - Built-in functions (such as **abs**) and instructions (such as **LineVert**). Refer to the *Technical Reference* module.
  - System variables (such as **xmin** and **xmax**, which are used to store graph-related values). Refer to the *Technical Reference* module for a list.


Examples

Variable	Description
myvar	OK
a	OK
Log	Not OK, name is preassigned to the **log** function.
Log1	OK
3rdTotal	Not OK, starts with a digit.
circumfer	Not OK, more than 8 characters.

Data Types

DataTypes	Examples
Expressions	2.54, 1.25E6, 2π, xmin/10, 2+3i, $(x-2)^2$, $\sqrt{2}/2$
Lists	{2 4 6 8}, {1 1 2}


Downloaded from www.Manualslib.com manuals search engine

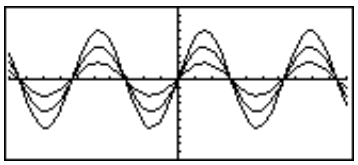DataTypes	Examples
Matrices	$\begin{bmatrix}1 & 0 & 0\end{bmatrix}$, $\begin{bmatrix}1 & 0 & 0\\3 & 4 & 6\end{bmatrix}$
Character strings	“Hello”, “The answer is:”, “xmin/10”
Pictures	
Functions	myfunc(arg), ellipse(x,y,r1,r2)

Storing a Value in a Variable

1. Enter the value you want to store, which can be an expression.
2. Press STO▸. The store symbol (→) is displayed.
3. Type the variable name.

   Note: TI-89 Titanium users should use alpha as necessary when typing variable names.




4. Press ENTER.

To store to a variable temporarily, you can use the “*with*” operator. Refer to “Substituting Values and Setting Constraints” in *Symbolic Manipulation*.

Downloaded from www.Manualslib.com manuals search engine


Displaying a Variable

1. Type the variable name.
2. Press [ENTER].



If the variable is undefined, the variable name is shown in the result.

In this example, the variable a is undefined. Therefore, it is used as a symbolic variable.




Note: Refer to *Symbolic Manipulation* for information about symbolic manipulation.

Using a Variable in an Expression


1. Type the variable name into the expression.
2. Press [ENTER] to evaluate the expression.

   Note: To view a list of existing variable names, use [2nd] [VAR-LINK] as described in *Memory and Variable Management*.



The variable's value did not change.

If you want the result to replace the variable's previous value, you must store the result.




Downloaded from www.Manualslib.com manuals search engine

Recalling a Variable's Value

In some cases, you may want to use a variable's actual value in an expression instead of the variable name.

1. Press [2nd] [RCL] to display a dialog box.
2. Type the variable name.
3. Press [ENTER] twice.

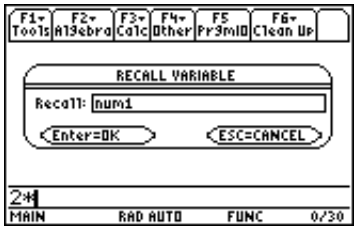


In this example, the value stored in **num1** will be inserted at the cursor position in the entry line.

Status Line Indicators in the Display

The status line is displayed at the bottom of all application screens. It shows information about the current state of the calculator, including several important mode settings.

Status Line Indicators

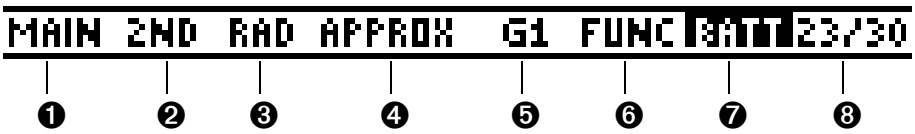

❶ Current Folder
❷ Modifier Key
❸ Angle Mode

Downloaded from www.Manualslib.com manuals search engine

❹ Exact/Approx Mode
❺ Graph Number
❻ Graph Mode
❼ Replace Batteries
❽ History Pairs, Busy/Pause, Locked Variable

Indicator	Meaning
Current Folder	Shows the name of the current folder. Refer to “Using Folders to Store Independent Sets of Variables” in *Calcul*ator Home Screen. MAIN is the default folder.
Modifier Key	Shows which modifier key is in effect, as described below.
2nd	[2nd] — will use the second function of the next key you press.
◆	[◆] — will use the diamond feature of the next key you press.
⬆	[⬆] — will type the uppercase letter for the next key you press. On the TI-89 Titanium, you can use [⬆] to type a letter without having to use [alpha].
a	[alpha] — will type the lowercase letter for the next key you press.
a	[2nd] [a-lock] — lowercase alpha-lock is on. Until you turn this off, will type the lowercase letter for each key you press. To cancel alpha-lock, press [alpha].
A	[⬆] [alpha] — uppercase ALPHA-lock is on. Until you turn this off, will type the uppercase letter for each key you press. To cancel ALPHA-lock, press [alpha].

Downloaded from www.Manualslib.com manuals search engine

Indicator	Meaning
Angle Mode	Shows the units in which angle values are interpreted and displayed. To change the Angle mode, use the MODE key.
RAD	Radians
DEG	Degrees
GRAD	Gradian
Exact/Approx Mode	Shows how answers are calculated and displayed. To change the Exact/Approx mode, use the MODE key.
AUTO	Auto
EXACT	Exact
APPROX	Approximate
Graph Number	If the screen is split to show two independent graphs, this indicates which graph is active — **G1** or **G2**.
Graph Mode	Indicates the type of graphs that can be plotted. To change the Graph mode, use the MODE key.
FUNC	**y(x)** functions
PAR	**x(t)** and **y(t)** parametric equations
POL	**r(θ)** polar equations
SEQ	**u(n)** sequences
3D	**z(x,y)** 3D equations
DE	**y'(t)** differential equations

Downloaded from www.Manualslib.com manuals search engine

Indicator	Meaning
Battery	Displayed only when the batteries are getting low. If BATT is shown with a black background, change the batteries as soon as possible.
History Pairs, Busy/Pause, Archived	The information shown in this part of the status line depends on the application you are using.
23/30	Displayed on the Home screen to show the number of entry/answer pairs in the history area. Refer to History Information on the Status Line in the *Calculator Home Screen* module.
BUSY	A calculation or graph is in progress.
PAUSE	You paused a graph or program.
	The variable opened in the current editor (Data/Matrix Editor, Program Editor, or Text Editor) is locked or archived and cannot be modified.

Notes:


- To cancel [2nd], [◆], [alpha], or [⬆], press the same key again or press a different modifier key.
- If the next key you press does not have a diamond feature or an associated letter, the key performs its normal operation.

Downloaded from www.Manualslib.com manuals search engine

Calculator Home Screen

Calculator Home Screen

The calculator Home screen is the starting point for math operations, including executing instructions, evaluating expressions, and viewing results.

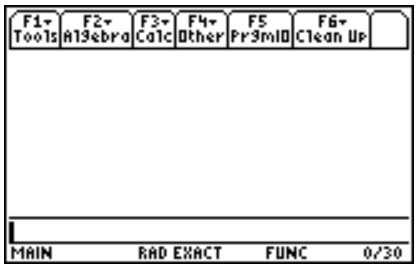

A blank calculator Home screen

This module describes the parts of the calculator Home screen, how to scroll through or modify the history area; how to use cut, copy, and paste, and more.

Note: The term “calculator Home screen” is used in this module. Other modules use the term “Home screen.” Both terms are interchangeable and refer to the same screen.


Displaying the Calculator Home Screen

When you first turn on your TI-89 Titanium, the Apps desktop is displayed. To display the calculator Home screen, highlight the Home icon and press ENTER. You can also display the calculator Home screen by pressing HOME (TI-89 Titanium). If you turn off the Apps Desktop mode, the calculator Home screen appears automatically.

Downloaded from www.Manualslib.com manuals search engine

Parts of the Calculator Home Screen

The following example contains previously entered data and describes the main parts of the calculator Home screen. Entry/answer pairs in the history area are displayed in "pretty print." Pretty print displays expressions in the same form in which they are written on the board or in textbooks.

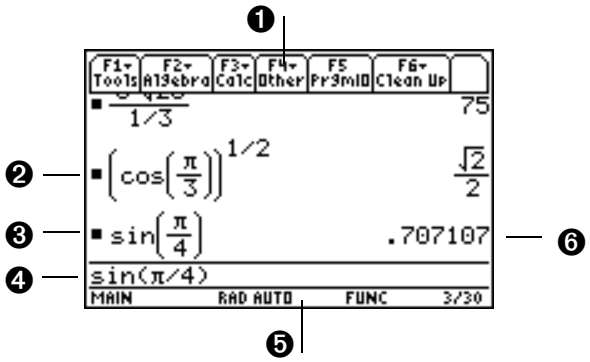

❶ Toolbar
Lets you display menus for selecting operations applicable to the calculator Home screen. To display a toolbar menu, press F1, F2, etc.

❷ Pretty Print Display
Shows exponents, roots, fractions, etc., in traditional form.

❸ Last Entry
Your last entry.

❹ Entry Line
Where you enter expressions or instructions.


❺ Status Line
Shows the current state of the calculator, including several important mode settings.

Downloaded from www.Manualslib.com manuals search engine

❻ Last Answer

Result of your last entry. Note that results are not displayed on the entry line. Note: ♦ ENTER (Approx) was used in this example.

The following example shows an answer that is not on the same line as the expression. Note that the answer is longer than the screen width. An arrow (▶) indicates the answer is continued. The entry line contains ellipsis (…). Ellipsis indicates the entry is longer than the screen width.

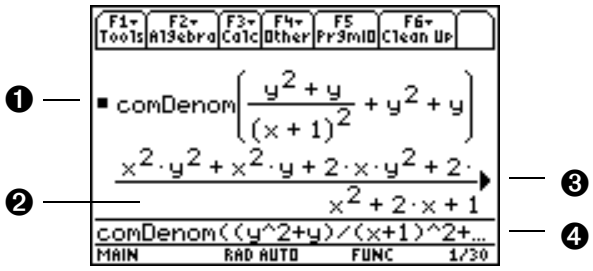

❶ Last Entry

"Pretty print" is ON. Exponents, roots, fractions, etc., are displayed in the same form in which they are traditionally written.

❷ History Area

Lists entry/answer pairs you have entered. Pairs scroll up the screen as you make new entries.

❸ Answer Continues

Highlight the answer and press ⊙ to scroll right and view the rest of it. Note that the answer is not on the same line as the expression.

❹ Expression Continues (…)

Press ⊙ to scroll right and view the rest of the entry. Press 2nd ⊙ or 2nd ⊙ to go to the beginning or end of the entry line.

Downloaded from www.Manualslib.com manuals search engine

History Area

The history area shows up to eight previous entry/answer pairs (depending on the complexity and height of the displayed expressions). When the display is filled, information scrolls off the top of the screen. You can use the history area to:

- Review previous entries and answers. You can use the cursor to view entries and answers that have scrolled off the screen.
- Recall or auto-paste a previous entry or answer onto the entry line so that you can re-use or edit it.

Scrolling through the History Area

Normally, the cursor is in the entry line. However, you can move the cursor into the history area.

To:	Do this:
View entries or answers that have scrolled off the screen	• From the entry line, press ▲ to highlight the last answer. • Continue using ▲ to move the cursor from answer to entry, up through the history area.
Go to the oldest or newest history pair	If the cursor is in the history area, press ◆ ▲ or ◆ ▼, respectively.
View an entry or answer that is too long for one line (▶ is at end of line)	Move the cursor to the entry or answer. Use ◀ and ▶ to scroll left and right (or 2nd ◀ and 2nd ▶ to go to the beginning or end), respectively.


Downloaded from www.Manualslib.com manuals search engine

To:	Do this:
Return the cursor to the entry line	Press ESC, or press ⊖ until the cursor is back on the entry line.

Note: An example of viewing a long answer is available.

History Information on the Status Line

Use the history indicator on the status line for information about the entry/answer pairs. For example:

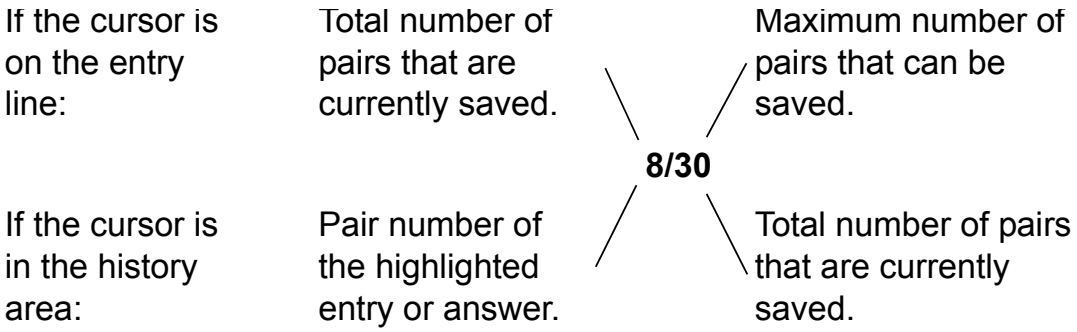
If the cursor is on the entry line:
Total number of pairs that are currently saved.
Maximum number of pairs that can be saved.
8/30
If the cursor is in the history area:
Pair number of the highlighted entry or answer.
Total number of pairs that are currently saved.

By default, the last 30 entry/answer pairs are saved. If the history area is full when you make a new entry (indicated by 30/30), the new entry/answer pair is saved and the oldest pair is deleted. The history indicator does not change.

Downloaded from www.Manualslib.com manuals search engine

Modifying the History Area

To:	Do this:
Change the number of pairs that can be saved	Press F1 and select **9:Format**, or press [calculator] ◆ | Then press ▶, use ▲ or ▼ to highlight the new number, and press ENTER twice.
Clear the history area and delete all saved pairs	Press F1 and select **8:Clear Home**, or enter **ClrHome** on the entry line.
Delete a particular entry/answer pair	Move the cursor to either the entry or answer. Press ← or CLEAR.


Saving the Calculator Home Screen Entries as a Text Editor Script

To save all the entries in the history area, you can save the calculator Home screen to a text variable. When you want to reexecute those entries, use the Text Editor to open the variable as a command script.

Saving the Entries in the History Area

From the calculator Home screen:


1. Press F1 and select **2:Save Copy As**.

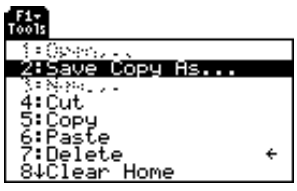

Downloaded from www.Manualslib.com manuals search engine

2. Specify a folder and text variable that you want to use to store the entries.

   Note: Only the entries are saved, not the answers.

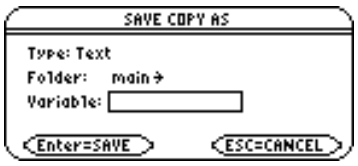

Item	Description
Type	Automatically set as Text and cannot be changed.
Folder	Shows the folder in which the text variable will be stored. To use a different folder, press ⊙ to display a menu of existing folders. Then select a folder.
Variable	Type a valid, unused variable name.

   Note: For information about folders, see the *Memory and Variable Management module*.

3. Press ENTER (after typing in an input box such as Variable, press ENTER twice).

Restoring the Saved Entries


Because the entries are stored in a script format, you cannot restore them from the calculator Home screen. (On the calculator Home screen's F1 toolbar menu, **1:Open** is not available.) Instead:

Downloaded from www.Manualslib.com manuals search engine

1. Use the Text Editor to open the variable containing the saved calculator Home screen entries.

   The saved entries are listed as a series of command lines that you can execute individually, in any order.

2. Starting with the cursor on the first line of the script, press F4 repeatedly to execute the commands line by line.
3. Display the restored calculator Home screen.

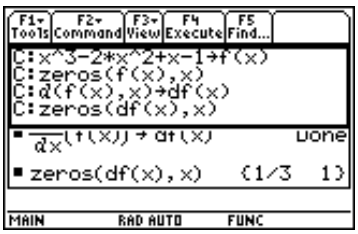

   This split screen shows the Text Editor (with the command line script) and the restored calculator Home screen.

Note: For complete information on using the Text Editor and executing a command script, refer to the *Text Editor* module.

Cutting, Copying, and Pasting Information

Cut, copy, and paste operations let you move or copy information within the same application or between different applications. These operations use the clipboard, which is an area in memory that serves as a temporary storage location.

Auto-paste vs. Cut/Copy/Paste

Auto-paste is a quick way to copy an entry or answer in the history area and paste it to the entry line.

Downloaded from www.Manualslib.com manuals search engine

1. Use ▲ and ▼ to highlight the item in the history area.
2. Press [ENTER] to auto-paste that item to the entry line.

To copy or move information in the entry line, you must use a cut, copy, or paste operation. (You can perform a copy operation in the history area, but not a cut or paste.)

Cutting or Copying Information to the Clipboard


When you cut or copy information, that information is placed in the clipboard. However, cutting deletes the information from its current location (used to move information) and copying leaves the information.

1. Highlight the characters that you want to cut or copy.

   In the entry line, move the cursor to either side of the characters. Hold [↑] and press ◀ or ▶ to highlight characters to the left or right of the cursor, respectively.
2. Press [F1] and select **4:Cut** or **5:Copy**.

Downloaded from www.Manualslib.com manuals search engine

Clipboard = (empty or the previous contents)

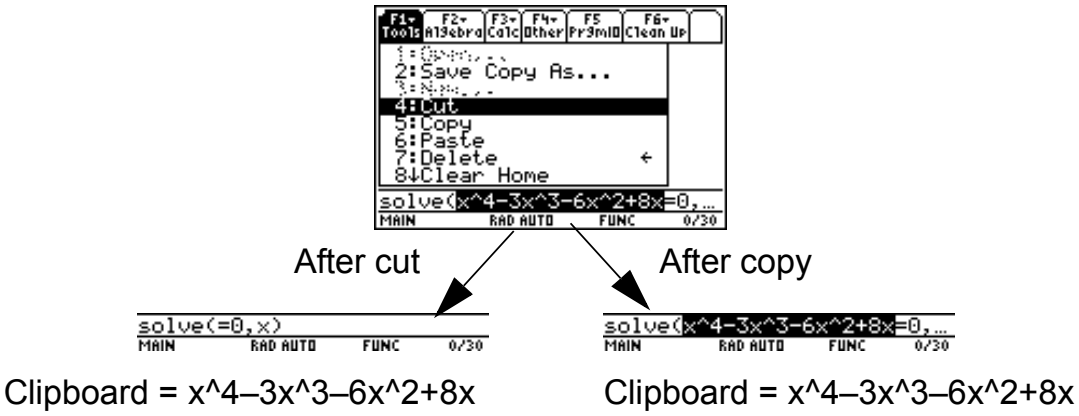

Clipboard = x^4–3x^3–6x^2+8x

Clipboard = x^4–3x^3–6x^2+8x

Note: You can cut, copy or paste without having to use the F1 toolbar menu. Press: ◆ [CUT], ◆ [COPY], or ◆ [PASTE]

Cutting is not the same as deleting. When you delete information, it is not placed in the clipboard and cannot be retrieved.

Note: When you cut or copy information, it replaces the clipboard's previous contents, if any.

Pasting Information from the Clipboard

A paste operation inserts the contents of the clipboard at the current cursor location on the entry line. This does not change the contents of the clipboard.

1. Position the cursor where you want to paste the information.

Downloaded from www.Manualslib.com manuals search engine

2. Press F1 and select **6:Paste**, or use the key shortcut:
   [PASTE]

Example: Copying and Pasting

Suppose you want to reuse an expression without retyping it each time.

1. Copy the applicable information.

   a) Use ⬆ ▶ or ⬆ ◀ to highlight the expression.

   b) Press:
   [COPY]

   c) For this example, press ENTER to evaluate the entry.


2. Paste the copied information into a new entry.

   a) Begin a new entry and place the cursor where you want to paste the copied information.


Downloaded from www.Manualslib.com manuals search engine

b) Press F3 **1** to select the d (differentiate) function.

c) Press:
[calculator] ◆ [PASTE]
to paste the copied expression.



d) Complete the new entry, and press ENTER.

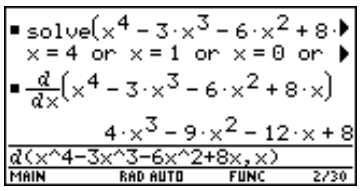


Note: You can also reuse an expression by creating a user-defined function.

3. Paste the copied information into a different application.

a) Press ◆ [Y=] to display the Y= Editor.

b) Press ENTER to define **y1(x)**.

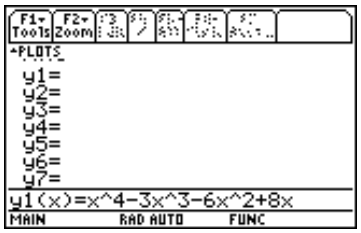

c) Press:
[calculator] ◆ [PASTE]
to paste.

d) Press ENTER to save the new definition.

Note: By copying and pasting, you can easily transfer information from one application to another.

Downloaded from www.Manualslib.com manuals search engine



Reusing a Previous Entry or the Last Answer

You can reuse a previous entry by reexecuting the entry “as is” or by editing the entry and then reexecuting it. You can also reuse the last calculated answer by inserting it into a new expression.


Reusing the Expression on the Entry Line

When you press ENTER to evaluate an expression, the TI-89 Titanium leaves that expression on the entry line and highlights it. You can type over the entry, or you can reuse it as necessary.

For example, using a variable, find the square of 1, 2, 3, etc. As shown below, set the initial variable value and then enter the variable expression. Next, reenter to increment the variable and calculate the square.

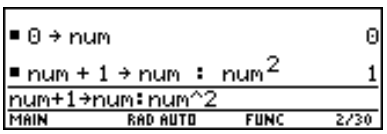TI-89 Titanium	Display
0 STO▸ 2nd [a-lock] NUM ENTER	
NUM alpha + 1 STO▸ 2nd [a-lock] NUM 2nd [:] NUM ^ 2 ENTER	

Downloaded from www.Manualslib.com manuals search engine


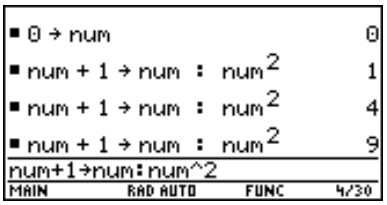
TI-89 Titanium	Display
ENTER ENTER	

Note: Reexecuting an entry “as is” is useful for iterative calculations that involve variables.


Using the equation **A=πr**^{2}, use trial and error to find the radius of a circle that covers 200 square centimeters.

Note: Editing an entry lets you make minor changes without retyping the entire entry.

The example below uses 8 as the first guess and then displays the answer in its approximate floating-point form. You can edit and reexecute using `7.95` and continue until the answer is as accurate as you want.

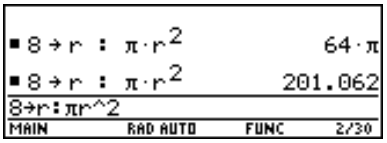TI-89 Titanium	Display
8 STO▸ alpha R 2nd [:] 2nd [π] alpha R ^ 2 ENTER	
◆ ENTER	

Downloaded from www.Manualslib.com manuals search engine

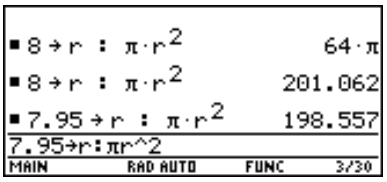TI-89 Titanium	Display
◀ ◆ [DEL] 7.95 [ENTER]	

Note: When the entry contains a decimal point, the result is automatically displayed in floating-point.

Recalling a Previous Entry

You can recall any previous entry that is stored in the history area, even if the entry has scrolled off the top of the screen. The recalled entry *replaces* whatever is currently shown on the entry line. You can then reexecute or edit the recalled entry.

To recall:	Press:	Effect:
The last entry (if you've changed the entry line)	[2nd] [ENTRY] once	If the last entry is still shown on the entry line, this recalls the entry prior to that.
Previous entries	[2nd] [ENTRY] repeatedly	Each press recalls the entry prior to the one shown on the entry line.


Note: You can also use the entry function to recall any previous entry. Refer to **entry( )** in the *Technical Reference* module.

For example:

Downloaded from www.Manualslib.com manuals search engine

If the entry line contains the last entry, 2nd [ENTRY] recalls this entry.

If the entry line is edited or cleared, 2nd [ENTRY] recalls this entry.

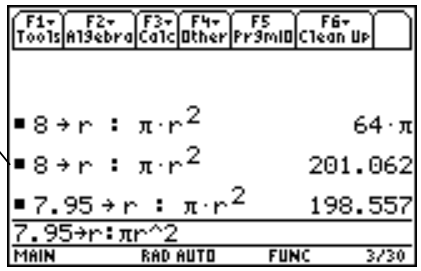

Recalling the Last Answer

Each time you evaluate an expression, the TI-89 Titanium stores the answer to the variable **ans(1)**. To insert this variable in the entry line, press 2nd [ANS].


For example, calculate the area of a garden plot that is 1.7 meters by 4.2 meters. Then calculate the yield per square meter if the plot produces a total of 147 tomatoes.

1. Find the area.

   1.7 × 4.2 ENTER

2. Find the yield.

   147 ÷ 2nd [ANS] ENTER

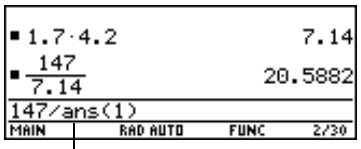

Variable **ans(1)** is inserted, and its value is used in the calculation.

Just as **ans(1)** always contains the last answer, **ans(2)**, **ans(3)**, etc., also contain previous answers. For example, **ans(2)** contains the next-to-last answer.

Note: Refer to **ans( )** in the *Technical Reference* module.

Downloaded from www.Manualslib.com manuals search engine

Auto-Pasting an Entry or Answer from the History Area

You can select any entry or answer from the history area and “auto-paste” a duplicate of it on the entry line. This lets you insert a previous entry or answer into a new expression without having to retype the previous information.

Why Use Auto-Paste

The effect of using auto-paste is similar to 2nd [ENTRY] and 2nd [ANS] as described in the previous section, but there are differences.

For entries:

Pasting lets you:	2nd [ENTRY] **lets you:**
Insert any previous entry into the entry line.	Replace the contents of the entry line with any previous entry.

For answers:

Pasting lets you:	2nd [ANS] **lets you:**
Insert the displayed value of any previous answer into the entry line.	Insert the variable **ans(1)**, which contains the last answer only. Each time you enter a calculation, **ans(1)** is updated to the latest answer.

Note: You can also paste information by using the F1 toolbar menu.


Downloaded from www.Manualslib.com manuals search engine

Auto-Pasting an Entry or Answer

1. On the entry line, place the cursor where you want to insert the entry or answer.
2. Press ▲ to move the cursor up into the history area. This highlights the last answer.
3. Use ▲ and ▼ to highlight the entry or answer to auto-paste.


   - ▲ moves from answer to entry up through the history area.
   - You can use ▲ to highlight items that have scrolled off the screen

   Note: To cancel auto-paste and return to the entry line, press ESC. To view an entry or answer too long for one line (indicated by ▶ at the end of the line), use ▶ and ◀ or 2nd ▶ and 2nd ◀.

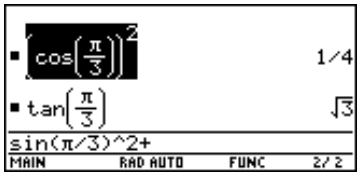

4. Press ENTER.

   The highlighted item is inserted in the entry line.

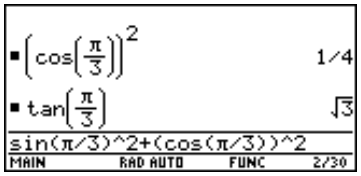

This pastes the entire entry or answer. If you need only a part of the entry or answer, edit the entry line to delete the unwanted parts.

Downloaded from www.Manualslib.com manuals search engine

Creating and Evaluating User-Defined Functions

User-defined functions can be a great time-saver when you need to repeat the same expression (but with different values) multiple times. User-defined functions can also extend your TI-89 Titanium's capabilities beyond the built-in functions.

Format of a Function

The following examples show user-defined functions with one argument and two arguments. You can use as many arguments as necessary. In these examples, the definition consists of a single expression (or statement).

$\text{cube}(x) = x^3$ (❶ ❷ ❸)

$\text{xroot}(x,y) = y^{1/x}$ (❶ ❷ ❸)

❶ Function name
❷ Argument list
❸ Definition

When defining functions and programs, use unique names for arguments that will not be used in the arguments for a subsequent function or program call.

Note: Function names follow the same rules as variable names. Refer to "Storing and Recalling Variable Values" in *Operating the Calculator*.


In the argument list, be sure to use the same arguments that are used in the definition. For example, **cube(n) = x^3** gives unexpected results when you evaluate the function.

Downloaded from www.Manualslib.com manuals search engine

Arguments (x and y in these examples) are placeholders that represent whatever values you pass to the function. They do not represent the variables x and y unless you specifically pass x and y as the arguments when you evaluate the function.

Creating a User-Defined Function

Use one of the following methods.

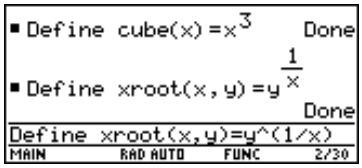Method	Description
STO▸	Store an expression to a function name (including the argument list). 
Define command	Define a function name (including the argument list) as an expression. 
Program Editor	Refer to *Programming* or information on creating a user-defined function.

Downloaded from www.Manualslib.com manuals search engine

Creating a Multi-Statement Function

You can also create a user-defined function whose definition consists of multiple statements. The definition can include many of the control and decision-making structures (**If**, **ElseIf**, **Return**, etc.) used in programming.

Note: For information about similarities and differences between functions and programs, refer to *Programming*.

For example, suppose you want to create a function that sums a series of reciprocals based on an entered integer (**n**):

$$\frac{1}{n} + \frac{1}{n-1} + \ldots + \frac{1}{1}$$

When creating the definition of a multi-statement function, it may be helpful to visualize it first in a block form.

```
❶ Func
❷ Local temp,i
  If fPart(nn)≠0 or nn≤0
❸   Return "bad argument"
  0→temp
❹ For i,nn,1,-1
    approx(temp+1/i)→temp
  EndFor
❺ Return temp
❶ EndFunc
```

❶ **Func** and **EndFunc** must begin and end the function.
❷ Variables not in the argument list must be declared as local.

Downloaded from www.Manualslib.com manuals search engine

❸ Returns a message if nn is not an integer or if nn≤0.
❹ Sums the reciprocals.
❺ Returns the sum.

When entering a multi-statement function on the calculator Home screen, you must enter the entire function on a single line. Use the **Define** command just as you would for a single-statement function.


Use a colon to separate each statement.

```
Define sumrecip(nn)=Func:Local temp,i: ... :EndFunc
```

Use argument names that will never be used when calling the function or program.

On the calculator Home screen:

Multi-statement functions show as




Enter a multi-statement function on one line. Be sure to include colons.

Note: It's easier to create a complicated multi-statement function in the Program Editor than on the calculator Home screen. Refer to *Programming*.

Downloaded from www.Manualslib.com manuals search engine

Evaluating a Function

You can use a user-defined function just as you would any other function. Evaluate it by itself or include it in another expression.

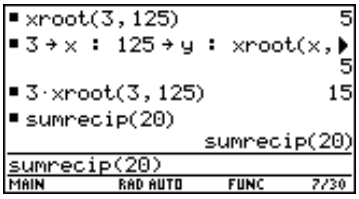

Displaying and Editing a Function Definition

To:	Do this:
Display a list of all user-defined functions	Press 2nd [VAR-LINK] to display the VAR-LINK screen. You may need to use the F2 **View** toolbar menu to specify the **Function** variable type. (Refer to *Memory and Variable Management*.) – or – Press: CATALOG F4
Display a list of Flash application functions	Press: CATALOG F3

Downloaded from www.Manualslib.com manuals search engine

To:	Do this:
Display the definition of a user-defined function	From the VAR-LINK screen, highlight the function and display the Contents menu. [calculator] [2nd] [F6] – or – From the calculator Home screen, press [2nd] [RCL]. Type the function name but not the argument list (such as **xroot**), and press [ENTER] twice. – or – From the Program Editor, open the function. (Refer to *Programming*.)
Edit the definition	From the calculator Home screen, use [2nd] [RCL] to display the definition. Edit the definition as necessary. Then use [STO▸] or **Define** to save the new definition. – or – From the Program Editor, open the function, edit it, and save your changes. (Refer to *Programming*.)

Note: You can view a user-defined function in the CATALOG dialog box, but you cannot use the CATALOG to view or edit its definition.

If an Entry or Answer Is “Too Big”

In some cases, an entry or answer may be “too long” and/or “too tall” to be displayed completely in the history area. In other cases, the TI-89 Titanium may not be able to display an answer because there is not enough free memory.


Downloaded from www.Manualslib.com manuals search engine

If an Entry or Answer Is “Too Long”

Move the cursor into the history area, and highlight the entry or answer. Then use the cursor pad to scroll. For example:

- The following shows an answer that is too long for one line.

Press ◀ or 2nd ◀ to scroll left.

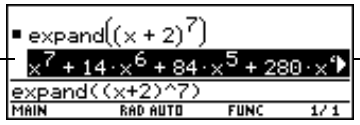

Press ▶ or 2nd ▶ to scroll right.

- The following shows an answer that is both too long and too tall to be displayed on the screen.


  Note: This example uses the **randMat** function to generate a 25 x 25 matrix.

❶ Press ▲ or ↑ ▲ to scroll up

❷ Press ↑ ▼ to scroll down

❸ Press ◀ or 2nd ◀ to scroll left

❹ Press ▶ or 2nd ▶ to scroll right

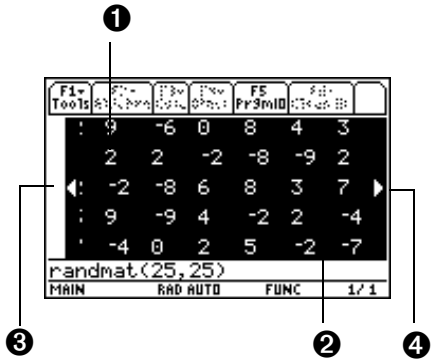


If There Is not Enough Memory

A << ...>> symbol is displayed when the TI-89 Titanium does not have enough free memory to display the answer.

Downloaded from www.Manualslib.com manuals search engine

For example:



Note: This example uses the seq function to generate a sequential list of integers from 1 to 2500.

When you see the << ...>> symbol, the answer cannot be displayed even if you highlight it and try to scroll.

In general, you can try to:

- Free up additional memory by deleting unneeded variables and/or Flash applications. Use 2nd [VAR-LINK] as described in *Memory and Variable Management*.
- If possible, break the problem into smaller parts that can be calculated and displayed with less memory.


Using the Custom Menu

The TI-89 Titanium has a custom menu that you can turn on and off at any time. You can use the default custom menu or create your own as described in the *Programming* module.

Downloaded from www.Manualslib.com manuals search engine

Turning the Custom Menu On and Off

When you turn on the custom menu, it replaces the normal toolbar menu. When you turn it off, the normal menu returns. For example, from the calculator Home screen's normal toolbar menu, press 2nd [CATALOG] to toggle the custom menu on and off.

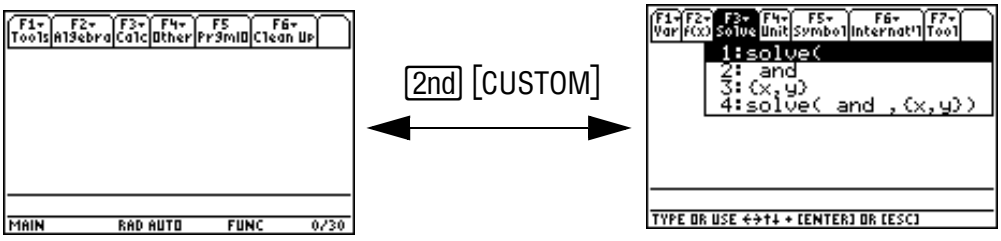

Calculator Home screen normal toolbar menu

Custom menu

Note: You can also turn the custom menu on and off by entering **CustmOn** or **CustmOff** in the entry line and pressing ENTER.

Unless the menu has been modified, the default custom menu appears.

Menu	Function
F1 **Var**	Common variable names.
F2 **f(x)**	Function names such as f(x), g(x), and f(x,y).
F3 **Solve**	Items related to solving equations.
F4 **Unit**	Common units such as _m, _ft, and _l.
F5 **Symbol**	Symbols such as #, ?, and ~.

Downloaded from www.Manualslib.com manuals search engine

Menu	Function
International 2nd [F6]	Commonly accented characters such as è, é,and ê.
Tool 2nd [F7]	**ClrHome**, **NewProb**, and **CustmOff**.

Note: A custom menu can give you quick access to commonly used items. The *Programming* module shows you how to create custom menus for the items you use most often.

Restoring the Default Custom Menu

If a custom menu other than the default is displayed and you want to restore the default:

1. From the calculator Home screen, use 2nd [CATALOG] to turn off the custom menu and display the calculator Home screen's normal toolbar menu.

2. Display the **Clean Up** toolbar menu, and select **3:Restore custom default**.
   2nd [F6]



   This pastes the commands used to create the default menu into the entry line.

   Note: The previous custom menu is erased. If that menu was created with a program, it can be recreated later by running the program again.

3. Press ENTER to execute the commands and restore the default.

Downloaded from www.Manualslib.com manuals search engine

Finding the Software Version and ID Number

In some situations, you may need to find out information about your TI-89 Titanium, particularly the software version and the unit's ID number.

Displaying the "About" Screen

1. From either the calculator Home screen or the Apps desktop, press F1 and then select **A:About**.



   Your screen will be different from the one shown to the right.



2. Press ENTER or ESC to close the screen.

When Do You Need this Information?


The information on the About screen is intended for situations such as:

- If you obtain new or upgraded software or Flash applications for your TI-89 Titanium, you may need to provide your current software version and/or the ID number of your unit.
- If you have difficulties with your TI-89 Titanium and need to contact technical support, knowing the software version may make it easier to diagnose the problem.

Downloaded from www.Manualslib.com manuals search engine

The About screen displays the following information about your calculator:

- Hardware version
- OS (Advanced Mathematics Software) version
- Product identifier (Product ID)
- Unit ID
- Apps certificate revision number (Cert. Rev.)

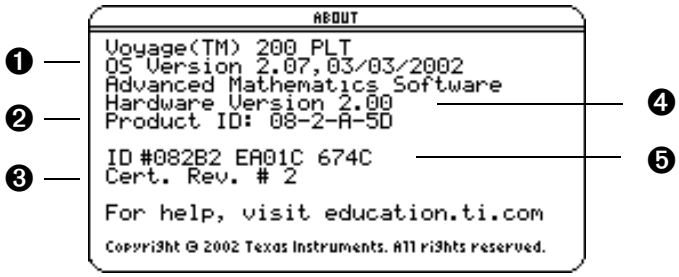

❶ OS version
❷ Product identifier
❸ Apps certificate revision number
❹ Hardware version
❺ Unit ID (required to obtain certificates for installing purchased Apps)

Your screen will be different from the one shown above.

Downloaded from www.Manualslib.com manuals search engine

Symbolic Manipulation


Using Undefined or Defined Variables

When performing algebraic or calculus operations, it is important that you understand the effect of using undefined and defined variables. Otherwise, you may get a number for a result instead of the algebraic expression that you anticipated.


How Undefined and Defined Variables Are Treated

When you enter an expression that contains a variable, the TI-89 Titanium treats the variable in one of two ways.

- If the variable is undefined, it is treated as an algebraic symbol.




- If the variable is defined (even if defined as 0), its value replaces the variable.



To see why this is important, suppose you want to find the first derivative of x^3 with respect to x.


- If x is undefined, the result is in the form you probably expected.



Downloaded from www.Manualslib.com manuals search engine



- If *x* is defined, the result may be in a form you did not expect.

  Note: When defining a variable, it's a good practice to use more than one character in the name. Leave one-character names undefined for symbolic calculations.

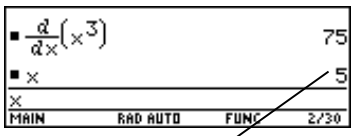


Unless you knew that 5 had been stored to x previously, the answer 75 could be misleading.

Determining If a Variable Is Exists

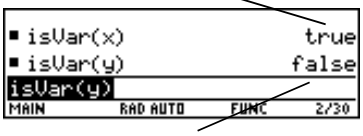Method:	Example:
Enter the variable name.	If defined, the variable's value is displayed.  If undefined, the variable name is displayed.
Use the **isVar()** function.	If defined, "true" is displayed.  If undefined, "false" is displayed.

Downloaded from www.Manualslib.com manuals search engine



Method:	Example:
Use the **getType** function.	If defined, the variable's type is displayed.  If undefined, "NONE" is displayed.

Note: Use 2nd [VAR-LINK] to view a list of defined variables, as described in *Memory and Variable Management*.


Downloaded from www.Manualslib.com manuals search engine

Deleting a Defined Variable

You can “undefine” a defined variable by deleting it.

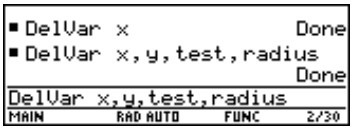To delete:	Do this:
One or more specified variables	Use the **DelVar** function.  You can also delete variables by using the VAR-LINK screen ([2nd] [VAR-LINK]) as described in *Memory and Variable Management*.
All variables of a specific type **Note:** The Deltype function deletes all variables of the specified type in all folders.	Use the **Deltype** function. 


Downloaded from www.Manualslib.com manuals search engine

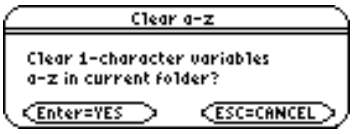To delete:	Do this:
All one-letter variables (a – z) in the current folder. **Note:** For information about folders, refer to the *Calculator Home Screen* module.	From the Home screen Clean Up menu, select **1:Clear a-z**. You will be prompted to press ENTER to confirm the deletion. 


Temporarily Overriding a Variable

By using the "*with*" operator (|), you can:

- Temporarily override a variable's defined value.

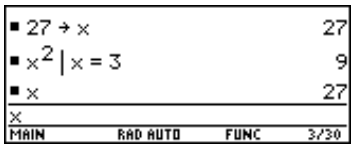

- Temporarily define a value for an undefined variable.

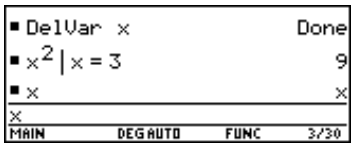

Note: For more information about the | operator, refer to Typing the "*With*" Operator.

To type the "*with*" operator (|), press:



Downloaded from www.Manualslib.com manuals search engine

Using Exact, Approximate, and Auto Modes

The Exact/Approx mode settings, which are described briefly in *Operating the Handheld*, directly affect the precision and accuracy with which the TI-89 Titanium calculates a result. This section describes these mode settings as they relate to symbolic manipulation.

EXACT Setting

When Exact/Approx = EXACT, the handheld uses exact rational arithmetic with up to 614 digits in the numerator and 614 digits in the denominator. The EXACT setting:

- Transforms irrational numbers to standard forms as much as possible without approximating them. For example, $\sqrt{12}$ transforms to $2\sqrt{3}$ and **ln(1000)** transforms to **3 ln(10)**.
- Converts floating-point numbers to rational numbers. For example, 0.25 transforms to 1/4.

The functions **solve**, **cSolve**, **zeros**, **cZeros**, **factor**, ∫, **fMin**, and **fMax** use only exact symbolic algorithms. These functions do not compute approximate solutions in the EXACT setting.

- Some equations, such as $\mathbf{2^{-x} = x}$, have solutions that cannot all be finitely represented in terms of the functions and operators on the handheld.

Downloaded from www.Manualslib.com manuals search engine

- With this kind of equation, EXACT will not compute approximate solutions. For example, $\mathbf{2^{-x} = x}$ has an approximate solution $\mathbf{x \approx 0.641186}$, but it is not displayed in the EXACT setting.

Advantages	Disadvantages
Results are exact.	As you use more complicated rational numbers and irrational constants, calculations can: • Use more memory, which may exhaust the memory before a solution is completed. • Take more computing time. • Produce bulky results that are harder to comprehend than a floating-point number.

APPROXIMATE Setting

When Exact/Approx = APPROXIMATE, the handheld converts rational numbers and irrational constants to floating-point. However, there are exceptions:

- Certain built-in functions that expect one of their arguments to be an integer will convert that number to an integer if possible. For example: d**(y(x), x, 2.0)** transforms to d**(y(x), x, 2).**
- Whole-number floating-point exponents are converted to integers. For example: $x^{2.0}$ transforms to x^2 even in the APPROXIMATE setting.

Downloaded from www.Manualslib.com manuals search engine

Functions such as **solve** and ∫ (integrate) can use both exact symbolic and approximate numeric techniques. These functions skip all or some of their exact symbolic techniques in the APPROXIMATE setting.

Advantages	Disadvantages
If exact results are not needed, this might save time and/or use less memory than the EXACT setting. Approximate results are sometimes more compact and comprehensible than exact results.	Results with undefined variables or functions often exhibit incomplete cancellation. For example, a coefficient that should be **0** might be displayed as a small magnitude such as **1.23457E−11**.
If you do not plan to use symbolic computations, approximate results are similar to familiar, traditional numeric calculators.	Symbolic operations such as limits and integration are less likely to give satisfying results in the APPROXIMATE setting. Approximate results are sometimes less compact and comprehensible than exact results. For example, you may prefer to see **1/7** instead of **.142857**.

AUTO Setting

When Exact/Approx = AUTO, the handheld uses exact rational arithmetic wherever all of the operands are rational numbers. Otherwise, floating-point arithmetic is used after

Downloaded from www.Manualslib.com manuals search engine

converting any rational operands to floating-point. In other words, floating-point is “infectious.” For example:

1/2 – **1/3** transforms to **1/6**
but
0.5 – **1/3** transforms to **.16666666666667**

This floating-point infection does not leap over barriers such as undefined variables or between elements of lists or matrices. For example:

(1/2 – **1/3) x + (0.5** – **1/3) y** transforms to **x/6 + .16666666666667 y**
and
{1/2 – **1/3, 0.5** – **1/3}** transforms to **{1/6, .16666666666667}**

In the AUTO setting, functions such as **solve** determine as many solutions as possible exactly, and then use approximate numerical methods if necessary to determine additional solutions. Similarly, ⌡ (integrate) uses approximate numerical methods if appropriate where exact symbolic methods fail.

Advantages	Disadvantages
You see exact results when practical, and approximate numeric results when exact results are impractical.	If you are interested only in exact results, some time may be wasted seeking approximate results.
You can often control the format of a result by choosing to enter some coefficients as either rational or floating-point numbers.	If you are interested only in approximate results, some time may be wasted seeking exact results. Moreover, you might exhaust the memory seeking those exact results.

Downloaded from www.Manualslib.com manuals search engine

Automatic Simplification


When you type an expression on the entry line and press ENTER, the TI-89 Titanium automatically simplifies the expression according to its default simplification rules.


Default Simplification Rules

All of the following rules are applied automatically. You do not see intermediate results.

- If a variable has a defined value, that value replaces the variable.

  If the variable is defined in terms of another variable, the variable is replaced with its “lowest level” value (called infinite lookup).



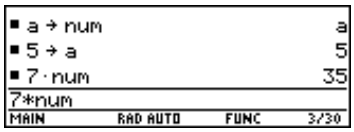


  Default simplification does not modify variables that use path names to indicate a folder. For example, *x+class\x* does not simplify to 2x.

Note: For information about folders, refer to the *Calculator Home Screen* module.

- For functions:
  - The arguments are simplified. (Some built-in functions delay simplification of some of their arguments.)
  - If the function is a built-in or user-defined function, the function definition is applied to the simplified arguments. Then the functional form is replaced with this result.

Downloaded from www.Manualslib.com manuals search engine


- Numeric subexpressions are combined.
- Products and sums are sorted into order.

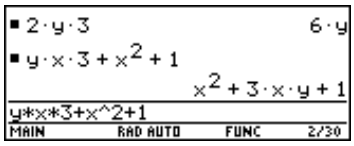


Products and sums involving undefined variables are sorted according to the first letter of the variable name.

- Undefined variables *r* through *z* are assumed to be true variables, and are placed in alphabetical order at the beginning of a sum.
- Undefined variables *a* through *q* are assumed to represent constants, and are placed in alphabetical order at the end of a sum (but before numbers).

- Similar factors and similar terms are collected.




- Identities involving zeros and ones are exploited.

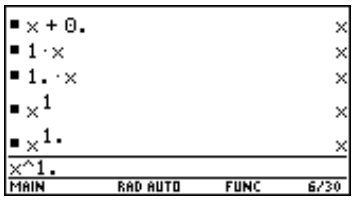


This floating-point number causes numeric results to be shown as floating-point.

If a floating-point whole number is entered as an exponent, it is treated as an integer (and does not produce a floating-point result).

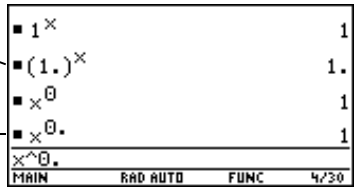


Downloaded from www.Manualslib.com manuals search engine

- Polynomial greatest common divisors are canceled.




- Polynomials are expanded unless no key cancellation can occur.

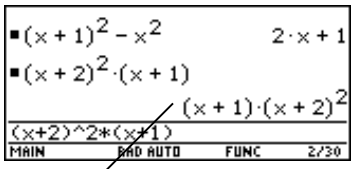

No key cancellation


- Common denominators are formed unless no key cancellation can occur.

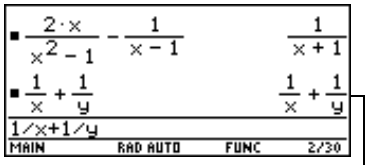

No key cancellation

- Functional identities are exploited. For example:

  ln(2x) = ln(2) + ln(x)
  and
  $\sin(x)^2 + \cos(x)^2 = 1$

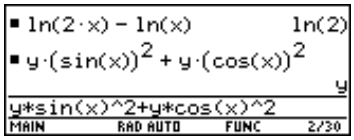

How Long Is the Simplification Process?

Depending on the complexity of an entry, result, or intermediate expression, it can take a long time to expand an expression and cancel common divisors as necessary for simplification.

To interrupt a simplification process that is taking too long, press ON. You can then try simplifying only a portion of the expression. (Auto-paste the entire expression on the entry line, and then delete the unwanted parts.)

Downloaded from www.Manualslib.com manuals search engine

Delayed Simplification for Certain Built-In Functions

Usually, variables are automatically simplified to their lowest possible level before they are passed to a function. For certain functions, however, complete simplification is delayed until after the function is performed.

Functions that Use Delayed Simplification

Functions that use delayed simplification have a required var argument that performs the function with respect to a variable. These functions have at least two arguments with the general form:

function(*expression, var* **[, …])**

Note: Not all functions that use a var argument use delayed simplification.

For example: **solve(x^2−x−2=0,x)**
d(x^2−x−2,x)
∫(x^2−x−2,x)
limit(x^2−x−2,x,5)

For a function that uses delayed simplification:


1. The *var* variable is simplified to the lowest level at which it remains a variable (even if it could be further simplified to a non-variable value).
2. The function is performed using the variable.
3. If *var* can be further simplified, that value is then substituted into the result.

Downloaded from www.Manualslib.com manuals search engine


Note: You may or may not want to define a numeric value for *var*, depending on the situation.

For example:

x cannot be simplified.

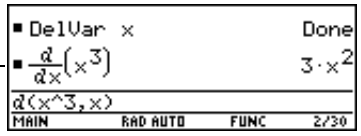


x is not simplified. The function uses x^3, and then substitutes 5 for x.

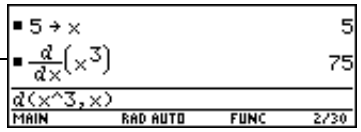


Note: The example to the right finds the derivative of x^3 at x=5. If x^3 was initially simplified to 75, you would find the derivative of 75, which is not what you want.

x is simplified to t. The function uses t^3.

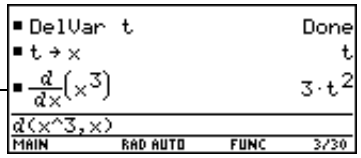

x is simplified to t. The function uses t^3, and then substitutes 5 for t.

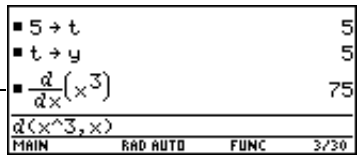

Downloaded from www.Manualslib.com manuals search engine

Substituting Values and Setting Constraints

The "*with*" operator (|) lets you temporarily substitute values into an expression or specify domain constraints.


Typing the "With" Operator

To type the "*with*" operator (|), press:




Substituting for a Variable


For every occurrence of a specified variable, you can substitute a numeric value or an expression.

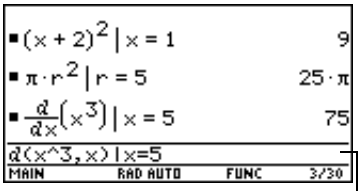

First derivative of x^3 at x = 5




To substitute for multiple variables at the same time, use the Boolean *and* operator.

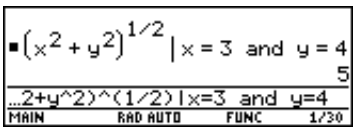

Downloaded from www.Manualslib.com manuals search engine


Substituting for a Simple Expression

For every occurrence of a simple expression, you can substitute a variable, numeric value, or another expression.

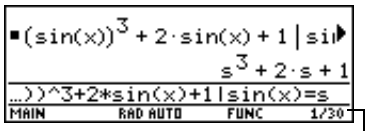

Substituting s for sin(x) shows that the expression is a polynomial in terms of sin(x).


By replacing a commonly used (or long) term, you can display results in a more compact form.

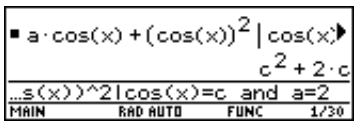

Note: acos(x) is different from **a*cos(x)**.

Substituting Complex Values

You can substitute complex values just as you would for other values.

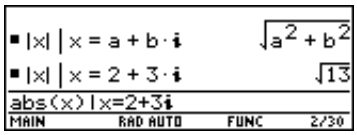

All undefined variables are treated as real numbers in symbolic calculations. To perform complex symbolic analysis, you must define a complex variable. For example:

x+y*i*→z

Then you can use *z* as a complex variable. You can also use *z*_. For more information see the _ (underscore) topic in the *Technical Reference* module.


Downloaded from www.Manualslib.com manuals search engine

Note:

- For an overview of complex numbers, refer to the *Technical Reference* module.
- To get the complex i, press 2nd [i]. Do not simply type the letter **i** on the keyboard.

Be Aware of the Limitations of Substitutions

- Substitution occurs only where there is an exact match for the substitution.

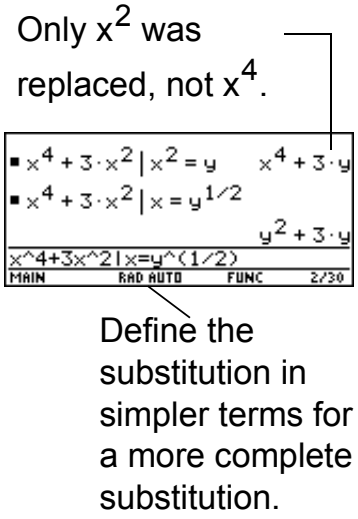
Only x^2 was replaced, not x^4.
$x^4+3\cdot x^2 \mid x^2=y \quad x^4+3\cdot y$
$x^4+3\cdot x^2 \mid x=y^{1/2} \quad y^2+3\cdot y$
x^4+3x^2|x=y^(1/2)
MAIN RAD AUTO FUNC 2/30
Define the substitution in simpler terms for a more complete substitution.

Downloaded from www.Manualslib.com manuals search engine


- Infinite recursions can occur when you define a substitution variable in terms of itself.

Substitutes sin(x+1), sin(x+1+1), sin(x+1+1+1), etc


sin(x)|x=x+1

When you enter a substitution that causes an infinite recursion:

- An error message is displayed.

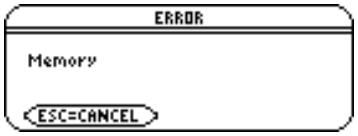


- When you press ESC, an error is shown in the history area.




- Internally, an expression is sorted according to the automatic simplification rules. Therefore, products and sums may not match the order in which you entered them.

- As a general rule, you should substitute for a single variable.

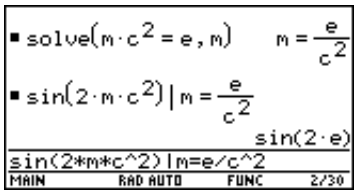

Downloaded from www.Manualslib.com manuals search engine

- Substituting for more general expressions (either $\mathbf{m \cdot c^2=e}$ or $\mathbf{c^2 \cdot m=e}$) may not work as you anticipate.

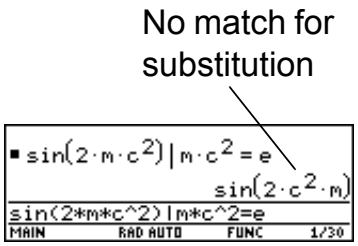

Note: Use the **solve** function to help determine the single-variable substitution.

Specifying Domain Constraints


Many identities and transformations are valid for only a particular domain. For example:

ln(x∗y) = ln(x) + ln(y)	only if **x** and/or **y** is not negative
Sin^{-1}(sin(θ)) = θ	only if θ ≥ $^{-}$π**/2** and θ ≤ π**/2** radians

Use the "*with*" operator to specify the domain constraint.

Because ln(x∗y) = ln(x) + ln(y) is not always valid, the logarithms are not combined.

With a constraint, the identity is valid and the expression is simplified.

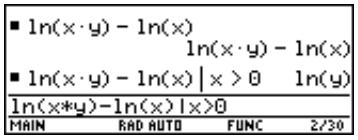


Downloaded from www.Manualslib.com manuals search engine

Note: Enter **ln(x∗y)** instead of **ln(xy)**; otherwise, xy is interpreted as a single variable named xy.

Because $\sin^{-1}(\sin(\theta)) = \theta$ is not always valid, the expression is not simplified.


With a constraint, the expression can be simplified.

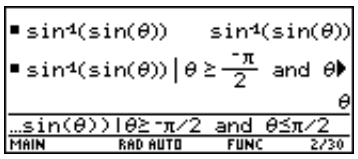

Note: For ≥ or ≤, press ◆ [>] or ◆ [<]. You can also use 2nd [MATH] **8** or 2nd [CHAR] **2** to select them from a menu.


Using Substitutions vs. Defining a Variable

In many cases, you can achieve the same effect as a substitution by defining the variable.

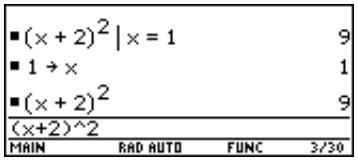


However, substitution is preferable for most cases because the variable is defined only for the current calculation and does not accidentally affect later calculations.

Substituting x=1 does not affect the next calculation.

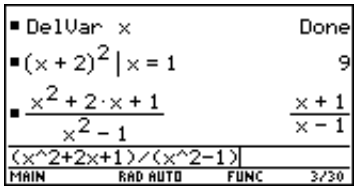

Downloaded from www.Manualslib.com manuals search engine

Storing 1→x affects the subsequent calculations.calculation.

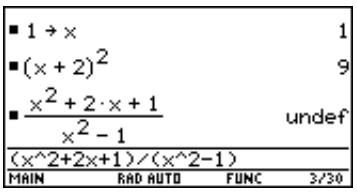


Caution: After x is defined, it can affect all calculations that involve x (until you delete x).

Overview of the Algebra Menu

You can use the F2 **Algebra** toolbar menu to select the most commonly used algebraic functions.

The Algebra Menu

From the Home screen, press F2 to display:

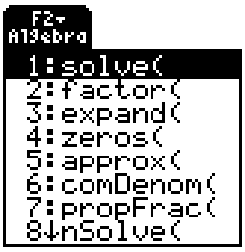



This menu is also available from the **MATH** menu. Press 2nd [MATH] and then select **9:Algebra**.

Downloaded from www.Manualslib.com manuals search engine

Note: For a complete description of each function and its syntax, refer to the *Technical Reference* module.

Menu Item	Description
solve	Solves an equation for a specified variable. This returns real solutions only, regardless of the **Complex Format** mode setting. Displays answers with "*and*" and "*or*" connecting solutions. (For complex solutions, select **A:Complex** from the **Algebra** menu.)
factor	Factors an expression with respect to all its variables or with respect to only a specified variable.
expand	Expands an expression with respect to all its variables or with respect to only a specified variable.
zeros	Determines the values of a specified variable that make an expression equal to zero. Displays in a list.
approx	Evaluates an expression using floating-point arithmetic, where possible. This is equivalent to using [MODE] to set Exact/Approx = APPROXIMATE (or using [◆] [ENTER] to evaluate an expression).
comDenom	Calculates a common denominator for all terms in an expression and transforms the expression into a reduced ratio of a numerator and denominator.
propFrac	Returns an expression as a proper fraction expression.
nSolve	Calculates a single solution for an equation as a floating-point number (as opposed to solve, which may display several solutions in a rational or symbolic form).

Downloaded from www.Manualslib.com manuals search engine

Menu Item	Description
Trig	Displays the submenu: 
	tExpand — Expands trig expressions with angle sums and multiple angles.
	TCollect — Collects the products of integer powers of trig functions into angle sums and multiple angles. **tCollect** is the opposite of **tExpand**.
Complex	Displays the submenu:  These are the same as **solve**, **factor**, and **zeros**; but they also compute complex results.
Extract	Displays the submenu: 
	getNum — Applies **comDenom** and then returns the resulting numerator.
	getDenom — Applies **comDenom** and then returns the resulting denominator.
	left — Returns the left-hand side of an equation or inequality.

Downloaded from www.Manualslib.com manuals search engine

Menu Item	Description
	right — Returns the right-hand side of an equation or inequality.


Note: The **left** and **right** functions are also used to return a specified number of elements or characters from the left or right side of a list or character string.


Common Algebraic Operations

This section gives examples for some of the functions available from the F2 **Algebra** toolbar menu. For complete information about any function, refer to the *Technical Reference* module. Some algebraic operations do not require a special function.

Adding or Dividing Polynomials

You can add or divide polynomials directly, without using a special function.





Downloaded from www.Manualslib.com manuals search engine

Factoring and Expanding Polynomials

Use the **factor** (F2 **2**) and **expand** (F2 **3**) functions.

factor(*expression* [,*var*]**)**


└for factoring with respect to a variable

expand(*expression* [,*var*]**)**

└for partial expansion with respect to a variable

Factor $\mathbf{x}^5 - \mathbf{1}$. Then expand the result.


Notice that **factor** and **expand** perform opposite operations.

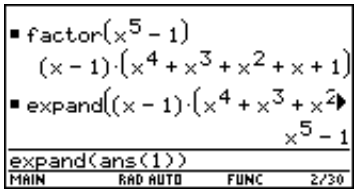

Finding Prime Factors of a Number

The **factor** (F2 **2**) function lets you do more than simply factor an algebraic polynomial.

You can find prime factors of a rational number (either an integer or a ratio of integers).

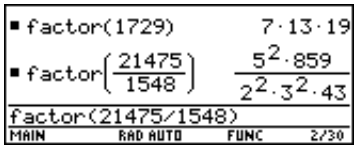


Downloaded from www.Manualslib.com manuals search engine

Finding Partial Expansions

With the **expand** (F2 **3**) function's optional var value, you can do a partial expansion that collects similar powers of a variable.

Do a full expansion of **$(x^2-x)(y^2-y)$** with respect to all variables.

Then do a partial expansion with respect to x.

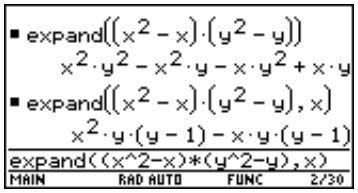


Solving an Equation

Use the **solve** (F2 **1**) function to solve an equation for a specified variable.

solve(*equation*, *var***)**


Solve **x + y − 5 = 2x − 5y** for x.

Notice that solve displays only the final result.



Downloaded from www.Manualslib.com manuals search engine

To see intermediate results, you can manually solve the equation step-by-step.

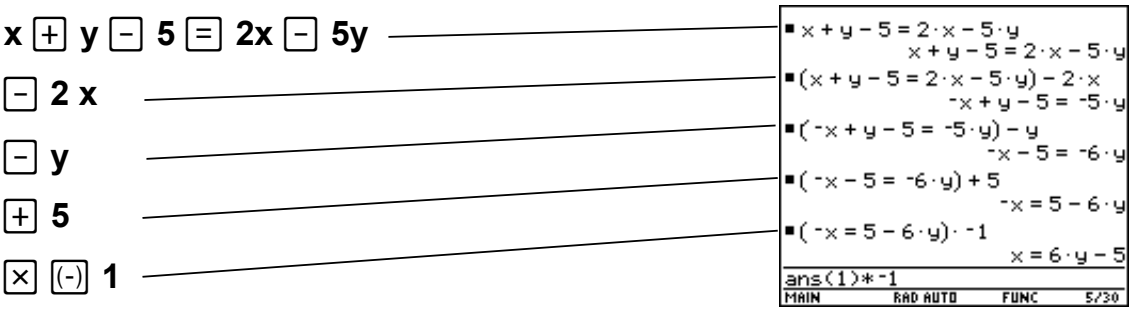

Note: An operation such as − **2** × subtracts 2x from both sides.

Solving a System of Linear Equations



Consider a set of two equations with two unknowns:

2x − 3y = 4
−x + 7y = −12

To solve this system of equations, use any of the following methods.

Method	Example
Use the **solve** function for a one-step solution.	**solve(**2x−3y=4 and −x+7y=−12,{x,y}**)**
Use the **solve** function with substitution (|) for step-by-step manipulation.	Substitutions are in the form of an equality, such as x=3 or y=sin(x). To be most effective, the left side should be a simple variable. See ”Symbolic Manipulation” in the *Previews* chapter, which solved for **x = −8/11** and **y = −20/11**.

Downloaded from www.Manualslib.com manuals search engine

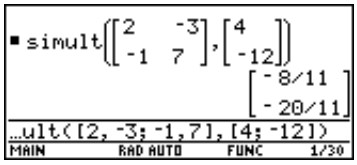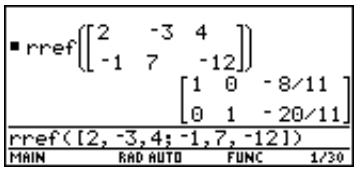Method	Example
Use the **simult** function with a matrix.	Enter the coefficients as a matrix and the results as a constant column matrix. 
Use the **rref** function with a matrix.	Enter the coefficients as an augmented matrix. 

Note: The simult and rref matrix functions are not on the F2 **Algebra** menu. Use 2nd [MATH] **4** or the **Catalog**.

Downloaded from www.Manualslib.com manuals search engine

Finding the Zeros of an Expression

Use the **zeros** (F2 **4**) function.


zeros(*expression*, *var***)**

Use the expression **x**

sin(x) + cos(x).

Find the zeros with respect to x in the interval **0** ≤ **x** and **x** ≤ **3**.

Note: For ≥ or ≤, type ◆ [>] or ◆ [<].You can also use 2nd [MATH] **8** or 2nd [CHAR] **2** to select them from a menu.



Use the "*with*" operator to specify the interval.

Downloaded from www.Manualslib.com manuals search engine

Finding Proper Fractions and Common Denominators

Use the **propFrac** (F2 **7**) and **comDenom** (F2 **6**) functions.

propFrac(*rational expression* [,*var*]**)**

└ for proper fractions with respect to a variable

comDenom(*expression* [,*var*]**)**


└ for common denominators that collect similar powers of this variable

Find a proper fraction for the expression **(x^4 − 2x^2 + x) / (2x^2 + x + 4)**.

Then transform the answer into a ratio of a fully expanded numerator and a fully expanded denominator.

Notice that **propFrac** and **comDenom** perform opposite operations.

Note: You can use **comDenom** with an expression, list, or matrix.

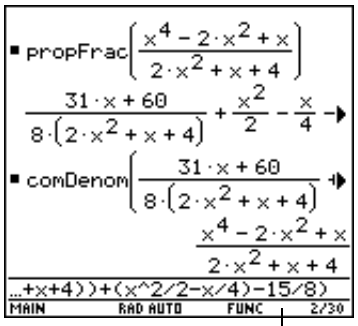

If you do this example on your handheld, the **propFrac** function scrolls off the top of the screen.

In this example:

Downloaded from www.Manualslib.com manuals search engine

- $\frac{31x+60}{8}$ is the remainder of x^4-2x^2+x divided by $2x^2+x+4$.
- $\frac{x^2}{2}-\frac{x}{4}-15/8$ is the quotient.

Overview of the Calc Menu

You can use the F3 **Calc** toolbar menu to select commonly used calculus functions.

The Calc Menu

From the Home screen, press F3 to display:



This menu is also available from the MATH menu. Press 2nd [MATH] and then select **A:Calculus**.

Note: For a complete description of each function and its syntax, refer to the *Technical Reference* module.

Menu Item	Description
d **differentiate**	Differentiates an expression with respect to a specified variable.

Downloaded from www.Manualslib.com manuals search engine

∫ **integrate**	Integrates an expression with respect to a specified variable.
limit	Calculates the limit of an expression with respect to a specified variable.
Σ **sum**	Evaluates an expression at discrete variable values within a range and then calculates the sum.
Π **product**	Evaluates an expression at discrete variable values within a range and then calculates the product.
fMin	Finds candidate values of a specified variable that minimize an expression.
fMax	Finds candidate values of a specified variable that maximize an expression.
arcLen	Returns the arc length of an expression with respect to a specified variable.
taylor	Calculates a Taylor polynomial approximation to an expression with respect to a specified variable.
nDeriv	Calculates the numerical derivative of an expression with respect to a specified variable.
nInt	Calculates an integral as a floating-point number using quadrature (an approximation using weighted sums of integrand values).
deSolve	Symbolically solves many 1st and 2nd order differential equations, with or without initial conditions.
impDif	Computes implicit derivatives for equations in two variables in which one variable is defined implicitly in terms of another.

Downloaded from www.Manualslib.com manuals search engine

Note: The d symbol for differentiate is a special symbol. It is not the same as typing the letter **D** on the keyboard. Use F3 **1** or 2nd [d].

Common Calculus Operations

This section gives examples for some of the functions available from the F3 **Calc** toolbar menu. For complete information about any calculus function, refer to the *Technical Reference* module.

Integrating and Differentiating

Use the ∫ **integrate** (F3 **2**) and d **differentiate** (F3 **1**) functions.


∫ **(***expression*, *var* **[**,*low*] **[**,*up*]**)**

lets you specify limits or a constant of integration

d **(***expression*, *var* **[**,*order*]**)**

Integrate **x**^{2}***sin(x)** with respect to x.

Differentiate the answer with respect to x.

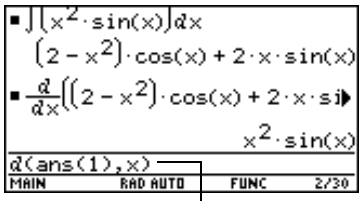

To get d, use F3 **1** or 2nd [d]. Do not simply type the letter D on the keyboard.

Downloaded from www.Manualslib.com manuals search engine

Note: You can integrate an expression only; you can differentiate an expression, list, or matrix.


Finding a Limit

Use the **limit** (F3 **3**) function.

limit(*expression*, *var*, *point* [,*direction*]**)**

negative number = from left
positive number= from right
omitted number or 0 = both

Find the limit of **sin(3x) / x** as x approaches 0.

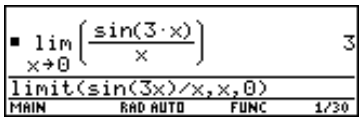

Note: You can find a limit for an expression, list, or matrix.

Downloaded from www.Manualslib.com manuals search engine

Finding a Taylor Polynomial


Use the **taylor** (F3 **9**) function.

taylor(*expression*, *var*, *order* [,*point*]**)**

└ if omitted, expansion point is 0


Find a 6th order Taylor polynomial for **sin(x)** with respect to x.

Store the answer as a user-defined function named **y1(x)**.

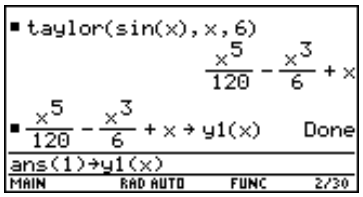

Then graph **sin(x)** and the Taylor polynomial.

Graph sin(x):Graph y1(x)

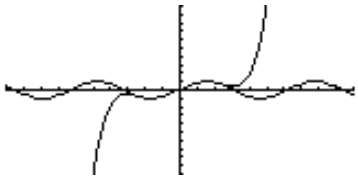

Important: Degree-mode scaling by π/180 may cause calculus application results to appear in a different form.

User-Defined Functions and Symbolic Manipulation

You can use a user-defined function as an argument for the TI-89 Titanium 's built-in algebra and calculus functions.

Downloaded from www.Manualslib.com manuals search engine

For Information about Creating a User-Defined Function

Refer to:


- “Creating and Evaluating User-Defined Functions” in the *Calculator Home Screen* module.
- “Graphing a Function Defined on the Home Screen” and “Graphing a Piecewise Defined Function” in the *Calculator Home Screen* module.
- “Overview of Entering a Function” in the *Programming* module.

Undefined Functions

You can use functions such as **f(x)**, **g(t)**, **r(θ)**, etc., that have not been assigned a definition. These “undefined” functions yield symbolic results. For example:

Use **DelVar** to ensure that **f(x)** and **g(x)** are not defined.

Then find the derivative of **f(x) g(x)** with respect to x.

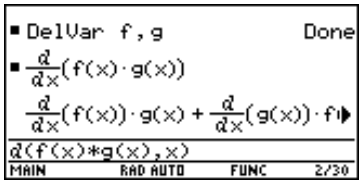

Note: To select **d** from the Calc toolbar menu, press F3 **1** (or press 2nd [d] on the keyboard).

Single-Statement Functions

You can use user-defined functions consisting of a single expression. For example:

Downloaded from www.Manualslib.com manuals search engine

- Use [STO▸] to create a user-defined secant function, where:

$$\sec x = \frac{1}{\cos x}$$

Then find the limit of **sec(x)** as *x* approaches π/4.



Note: To select **limit** from the Calc toolbar menu, press [F3] **3**.


- Use **Define** to create a user-defined function **h(x)**, where:

$$h(x) = \int_0^x \frac{\sin t}{t}$$

Then find a 5th order Taylor polynomial for **h(x)** with respect to *x*.

Note: To select ∫ from the **Calc** toolbar menu, press [F3] **2** (or press [2nd] [∫] on the keyboard). To select taylor, press [F3] **9**.

Define h(x)= ∫(sin(t)/t,t,0,x).

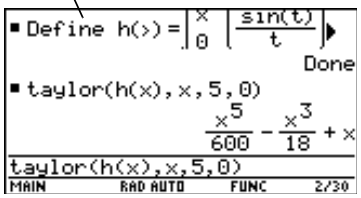


Multi-Statement vs. Single-Statement Functions

Multi-statement user-defined functions should be used as an argument for numeric functions (such as **nDeriv** and **nInt**) only.

Downloaded from www.Manualslib.com manuals search engine

In some cases, you may be able to create an equivalent single-statement function. For example, consider a piecewise function with two pieces.


When:	Use expression:
$x < 0$	$-x$
$x \geq 0$	$5\cos(x)$

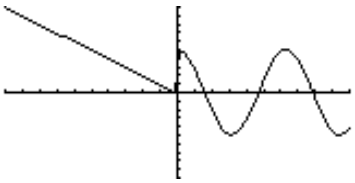

- If you were to create a multi-statement user-defined function with the form:

```
Func
  If x<0 Then
  Return ëx
Else
  Return 5cos(x)
EndIf
EndFunc
```

Define
y1(x)=Func:If x<0
Then: ... :EndFunc

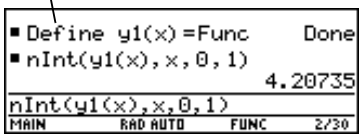

Then numerically integrate **y1(x)** with respect to *x*.

Note: To select **nInt** from the Calc toolbar menu, press F3 **B:nInt**.

Downloaded from www.Manualslib.com manuals search engine


- Create an equivalent single-statement user-defined function.

  Use the TI-89 Titanium's built-in **when** function.

  Then integrate **y1(x)** with respect to *x*.

  Note: To select ∫ from the Calc toolbar menu, press F3 **2** (or press 2nd [∫] on the keyboard).

Define y1(x)=when(x<0, ⁻x, 5cos(x))

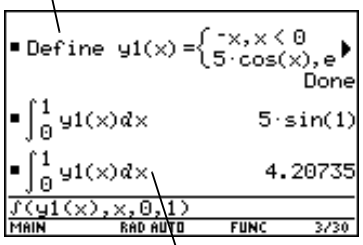

Press ◆ ENTER for a floating-point result.

If You Get an Out-of-Memory Error

The TI-89 Titanium stores intermediate results in memory and then deletes them when the calculation is complete. Depending on the complexity of the calculation, the handheld may run out of memory before a result can be calculated.

Freeing Up Memory

- Delete unneeded variables and/or Flash applications, particularly large-sized ones.
  - Use 2nd [VAR-LINK] as described in *Memory and Variable Management* to view and delete variables and/or Flash applications.
- On the Home screen:

Downloaded from www.Manualslib.com manuals search engine

- Clear the history area (F1 **8**) or delete unneeded history pairs.
- You can also use F1 **9** to reduce the number of history pairs that will be saved.

- Use MODE to set Exact/Approx = APPROXIMATE. (For results that have a large number of digits, this uses less memory than **AUTO** or EXACT. For results that have only a few digits, this uses more memory.)

Simplifying Problems

- Split the problem into parts.
  - Split **solve(**a∗b=0,*var***)** into **solve(**a=0,*var***)** and **solve(**b=0,var**)**. Solve each part and combine the results.
- If several undefined variables occur only in a certain combination, replace that combination with a single variable.
  - If m and c occur only as $\mathbf{m}*\mathbf{c}^2$, substitute e for $\mathbf{m}*\mathbf{c}^2$.
  - In the expression $\frac{(a+b)^2+\sqrt{(a+b)^2}}{1-(a+b)^2}$, substitute c for **(a+b)** and use $\frac{c^2+\sqrt{c^2}}{1-c^2}$. In the solution, replace c with **(a+b)**.
- For expressions combined over a common denominator, replace sums in denominators with unique new undefined variables.
  - In the expression $\frac{x}{\sqrt{a^2+b^2}+c}+\frac{y}{\sqrt{a^2+b^2}+c}$, substitute d for $\sqrt{a^2+b^2}+c$ and are $\frac{x}{d}+\frac{y}{d}$. In the solution, replace d with $\sqrt{a^2+b^2}+c$.
- Substitute known numeric values for undefined variables at an earlier stage, particularly if they are simple integers or fractions.

Downloaded from www.Manualslib.com manuals search engine

- Reformulate a problem to avoid fractional powers.
- Omit relatively small terms to find an approximation.


Special Constants Used in Symbolic Manipulation

The result of a calculation may include one of the special constants described in this section. In some cases, you may also need to enter a constant as part of your entry.

true, false

These indicate the result of an identity or a Boolean expression.

x=x is true for any value of x.

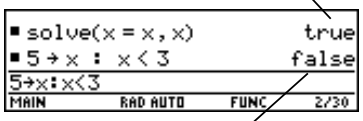

5<3 is false.

Downloaded from www.Manualslib.com manuals search engine


@n1 ... @n255

This notation indicates an “arbitrary integer” that represents any integer.

When an arbitrary integer occurs multiple times in the same session, each occurrence is numbered consecutively. After it reaches 255, arbitrary integer consecutive numbering restarts at @n0. Use Clean Up **2:NewProb** to reset to @n1.

Note: For @, press: ◆ STO▸

A solution is at every integer multiple of π.

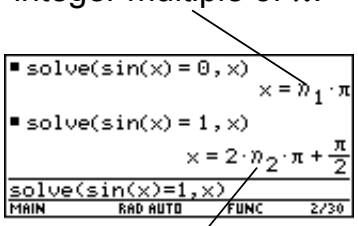

Both @n and @n2 represent any arbitrary integer, but this notation identifies separate arbitrary integers.

Downloaded from www.Manualslib.com manuals search engine

@1 ... @255


This notation indicates an “arbitrary constant” that represents any integer.

When an arbitrary constant occurs multiple times in the same session, each occurrence is numbered consecutively. After it reaches 255, arbitrary integer consecutive numbering restarts at @0. Use Clean Up **2:NewProb** to reset to @1.

Note: For @, press: ◆ STO▸

∞, e

∞ represents infinity, and e represents the constant **2.71828...** (base of the natural logarithms).

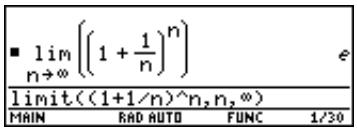

These constants are often used in entries as well as results.

Notes:
For ∞, press:
[calculator] ◆ [∞]
For *e*, press:
[calculator] ◆ [e^x]

Downloaded from www.Manualslib.com manuals search engine


undef

This indicates that the result is undefined.

Mathematically undefined

±∞ (undetermined sign)

Non-unique limit

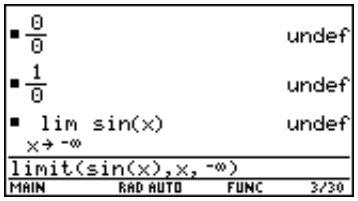

Downloaded from www.Manualslib.com manuals search engine

Constants and Measurement Units

Entering Constants or Units


You can use a menu to select from a list of available constants and units, or you can type them directly from the keyboard.

From a Menu


The following shows how to select a unit, but you can use the same general procedure to select a constant.

From the Home screen:

1. Type the value or expression.




2. Display the **UNITS** dialog box. Press:
   2nd [UNITS]

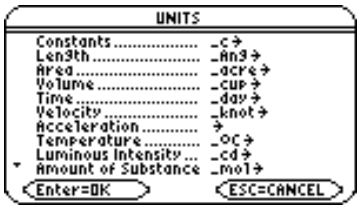

3. Use ▼ and ▲ to move the cursor to the applicable category.


   Note: Use 2nd ▼ and 2nd ▲ to scroll one page at a time through the categories.

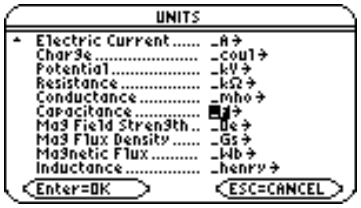

Downloaded from www.Manualslib.com manuals search engine

4. To select the highlighted (default) unit, press ENTER.
   – or –
   To select a different unit from the category, press ▶. Then highlight the applicable unit, and press ENTER.

   Note: If you created a user-defined unit for an existing category, it is listed in the menu.

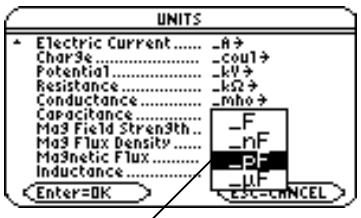

You can also move the cursor by typing the first letter of a unit.

The selected unit is placed in the entry line. Constant and unit names always begin with an underscore (_).

6.3_pF

From the Keyboard

If you know the abbreviation that the TI-89 Titanium uses for a particular constant or unit, you can type it directly from the keyboard. For example:

256_m

- The first character must be an underscore (_). For _, press:
  ◆ [_]

- A space or a multiplication symbol (∗) before the underscore is optional. For example, **256_m, 256 _m**, and **256∗_m** are equivalent.
- However, if you are adding units to a variable, you must put a space or ∗ before the underscore. For example, *x_m* is treated as a variable, not as x with a unit.


Note: You can type units in either uppercase or lowercase characters.

Downloaded from www.Manualslib.com manuals search engine

Combining Multiple Units

You may need to combine two or more units from different categories.

For example, suppose you want to enter a velocity in meters per second. In the UNITS dialog box, however, the **Velocity** category does not contain this unit.

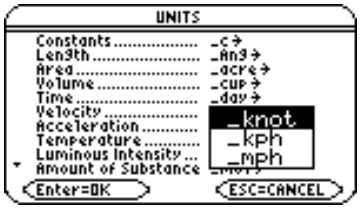

You can enter meters per second by combining **_m** and **_s** from the **Length** and **Time** categories, respectively.

3∗9.8_m/_s

Combine the units _m and _s. There is no pre-defined m/_s unit.

Note: Create a user-defined unit for frequently used combinations.

Downloaded from www.Manualslib.com manuals search engine

Using Parentheses with Units in a Calculation

In a calculation, you may need to use parentheses ( ) to group a value and its units so that they are evaluated properly. This is particularly true for division problems. For example:

To calculate:	Enter:
$\frac{100\_m}{2\_s}$	100_m/(2_s) 50 • $\frac{\_m}{\_s}$ You must use parentheses for (2_s). This is important for division. If you omit the parentheses, you will get unexpected units. For example: 100_m/2_s 50. ∗_m ∗_s

Note: If you have any doubt about how a value and its units will be evaluated, group them within parentheses ( ).

Here's why you get unexpected units if you do not use parentheses. In a calculation, a unit is treated similar to a variable. For example: **100_m** is treated as **100∗_m** and **2_s** is treated as **2∗_s**. Without parentheses, the entry is calculated as:

100∗_m / 2∗_s = $\frac{100 * \_m}{2}$ **∗_s = 50. ∗_m ∗_s.**

Downloaded from www.Manualslib.com manuals search engine

Converting from One Unit to Another

You can convert from one unit to another in the same category, including any user-defined units.

For All Units Except Temperature


If you use a unit in a calculation, it is converted and displayed automatically in the current default unit for that category, unless you use the ▸ conversion operator as described later. The following examples assume that your default units are set to the SI system of metric units.

Notes:

- Refer to the list of pre-defined units.
- From the UNITS dialog box, you can select available units from a menu.

To multiply 20 times 6 kilometers.

20∗6_km



Shown in the default unit for Length, (_m in SI system).

Downloaded from www.Manualslib.com manuals search engine

If you want to convert to a unit other than the default, use the ▸ conversion operator.

expression_unit1 ▸ *_unit2*


└ For ▸, press 2nd [▸].

To convert 4 light years to kilometers:

4_ltyr ▸ _km

To convert 186000 miles/second to kilometers/hour:

186000_mi/_s ▸ _km/_hr

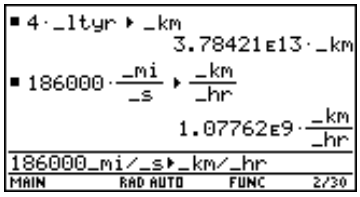

Downloaded from www.Manualslib.com manuals search engine

If an expression uses a combination of units, you can specify a conversion for some of the units only. Any units for which you do not specify a conversion will be displayed according to your defaults.


To convert 186000 miles/second from miles to kilometers:

186000_mi/_s ▸ _km

To convert 186000 miles/second from seconds to hours:

186000_mi/_s ▸ 1/_hr


Because a Time conversion is not specified, it is shown in its default unit (_s in this example).

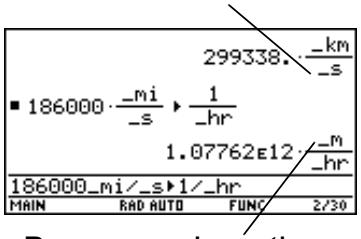

Because a Length conversion is not specified, it is shown in its default unit (_m in this example).


To enter meters per second squared:

27_m/_s^2



To convert meters per second squared from seconds to hours:

27_m/_s^2 ▸ 1/_hr^2

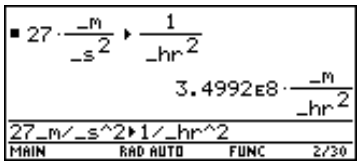

Downloaded from www.Manualslib.com manuals search engine


For Temperature Values


To convert a temperature value, you must use **tmpCnv( )** instead of the ▸ operator.

tmpCnv(*expression*_°*tempUnit1*, _°*tempUnit2*)**
└For °, press 2nd [°]

For example, to convert 100_°C to _°F:

tmpCnv(*100*_°*c*, _°*f*)**



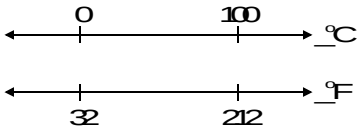


Downloaded from www.Manualslib.com manuals search engine

For Temperature Ranges


To convert a temperature range (the difference between two temperature values), use **ΔtmpCnv( )**.

ΔtmpCnv(*expression*_°*tempUnit1*, _°*tempUnit2*)

For example, to convert a 100_°C range to its equivalent range in _°F:



ΔtmpCnv(*100*_°*c*, _°*f*)

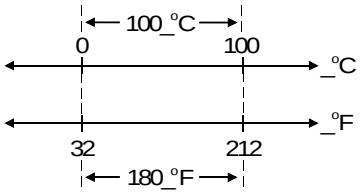

Note: For Δ, press:
◆ (⇧ [D]

Setting the Default Units for Displayed Results


All results involving units are displayed in the default unit for that category. For example, if the default unit for **Length** is *_m*, any length result is displayed in meters (even if you entered *_km* or *_ft* in the calculation).

Downloaded from www.Manualslib.com manuals search engine

If You're Using the SI or ENG/US System

The SI and ENG/US systems of measurement (set from **Page 3** of the MODE screen) use built-in default units, which you cannot change.


The default units for these systems are available.

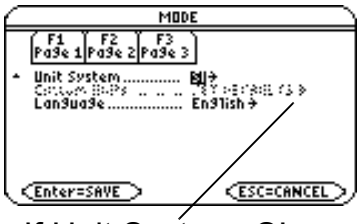

If Unit System=SI or ENG/US, the Custom Units item is dimmed. You cannot set a default for individual categories.

Setting Custom Defaults


To set custom defaults:

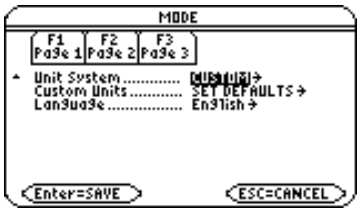

1. Press MODE F3 ▶ **3** to set **Unit System = CUSTOM**.
2. Press ▼ to highlight **SET DEFAULTS**.
3. Press ▶ to display the **CUSTOM UNIT DEFAULTS** dialog box.

Downloaded from www.Manualslib.com manuals search engine

4. For each category, you can highlight its default, press ▶, and select a unit from the list.
5. Press ENTER twice to save your changes and exit the **MODE** screen.

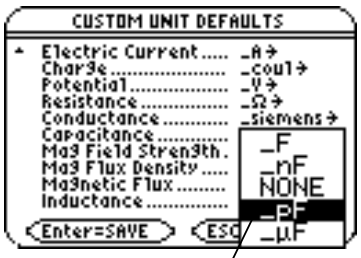

You can also move the cursor by typing the first letter of a unit.

Notes:


- You can also use **setUnits( )** or **getUnits( )** to set or return information about default units. Refer to the *Technical Reference* module.
- When the **CUSTOM UNIT DEFAULTS** dialog box first appears, it shows the current default units.

What is the NONE Default?

Many categories let you select NONE as the default unit.

This means that results in that category are displayed in the default units of its components.

For example, **Area = Length**^{2}, so **Length** is the component of **Area**.

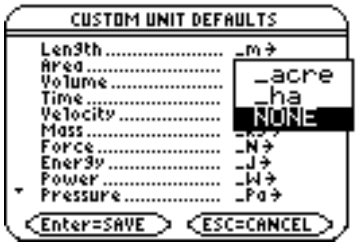

Downloaded from www.Manualslib.com manuals search engine

- If the defaults are **Area = _acre** and **Length = _m** (meters), area results are shown with **_acre** units.
- If you set **Area = NONE**, area results are shown with **_m**^{2} units.

Note: NONE is not available for base categories such as **Length** and **Mass** that have no components.

Creating Your Own User-Defined Units

In any category, you can expand the list of available units by defining a new unit in terms of one or more pre-defined units. You can also use “standalone” units.

Why Use Your Own Units?

Some example reasons to create a unit are:

- You want to enter length values in dekameters. Define *10_m* as a new unit named *_dm*.
- Instead of entering *_m/_s*^{2} as an acceleration unit, you define that combination of units as a single unit named *_ms2*.
- You want to calculate how many times someone blinks. You can use *_blinks* as a valid unit without defining it. This “standalone” unit is treated similar to a variable that is not defined. For instance, *3_blinks* is treated the same as *3a*.

Note: If you create a user-defined unit for an existing category, you can select it from the UNITS dialog box menu. But you cannot use MODE to select the unit as a default for displayed results.

Downloaded from www.Manualslib.com manuals search engine

Rules for User-Defined Unit Names

The naming rules for units are similar to variables.

- Can have up to 8 characters.
- First character must be an underscore. For _, press:
  ◆ [_]

- Second character can be any valid variable name character except _ or a digit. For example, _*9f* is not valid.
- Remaining characters (up to 6) can be any valid variable name character except an underscore.

Defining a Unit

Define a unit the same way you store to a variable.

Downloaded from www.Manualslib.com manuals search engine

definition → *_newUnit*


For →, press STO▸

For example, to define a dekameter unit:

10_m →_dm

To define an acceleration unit:


_m/_s^2 →_ms2

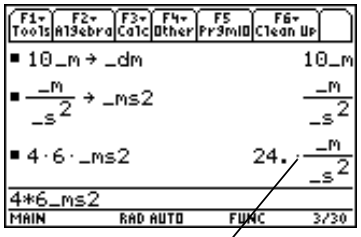

Assuming unit defaults for Length and Time are set to _m and _s.

To calculate 195 blinks in 5 minutes as _blinks/_min:

195_blinks/(5_min)

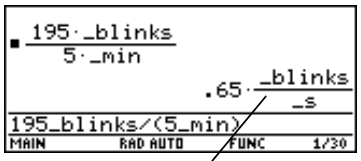

Assuming unit default for Time is set to _s.

Notes:

- User-defined units are displayed in lowercase characters, regardless of the case you use to define them.
- User-defined units such as *_dm* are stored as variables. You can delete them the same as you would any variable.

Downloaded from www.Manualslib.com manuals search engine

List of Pre-Defined Constants and Units

This section lists the pre-defined constants and units by category. You can select any of these from the UNITS dialog box. If you use MODE to set default units, note that categories with only one defined unit are not listed.

Defaults for SI and ENG/US

The SI and ENG/US systems of measurement use built-in default units. In this section, the built-in defaults are indicated by (SI) and (ENG/US). In some categories, both systems use the same default.

Some categories do not have default units.

Constants

	Description	Value
_c	speed of light	2.99792458E8_m/_s
_Cc	coulomb constant	8.9875517873682E9_N•_m^2 /_$coul^2$
_g	acceleration of gravity	9.80665_m/_s^2
_Gc	gravitational constant	6.6742E-11_m^3/_kg/_s^2
_h	Planck's constant	6.6260693E-34_J•_s
_k	Boltzmann's constant	1.3806505E-23_J/_°K
_Me	electron rest mass	9.1093826E-31_kg

Downloaded from www.Manualslib.com manuals search engine

	Description	Value
_Mn	neutron rest mass	1.67492728E-27_kg
_Mp	proton rest mass	1.67262171E-27_kg
_Na	Avogadro's number	6.0221415E23 /_mol
_q	electron charge	1.60217653E-19_coul
_Rb	Bohr radius	5.291772108E-11_m
_Rc	molar gas constant	8.314472_J/_mol/_°K
_Rdb	Rydberg constant	10973731.568525 /_m
_Vm	molar volume	2.2413996E-2_m^3/_mol
_ε0	permittivity of a vacuum	8.8541878176204E-12_F/_m
_σ	Stefan-Boltzmann constant	5.670400E-8_W/_m^2/_$°K^4$
_ϕ0	magnetic flux quantum	2.06783372E-15_Wb
_μ0	permeability of a vacuum	1.2566370614359E-6_N/_A^2
_μb	Bohr magneton	9.27400949E-24_J • _m^2/_Wb

Notes:

- The calculator simplifies unit expressions and displays results according to your default units. Therefore, constant values displayed on your screen may appear different from the values in this table.
- For Greek characters, refer to *Quick Reference Key Table.*

Downloaded from www.Manualslib.com manuals search engine

- These values represent the most up-to-date constants available at time of printing from the CODATA Internationally recommended values of the Fundamental Physical Constants available on the National Institute of Standards and Technology (NIST) web site. (http://physics.nist.gov/cuu/Constants/index.html).

Length

_Ang	angstrom	_mi	mile
_au	astronomical unit	_mil	1/1000 inch
_cm	centimeter	_mm	millimeter
_fath	fathom	_Nmi	nautical mile
_fm	fermi	_pc	parsec
_ft	foot (ENG/US)	_rod	rod
_in	inch	_yd	yard
_km	kilometer	_μ	micron
_ltyr	light year	_Å	angstrom
_m	meter (SI)		

Area

_acre	acre	NONE (SI) (ENG/US)	
_ha	hectare		

Downloaded from www.Manualslib.com manuals search engine

Volume

_cup	cup	_ml	milliliter
_floz	fluid ounce	_pt	pint
_flozUK	British fluid ounce	_qt	quart
_gal	gallon	_tbsp	tablespoon
_galUK	British gallon	_tsp	teaspoon
_l	liter	NONE (SI) (ENG/US)	

Time

_day	day	_s	second (SI) (ENG/US)
_hr	hour	_week	week
_min	minute	_yr	year
_ms	millisecond	_µs	microsecond
_ns	nanosecond		

Velocity

_knot	knot	_mph	miles per hour
_kph	kilometers per hour	NONE (SI) (ENG/US)	

Downloaded from www.Manualslib.com manuals search engine

Acceleration

no pre-defined units		

Temperature

_°C	°Celsius (For °, press 2nd [°].)	_°K	°Kelvin
_°F	°Fahrenheit	_°R	°Rankine (no default)

Luminous Intensity

_cd	candela (no default)		

Amount of Substance

_mol	mole (no default)		

Mass

_amu	atomic mass unit	_oz	ounce
_gm	gram	_slug	slug
_kg	kilogram (SI)	_ton	ton
_lb	pound (ENG/US)	_tonne	metric ton

Downloaded from www.Manualslib.com manuals search engine

_mg	milligram	_tonUK	long ton
_mton	metric ton		

Force

_dyne	dyne	_N	newton (SI)
_kgf	kilogram force	_tonf	ton force
_lbf	pound force (ENG/US)		

Energy

_Btu	British thermal unit (ENG/US)	_J	joule (SI)
_cal	calorie	_kcal	kilocalorie
_erg	erg	_kWh	kilowatt-hour
_eV	electron volt	_latm	liter-atmosphere
_ftlb	foot-pound		

Power

_hp	horsepower (ENG/US)	_W	watt (SI)
_kW	kilowatt		

Downloaded from www.Manualslib.com manuals search engine

Pressure

_atm	atmosphere	_mmHg	millimeters of mercury
_bar	bar	_Pa	pascal (SI)
_inH2O	inches of water	_psi	pounds per square inch (ENG/US)
_inHg	inches of mercury	_torr	millimeters of mercury
_mmH2O	millimeters of water		

Viscosity, Kinematic

_St	stokes		

Viscosity, Dynamic

_P	poise		

Frequency

_GHz	gigahertz	_kHz	kilohertz
_Hz	hertz (SI) (ENG/US	_MHz	megahertz

Downloaded from www.Manualslib.com manuals search engine

Electric Current

_A	ampere (SI) (ENG/US)	_mA	milliampere
_kA	kiloampere	_µA	microampere

Charge

_coul	coulomb (SI) (ENG/US)		

Potential

_kV	kilovolt	_V	volt (SI) (ENG/US)
_mV	millivolt	_volt	volt

Resistance

_kΩ	kilo ohm	_ohm	ohm
_MΩ	megaohm	_Ω	ohm (SI) (ENG/US)

Conductance

_mho	mho (ENG/US)	_siemens	siemens (SI)
_mmho	millimho	_µmho	micromho

Downloaded from www.Manualslib.com manuals search engine

Capacitance

_F	farad (SI) (ENG/US)	_pF	picofarad
_nF	nanofarad	_µF	microfarad

Mag Field Strength

_Oe	oersted	NONE (SI) (ENG/US)

Mag Flux Density

_Gs	gauss	_T	tesla (SI) (ENG/US)

Magnetic Flux

_Wb	weber (SI) (ENG/US)		

Inductance

_henry	henry (SI) (ENG/US)	_nH	nanohenry
_mH	millihenry	_µH	microhenry

Downloaded from www.Manualslib.com manuals search engine


Basic Function Graphing

Overview of Steps in Graphing Functions


To graph one or more **y(x)** functions, use the general steps shown below. For a detailed description of each step, refer to the following pages. You may not need to do all the steps each time you graph a function.

Graphing Functions

1. Set **Graph** mode ([MODE]) to **FUNCTION**. Also set **Angle** mode, if necessary.

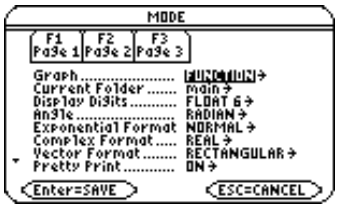

2. Define x and y components on Y= Editor ([◆] [Y=]).
3. Select ([F4]) which defined functions to graph.

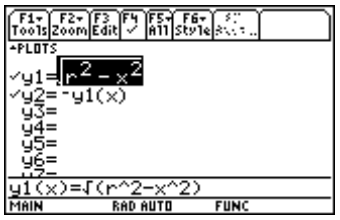

   Note: To turn off any stat data plots, press [F5] **5** or use [F4] to deselect them.

Downloaded from www.Manualslib.com manuals search engine

4. Set the display style for a function.


   2nd [F6]

   This is optional. For multiple equations, this helps visually distinguish one from another.




5. Define the viewing window (◆ [WINDOW]).

   F2 **Zoom** also changes the viewing window.

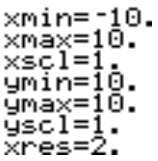


6. Change the graph format if necessary.

   F1 **9**
   – or –
   ◆ |

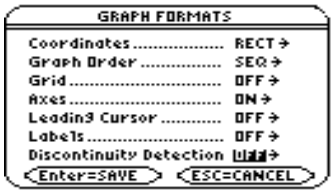

7. Graph the selected functions (◆ [GRAPH]).

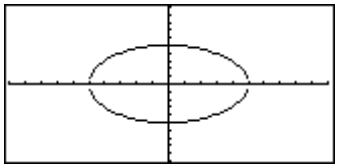

Exploring the Graph

From the Graph screen, you can:

- Display the coordinates of any pixel by using the free-moving cursor, or of a plotted point by tracing a function.
- Use the F2 **Zoom** toolbar menu to zoom in or out on a portion of the graph.

Downloaded from www.Manualslib.com manuals search engine


- Use the F5 **Math** toolbar menu to find a zero, minimum, maximum, etc.

Setting the Graph Mode

Before graphing **y(x)** functions, you must select FUNCTION graphing. You may also need to set the Angle mode, which affects how the TI-89 Titanium graphs trigonometric functions.

Graph Mode

1. Press MODE to display the **MODE** dialog box, which shows the current mode settings.

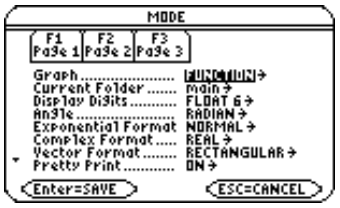

2. Set the Graph mode to **FUNCTION**. Refer to “Setting Modes” in *Operating the Calculator*.

   For graphs that do not use complex numbers, set **Complex Format = REAL**. Otherwise, it may affect graphs that use powers, such as $\mathbf{x}^{1/3}$.

While this module specifically describes **y(x)** function graphs, the calculator lets you select from six Graph mode settings.

Graph Mode Setting	Description
FUNCTION	**y(x)** functions
PARAMETRIC	**x(t)** and **y(t)** parametric equations

Downloaded from www.Manualslib.com manuals search engine


Graph Mode Setting	Description
POLAR	**r(θ)** polar equations
SEQUENCE	**u(n)** sequences
3D	**z(x,y)** 3D equations
DIFFERENTIAL EQUATION	**y'(t)** differential equations

Angle Mode

When using trigonometric functions, set the Angle mode for the units (RADIAN, DEGREE or GRADIAN) in which you want to enter and display angle values.

Checking the Status Line

To see the current Graph mode and Angle mode, check the status line at the bottom of the screen.

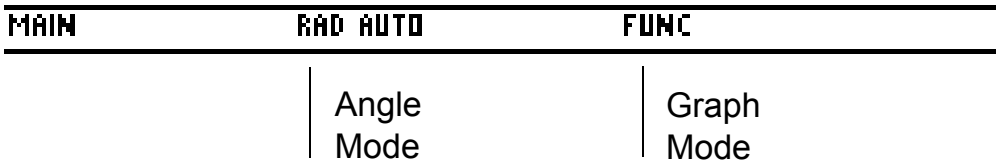

Defining Functions for Graphing


In FUNCTION graphing mode, you can graph functions named **y1(x)** through **y99(x)**. To define and edit these functions, use the Y= Editor. (The Y= Editor lists function names for

Downloaded from www.Manualslib.com manuals search engine

the current graphing mode. For example, in POLAR graphing mode, function names are **r1(θ)**, **r2(θ)**, etc.)

Defining a New Function

1. Press ◆ [Y=] to display the Y= Editor.

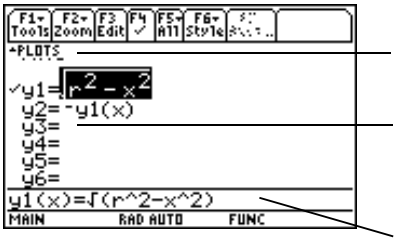

Plots — You can scroll above y1= to see a list of stat plots.

Function List — You can scroll through the list of functions and definitions.

Entry Line — Where you define or edit the function highlighted in the list.

Note: The function list shows abbreviated function names such as **y1**, but the entry line shows the full name **y1(x)**.

2. Press ▼ and ▲ to move the cursor to any undefined function. (Use 2nd ▼ and 2nd ▲ to scroll one page at a time.)
3. Press ENTER or F3 to move the cursor to the entry line.
4. Type the expression to define the function.
   - The independent variable in function graphing is x.
   - The expression can refer to other variables, including matrices, lists, and other functions. Only floats and lists of floats will produce a plot.

   Note: For an undefined function, you do not need to press ENTER or F3. When you begin typing, the cursor moves to the entry line.
5. When you complete the expression, press ENTER.

Downloaded from www.Manualslib.com manuals search engine

The function list now shows the new function, which is automatically selected for graphing.

Note: If you accidentally move the cursor to the entry line, press ESC to move it back to the function list.

Editing a Function

From the Y= Editor:

1. Press ▼ and ▲ to highlight the function.
2. Press ENTER or F3 to move the cursor to the entry line.
3. Do any of the following:
   - Use ▶ and ◀ to move the cursor within the expression and edit it. Refer to "Editing an Expression in the Entry Line" in *Operating the Calculator*.

     – or –
   - Press CLEAR once or twice to clear the old expression, and then type the new one.
4. Press ENTER.

   The function list now shows the edited function, which is automatically selected for graphing.

   Note: To cancel any editing changes, press ESC instead of ENTER.

Downloaded from www.Manualslib.com manuals search engine

Clearing a Function

From the Y= Editor:

To erase:	Do this:
A function from the function list	Highlight the function and press ← or CLEAR.
A function from the entry line	Press CLEAR once or twice (depending on the cursor's location) and then press ENTER.
All functions	Press F1 and then select **8:Clear Functions**. When prompted for confirmation, press ENTER.

Note: F1 **8** does not erase any stat plots.

You don't have to clear a function to prevent it from being graphed. You can select the functions you want to graph.

Shortcuts to Move the Cursor

From the Y= Editor:

Press:	To:
♦ ⊖ or ♦ ⊕	Go to function 1 or to the last defined function, respectively. If the cursor is on or past the last defined function, ♦ ⊕ goes to function 99.

Downloaded from www.Manualslib.com manuals search engine

From the Home Screen or a Program

You can also define and evaluate a function from the Home screen or a program.

- Use the **Define** and **Graph** commands. Refer to:
  - "Graphing a Function Defined on the Home Screen" and "Graphing a Piecewise Defined Function" in *Additional Graphing Topics*.
  - "Overview of Entering a Function" in *Programming*.
- Store an expression directly to a function variable. Refer to:
  - "Storing and Recalling Variable Values" in *Operating the Calculator*.
  - "Creating and Evaluating User-Defined Functions" in *Calculator Home Screen*.

Note: User-defined functions can have almost any name. However, if you want them to appear in the Y= Editor, use function names **y1(x)**, **y2(x)**, etc.

Selecting Functions to Graph


Regardless of how many functions are defined in the Y= Editor, you can select the ones you want to graph.

Selecting or Deselecting Functions

Press ♦ [Y=] to display the Y= Editor.


A "✓" indicates which functions will be graphed the next time you display the Graph screen.

Downloaded from www.Manualslib.com manuals search engine

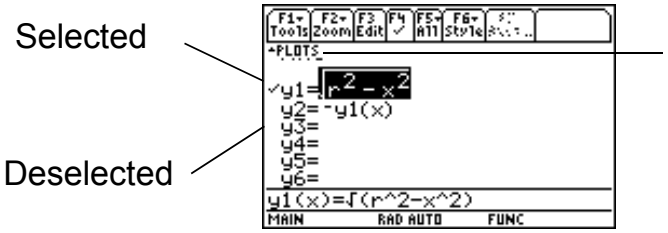

If PLOT numbers are displayed, those stat plots are selected.

In this example, Plots 1 and 2 are selected. To view them, scroll above y1=.

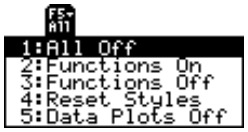To select or deselect:	Do this:
A specified function	• Move the cursor to highlight the function. • Press F4. This procedure selects a deselected function or deselects a selected function.
All functions	• Press F5 to display the **All** toolbar menu. • Select the applicable item. 

You don't have to select a function when you enter or edit it; it is selected automatically. To turn off any stat plots, press F5 **5** or use F4 to deselect them.

From the Home Screen or a Program

You can also select or deselect functions from the Home screen or a program.

Downloaded from www.Manualslib.com manuals search engine

- Use the **FnOn** and **FnOff** commands (available from the Home screen's F4 **Other** toolbar menu) for functions. Refer to the *Technical Reference* module.
- Use the **PlotsOn** and **PlotsOff** commands for stat plots. Refer to the *Technical Reference* module.

Setting the Display Style for a Function

For each defined function, you can set a style that specifies how that function will be graphed. This is useful when graphing multiple functions. For example, set one as a solid line, another as a dotted line, etc.

Displaying or Changing a Function's Style

From the Y= Editor:

1. Move the cursor to highlight the applicable function.
2. Select the **Style** menu and press: 2nd [F6]



- Although the Line item is initially highlighted, the function's current style is indicated by a ✓ mark.
- To exit the menu without making a change, press ESC.

Downloaded from www.Manualslib.com manuals search engine

3. To make a change, select the applicable style.


Style	Description
Line	Connects plotted points with a line. This is the default.
Dot	Displays a dot at each plotted point.
Square	Displays a solid box at each plotted point.
Thick	Connects plotted points with a thick line.
Animate	A round cursor moves along the leading edge of the graph but does not leave a path.
Path	A round cursor moves along the leading edge of the graph and does leave a path.
Above	Shades the area above the graph.
Below	Shades the area below the graph.

To set Line as the style for all functions, press F5 and select **4:Reset Styles**.

If You Use Above or Below Shading

The TI-89 Titanium has four shading patterns, used on a rotating basis. If you set one function as shaded, it uses the first pattern. The next shaded function uses the second pattern, etc. The fifth shaded function reuses the first pattern.

When shaded areas intersect, their patterns overlap.

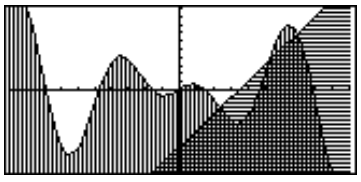

Downloaded from www.Manualslib.com manuals search engine

From the Home Screen or a Program


You can also set a function's style from the Home screen or a program. Refer to the **Style** command in the *Technical Reference* module.

Defining the Viewing Window


The viewing window represents the portion of the coordinate plane displayed on the Graph screen. By setting Window variables, you can define the viewing window's boundaries and other attributes. Function graphs, parametric graphs, etc., have their own independent set of Window variables.

Displaying Window Variables in the Window Editor

Press ♦ [WINDOW] to display the Window Editor.

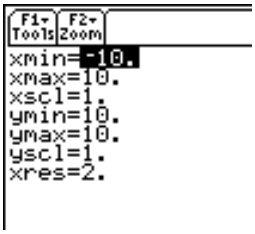

Window Variables
(shown in Window Editor)

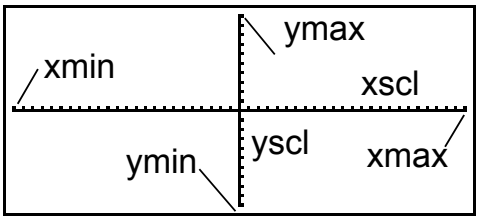

Corresponding Viewing Window
(shown on Graph screen)

Variable	Description
xmin, xmax, ymin, ymax	Boundaries of the viewing window.

Downloaded from www.Manualslib.com manuals search engine

Variable	Description
xscl, yscl	Distance between tick marks on the x and y axes.
xres	Sets pixel resolution (1 through 10) for function graphs. The default is 2. • At 1, functions are evaluated and graphed at each pixel along the x axis. • At 10, functions are evaluated and graphed at every 10th pixel along the x axis.

To turn off tick marks, set **xscl=0** and/or **yscl=0**. Small values of **xres** improve the graph's resolution but may reduce the graphing speed.

Changing the Values

From the Window Editor:

1. Move the cursor to highlight the value you want to change.
2. Do any of the following:
   - Type a value or an expression. The old value is erased when you begin typing.

     – or –
   - Press CLEAR to clear the old value; then type the new one.

     – or –
   - Press ◀ or ▶ to remove the highlighting; then edit the value.

Values are stored as you type them; you do not need to press ENTER. ENTER simply moves the cursor to the next Window variable. If you type an expression, it is evaluated when you move the cursor to a different Window variable or leave the Window Editor.

Downloaded from www.Manualslib.com manuals search engine

From the Home Screen or a Program


You can also store values directly to the Window variables from the Home screen or a program. Refer to “Storing and Recalling Variable Values” in *Operating the Calculator*.

Changing the Graph Format

You can set the graph format to show or hide reference elements such as the axes, a grid, and the cursor’s coordinates. Function graphs, parametric graphs, etc., have their own independent set of graph formats.

Displaying Graph Format Settings

From the Y= Editor, Window Editor, or Graph screen, press F1 and select **9:Format**.

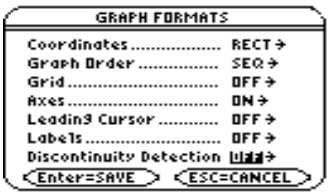

- The GRAPH FORMATS dialog box shows the current settings.
- To exit without making a change, press ESC.

You also can display the GRAPH FORMATS dialog box from the Y= Editor, Window Editor, or Graph screen. Press: ♦ |

Format	Description
Coordinates	Shows cursor coordinates in rectangular (RECT) or polar (POLAR) form, or hides (OFF) the coordinates.

Downloaded from www.Manualslib.com manuals search engine

Format	Description
Graph Order	Graphs functions one at a time (SEQ) or all at the same time (SIMUL). Not available when Discontinuity Detection is set to ON.
Grid	Shows (ON) or hides (OFF) grid points that correspond to the tick marks on the axes.
Axes	Shows (ON) or hides (OFF) the x and y axes.
Leading Cursor	Shows (ON) or hides (OFF) a reference cursor that tracks the functions as they are graphed.
Labels	Shows (ON) or hides (OFF) labels for the x and y axes.
Discontinuity Detection	Eliminates (ON) or allows (OFF) faux asymptotes and connections in a jump discontinuity.

To turn off tick marks, define the viewing window so that **xscl** and/or **yscl = 0**.

Changing Settings

From the GRAPH FORMATS dialog box:

1. Move the cursor to highlight the format setting.
2. Press ▶ to display a menu of valid settings for that format.
3. Select a setting. Either:
   - Move the cursor to highlight the setting, and then press ENTER.

     – or –
   - Press the number for that setting.

Downloaded from www.Manualslib.com manuals search engine

4. After changing all applicable format settings, press ENTER to save your changes and close the **GRAPH FORMATS** dialog box.


   Note: To cancel a menu or exit the dialog box without saving any changes, use ESC instead of ENTER.

Graphing the Selected Functions

When you are ready to graph the selected functions, display the Graph screen. This screen uses the display style and viewing window that you previously defined.

Displaying the Graph Screen

Press ♦ [GRAPH]. The TI-89 Titanium automatically graphs the selected functions.

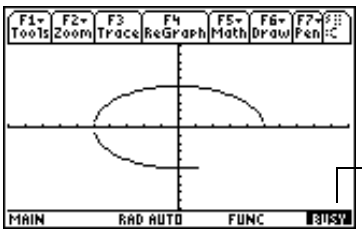

BUSY indicator shows while graphing is in progress.

If you select an F2 **Zoom** operation from the Y= Editor or Window Editor, the TI-89 Titanium automatically displays the Graph screen.

Interrupting Graphing

While graphing is in progress:

Downloaded from www.Manualslib.com manuals search engine

- To pause graphing temporarily, press ENTER. (The PAUSE indicator replaces BUSY.) To resume, press ENTER again.
- To cancel graphing, press ON. To start graphing again from the beginning, press F4 (**ReGraph**).

If You Need to Change the Viewing Window

Depending on various settings, a function may be graphed such that it is too small, too large, or offset too far to one side of the screen. To correct this:

- Redefine the viewing window with different boundaries.
- Use a Zoom operation.

Smart Graph

When you display the Graph screen, the Smart Graph feature displays the previous window contents immediately, provided nothing has changed that requires regraphing.

Smart Graph updates the window and regraphs only if you have:

- Changed a mode setting that affects graphing, a function's graphing attribute, a Window variable, or a graph format.
- Selected or deselected a function or stat plot. (If you only select a new function, Smart Graph adds that function to the Graph screen.)
- Changed the definition of a selected function or the value of a variable in a selected function.
- Cleared a drawn object.

Downloaded from www.Manualslib.com manuals search engine


- Changed a stat plot definition.

Displaying Coordinates with the Free-Moving Cursor

To display the coordinates of any location on the Graph screen, use the free-moving cursor. You can move the cursor to any pixel on the screen; the cursor is not confined to a graphed function.

Free-Moving Cursor

When you first display the Graph screen, no cursor is visible. To display the cursor, press a cursor pad arrow. The cursor moves from the center of the screen, and its coordinates are displayed.

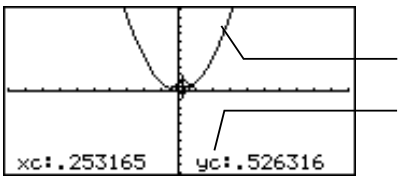

$y1(x)=x^2$

The "**c**" indicates these are cursor coordinates. The values are stored in the **xc** and **yc** system variables. Rectangular coordinates use **xc** and **yc**. Polar coordinates use **rc** and θ**c**.

If your screen does not show coordinates, set the graph format so that **Coordinates = RECT** or **POLAR**. Press:

◆ |


To move the free-moving cursor:	Press:
To an adjoining pixel	A cursor pad arrow for any direction.

Downloaded from www.Manualslib.com manuals search engine

To move the free-moving cursor:	Press:
In increments of 10 pixels	2nd and then a cursor pad arrow.

Note: To hide the cursor and its coordinates temporarily, press CLEAR, ESC, or ENTER. The next time you move the cursor, it moves from its last position.

When you move the cursor to a pixel that appears to be “on” the function, it may be near the function but not on it.

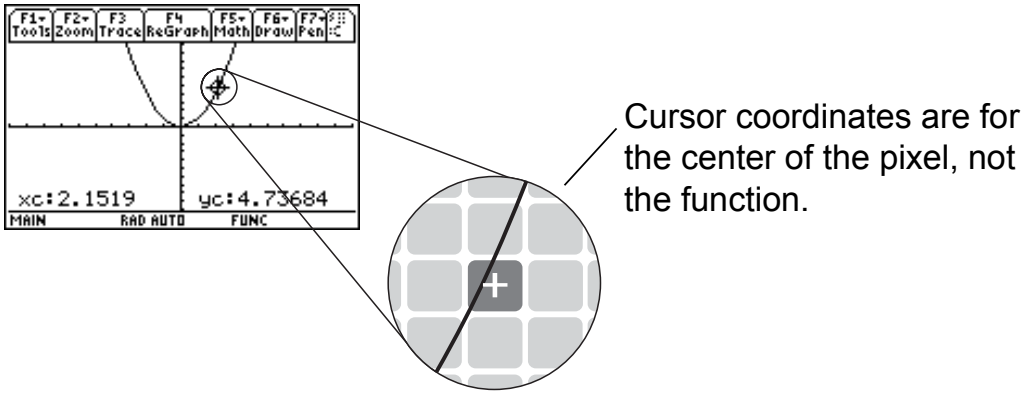

To increase the accuracy:

- Use the **Trace** tool described on the next page to display coordinates that are on the function.
- Use a **Zoom** operation to zoom in on a portion of the graph.

Downloaded from www.Manualslib.com manuals search engine

Tracing a Function

To display the exact coordinates of any plotted point on a graphed function, use the F3 **Trace** tool. Unlike the free-moving cursor, the trace cursor moves only along a function's plotted points.

Beginning a Trace

From the Graph screen, press F3.

The trace cursor appears on the function, at the middle x value on the screen. The cursor's coordinates are displayed at the bottom of the screen.

If multiple functions are graphed, the trace cursor appears on the lowest-numbered function selected in the Y= Editor. The function number is shown in the upper right part of the screen.

If any stat plots are graphed, the trace cursor appears on the lowest-numbered stat plot.

Moving along a Function


To move the trace cursor:	Do this:
To the previous or next plotted point	Press ◀ or ▶.
Approximately 5 plotted points (it may be more or less than 5, depending on the **xres** Window variable)	Press 2nd ◀ or 2nd ▶.

Downloaded from www.Manualslib.com manuals search engine

To move the trace cursor:	Do this:
To a specified x value on the function	Type the x value and press ENTER.

Note: If you enter an x value, it must be between **xmin** and **xmax**.

The trace cursor moves only from plotted point to plotted point along the function, not from pixel to pixel.

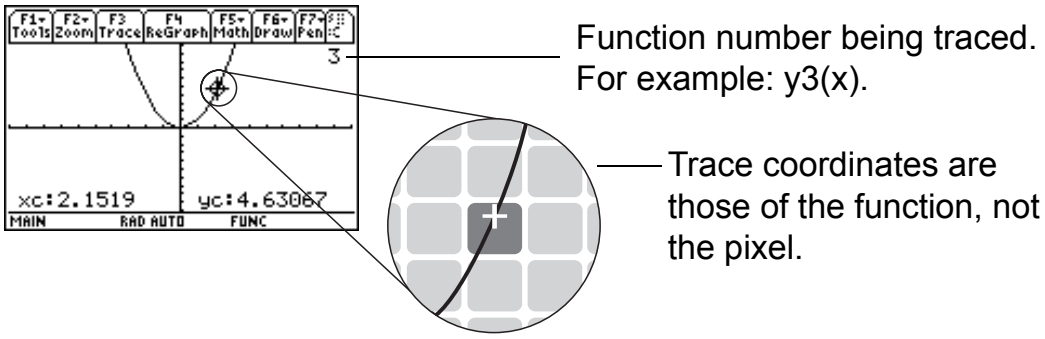

If your screen does not show coordinates, set the graph format so that **Coordinates = RECT** or **POLAR**. Press:

◆ |

Each displayed y value is calculated from the x value; that is, **y=yn(x)**. If the function is undefined at an x value, the y value is blank.

You can continue to trace a function that goes above or below the viewing window. You cannot see the cursor as it moves in that “off the screen” area, but the displayed coordinate values show its correct coordinates.

Note: Use QuickCenter to trace a function that goes above or below the window.

Downloaded from www.Manualslib.com manuals search engine


Moving from Function to Function

Press ⊙ or ⊙ to move to the previous or next selected function at the same x value. The new function number is shown on the screen.


The “previous or next” function is based on the order of the selected functions in the Y= Editor, not the appearance of the functions as graphed on the screen.

Automatic Panning

If you trace a function off the left or right edge of the screen, the viewing window automatically pans to the left or right. There is a slight pause while the new portion of the graph is drawn.

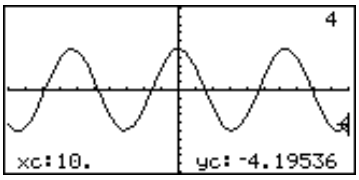

Before automatic pan

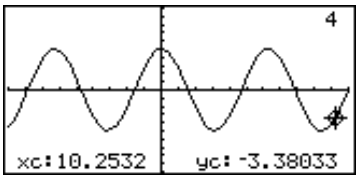

After automatic pan


After an automatic pan, the cursor continues tracing.


Note: Automatic panning does not work if stat plots are displayed or if a function uses a shaded display style.

Downloaded from www.Manualslib.com manuals search engine

Using QuickCenter

If you trace a function off the top or bottom of the viewing window, you can press ENTER to center the viewing window on the cursor location.

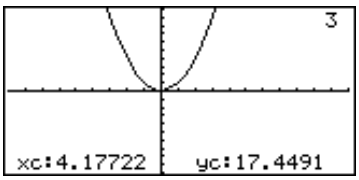

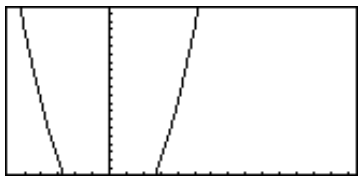

Before using QuickCenter *After using QuickCenter*

After QuickCenter, the cursor stops tracing. If you want to continue tracing, press F3.

You can use QuickCenter at any time during a trace, even when the cursor is still on the screen.

Canceling Trace

To cancel a trace at any time, press ESC.

A trace is also canceled when you display another application screen such as the Y= Editor. When you return to the Graph screen and press F3 to begin tracing:

- If Smart Graph regraphed the screen, the cursor appears at the middle x value.
- If Smart Graph does not regraph the screen, the cursor appears at its previous location (before you displayed the other application).


Downloaded from www.Manualslib.com manuals search engine

Using Zooms to Explore a Graph

The F2 **Zoom** toolbar menu has several tools that let you adjust the viewing window. You can also save a viewing window for later use.

Overview of the Zoom Menu

Press F2 from the Y= Editor, Window Editor, or Graph screen.

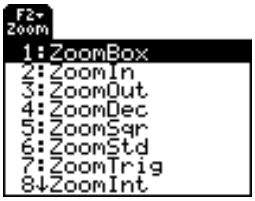

Procedures for using **ZoomBox**, **ZoomIn**, **ZoomOut**, **ZoomStd**, **Memory**, and **SetFactors** are given later in this section.

For more information about the other items, refer to the *Technical Reference* module.

Note: If you select a **Zoom** tool from the Y=Editor or Window Editor, the TI-89 Titanium automatically displays the Graph screen.

Zoom Tool	Description
ZoomBox	Lets you draw a box and zoom in on that box.
ZoomIn, **ZoomOut**	Lets you select a point and zoom in or out by an amount defined by **SetFactors**.
ZoomDec	Sets Δx and Δy to .1, and centers the origin.
ZoomSqr	Adjusts Window variables so that a square or circle is shown in correct proportion (instead of a rectangle or ellipse).

Downloaded from www.Manualslib.com manuals search engine

Zoom Tool	Description
ZoomStd	Sets Window variables to their default values. xmin = −10 ymin = −10 xres = 2 xmax = 10 ymax = 10 xscl = 1 yscl = 1
ZoomTrig	Sets Window variables to preset values that are often appropriate for graphing trig functions. Centers the origin and sets: Δx = π/24 (.130899... radians or 7.5 degrees) ymin = −4 ymax = 4 xscl = π/2 (1.570796... radians or 90 degrees) yscl = 0.5
ZoomInt	Lets you select a new center point, and then sets Δx and Δy to 1 and sets **xscl** and **yscl** to 10.
ZoomData	Adjusts Window variables so that all selected stat plots are in view.
ZoomFit	Adjusts the viewing window to display the full range of dependent variable values for the selected functions. In function graphing, this maintains the current **xmin** and **xmax** and adjusts **ymin** and **ymax**.
Memory	Lets you store and recall Window variable settings so that you can recreate a custom viewing window.
SetFactors	Lets you set **Zoom** factors for **ZoomIn** and **ZoomOut**.

Δx and Δy are the distances from the center of one pixel to the center of an adjoining pixel.

Downloaded from www.Manualslib.com manuals search engine

Zooming In with a Zoom Box


1. From the F2 **Zoom** menu, select **1:ZoomBox**.

   The screen prompts for **1st Corner?**

2. Move the cursor to any corner of the box you want to define, and then press ENTER.


   The cursor changes to a small square, and the screen prompts for **2nd Corner?**

   Note: To move the cursor in larger increments, use 2nd ▶, 2nd ▼, etc.

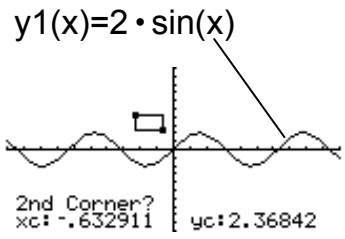


3. Move the cursor to the opposite corner of the zoom box.

   As you move the cursor, the box stretches.

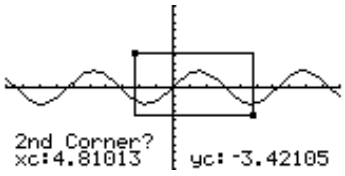

4. When you have outlined the area you want to zoom in on, press ENTER.

   The Graph screen shows the zoomed area. You can cancel **ZoomBox** by pressing ESC before you press ENTER.

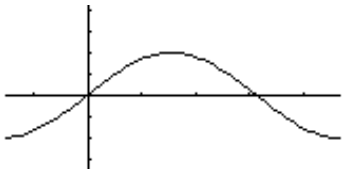


Downloaded from www.Manualslib.com manuals search engine

Zooming In and Out on a Point


1. From the F2 **Zoom** menu, select **2:ZoomIn** or **3:ZoomOut**.

   A cursor appears, and the screen prompts for **New Center?**

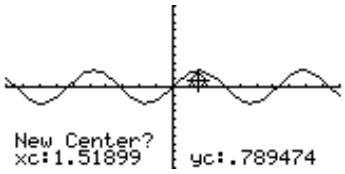

2. Move the cursor to the point where you want to zoom in or out, and then press ENTER.

   The TI-89 Titanium adjusts the Window variables by the **Zoom** factors defined in **SetFactors**.

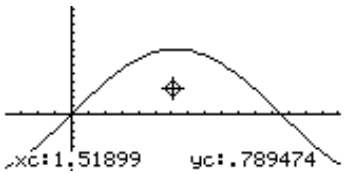

- For a **ZoomIn**, the x variables are divided by **xFact**, and the y variables are divided by **yFact**.

  new **xmin = xmin/xFact** , etc.

- For a **ZoomOut**, the x variables are multiplied by **xFact**, and the y variables are multiplied by **yFact**.


  new **xmin = xmin** ∗ **xFact** , etc.

Changing Zoom Factors

The Zoom factors define the magnification and reduction used by **ZoomIn** and **ZoomOut**.

Downloaded from www.Manualslib.com manuals search engine

1. From the F2 **Zoom** menu, select **C:SetFactors** to display the **ZOOM FACTORS** dialog box.

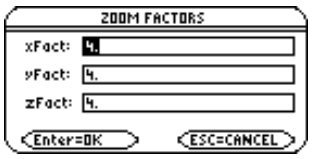

Zoom factors must be ≥ 1, but they do not have to be integers. The default setting is 4.

Note: To exit without saving any changes, press ESC.

2. Use ▼ and ▲ to highlight the value you want to change. Then:
   - Type the new value. The old value is cleared automatically when you begin typing.

     – or –
   - Press ◀ or ▶ to remove the highlighting, and then edit the old value.
3. Press ENTER (after typing in an input box, you must press ENTER twice) to save any changes and exit the dialog box.

Saving or Recalling a Viewing Window

After using various **Zoom** tools, you may want to return to a previous viewing window or save the current one.

1. From the F2 **Zoom** menu, select **B:Memory** to display its submenu.



2. Select the applicable item.

Downloaded from www.Manualslib.com manuals search engine

Select:	To:
1:ZoomPrev	Return to the viewing window displayed before the previous zoom.
2:ZoomSto	Save the current viewing window. (The current Window variable values are stored to the system variables **zxmin**, **zxmax**, etc.)
3:ZoomRcl	Recall the viewing window last stored with **ZoomSto**.

Note: You can store only one set of Window variable values at a time. Storing a new set overwrites the old set.

Restoring the Standard Viewing Window

You can restore the Window variables to their default values at any time. From the F2 **Zoom** menu, select **6:ZoomStd**.

Using Math Tools to Analyze Functions


On the Graph screen, the F5 **Math** toolbar menu has several tools that help you analyze graphed functions.

Downloaded from www.Manualslib.com manuals search engine

Overview of the Math Menu

Press F5 from the Graph screen.





On the Derivatives submenu, only dy/dx is available for function graphing. The other derivatives are available for other graphing modes (parametric, polar, etc.).

Math Tool	Description
Value	Evaluates a selected **y(x)** function at a specified x value.
Zero, Minimum, Maximum	Finds a zero (x-intercept), minimum, or maximum point within an interval.
Intersection	Finds the intersection of two functions.
Derivatives	Finds the derivative (slope) at a point.
∫f(x)dx	Finds the approximate numerical integral over an interval.
Inflection	Finds the inflection point of a curve, where its second derivative changes sign (where the curve changes concavity).
Distance	Draws and measures a line between two points on the same function or on two different functions.
Tangent	Draws a tangent line at a point and displays its equation.
Arc	Finds the arc length between two points along a curve.

Downloaded from www.Manualslib.com manuals search engine


Math Tool	Description
Shade	Depends on the number of functions graphed. • If only one function is graphed, this shades the function's area above or below the x axis. • If two or more functions are graphed, this shades the area between any two functions within an interval.

Note: For Math results, cursor coordinates are stored in system variables xc and yc (rc and θc if you use polar coordinates). Derivatives, integrals, distances, etc., are stored in the system variable *sysMath*.

Finding y(x) at a Specified Point

1. From the **Graph** screen, press F5 and select **1:Value**.
2. Type the x value, which must be a real value between **xmin** and **xmax**. The value can be an expression.
3. Press ENTER.

   The cursor moves to that x value on the first function selected in the Y= Editor, and its coordinates are displayed.

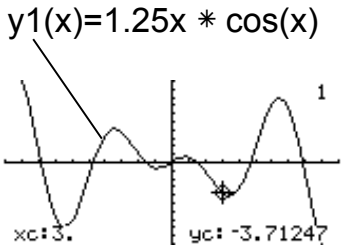

4. Press ▼ or ▲ to move the cursor between functions at the entered x value. The corresponding y value is displayed.

   If you press ◀ or ▶, the free-moving cursor appears. You may not be able to move it back to the entered x value.

Downloaded from www.Manualslib.com manuals search engine


You can also display function coordinates by tracing the function (F3), typing an x value, and pressing ENTER.

Finding a Zero, Minimum, or Maximum within an Interval

1. From the **Graph** screen, press F5 and select **2:Zero**, **3:Minimum**, or **4:Maximum**.
2. As necessary, use ▼ and ▲ to select the applicable function.

   Note: Typing x values is a quick way to set bounds.
3. Set the lower bound for x. Either use ◀ and ▶ to move the cursor to the lower bound or type its x value.
4. Press ENTER. A ▶ at the top of the screen marks the lower bound.
5. Set the upper bound, and press ENTER.

   The cursor moves to the solution, and its coordinates are displayed.

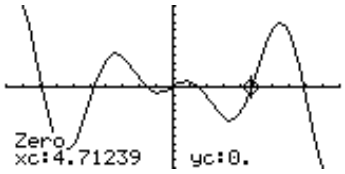

Finding the Intersection of Two Functions within an Interval


1. From the **Graph** screen, press F5 and select **5:Intersection**.
2. Select the first function, using ▼ or ▲ as necessary, and press ENTER. The cursor moves to the next graphed function.
3. Select the second function, and press ENTER.
4. Set the lower bound for x. Either use ◀ and ▶ to move the cursor to the lower bound or type its x value.

Downloaded from www.Manualslib.com manuals search engine

5. Press ENTER. A ▸ at the top of the screen marks the lower bound.

6. Set the upper bound, and press ENTER.


   The cursor moves to the intersection, and its coordinates are displayed.

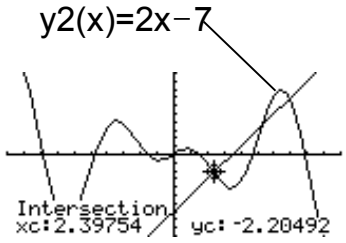

Finding the Derivative (Slope) at a Point

1. From the **Graph** screen, press F5 and select **6:Derivatives**. Then select **1:dy/dx** from the submenu.
2. As necessary, use ⊖ and ⊕ to select the applicable function.
3. Set the derivative point. Either move the cursor to the point or type its x value.
4. Press ENTER.

   The derivative at that point is displayed.

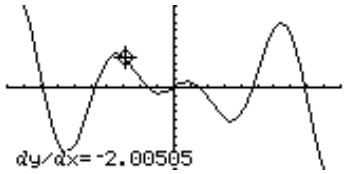

Finding the Numerical Integral over an Interval

1. From the **Graph** screen, press F5 and select **7:∫f(x)dx**.
2. As necessary, use ⊖ and ⊕ to select the applicable function.

   Note: Typing x values is a quick way to set the limits.


Downloaded from www.Manualslib.com manuals search engine

3. Set the lower limit for x. Either use ◄ and ► to move the cursor to the lower limit or type its x value.
4. Press ENTER. A ▶ at the top of the screen marks the lower limit.

   Note: To erase the shaded area, press F4 (**ReGraph**).

5. Set the upper limit, and press ENTER.

   The interval is shaded, and its approximate numerical integral is displayed.

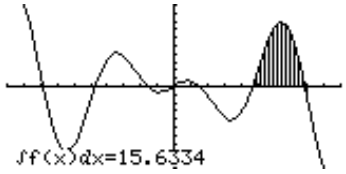


Finding an Inflection Point within an Interval

1. From the **Graph** screen, press F5 and select **8:Inflection**.
2. As necessary, use ▼ and ▲ to select the applicable function.
3. Set the lower bound for x. Either use ◄ and ► to move the cursor to the lower bound or type its x value.
4. Press ENTER. A ▶ at the top of the screen marks the lower bound.

5. Set the upper bound, and press ENTER.

   The cursor moves to the inflection point (if any) within the interval, and its coordinates are displayed.

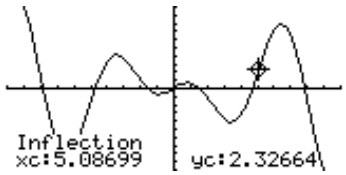


Finding the Distance between Two Points

1. From the **Graph** screen, press F5 and select **9:Distance**.

Downloaded from www.Manualslib.com manuals search engine

2. As necessary, use ▼ and ▲ to select the function for the first point.
3. Set the first point. Either use ◀ or ▶ to move the cursor to the point or type its x value.
4. Press ENTER. A **+** marks the point.
5. If the second point is on a different function, use ▼ and ▲ to select the function.
6. Set the second point. (If you use the cursor to set the point, a line is drawn as you move the cursor.)
7. Press ENTER.

   The distance between the two points is displayed, along with the connecting line.

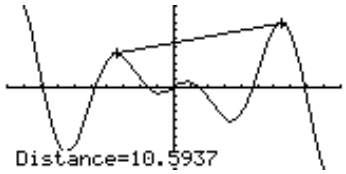


Drawing a Tangent Line

1. From the **Graph** screen, press F5 and select **A:Tangent**.
2. As necessary, use ▼ and ▲ to select the applicable function.

   Note: To erase a drawn tangent line, press F4 (**ReGraph**).
3. Set the tangent point. Either move the cursor to the point or type its x value.
4. Press ENTER.

   The tangent line is drawn, and its equation is displayed.

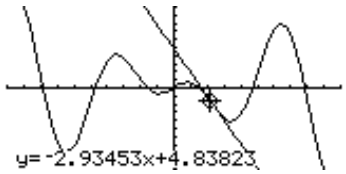


Downloaded from www.Manualslib.com manuals search engine

Finding an Arc Length

1. From the **Graph** screen, press F5 and select **B:Arc**.
2. As necessary, use ▼ and ▲ to select the applicable function.
3. Set the first point of the arc. Either use ◀ or ▶ to move the cursor or type the x value.
4. Press ENTER. A **+** marks the first point.
5. Set the second point, and press ENTER.

   A **+** marks the second point, and the arc length is displayed.

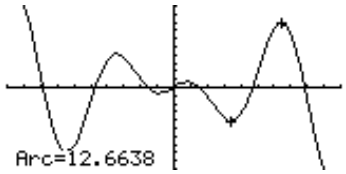

Shading the Area between a Function and the x Axis

You must have only one function graphed. If you graph two or more functions, the Shade tool shades the area between two functions.

1. From the **Graph** screen, press F5 and select **C:Shade**. The screen prompts for **Above X axis?**
2. Select one of the following. To shade the function's area:
   - Above the x axis, press ENTER.
   - Below the x axis, press:
     alpha **N**

Downloaded from www.Manualslib.com manuals search engine


3. Set the lower bound for x. Either use ◀ and ▶ to move the cursor to the lower bound or type its x value.

   Note: If you do not press ◀ or ▶, or type an x value when setting the lower and upper bound, **xmin** and **xmax** will be used as the lower and upper bound, respectively.

4. Press ENTER. A ▶ at the top of the screen marks the lower bound.

5. Set the upper bound, and press ENTER.

   The bounded area is shaded. To erase the shaded area, press F4 (**ReGraph**).

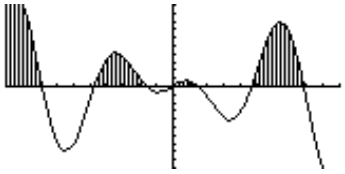

Shading the Area between Two Functions within an Interval

You must have at least two functions graphed. If you graph only one function, the Shade tool shades the area between the function and the x axis.

1. From the **Graph** screen, press F5 and select **C:Shade**. The screen prompts for **Above?**
2. As necessary, use ▼ or ▲ to select a function. (Shading will be above this function.)
3. Press ENTER. The cursor moves to the next graphed function, and the screen prompts for **Below?**
4. As necessary, use ▼ or ▲ to select another function. (Shading will be below this function.)
5. Press ENTER.

Downloaded from www.Manualslib.com manuals search engine


6. Set the lower bound for x. Either use ◄ and ► to move the cursor to the lower bound or type its x value.

   Note: If you do not press ◄ or ►, or type an x value when setting the lower and upper bound, **xmin** and **xmax** will be used as the lower and upper bound, respectively.

7. Press ENTER. A ▶ at the top of the screen marks the lower bound.

8. Set the upper bound, and press ENTER.

   The bounded area is shaded. To erase the shaded area, press F4 (**ReGraph**).

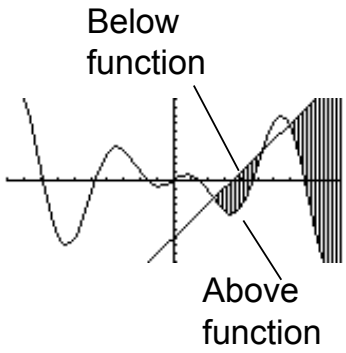

Downloaded from www.Manualslib.com manuals search engine


Polar Graphing

Overview of Steps in Graphing Polar Equations


To graph polar equations, use the same general steps used for **y(x)** functions as described in *Basic Function Graphing*. Any differences that apply to polar equations are described on the following pages.

Graphing Polar Equations

1. Set **Graph** mode ([MODE]) to **POLAR**. Also set **Angle** mode, if necessary.

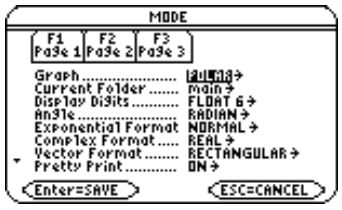

2. Define *x* and y components on Y= Editor ([◆] [Y=]).
3. Select ([F4]) which defined equations to graph. Select the x or y component, or both.

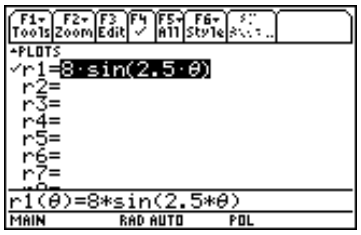

   Note: To turn off any stat data plots press [F5] **5** or use [F4] to deselect them.

Downloaded from www.Manualslib.com manuals search engine

4. Set the display style for an equation. You can set either the x or y component.


   2nd [F6]

   This is optional. For multiple equations, this helps visually distinguish one from another.




5. Define the viewing window (◆ [WINDOW]).

   F2 **Zoom** also changes the viewing window.

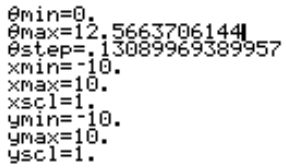


6. Change the graph format if necessary.

   F1 **9**
   – or –
   ◆ |

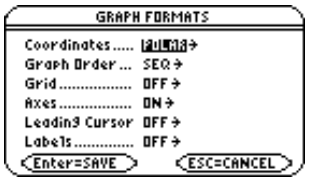

7. Graph the selected equations (◆ [GRAPH]).

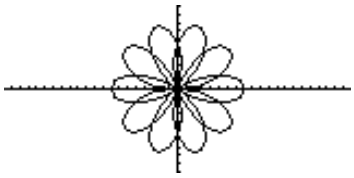

Exploring the Graph

From the Graph screen, you can:

- Display the coordinates of any pixel by using the free-moving cursor, or of a plotted point by tracing a polar equation.

Downloaded from www.Manualslib.com manuals search engine

- Use the F2 **Zoom** toolbar menu to zoom in or out on a portion of the graph.
- Use the F5 **Math** toolbar menu to find derivatives, tangents, etc. Some menu items are not available for polar graphs.

Differences in Polar and Function Graphing


This module assumes that you already know how to graph **y(x)** functions as described in *Basic Function Graphing*. This section describes the differences that apply to polar equations.

Setting the Graph Mode

Use MODE to set **Graph = POLAR** before you define equations or set Window variables. The Y= Editor and the Window Editor let you enter information for the current **Graph** mode setting only.

You should also set the **Angle** mode to the units (RADIAN or DEGREE) you want to use for θ.

Defining Polar Equations on the Y= Editor

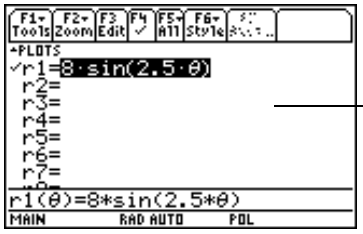

You can define polar equations for r1(θ) through r99(θ).

Downloaded from www.Manualslib.com manuals search engine

You can use the **Define** command from the Home screen (see the *Technical Reference* module) to define functions and equations for any graphing mode, regardless of the current mode.

The Y= Editor maintains an independent function list for each **Graph** mode setting. For example, suppose:

- In FUNCTION graphing mode, you define a set of **y(x)** functions. You change to POLAR graphing mode and define a set of **r(θ)** equations.
- When you return to FUNCTION graphing mode, your **y(x)** functions are still defined in the Y= Editor. When you return to POLAR graphing mode, your **r(θ)** equations are still defined.

Selecting the Display Style

The **Above** and **Below** styles are not available for polar equations and are dimmed on the Y= Editor's **Style** toolbar menu.

Window Variables

The Window Editor maintains an independent set of Window variables for each **Graph** mode setting (just as the Y= Editor maintains independent function lists). Polar graphs use the following Window variables.

Variable	Description
θmin, θmax	Smallest and largest θ values to evaluate.

Downloaded from www.Manualslib.com manuals search engine

Variable	Description
θ**step**	Increment for the θ value. Polar equations are evaluated at: r(θmin) r(θmin+θstep) r(θmin+2(θstep)) ... not to exceed ... r(θmax)
xmin, **xmax**, **ymin**, **ymax**	Boundaries of the viewing window.
xscl, **yscl**	Distance between tick marks on the x and y axes.

Note: You can use a negative θ**step**. If so, θ**min** must be greater than θ**max**.

Standard values (set when you select **6:ZoomStd** from the F2 **Zoom** toolbar menu) are:

θmin = 0.		xmin = ⁻10.	ymin = ⁻10.
θmax = 2π	(6.2831853... radians or 360 degrees)	xmax = 10.	ymax = 10.
θstep = π/24	(.1308996... radians or 7.5 degrees)	xscl = 1.	yscl = 1.

You may need to change the standard values for the θ variables (θ**min**, θ**max**, θ**step**) to ensure that enough points are plotted.

Setting the Graph Format

To display coordinates as **r** and θ values, use:

Downloaded from www.Manualslib.com manuals search engine

F1 **9**
– or –
◆ I

to set **Coordinates = POLAR**. If **Coordinates = RECT**, the polar equations will be graphed properly, but coordinates will be displayed as x and y.

When you trace a polar equation, the θ coordinate is shown even if **Coordinates = RECT**.

Exploring a Graph

As in function graphing, you can explore a graph by using the following tools. Any displayed coordinates are shown in polar or rectangular form as set in the graph format.

Tool	For Polar Graphs:
Free-Moving Cursor	Works just as it does for function graphs.
F2 **Zoom**	Works just as it does for function graphs. • Only **x** (**xmin**, **xmax**, **xscl**) and **y** (**ymin**, **ymax**, **yscl**) Window variables are affected. • The θ Window variables (**θmin**, **θmax**, **θstep**) are not affected unless you select **6:ZoomStd** (which sets **θmin = 0**, **θmax = 2π**, and **θstep = π/24**).

Downloaded from www.Manualslib.com manuals search engine

Tool	For Polar Graphs:
F3 **Trace**	Lets you move the cursor along a graph one θ**step** at a time. • When you begin a trace, the cursor is on the first selected equation at θ**min**. • QuickCenter applies to all directions. If you move the cursor off the screen (top or bottom, left or right), press ENTER to center the viewing window on the cursor location. • Automatic panning is not available. If you move the cursor off the left or right side of the screen, the TI-89 Titanium / Voyage™ 200 Graphing Calculator will not automatically pan the viewing window. However, you can use QuickCenter.
F5 **Math**	Only **1:Value**, **6:Derivatives**, **9:Distance**, **A:Tangent**, and **B:Arc** are available for polar graphs. These tools are based on θ values. For example: • **1:Value** displays an **r** value (or x and y, depending on the graph format) for a specified θ value. • **6:Derivatives** finds **dy/dx** or **dr/d**θ at a point defined for a specified θ value.

During a trace, you can also evaluate **r(**θ**)** by typing the θ value and pressing ENTER.

Note: You can use QuickCenter at any time during a trace, even if the cursor is still on the screen.

Downloaded from www.Manualslib.com manuals search engine


Parametric Graphing

Overview of Steps in Graphing Parametric Equations


To graph parametric equations, use the same general steps used for **y(x)** functions as described in *Basic Function Graphing*. Any differences that apply to parametric equations are described on the following pages.

Graping Parametic Equations

1. Set **Graph** mode ([MODE]) to **PARAMETRIC**. Also set **Angle** mode, if necessary.

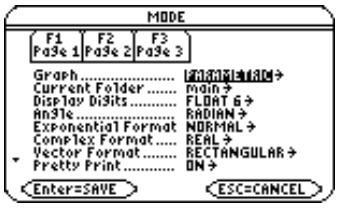

2. Define x and y components on Y= Editor ([◆] [Y=]).
3. Select ([F4]), which defined equations to graph. Select the x or y component, or both.

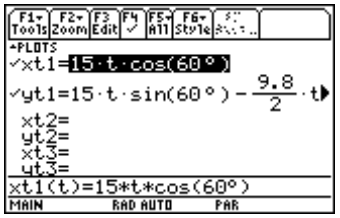

   Note: To turn off any stat data plots, press [F5] **5** or use [F4] to deselect them.

Downloaded from www.Manualslib.com manuals search engine

4. Set the display style for an equation. You can set either the x or y component.


   2nd [F6]

   This is optional. For multiple equations, this helps visually distinguish one from another.




5. Define the viewing window (◆ [WINDOW]).

   F2 **Zoom** also changes the viewing window.

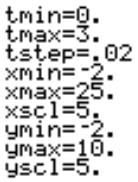


6. Change the graph format if necessary.

   F1 **9**
   – or –
   ◆ |

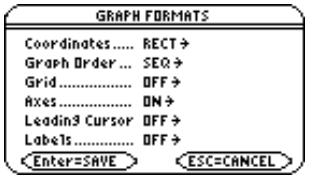

7. Graph the selected equations (◆ [GRAPH]).

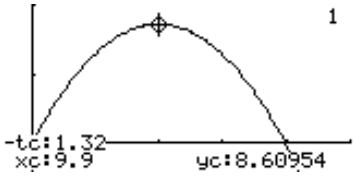

Exploring the Graph

From the Graph screen, you can:

- Display the coordinates of any pixel by using the free-moving cursor, or of a plotted point by tracing a parametric equation.

Downloaded from www.Manualslib.com manuals search engine

- Use the F2 **Zoom** toolbar menu to zoom in or out on a portion of the graph.
- Use the F5 **Math** toolbar menu to find derivatives, tangents, etc. Some menu items are not available for parametric graphs.

Differences in Parametric and Function Graphing


This module assumes that you already know how to graph **y(x)** functions as described in Basic Function Graphing. This section describes the differences that apply to parametric equations.

Setting the Graph Mode

Use MODE to set **Graph = PARAMETRIC** before you define equations or set Window variables. The Y= Editor and the Window Editor let you enter information for the *current* **Graph** mode setting only.

Defining Parametric Equations on the Y= Editor

To graph a parametric equation, you must define both its x and y components. If you define only one component, the equation cannot be graphed. (However, you can use single components to generate an automatic table as described in *Tables.*)

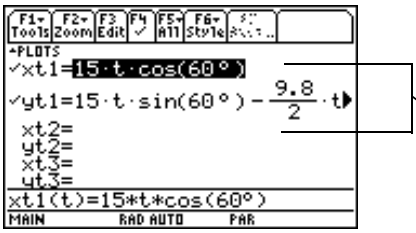

Enter x and y components on separate lines.

You can define xt1(t) through xt99(t) and yt1(t) through yt99(t).

Downloaded from www.Manualslib.com manuals search engine

Be careful when using implied multiplication with **t**. For example:

Enter:	Instead of:	Because:
t∗cos(60)	tcos(60)	**tcos** is interpreted as a user-defined function called **tcos**, not as implied multiplication. In most cases, this refers to a nonexistent function. So the TI-89 Titanium simply returns the function name, not a number.

Note: When using **t**, be sure implied multiplication is valid for your situation. You can use the **Define** command from the Home screen (see the *Technical Reference* module) to define functions and equations for any graphing mode, regardless of the current mode.

The Y= Editor maintains an independent function list for each **Graph** mode setting. For example, suppose:

- In FUNCTION graphing mode, you define a set of **y(x)** functions. You change to PARAMETRIC graphing mode and define a set of x and *y* components.
- When you return to FUNCTION graphing mode, your **y(x)** functions are still defined in the Y= Editor. When you return to PARAMETRIC graphing mode, your x and y components are still defined.

Selecting Parametric Equations

To graph a parametric equation, select either its x or y component or both. When you enter or edit a component, it is selected automatically.

Selecting x and y components separately can be useful for tables as described in *Tables*. With multiple parametric equations, you can select and compare all the x components or all the y components.

Downloaded from www.Manualslib.com manuals search engine

Selecting the Display Style

You can set the style for either the x or y component. For example, if you set the x component to **Dot**, the TI-89 Titanium automatically sets the y component to **Dot**.

Note: Use the **Animate** and **Path** styles for interesting projectile-motion effects.

The **Above** and **Below** styles are not available for parametric equations and are dimmed on the Y= Editor's **Style** toolbar menu.

Window Variables

The Window Editor maintains an independent set of Window variables for each **Graph** mode setting (just as the Y= Editor maintains independent function lists). Parametric graphs use the following Window variables.

Note: You can use a negative **tstep**. If so, **tmin** must be greater than **tmax**.

Variable	Description
tmin, **tmax**	Smallest and largest **t** values to evaluate.
tstep	Increment for the **t** value. Parametric equations are evaluated at: x(tmin) y(tmin) x(tmin+tstep) y(tmin+tstep) x(tmin+2(tstep)) y(tmin+2(tstep)) ... not to exceed ... ... not to exceed ... x(tmax) y(tmax)
xmin, **xmax**, **ymin**, **ymax**	Boundaries of the viewing window.

Downloaded from www.Manualslib.com manuals search engine

Variable	Description
xscl, **yscl**	Distance between tick marks on the x and y axes.

Standard values (set when you select **6:ZoomStd** from the F2 **Zoom** toolbar menu) are:

tmin = 0		xmin = ⁻10.	ymin = ⁻10.
tmax = 2π	(6.2831853... radians or 360 degrees)	xmax = 10.	ymax = 10.
tstep =π/24	(.1308996... radians or 7.5 degrees)	xscl = 1.	yscl = 1.

You may need to change the standard values for the **t** variables (**tmin**, **tmax**, **tstep**) to ensure that enough points are plotted.

Exploring a Graph

As in function graphing, you can explore a graph by using the following tools.

Note: During a trace, you can also evaluate **x(t)** and **y(t)** by typing the **t** value and pressing ENTER. You can use QuickCenter at any time during a trace, even if the cursor is still on the screen.

Tool	For Parametric Graphs:
Free-Moving Cursor	Works just as it does for function graphs.

Downloaded from www.Manualslib.com manuals search engine

Tool	For Parametric Graphs:
F2 **Zoom**	Works just as it does for function graphs, with the following exceptions: • Only **x** (**xmin**, **xmax**, **xscl**) and **y** (**ymin**, **ymax**, **yscl**) Window variables are affected. • The **t** Window variables (**tmin**, **tmax**, **tstep**) are not affected unless you select **6:ZoomStd** (which sets **tmin = 0**, **tmax = 2π**, and **tstep = π/24**).
F3 **Trace**	Lets you move the cursor along a graph one **tstep** at a time. • When you begin a trace, the cursor is on the first selected parametric equation at **tmin**. • QuickCenter applies to all directions. If you move the cursor off the screen (top or bottom, left or right), press ENTER to center the viewing window on the cursor location. • Automatic panning is not available. If you move the cursor off the left or right side of the screen, the TI-89 Titanium will not automatically pan the viewing window. However, you can use QuickCenter.
F5 **Math**	Only **1:Value**, **6:Derivatives**, **9:Distance**, **A:Tangent**, and **B:Arc** are available for parametric graphs. These tools are based on **t** values. For example: • **1:Value** displays x and y values for a specified **t** value. • **6:Derivatives** finds **dy/dx**, **dy/dt**, or **dx/dt** at a point defined for a specified **t** value.

Downloaded from www.Manualslib.com manuals search engine


Sequence Graphing

Overview of Steps in Graphing Sequences


To graph sequences, use the same general steps used for **y(x)** functions as described in *Basic Function Graphing*. Any differences are described on the following pages.

Graphing Sequences

1. Set **Graph** mode (MODE) to **SEQUENCE**. Also set **Angle** mode, if necessary.

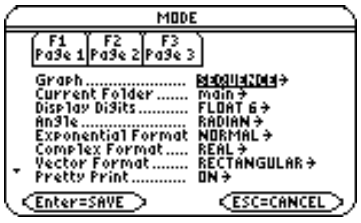

2. Define sequences and, if needed, initial values on Y= Editor (◆ [Y=]).
3. Select (F4) which defined sequences to graph. Do not select initial values.

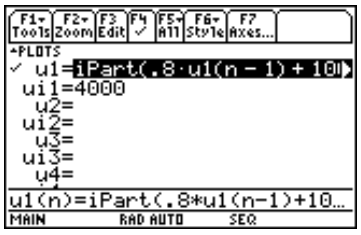

Note: To turn off any stat data plots, press F5 **5** or use F4 to deselect them.

4. Set the display style for a sequence.


   2nd [F6]
   For sequences, the default style is **Square**.



Downloaded from www.Manualslib.com manuals search engine


5. Define the viewing window (◆ [WINDOW]).

   F2 **Zoom** also changes the viewing window.

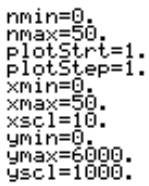


6. Change the graph format if necessary.

   F1 **9**
   — or —
   ◆ I

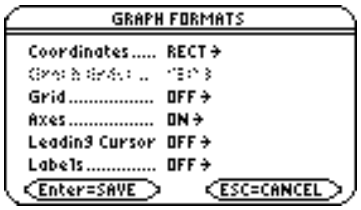

7. Graph the selected equations (◆ [GRAPH]).

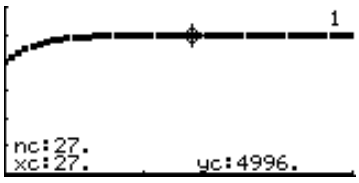

Exploring the Graph

From the Graph screen, you can:

- Display the coordinates of any pixel by using the free-moving cursor, or of a plotted point by tracing a sequence.
- Use the F2 **Zoom** toolbar menu to zoom in or out on a portion of the graph.
- Use the F5 **Math** toolbar menu to evaluate a sequence. Only **1:Value** is available for sequences.
- Plot sequences on **Time** (the default), **Web**, or **Custom** axes.

Note: You can also evaluate a sequence while tracing. Simply enter the n value directly from the keyboard.

Downloaded from www.Manualslib.com manuals search engine


Differences in Sequence and Function Graphing

This module assumes that you already know how to graph **y(x)** functions as described in *Basic Function Graphing*. This section describes the differences that apply to sequences.

Setting the Graph Mode

Use MODE to set **Graph = SEQUENCE** before you define sequences or set Window variables. The Y= Editor and the Window Editor let you enter information for the current Graph mode setting only.


Defining Sequences on the Y= Editor

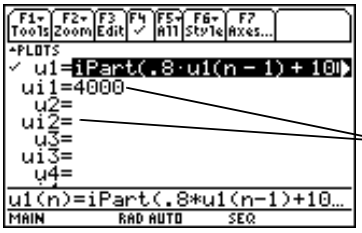

You can define sequences u1(n) through u99(n).

Use ui only for recursive sequences, which require one or more initial values.

If a sequence requires more than one initial value, enter them as a list enclosed in braces { } and separated by commas. You must use a list to enter two or more initial values.

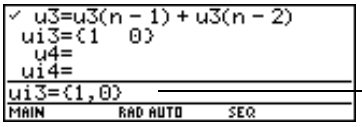

Enter {1,0} even though {1 0} is shown in the sequence list.

Downloaded from www.Manualslib.com manuals search engine

If a sequence requires an initial value but you do not enter one, you will get an error when graphing.

On the Y= Editor, Axes lets you select the axes that are used to graph the sequences. Optionally, for sequences only, you can select different axes for the graph. TIME is the default.

Axes	Description
TIME	Plots n on the x axis and **u(n)** on the y axis.
WEB	Plots **u(n–1)** on the x axis and **u(n)** on the y axis.
CUSTOM	Lets you select the x and y axes.

The Y= Editor maintains an independent function list for each Graph mode setting. For example, suppose:

- In FUNCTION graphing mode, you define a set of **y(x)** functions. You change to SEQUENCE graphing mode and define a set of **u(n)** sequences.
- When you return to FUNCTION graphing mode, your **y(x)** functions are still defined in the Y= Editor. When you return to SEQUENCE graphing mode, your **u(n)** sequences are still defined.

Note: You can use the **Define** command from the Home screen (see *Technical Reference*) to define functions and equations for any graphing mode, regardless of the current mode.

Downloaded from www.Manualslib.com manuals search engine


Selecting Sequences

With TIME and WEB axes, the TI-89 Titanium graphs only the selected sequences. If you entered any sequences that require an initial value, you must enter the corresponding ui value.

Note: With TIME and CUSTOM axes, all defined sequences are evaluated even if they are not plotted.

You can select a sequence

You cannot select its initial value.

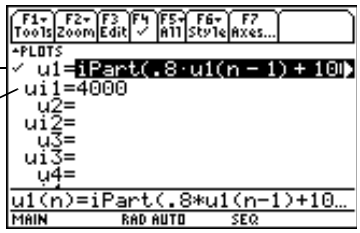

With CUSTOM axes, when you specify a sequence in the custom settings, it is graphed regardless of whether it is selected.

Selecting the Display Style

Only the **Line**, **Dot**, **Square**, and **Thick** styles are available for sequence graphs. **Dot** and **Square** mark only those discrete integer values (in plotstep increments) at which a sequence is plotted.

Downloaded from www.Manualslib.com manuals search engine

Window Variables

The Window Editor maintains an independent set of Window variables for each Graph mode setting (just as the Y= Editor maintains independent function lists). Sequence graphs use the following Window variables.

Variable	Description
nmin, nmax	Smallest and largest n values to evaluate. Sequences are evaluated at: u(nmin) u(nmin+1) u(nmin+2) ... not to exceed ... u(nmax)
plotStrt	The term number that will be the first one plotted (depending on plotstep). For example, to begin plotting with the 2nd term in the sequence, set **plotstrt = 2**. The first term will be evaluated at **nmin** but not plotted.
plotStep	Incremental n value *for graphing only*. This does not affect how the sequence is evaluated, only which points are plotted. For example, suppose **plotstep = 2**. The sequence is evaluated at each consecutive integer but is plotted at only every other integer.
xmin, xmax, ymin, ymax	Boundaries of the viewing window.
xscl, yscl	Distance between tick marks on the x and y axes.

Note: Both **nmin** and **nmax** must be positive integers, although **nmin** can be zero; **nmin**, **nmax**, **plotstrt** and **plotstep** must be integers ≥ 1. If you do not enter integers, they will be rounded to integers.

Downloaded from www.Manualslib.com manuals search engine


Standard values (set when you select **6:ZoomStd** from the F2 **Zoom** toolbar menu) are:

nmin = 1.	xmin = ⁻10.	ymin = ⁻10.
nmax = 10.	xmax = 10.	ymax = 10.
plotstrt = 1.	xscl = 1.	yscl = 1.
plotstep = 1.		


You may need to change the standard values for the n and plot variables to ensure that sufficient points are plotted.

To see how **plotstrt** affects graph, look at the following examples of a recursive sequence.

This graph is plotted beginning with the 1st term.

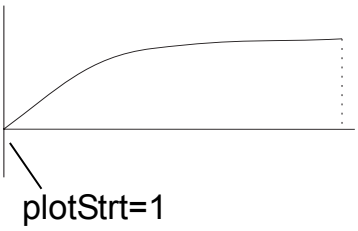

This graph is plotted beginning with the 9th term.

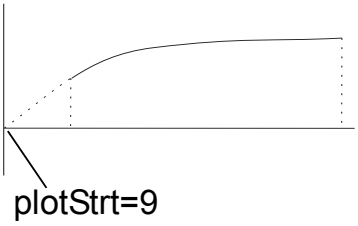


Note: Both of these graphs use the same Window variables, except for **plotstrt**.

Downloaded from www.Manualslib.com manuals search engine

With TIME axes (from Axes on the Y= Editor), you can set **plotstrt = 1** and still graph only a selected part of the sequence. Simply define a viewing window that shows only the area of the coordinate plane you want to view.

You could set:

- **xmin** = first n value to graph
- **xmax** = **nmax** (although you can use other values)
- **ymin** and **ymax** = expected values for the sequence

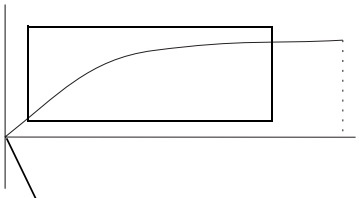

Changing the Graph Format

The Graph Order format is not available.

- With TIME or CUSTOM axes, multiple sequences are always plotted simultaneously.
- With WEB axes, multiple sequences are always plotted sequentially.

Exploring a Graph

As in function graphing, you can explore a graph by using the following tools. Any displayed coordinates are shown in rectangular or polar form as set in the graph format.

Tool	For Sequence Graphs:
Free-Moving Cursor	Works just as it does for function graphs.

Downloaded from www.Manualslib.com manuals search engine

Tool	For Sequence Graphs:
F2 **Zoom**	Works just as it does for function graphs. • Only **x** (**xmin**, **xmax**, **xscl**) and **y** (**ymin**, **ymax**, **yscl**) Window variables are affected. • The n and plot Window variables (**nmin**, **nmax**, **plotStrt**, **plotStep**) are not affected unless you select **6:ZoomStd** (which sets all Window variables to their standard values).
F3 **Trace**	Depending on whether you use TIME, CUSTOM, or WEB axes, Trace operates very differently. • With TIME or CUSTOM axes, you move the cursor along the sequence one plotstep at a time. To move approximately ten plotted points at a time, press 2nd ▶ or 2nd ◀. - When you begin a trace, the cursor is on the first selected sequence at the term number specified by plotstrt, even if it is outside the viewing window. - QuickCenter applies to all directions. If you move the cursor off the screen (top or bottom, left or right), press ENTER to center the viewing window on the cursor location. • With WEB axes, the trace cursor follows the web, not the sequence.
F5 **Math**	Only **1:Value** is available for sequence graphs. • With TIME and WEB axes, the **u(n)** value (represented by **yc**) is displayed for a specified n value. • With CUSTOM axes, the values that correspond to x and y depend on the axes you choose.

Downloaded from www.Manualslib.com manuals search engine

During a trace, you can evaluate a sequence by typing a value for n and pressing ENTER. You can use QuickCenter at any time during a trace, even if the cursor is still on the screen.


Setting Axes for Time, Web, or Custom Plots

For sequences only, you can select different types of axes for the graph. Examples of the different types are given later in this module.

Displaying the AXES Dialog Box

From the Y= Editor, Axes:

- Depending on the current Axes setting, some items may be dimmed.
- To exit without making any changes, press ESC.

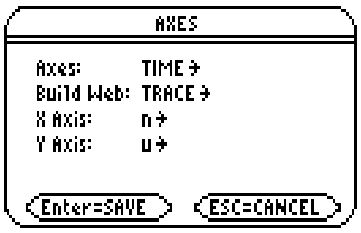

Item	Description
Axes	TIME — Plots **u(n)** on the y axis and n on the x axis. WEB — Plots **u(n)** on the y axis and **u(n−1)** on the x axis. CUSTOM — Lets you select the x and y axes.
Build Web	Active only when Axes = WEB, this specifies whether a web is drawn manually (TRACE) or automatically (AUTO).

Downloaded from www.Manualslib.com manuals search engine

Item	Description
X Axis and **Y Axis**	Active only when Axes = CUSTOM, these let you select the value or sequence to plot on the x and y axes.

To change any of these settings, use the same procedure that you use to change other types of dialog boxes, such as the MODE dialog box.

Using Web Plots

A web plot graphs **u(n)** vs. **u(n−1)**, which lets you study the long-term behavior of a recursive sequence. The examples in this section also show how the initial value can affect a sequence's behavior.

Valid Functions for Web Plots

A sequence must meet the following criteria; otherwise, it will not be graphed properly on WEB axes. The sequence:

- Must be recursive with only one recursion level; **u(n−1)** but not **u(n−2)**.
- Cannot reference n directly.
- Cannot reference any other defined sequence except itself.

When You Display the Graph Screen

After you select WEB axes and display the Graph screen, the TI-89 Titanium:

Downloaded from www.Manualslib.com manuals search engine

- Draws a **y=x** reference line.
- Plots the selected sequence definitions as functions, with **u(n−1)** as the independent variable. This effectively converts a recursive sequence into a nonrecursive form for graphing.

For example, consider the sequence u1(n) = $\sqrt{5-u1(n-1)}$ and an initial value of **ui1=1**.

The TI-89 Titanium draws the **y=x** reference line and then plots y = $y = \sqrt{5-x}$.

Drawing the Web

After the sequence is plotted, the web may be displayed manually or automatically, depending on how you set **Build Web** on the AXES dialog box.

If Build Web =	The web is:
TRACE	Not drawn until you press F3. The web is then drawn step-by-step as you move the trace cursor (you must have an initial value before using Trace). **Note**: With WEB axes, you cannot trace along the sequence itself as you do in other graphing modes.
AUTO	Drawn automatically. You can then press F3 to trace the web and display its coordinates.

The web:

1. Starts on the x axis at the initial value ui (when **plotstrt = 1**).
2. Moves vertically (either up or down) to the sequence.

Downloaded from www.Manualslib.com manuals search engine

3. Moves horizontally to the **y=x** reference line.
4. Repeats this vertical and horizontal movement until **n=nmax**.

Note: The web starts at **plotstrt**. The value of n is incremented by 1 each time the web moves to the sequence (**plotStep** is ignored).


Example: Convergence

1. On the Y= Editor ([♦] [Y=]), define u1(n) = ⁻.8u1(n−1) + 3.6. Set initial value ui1 = ⁻4.
2. Set **Axes = TIME**.
3. On the Window Editor ([♦] [WINDOW]), set the Window variables.

nmin=1	xmin=0	ymin=⁻10
nmax=25	xmax=25	ymax=10
plotstrt=1	xscl=1	yscl=1
plotstep=1		

4. Graph the sequence ([♦] [GRAPH]).

   By default, a sequence uses the **Square** display style.

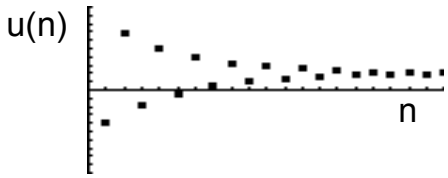

5. On the Y= Editor, set **Axes = WEB** and **Build Web = AUTO**.

Downloaded from www.Manualslib.com manuals search engine


6. On the Window Editor, change the Window variables.

nmin=1	xmin=⁻10	ymin=⁻10
nmax=25	xmax=10	ymax=10
plotstrt=1	xscl=1	yscl=1
plotstep=1		

7. Regraph the sequence.

   Web plots are always shown as lines, regardless of the selected display style.

   Note: During a trace, you can move the cursor to a specified n value by typing the value and pressing ENTER.

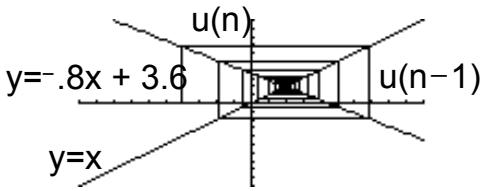

8. Press F3. As you press ▶, the trace cursor follows the web. The screen displays the cursor coordinates nc, xc, and yc (where xc and yc represent **u(n−1)** and **u(n)**, respectively).

As you trace to larger values of nc, you can see xc and yc approach the convergence point.

Note: When the nc value changes, the cursor is on the sequence. The next time you press ▶, nc stays the same but the cursor is now on the **y=x** reference line.

Downloaded from www.Manualslib.com manuals search engine


Example: Divergence

1. On the Y= Editor ([♦] [Y=]), define u1(n) = 3.2u1(n−1) − .8(u1(n−1))^2. Set initial value ui1 = 4.45.
2. Set **Axes = TIME**.
3. On the Window Editor ([♦] [WINDOW]), set the Window variables.

nmin=0	xmin=0	ymin=−75
nmax=10	xmax=10	ymax=10
plotstrt=1	xscl=1	yscl=1
plotstep=1		

4. Graph the sequence ([♦] [GRAPH]).

   Because the sequence quickly diverges to large negative values, only a few points are plotted.

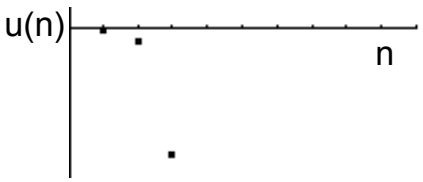


5. On the Y= Editor, set **Axes = WEB** and **Build Web = AUTO**.
6. On the Window Editor ([♦] [WINDOW]), set the Window variables.

nmin=0	xmin=−10	ymin=−10
nmax=10	xmax=10	ymax=10
plotstrt=1	xscl=1	yscl=1
plotstep=1		

Downloaded from www.Manualslib.com manuals search engine

7. Regraph the sequence.

   The web plot shows how quickly the sequence diverges to large negative values.

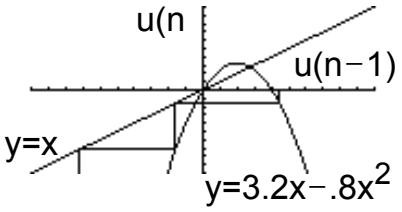

Example: Oscillation


This example shows how the initial value can affect a sequence.

1. On the Y= Editor ([◆] [Y=]), use the same sequence defined in the divergence example: u1(n) = 3.2u1(n−1) − .8(u1(n−1))^2. Set initial value ui1 = 0.5.
2. Set **Axes = TIME**.
3. On the Window Editor ([◆] [WINDOW]), set the Window variables.

nmin=1	xmin=0	ymin=0
nmax=100	xmax=100	ymax=5
plotstrt=1	xscl=10	yscl=1
plotstep=1		

4. Graph the sequence ([◆] [GRAPH]).

   Note: Compare this graph with the divergence example. This is the same sequence with a different initial value.

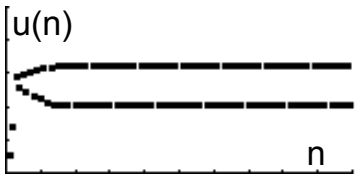

5. On the Y= Editor, set **Axes = WEB** and **Build Web = AUTO**.


Downloaded from www.Manualslib.com manuals search engine

6. On the Window Editor ([◆] [WINDOW]), set the Window variables.

nmin=1	xmin=2.68	ymin=4.7
nmax=100	xmax=6.47	ymax=47
plotstrt=1	xscl=1	yscl=1
plotstep=1		

7. Regraph the sequence.

   Note: The web moves to an orbit oscillating between two stable points.

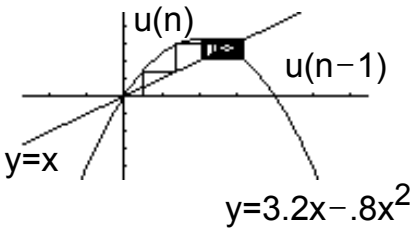


8. Press [F3]. Then use ⊙ to trace the web.

   As you trace to larger values of nc, notice that xc and yc oscillate between 2.05218 and 3.19782.

9. On the Window Editor, set **plotstrt=50**. Then regraph the sequence.

   Note: By starting the web plot at a later term, the stable oscillation orbit is shown more clearly.

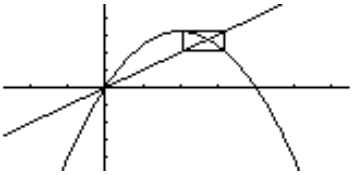

Using Custom Plots

CUSTOM axes give you great flexibility in graphing sequences. As shown in the following example, CUSTOM axes are particularly effective for showing relationships between one sequence and another.

Downloaded from www.Manualslib.com manuals search engine

Example: Predator-Prey Model

Using the predator-prey model in biology, determine the numbers of rabbits and foxes that maintain population equilibrium in a certain region.

R = Number of rabbits

M = Growth rate of rabbits if there are no foxes (use .05)

K = Rate at which foxes can kill rabbits (use .001)

W = Number of foxes

G = Growth rate of foxes if there are rabbits (use .0002)

D = Death rate of foxes if there are no rabbits (use .03)

Rn = $R_{n-1}\ (1 + M - K\ W_{n-1})$

Wn = $W_{n-1}\ (1 + G\ R_{n-1} - D)$

1. On the Y= Editor ([◆] [Y=]), define the sequences and initial values for $\mathbf{R}_n$ and $\mathbf{W}_n$.

   u1(n) = u1(n−1) ∗ (1 + .05 − .001 ∗ u2(n−1))
   ui1 = 200
   u2(n) = u2(n−1) ∗ (1 + .0002 ∗ u1(n−1) − .03)
   ui2 = 50

   Note: Assume there are initially 200 rabbits and 50 foxes.

2. Set **Axes = TIME**.


Downloaded from www.Manualslib.com manuals search engine

3. On the Window Editor ([◆] [WINDOW]), set the Window variables.

nmin=0	xmin=0	ymin=0
nmax=400	xmax=400	ymax=300
plotstrt=1	xscl=100	yscl=100
plotstep=1		

4. Graph the sequence ([◆] [GRAPH]).

   Note: Use [F3] to individually trace the number of rabbits **u1(n)** and foxes **u2(n)** over time **(n)**.

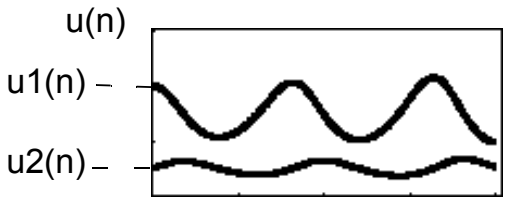


5. On the Y= Editor, set **Axes = CUSTOM**, **X Axis = u1**, and **Y Axis = u2**.
6. On the Window Editor ([◆] [WINDOW]), set the Window variables.

nmin=0	xmin=84	ymin=25
nmax=400	xmax=237	ymax=75
plotstrt=1	xscl=50	yscl=10
plotstep=1		

7. Regraph the sequence.

   Note: Use [F3] to trace both the number of rabbits (xc) and foxes (yc) over the cycle of 400 generations.

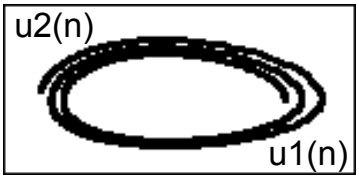

Downloaded from www.Manualslib.com manuals search engine


Using a Sequence to Generate a Table

Previous sections described how to graph a sequence. You can also use a sequence to generate a table. Refer to *Tables* for detailed information.

Example: Fibonacci Sequence


In a Fibonacci sequence, the first two terms are 1 and 1. Each succeeding term is the sum of the two immediately preceding terms.

1. On the Y= Editor ([♦] [Y=]), define the sequence and set the initial values as shown.

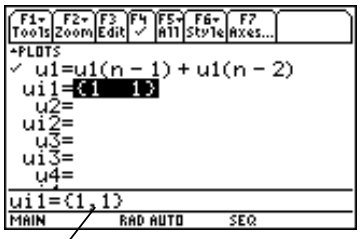

You must enter {1,1}, although {1 1} is shown in the sequence list.


2. Set table parameters ([♦] [TBLSET]) to:
   tblStart = 1
   Δtbl = 1
   Independent = AUTO

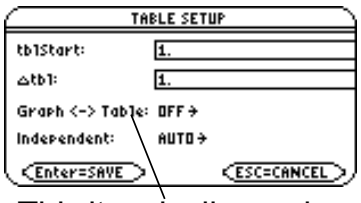


This item is dimmed if you are not using TIME axes.

Downloaded from www.Manualslib.com manuals search engine

3. Set Window variables ([♦] [WINDOW]) so that **nmin** has the same value as **tblStart**.

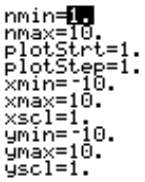

4. Display the table ([♦] [TABLE]).

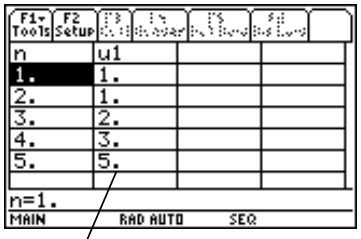

Fibonacci sequence is in column 2.

5. Scroll down the table (▼ or [2nd] ▼) to see more of the sequence.

Downloaded from www.Manualslib.com manuals search engine


3D Graphing

Overview of Steps in Graphing 3D Equations

To graph 3D equations, use the same general steps used for **y(x)** functions as described in *Basic Function Graphing*. Any differences that apply to 3D equations are described on the following pages.


Graphing 3D Equations

1. Set Graph mode (MODE) to **3D**. Also set **Angle** mode, if necessary.

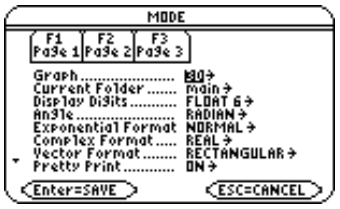


2. Define 3D equations on Y= Editor (◆ [Y=]).
3. Select (F4) which equation to graph. You can select only one 3D equation.

   To turn off any stat data plots, press F5 **5** or use F4 to deselect them.

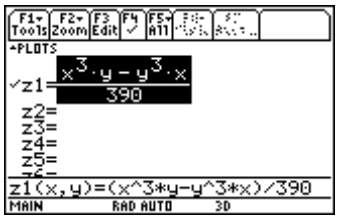

4. Define the viewing cube (◆ [WINDOW]).


   For 3D graphs, the viewing window is called the viewing cube. F2 **Zoom** also changes the viewing cube.

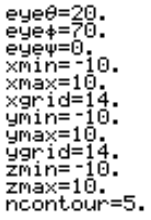

Downloaded from www.Manualslib.com manuals search engine

5. Change the graph format if necessary.

   F1 **9**
   – or -
   ◆ I
   Note: To help you see the orientation of 3D graphs, turn on **Axes and Labels**.

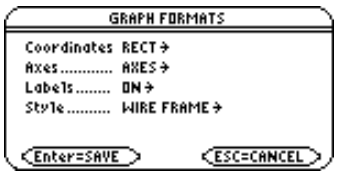

6. Graph the selected equations (◆ [GRAPH]).

   Note: Before displaying the graph, the screen shows the “percent evaluated.”



Exploring the Graph

From the Graph screen, you can:

- Trace the equation.
- Use the F2 **Zoom** toolbar menu to zoom in or out on a portion of the graph. Some of the menu items are dimmed because they are not available for 3D graphs.
- Use the F5 **Math** toolbar menu to evaluate the equation at a specified point. Only **1:Value** is available for 3D graphs.

You can also evaluate **z(x,y)** while tracing. Type the x value and press ENTER; then type the y value and press ENTER.

Downloaded from www.Manualslib.com manuals search engine


Differences in 3D and Function Graphing

This module assumes that you already know how to graph **y(x)** functions as described in Basic Function Graphing. This section describes the differences that apply to 3D equations.

Setting the Graph Mode

Use MODE to set **Graph = 3D** before you define equations or set Window variables. The Y= Editor and the Window Editor let you enter information for the current Graph mode setting only.

Defining 3D Equations on the Y= Editor

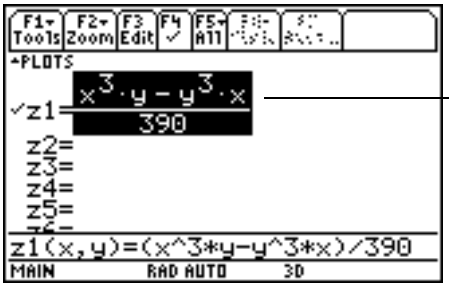

You can define 3D equations for **z1(x,y)** through **z99(x,y)**.

The Y= Editor maintains an independent function list for each Graph mode setting. For example, suppose:

- In FUNCTION graphing mode, you define a set of **y(x)** functions. You change to 3D graphing mode and define a set of **z(x,y)** equations.

Downloaded from www.Manualslib.com manuals search engine

- When you return to FUNCTION graphing mode, your **y(x)** functions are still defined in the Y= Editor. When you return to 3D graphing mode, your **z(x,y)** equations are still defined.

Note: You can use the **Define** command from the Home screen (see the Technical Reference module) to define functions and equations for any graphing mode, regardless of the current mode.

Selecting the Display Style

Because you can graph only one 3D equation at a time, display styles are not available. On the Y= Editor, the Style toolbar menu is dimmed.


For 3D equations, however, you can use:
F1 **9**
– or -
◆ |
to set the Style format to WIRE FRAME or HIDDEN SURFACE.

Window Variables

The Window Editor maintains an independent set of Window variables for each Graph mode setting (just as the Y= Editor maintains independent function lists). 3D graphs use the following Window variables.

Variable	Description
eyeθ**,** **eye**ϕ**,** **eye**ψ	Angles (always in degrees) used to view the graph.

Downloaded from www.Manualslib.com manuals search engine

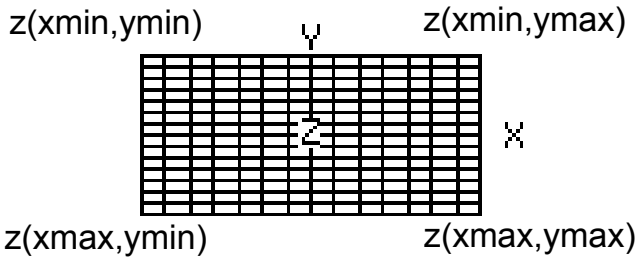Variable	Description
xmin, **xmax**, **ymin**, **ymax**, **zmin**, **zmax**	Boundaries of the viewing cube.
xgrid, **ygrid**	The distance between **xmin** and **xmax** and between **ymin** and **ymax** is divided into the specified number of grids. The **z(x,y)** equation is evaluated at each grid point where the grid lines (or grid wires) intersect. The incremental value along x and y is calculated as: $\text{x increment} = \frac{\text{xmax} - \text{xmin}}{\text{xgrid}}$ $\text{y increment} = \frac{\text{ymax} - \text{ymin}}{\text{ygrid}}$ The number of grid wires is **xgrid + 1** and **ygrid + 1**. For example, when **xgrid = 14** and **ygrid = 14**, the xy grid consists of 225 (15×15) grid points. 
ncontour	The number of contours evenly distributed along the displayed range of z values.

Downloaded from www.Manualslib.com manuals search engine

Note: If you enter a fractional number for **xgrid** or **ygrid**, it is rounded to the nearest whole number ≥ 1. The 3D mode does not have **scl** Window variables, so you cannot set tick marks on the axes.

Standard values (set when you select **6:ZoomStd** from the F2 **Zoom** toolbar menu) are:

eyeθ = 20.	xmin = ⁻10.	ymin = ⁻10.	zmin = ⁻10.
eyeϕ = 70.	xmax = 10.	ymax = 10.	zmax = 10.
eyeψ = 0.	xgrid = 14.	ygrid = 14.	ncontour = 5.

You may need to increase the standard values for the grid variables (**xgrid**, **ygrid**) to ensure that enough points are plotted.

Note: Increasing the grid variables decreases the graphing speed.

Setting the Graph Format

The Axes and Style formats are specific to the 3D graphing mode.

Exploring a Graph

As in function graphing, you can explore a graph by using the following tools. Any displayed coordinates are shown in rectangular or cylindrical form as set in the graph format. In 3D graphing, cylindrical coordinates are shown when you use use:
F1 **9**
– or –

Downloaded from www.Manualslib.com manuals search engine

◆ |
to set **Coordinates = POLAR**.

Tool	For 3D Graphs:
Free-Moving Cursor	The free-moving cursor is not available.
F2 **Zoom**	Works essentially the same as it does for function graphs, but remember that you are now using three dimensions instead of two. • Only the following zooms are available: **2:ZoomIn**, **3:ZoomOut**, **5:ZoomSqr**, **6:ZoomStd**, **A:ZoomFit**, **B:Memory**, **C:SetFactors** • Only **x** (**xmin**, **xmax**), **y** (**ymin**, **ymax**), and **z** (**zmin**, **zmax**) Window variables are affected. • The **grid** (**xgrid**, **ygrid**) and **eye** (**eye**θ, **eye**ϕ, **eye**ψ) Window variables are not affected unless you select **6:ZoomStd** (which resets these variables to their standard values).
F3 **Trace**	Lets you move the cursor along a grid wire from one grid point to the next on the 3D surface. • When you begin a trace, the cursor appears at the midpoint of the xy grid. • QuickCenter is available. At any time during a trace, regardless of the cursor's location, you can press ENTER to center the viewing cube on the cursor. • Cursor movement is restricted in the x and y directions. You cannot move the cursor beyond the viewing cube boundaries set by **xmin**, **xmax**, **ymin**, and **ymax**.

Downloaded from www.Manualslib.com manuals search engine

Tool	For 3D Graphs:
F5 **Math**	Only **1:Value** is available for 3D graphs. This tool displays the z value for a specified x and y value. After selecting **1:Value**, type the x value and press ENTER. Then type the y value and press ENTER.

Note: During a trace, you can also evaluate **z(x,y)**. Type the x value and press ENTER; then type the y value and press ENTER.

Moving the Cursor in 3D

When you move the cursor along a 3D surface, it may not be obvious why the cursor moves as it does. 3D graphs have two independent variables (**x,y**) instead of one, and the x and y axes have a different orientation than other graphing modes.

How to Move the Cursor

On a 3D surface, the cursor always follows along a grid wire.


Cursor Key	Moves the cursor to the next grid point in the:
▶	Positive x direction
◀	Negative x direction
▲	Positive y direction
▼	Negative y direction

Downloaded from www.Manualslib.com manuals search engine


Note: You can move the cursor only within the x and y boundaries set by Window variables **xmin**, **xmax**, **ymin**, and **ymax**.

Although the rules are straightforward, the actual cursor movement can be confusing unless you know the orientation of the axes.

In 2D graphing, the x and y axes always have the same orientation relative to the Graph screen.

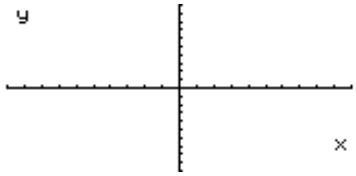

In 3D graphing, x and y have a different orientation relative to the Graph screen. Also, you can rotate and/or elevate the viewing angle.



eyeθ=20 eyeϕ=70 eyeψ=0


Note: To show the axes and their labels from the Y= Editor, Window Editor, or Graph screen, use:
◆ |

Simple Example of Moving the Cursor

The following graph shows a sloped plane that has the equation z1(x,y) = -(x + y) / 2. Suppose you want to trace around the displayed boundary.

Downloaded from www.Manualslib.com manuals search engine

When you press F3, the trace cursor appears at the midpoint of the xy grid. Use the cursor pad to move the cursor to any edge.

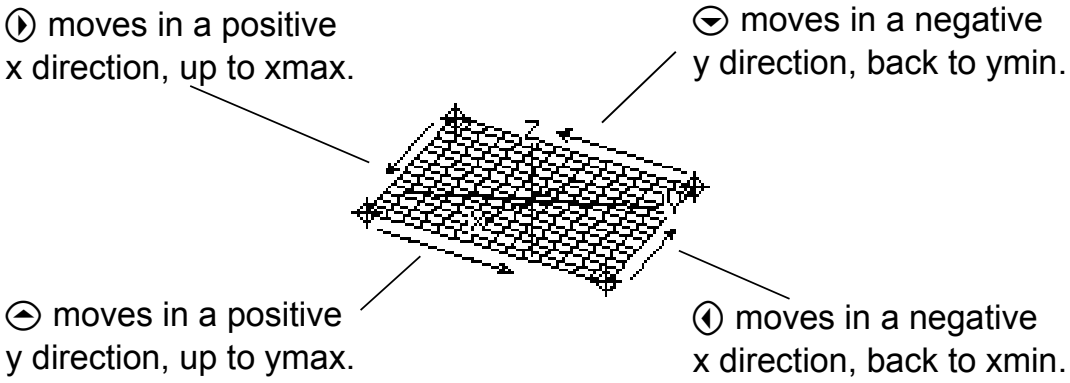
moves in a positive x direction, up to xmax.
moves in a negative y direction, back to ymin.
moves in a positive y direction, up to ymax.
moves in a negative x direction, back to xmin.

By displaying and labeling the axes, you can more easily see the pattern in the cursor movement. To move grid points closer together, you can increase Window variables **xgrid** and **ygrid**.


When the trace cursor is on an interior point in the displayed plane, the cursor moves from one grid point to the next along one of the grid wires. You cannot move diagonally across the grid. Notice that the grid wires may not appear parallel to the axes.

Example of the Cursor on a Hidden Surface


On more complex shapes, the cursor may appear as if it is not on a grid point. This is an optical illusion caused when the cursor is on a hidden surface.

Downloaded from www.Manualslib.com manuals search engine

For example, consider a saddle shape z1(x,y) = ($x^2 - y^2$) / 3. The following graph shows the view looking down the y axis.

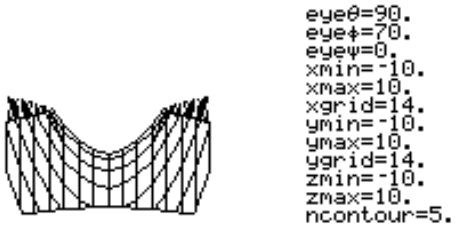

Now look at the same shape at 10° from the x axis (eyeθ = 10).

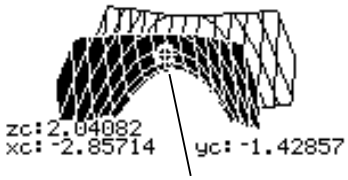

You can move the cursor so that it does not appear to be on a grid point.



If you cut away the front side, you can see the cursor is actually on a grid point on the hidden back side.


Note: To cut away the front of the saddle in this example, set **xmax=0** to show only negative x values.

Example of an "Off the Curve" Cursor

Although the cursor can move only along a grid wire, you will see many cases where the cursor does not appear to be on the 3D surface at all. This occurs when the z axis is too short to show **z(x,y)** for the corresponding x and y values.

Downloaded from www.Manualslib.com manuals search engine

For example, suppose you trace the paraboloid $z(x,y) = x^2 + .5y^2$ graphed with the indicated Window variables. You can easily move the cursor to a position such as:

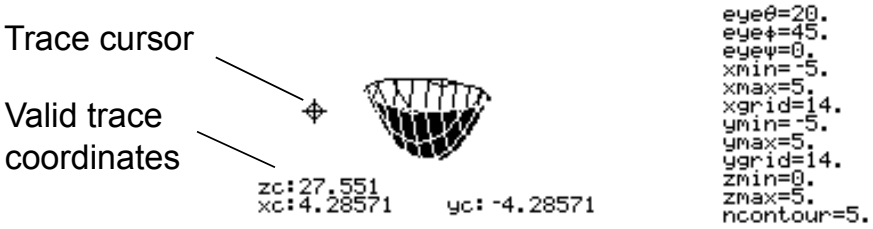

Although the cursor is actually tracing the paraboloid, it appears off the curve because the trace coordinates:

- **xc** and **yc** are within the viewing cube.

  – but –

- **zc** is outside the viewing cube.

Note: QuickCenter lets you center the viewing cube on the cursor's location. Simply press ENTER.

When **zc** is outside the z boundary of the viewing cube, the cursor is physically displayed at **zmin** or **zmax** (although the screen shows the correct trace coordinates).

Rotating and/or Elevating the Viewing Angle


In 3D graphing mode, the **eye**θ and **eye**ϕ Window variables let you set viewing angles that determine your line of sight. The **eye**ψ Window variable lets you rotate the graph around that line of sight.


Downloaded from www.Manualslib.com manuals search engine

How the Viewing Angle Is Measured

The viewing angle has three components:

- **eye**θ — angle in degrees from the positive x axis.
- **eye**ϕ — angle in degrees from the positive z axis.
- **eye**ψ — angle in degrees by which the graph is rotated counter-clockwise around the line of sight set by **eye**θ and **eye**ϕ.

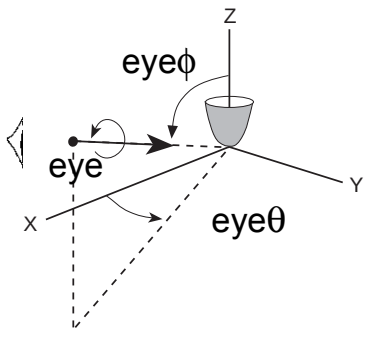

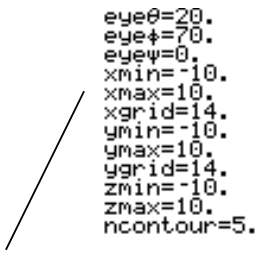

Do not enter a °symbol. For example, type 20, 70, and 0, not 20°, 70° and 0°.





Note: When **eye**ψ**=0**, the z axis is vertical on the screen. When **eye**ψ**=90**, the z axis is rotated 90° counterclockwise and is horizontal.

In the Window Editor ([♦] [WINDOW]), always enter **eye**θ, **eye**ϕ, and **eye**ψ in degrees, regardless of the current angle mode.

Downloaded from www.Manualslib.com manuals search engine

Effect of Changing eyeθ theta

The view on the Graph screen is always oriented along the viewing angle. From this point of view, you can change **eye**θ to rotate the viewing angle around the z axis.


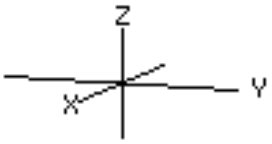
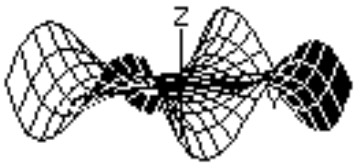
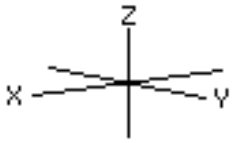
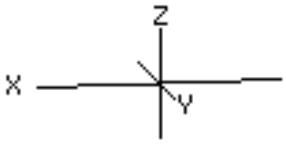
z1(x,y) = ($x^3y - y^3x$) / 390		**In this example eyeϕ = 70**
	eyeθ = 20	
	eyeθ = 50	
	eyeθ = 80	

Note: This example increments **eye**θ by 30.

Downloaded from www.Manualslib.com manuals search engine

Effect of Changing eyeϕ phi

By changing **eyeϕ**, you can elevate your viewing angle above the xy plane. If **90 < eyeϕ < 270**, the viewing angle is below the xy plane.

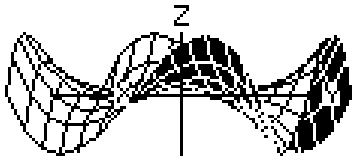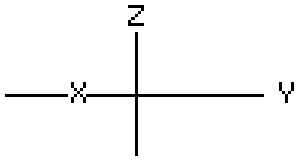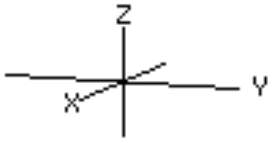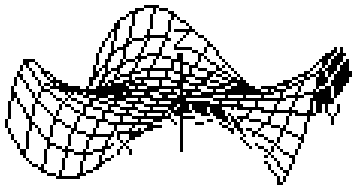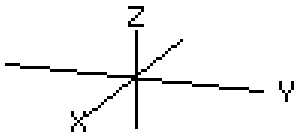z1(x,y) = ($x^3y - y^3x$) / 390		**In this example eyeθ = 20**
	eyeϕ = 90	
	eyeϕ = 70	
	eyeϕ = 50	



Note: This example starts on the xy plane (**eyeϕ = 90**) and decrements **eyeϕ** by 20 to elevate the viewing angle.

Effect of Changing eyeψ psi


The view on the Graph screen is always oriented along the viewing angles set by **eyeθ** and **eyeϕ**. You can change **eyeψ** to rotate the graph around that line of sight.

Downloaded from www.Manualslib.com manuals search engine


Note: During rotation, the axes expand or contract to fit the screen's width and height. This causes some distortion as shown in the example.

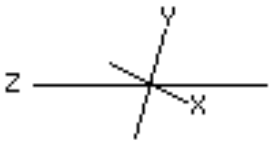z1(x,y)=(x^3y-y^3x) / 390		**In this example, eyeθ=20 and eyeϕ=70**
	eyeψ = 0	
	eyeψ = 45	
	eyeψ = 90	

When **eyeψ=0**, the z axis runs the height of the screen.

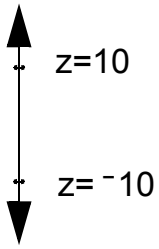

When **eyeψ=90**, the z axis runs the width of the screen.



Downloaded from www.Manualslib.com manuals search engine

As the z axis rotates 90°, its range (⁻10 to 10 in this example) expands to almost twice its original length. Likewise, the x and y axes expand or contract.

From the Home Screen or a Program

The **eye** values are stored in the system variables **eye**θ, **eye**ϕ, and **eye**ψ. You can access or store to these variables as necessary.

To type ϕ or ψ, press ♦ (alpha **[F]** or ♦ (Y, respectively. You can also press 2nd [CHAR] and use the Greek menu.


Animating a 3D Graph Interactively

After plotting any 3D graph, you can change the viewing angle interactively by using the cursor.

The Viewing Orbit

When using ◄ and ► to animate a graph, think of it as moving the viewing angle along its “viewing orbit” around the graph.

Moving along this orbit can cause the z axis to wobble slightly during the animation.

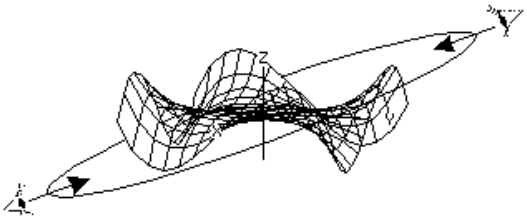

Downloaded from www.Manualslib.com manuals search engine

Note: The viewing orbit affects the eye Window variables in differing amounts.

Animating the Graph

To:	Do this:
Animate the graph incrementally.	Press and release the cursor quickly.
Move along the viewing orbit.	◀ or ▶
Change the viewing orbit's elevation. (primarily increases or decreases eyeϕ)	▲ or ▼
Animate the graph continuously.	Press and hold the cursor for about 1 second, and then release it. To stop, press ESC, ENTER, ON, or ♦ [␣] (space).
Change between 4 animation speeds (increase or decrease the incremental changes in the eye Window variables).	Press + or −.
Change the viewing angle of a non-animated graph to look along the x, y, or z axis.	Press X, Y or Z, respectively.
Return to the initial eye angle values.	Press 0 (zero).

Notes: If the graph is shown in expanded view, it returns to normal view automatically when you press a cursor key.

Downloaded from www.Manualslib.com manuals search engine

- After animating the graph, you can stop and then re-start the animation in the same direction by pressing:
  [ENTER] or [alpha] [␣]
- During an animation, you can switch to the next graph format style by pressing:
  [I]
- You can view a graphic that shows the eye angles.

Animating a Series of Graph Pictures

You can also animate a graph by saving a series of graph pictures and then flipping (or cycling) through those pictures. Refer to “Animating a Series of Graph Pictures” Additonal Graphing Topics. This method gives you more control over the Window variable values, particularly **eye**ψ, which rotates the graph.

Changing the Axes and Style Formats

With its default settings, the TI-89 Titanium displays hidden surfaces on a 3D graph but does not display the axes. However, you can change the graph format at any time.


Displaying the GRAPH FORMATS Dialog Box

From the Y= Editor, Window Editor, or Graph screen, press:
[F1] **9**

Downloaded from www.Manualslib.com manuals search engine

– or -
◆ |

- The dialog box shows the current graph format settings.
- To exit without making a change, press ESC.

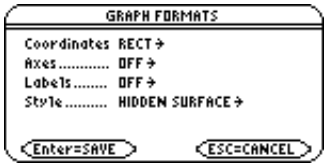

To change any of these settings, use the same procedure that you use to change other types of dialog boxes, such as the MODE dialog box.

Examples of Axes Settings

To display the valid **Axes** settings, highlight the current setting and press ▶.



$z1(x,y) = x^2+.5y^2$

- AXES — Shows standard xyz axes.



- BOX — Shows 3-dimensional box axes.

  The edges of the box are determined by the Window variables **xmin**, **xmax**, etc.



In many cases, the origin (0,0,0) is inside the box, not at a corner. For example, if **xmin = ymin = zmin = ⁻10** and **xmax = ymax = zmax = 10**, the origin is at the center of the box.

Downloaded from www.Manualslib.com manuals search engine

Note: Setting Labels = ON is helpful when you display either type of 3D axes.

Examples of Style Settings

Note: WIRE FRAME is faster to graph and may be more convenient when you're experimenting with different shapes.

To display the valid Style settings, highlight the current setting and press ▶.



- WIRE FRAME — Shows the 3D shape as a transparent wire frame.



- HIDDEN SURFACES — Uses shading to differentiate the two sides of the 3D shape.




Later sections in this module describe CONTOUR LEVELS, WIRE AND COUNTOUR, and implicit plots.

Be Aware of Possible Optical Illusions

The eye angles used to view a graph (**eye**θ, **eye**ϕ, and **eye**ψ Window variables) can result in optical illusions that cause you to lose perspective on a graph. Typically, most optical illusions occur when the eye angles are in a negative quadrant of the coordinate system.

Downloaded from www.Manualslib.com manuals search engine

Optical illusions may be more noticeable with box axes. For example, it may not be immediately obvious which is the “front” of the box.

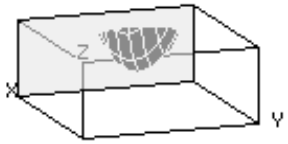Looking down from above the xy plane	Looking up from below the xy plane
	
eyeθ = 20, eyeϕ = 55, eyeψ = 0	eyeθ = 20, eyeϕ = 120, eyeψ= 0
	

Note: The first two examples show the graphs as displayed on the screen. The second two examples use artificial shading (which is not displayed on the screen) to show the front of the box.

To minimize the effect of optical illusions, use the GRAPH FORMATS dialog box to set Style = HIDDEN SURFACE.

Contour Plots


In a contour plot, a line is drawn to connect adjacent points on the 3D graph that have the same z value. This module discusses the CONTOUR LEVELS and WIRE AND CONTOUR graph format styles.

Downloaded from www.Manualslib.com manuals search engine

Selecting the Graph Format Style

In 3D graphing mode, define an equation and graph it as you would any 3D equation, with the following exception. Display the GRAPH FORMATS dialog box by pressing F1 **9** from the Y= Editor, Window editor, or Graph screen. Then set:

Style = CONTOUR LEVELS
– or –
Style = WIRE AND CONTOUR

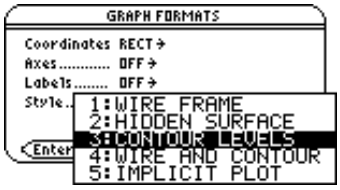





- For CONTOUR LEVELS, only the contours are shown.
  - The viewing angle is set initially so that you are viewing the contours by looking down the z axis. You can change the viewing angle as necessary.
  - The graph is shown in expanded view. To switch between expanded and normal view, press ×.
  - The Labels format is set to OFF automatically.
- For WIRE AND CONTOUR, the contours are drawn on a wire frame view. The viewing angle, view (expanded or normal), and Labels format retain their previous settings.

Notes:

- From the Graph screen, you can switch from one graph format style to the next (skipping IMPLICIT PLOT) by pressing:
  I
- Pressing:
  I
  to select CONTOUR LEVELS does not affect the viewing angle, view, or Labels

Downloaded from www.Manualslib.com manuals search engine

format as it does if you use:
◆ |

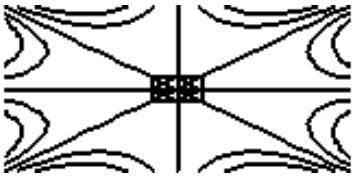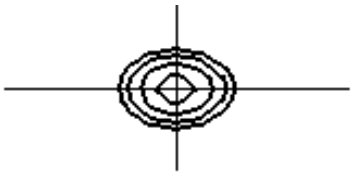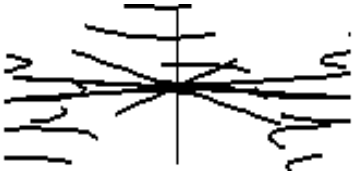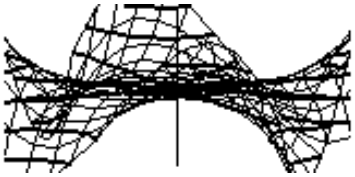Style	z1(x,y)=(x^{3}y–y^{3}x) / 390	z1(x,y)=x^2+.5y^2–5
	Looking down z axis	
CONTOUR LEVELS		
	Using eyeθ=20, eyeϕ=70, eyeψ=0	
CONTOUR LEVELS		
WIRE AND CONTOUR		

Note: These examples use the same x, y, and z Window variable values as a **ZoomStd** viewing cube. If you use **ZoomStd**, press Z to look down the z axis. Do not confuse the contours with the grid lines. The contours are darker.

Downloaded from www.Manualslib.com manuals search engine


How Are Z Values Determined?

You can set the ncontour Window variable (◆ [WINDOW]) to specify the number of contours that will be evenly distributed along the displayed range of z values, where:

$$\text{increment} = \frac{\text{zmax} - \text{zmin}}{\text{ncontour} + 1}$$

The z values for the contours are:

zmin + increment
zmin + 2(increment)
zmin + 3(increment)
⋮
zmin + ncontour(increment)

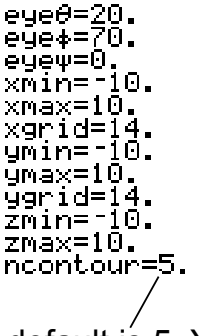

The default is 5. You can set this to 0 through 20.

If **ncontour=5** and you use the standard viewing window (**zmin=⁻10** and **zmax=10**) , the increment is 3.333. Five contours are drawn for z=⁻6.666, ⁻3.333, 0, 3.333, and 6.666.


Note, however, that a contour is not drawn for a z value if the 3D graph is not defined at that z value.

Downloaded from www.Manualslib.com manuals search engine

Drawing a Contour for the Z Value of a Selected Point Interactively

If a contour graph is currently displayed, you can specify a point on the graph and draw a contour for the corresponding z value.

1. To display the **Draw** menu, press:
   2nd [F6]

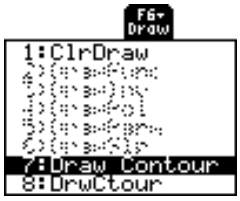

2. Select **7:Draw Contour**.
3. Either:
   - Type the point's x value and press ENTER, and then type the y value and press ENTER.

     – or –
   - Move the cursor to the applicable point. (The cursor moves along the grid lines.) Then press ENTER.

For example, suppose the current graph is $z1(x,y)=x^2+.5y^2-5$. If you specify x=2 and y=3, a contour is drawn for z=3.5.

Note: Any existing contours remain on the graph. To remove the default contours, display the Window editor (♦ [WINDOW]) and set **ncontour=0**.

Downloaded from www.Manualslib.com manuals search engine

Drawing Contours for Specified Z Values

From the Graph screen, display the Draw menu and then select **8:DrwCtour**. The Home screen is displayed automatically with **DrwCtour** in the entry line. You can then specify one or more z values individually or generate a sequence of z values.

Some examples are:

DrwCtour 5	Draws a contour for z=5.
DrwCtour {1,2,3}	Draws contours for z=1, 2, and 3.
DrwCtour seq(n,n,⁻10,10,2)	Draws contours for a sequence of z values from ⁻10 through 10 in steps of 2 (⁻10, ⁻8, ⁻6, etc.).

Note: To remove the default contours, use ♦ [WINDOW] and set **ncontour=0**.

The specified contours are drawn on the current 3D graph. (A contour is not drawn if the specified z value is outside the viewing cube or if the 3D graph is not defined at that z value.)

Notes about Contour Plots

For a contour plot:

- You can use the cursor keys to animate the contour plot.
- You cannot trace (F3) the contours themselves. However, you can trace the wire frame as seen when Style=WIRE AND CONTOUR.
- It may take awhile to evaluate the equation initially.

Downloaded from www.Manualslib.com manuals search engine

- Because of possible long evaluation times, you first may want to experiment with your 3D equation by using Style=WIRE FRAME. The evaluation time is much shorter. Then, after you're sure you have the correct Window variable values, display the Graph Formats dialog box and set Style=CONTOUR LEVELS or WIRE AND CONTOUR.
  ◆ I

Example: Contours of a Complex Modulus Surface


The complex modulus surface given by **z(a,b) = abs(f(a+b*i*))** shows all the complex zeros of any polynomial **y=f(x)**.

Example


In this example, let $f(x)=x^3+1$. By substituting the general complex form $x+yi$ for x, you can express the complex surface equation as $z(x,y)=abs((x+y\ i)^3+1)$.

1. Use MODE to set **Graph=3D**.
2. Press ◆ [Y=], and define the equation:

   z1(x,y)=abs((x+y*i)^3+1)

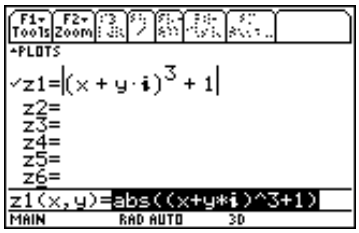


3. Press ◆ [WINDOW], and set the Window variables as shown.

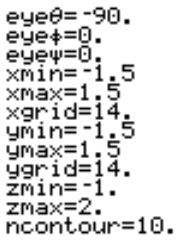

Downloaded from www.Manualslib.com manuals search engine

4. Display the Graph Formats dialog box: ♦ I Turn on the axes, set **Style = CONTOUR LEVELS**, and return to the Window editor.

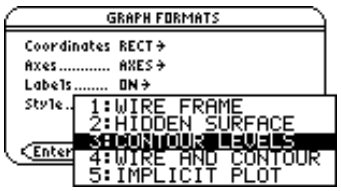


5. Press ♦ [GRAPH] to graph the equation.

   It will take awhile to evaluate the graph; so be patient. When the graph is displayed, the complex modulus surface touches the xy plane at exactly the complex zeros of the polynomial:

   -1, $\frac{1}{2}+\frac{\sqrt{3}}{2}i$, and $\frac{1}{2}-\frac{\sqrt{3}}{2}i$


6. Press F3, and move the trace cursor to the zero in the fourth quadrant.

   The coordinates let you estimate .428–.857i as the zero.

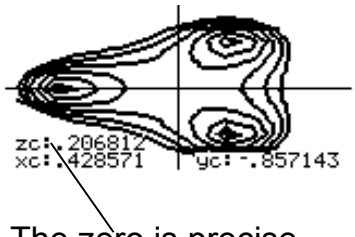

The zero is precise when z=0.

7. Press ESC. Then use the cursor keys to animate the graph and view it from different eye angles.

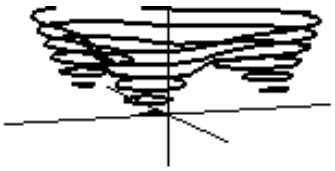

This example shows eyeθ=70, eyeϕ=70, and eyeψ=0.

Downloaded from www.Manualslib.com manuals search engine

Notes:

- For more accurate estimates, increase the **xgrid** and **ygrid** Window variables. However, this increases the graph evaluation time.

- When you animate the graph, the screen changes to normal view. Use ⊠ to toggle between normal and expanded views.


Implicit Plots

An implicit plot is used primarily as a way to graph 2D implicit forms that cannot be graphed in function graphing mode. Technically, an implicit plot is a 3D contour plot with a single contour drawn for **z=0** only.

Explicit and Implicit Forms

In 2D function graphing mode, equations have an explicit form **y=f(x)**, where y is unique for each value of x.

Many equations, however, have an implicit form **f(x,y)=g(x,y)**, where you cannot explicitly solve for y in terms of x or for x in terms of y.

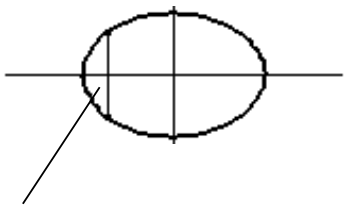

y is not unique for each x, so you cannot graph this in function graphing mode.

Downloaded from www.Manualslib.com manuals search engine

By using implicit plots in 3D graphing mode, you can graph these implicit forms without solving for y or x.

Rearrange the implicit form as an equation set to zero.

$$f(x,y)–g(x,y)=0$$

In the Y= Editor, enter the non-zero side of the equation. This is valid because an implicit plot automatically sets the equation equal to zero.

$$z1(x,y)=f(x,y)–g(x,y)$$

For example, given the ellipse equation shown to the right, enter the implicit form in the Y= Editor.

$$\text{If } x^2+.5y^2=30,$$
$$\text{then } z1(x,y)=x^2+.5y^2–30.$$

Notes: You can also graph many implicit forms if you either:

- Express them as parametric equations.
- Break them into separate, explicit functions.

Selecting the Graph Format Style


In 3D graphing mode, define an appropriate equation and graph it as you would any 3D equation, with the following exception. Display the GRAPH FORMATS dialog box from the Y= Editor, Window editor, or Graph screen:

◆ |

Downloaded from www.Manualslib.com manuals search engine

Note: From the Graph screen, you can switch to the other graph format styles by



and then set **Style = IMPLICIT PLOT**.

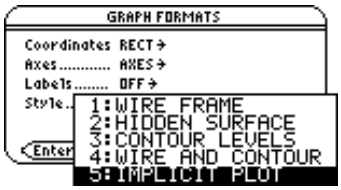

pressing:
[I]

However, to return to IMPLICIT PLOT press:
[◆] [I]

- The viewing angle is set initially so that you are viewing the plot by looking down the z axis. You can change the viewing angle as necessary.
- The plot is shown in expanded view. To switch between expanded and normal view, press [×].
- The Labels format is set to OFF automatically.

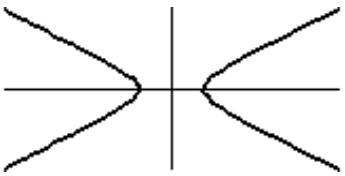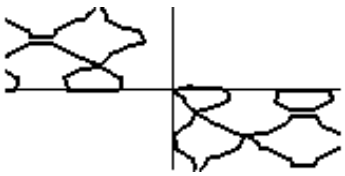Style	**$x^2-y^2=4$** **z1(x,y)=x^2-y^2-4**	**sin(x)+cos(y)= e(x∗y)** **z1(x,y)=sin(x)+cos(y)–e(x∗y)**
IMPLICIT PLOT		

Downloaded from www.Manualslib.com manuals search engine

Note: These examples use the same x, y, and z Window variable values as a **ZoomStd** viewing cube. If you use **ZoomStd**, press Z to look down the z axis.

Notes About Implicit Plots

For an implicit plot:

- The **ncontour** Window variable has no affect. Only the **z=0** contour is drawn, regardless of the value of ncontour. The displayed plot shows where the implicit form intersects the xy plane.
- You can use the cursor keys to animate the plot.
- You cannot trace (F3) the implicit plot itself. However, you can trace the unseen wire frame graph of the 3D equation.
- It may take awhile to evaluate the equation initially.
- Because of possible long evaluation times, you first may want to experiment with your 3D equation by using Style=WIRE FRAME. The evaluation time is much shorter. Then, after you're sure you have the correct Window variable values, set Style=IMPLICIT PLOT.
  ◆ |

Example: Implicit Plot of a More Complicated Equation

You can use the IMPLICIT PLOT graph format style to plot and animate a complicated equation that cannot be graphed otherwise. Although it may take a long time to evaluate such a graph, the visual results can justify the time required.


Downloaded from www.Manualslib.com manuals search engine

Example


Graph the equation $\sin(x^4+y-x^3 y) = .1$.

1. Use [MODE] to set **Graph=3D**.
2. Press [◆] [Y=], and define the equation:


   z1(x,y)=sin(x^4+y– x^3y)–.1

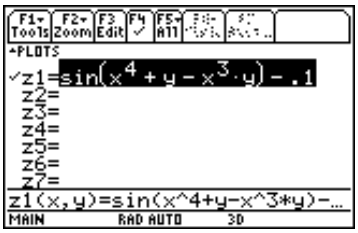

3. Press [◆] [WINDOW], and set the Window variables as shown.

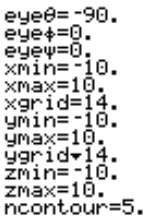


4. Press:
   [◆] [|] Turn on the axes, set **Style = IMPLICIT PLOT**, and return to the Window editor.

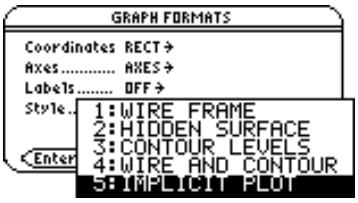

5. Press [◆] [GRAPH] to graph the equation.

   It will take awhile to evaluate the graph; so be patient.

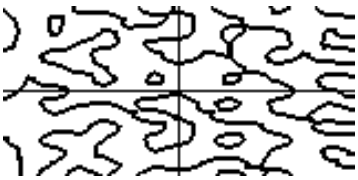

The graph shows where $\sin(x^4+y-x^3y) = .1$

Downloaded from www.Manualslib.com manuals search engine

6. Use the cursor keys to animate the graph and view it from different eye angles.

   Note: For more detail, increase the **xgrid** and **ygrid** Window variables. However, this increases the graph evaluation time.



In expanded view, this example shows eyeθ=⁻127.85, eyeϕ=52.86, and eyeψ=⁻18.26.

Note: When you animate the graph, the screen changes to normal view. Press ⊠ to switch between normal and expanded views.

Downloaded from www.Manualslib.com manuals search engine


Differential Equation Graphing

Overview of Steps in Graphing Differential Equations

To graph differential equations, use the same general steps used for **y(x)** functions as described in *Basic Function Graphing*. Any differences are described on the following pages.


Graphing Differential Equations

1. Set **Graph** mode (MODE) to **DIFF EQUATIONS**. Also set **Angle** mode, if necessary.

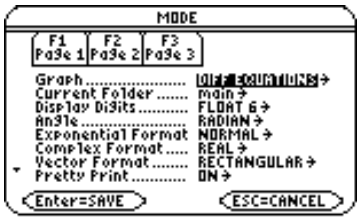

2. Define equations and, optionally, initial conditions on Y= Editor (◆ [Y=]).
3. Select (F4) which defined functions to graph.

   Note: To turn off any stat data plots, press F5 **5** or use F4 to deselect them.

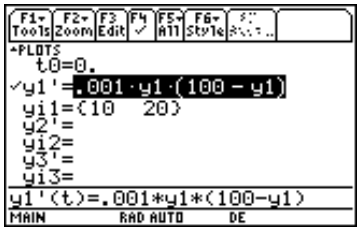

Downloaded from www.Manualslib.com manuals search engine

4. Set the display style for a function.

   2nd [F6]




5. Set the graph format. **Solution Method** and **Fields** are unique to differential equations.

   F1 **9**

   — or —

   ◆ |

   Note: The **Fields** format is critical, depending on the order of the equation.

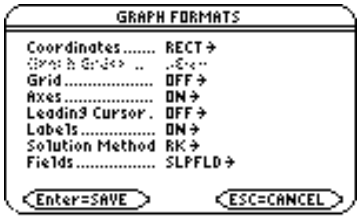

6. Set the axes as applicable, depending on the Fields format.


   2nd [F7]

   Note: Valid **Axes** settings depend on the Fields format.




7. Define the viewing window (◆ [WINDOW]).

   Note: Depending on the **Solution Method** and **Fields** formats, different Window variables are displayed. F2 **Zoom** also changes the viewing window.

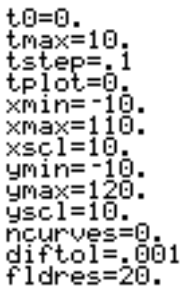

Downloaded from www.Manualslib.com manuals search engine

8. Graph the selected functions ([◆] [GRAPH]).

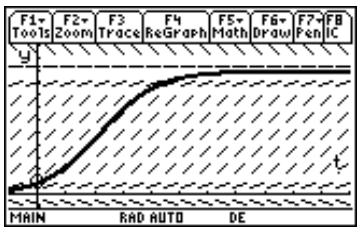


Differences in Diff Equations and Function Graphing

This module assumes that you already know how to graph **y(x)** functions as described in *Basic Function Graphing*. This section describes the differences.

Setting the Graph Mode

Use [MODE] to set **Graph = DIFF EQUATIONS** before you define differential equations or set Window variables. The Y= Editor and the Window Editor let you enter information for the current Graph mode setting only.

Defining Differential Equations on the Y= Editor

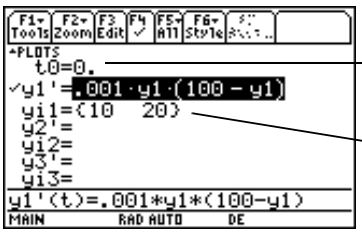

Use t0 to specify when initial conditions occur. You can also set t0 in the Window Editor.

Use yi to specify one or more initial conditions for the corresponding differential equation.

You can define differential equations y1'(t) through y99'(t).

Downloaded from www.Manualslib.com manuals search engine

Note: You can use the **Define** command from the Home screen to define functions and equations.

When entering equations in the Y= Editor, do not use **y(t)** formats to refer to results. For example:

Do not use implied multiplication between a variable and parenthetical expression. If you do, it is treated as a function call.


Enter: y1' = .001y1∗(100−y1)
Not: y1' = .001y1(t)∗(100−y1(t))

Only 1st-order equations can be entered in the Y= Editor. To graph 2nd- or higher-order equations, you must enter them as a system of 1st-order equations.

Detailed information is available on setting initial conditions.

Selecting Differential Equations

You can use F4 to select a differential equation, but not its initial condition.

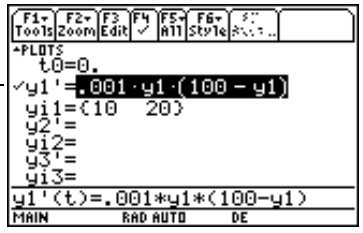

Important: Selecting y1' will graph the y1 solution curve, not the derivative y1', depending on the axis setting.

Downloaded from www.Manualslib.com manuals search engine

Selecting the Display Style

With the Style menu, only the **Line**, **Dot**, **Square**, **Thick**, **Animate**, and **Path** styles are available. **Dot** and **Square** mark only those discrete values (in **tstep** increments) at which a differential equation is plotted.

[2nd] [F6]


Setting Graph Formats

From the Y= Editor, Window Editor, or Graph screen, press:

[F1] **9**

— or —

[◆] [|]

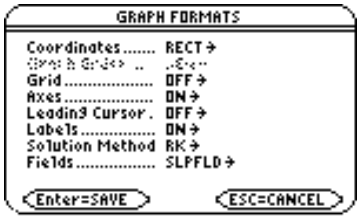

The formats affected by differential equations are:

Graph format	Description
Graph Order	Not available.
Solution Method	Specifies the method used to solve the differential equations. • RK — Runge-Kutta method. For information about the algorithm used for this method, refer to the *Technical Reference* module. • EULER — Euler method. • The method lets you choose either greater accuracy or speed. Typically, RK is more accurate than EULER but takes longer to find the solution.

Downloaded from www.Manualslib.com manuals search engine

Graph format	Description
Fields	Specifies whether to draw a field for the differential equation. • SLPFLD — Draws a slope field for only one 1st-order equation, with t on the x axis and the solution on the y axis. • DIRFLD — Draws a direction field for only one 2nd-order equation (or system of two 1st-order equations), with axes determined by the custom axes settings. • FLDOFF — Does not display a field. This is valid for equations of any order, but you must use it for 3rd- or higher-order. You must enter the same number of initial conditions for all equations in the Y= Editor.

Important: The Fields graph format is critical in successfully graphing differential equations.

Note: If you press ENTER while a slope or direction field is being drawn, the graph pauses after the field is drawn but before the solutions are plotted. Press ENTER gain to continue. To cancel graphing, press ON.

Setting Axes

In the Y= Editor, **Axes** may or may not be available, depending on the current graph format.

If it is available, you can select the axes that are used to graph the differential equations.

2nd [F7]



Downloaded from www.Manualslib.com manuals search engine

Axes	Description
TIME	Plots t on the x axis and y (the solutions to the selected differential equations) on the y axis.
CUSTOM	Lets you select the x and y axes.

Window Variables

Differential equation graphs use the following Window variables. Depending on the **Solution Method** and **Fields** graph formats, not all of these variables are listed in the Window Editor ([◆] [WINDOW]) at the same time.

Variable	Description
t0	Time at which the initial conditions entered in the Y= Editor occur. You can set **t0** in the Window Editor and Y= Editor. (If you set **t0** in the Y= Editor, **tplot** is set to the same value automatically.)
tmax, **tstep**	Used to determine the t values where the equations are plotted: y'(t0) y'(t0+tstep) y'(t0+2∗tstep) ... not to exceed ... y'(tmax) If **Fields = SLPFLD**, **tmax** is ignored. Equations are plotted from **t0** to both edges of the screen in **tstep** increments.

Downloaded from www.Manualslib.com manuals search engine

Variable	Description
tplot	First t value plotted. If this is not a **tstep** increment, plotting begins at the next **tstep** increment. In some situations, the first points evaluated and plotted starting at **t0** may not be interesting visually. By setting **tplot** greater than **t0**, you can start the plot at the interesting area, which speeds up the graphing time and avoids unnecessary clutter on the Graph screen.

Note: If **tmax < t0**, **tstep** must be negative. If **Fields=SLPFLD**, **tplot** is ignored and is assumed to be the same as **t0**.

Variable	Description
xmin, **xmax,** **ymin**, **ymax**	Boundaries of the viewing window.
xscl, **yscl**	Distance between tick marks on the x and y axes.
ncurves	Number of solution curves (0 through 10) that will be drawn automatically if you do not specify an initial condition. By default, **ncurves = 0**.

Downloaded from www.Manualslib.com manuals search engine

Variable	Description
	When **ncurves** is used, **t0** is set temporarily at the middle of the screen and initial conditions are distributed evenly along the y axis, where: $$increment = \frac{ymax - ymin}{ncurves + 1}$$ The y values for the initial conditions are: ymin + increment ymin + 2∗(increment) ⋮ ymin + ncurves∗(increment)
diftol	(**Solution Method = RK** only) Tolerance used by the **RK** method to help select a step size for solving the equation; must be ≥1E⁻14.
fldres	(**Fields = SLPFLD** or **DIRFLD** only) Number of columns (1 through 80) used to draw a slope or direction field across the full width of the screen.
Estep	(**Solution Method = EULER** only) Euler iterations between **tstep** values; must be an integer >0. For more accuracy, you can increase **Estep** without plotting additional points.
dtime	(**Fields = DIRFLD** only) Point in time at which a direction field is drawn.

Downloaded from www.Manualslib.com manuals search engine

Standard values (set when you select **6:ZoomStd** from the F2 **Zoom** toolbar menu) are:

t0 = 0.	xmin = ⁻1.	ymin = ⁻10.	ncurves = 0.
tmax = 10.	xmax = 10.	ymax = 10.	diftol = .001
tstep = .1	xscl = 1.	yscl = 1.	Estep = 1.
tplot = 0.			fldres = 14.
			dtime = 0.

You may need to change the standard values for the t variables to ensure that sufficient points are plotted.

The fldpic System Variable

When a slope or direction field is drawn, a picture of the field is stored automatically to a system variable named **fldpic**. If you perform an operation that regraphs the plotted equations but does not affect the field, the TI-89 Titanium reuses the picture in **fldpic** instead of having to redraw the field. This can speed up the regraphing time significantly.

fldpic is deleted automatically when you exit the differential equation graphing mode or when you display a graph with **Fields = FLDOFF**.

Exploring a Graph

As in function graphing, you can explore a graph by using the following tools. Any displayed coordinates are shown in rectangular or polar form as set in the graph format.

Tool	For Differential Equation Graphs:
Free-Moving Cursor	Works just as it does for function graphs.

Downloaded from www.Manualslib.com manuals search engine

Tool	For Differential Equation Graphs:
F2 **Zoom**	Works just as it does for function graphs. • Only **x** (**xmin**, **xmax**, **xscl**) and **y** (**ymin**, **ymax**, **yscl**) Window variables are affected. • The **t** Window variables (**t0**, **tmax**, **tstep**, **tplot**) are not affected unless you select **6:ZoomStd** (which sets all Window variables to their standard values).
F3 **Trace**	Lets you move the cursor along the curve one **tstep** at a time. To move approximately ten plotted points at a time, press 2nd ▶ or 2nd ◀. If you enter initial conditions in the Y= Editor or let the **ncurves** Window variable plot curves automatically, you can trace the curves. If you use: 🖩 2nd F8 IC from the Graph screen to select initial conditions interactively, you cannot trace the curves. QuickCenter applies to all directions. If you move the cursor off the screen (top or bottom, left or right), press ENTER to center the viewing window on the cursor location. Use ▲ or ▼ to view results on all plotted curves.
F5 **Math**	Only **1:Value** is available. • With TIME axes, the **y(t)** solution value (represented by yc) is displayed for a specified t value. • With CUSTOM axes, the values that correspond to x and y depend on the axes you choose.

Note: During a trace, you can move the cursor to a particular point by typing a value for t and pressing ENTER. You can use QuickCenter at any time during a trace, even if the cursor is still on the screen.

Downloaded from www.Manualslib.com manuals search engine


Setting the Initial Conditions

You can enter initial conditions in the Y= Editor, let the TI-89 Titanium calculate initial conditions automatically, or select them interactively from the Graph screen.

Entering Initial Conditions in the Y= Editor


You can specify one or more initial conditions in the Y= Editor. To specify more than one, enter them as a list enclosed in braces { } and separated by commas.

To enter initial conditions for the **y1'** equation, use the **yi1** line, etc.

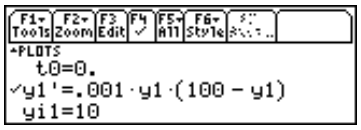

To specify when the initial conditions occur, use t0. This is also the first t evaluated for the graph.


To graph a family of solutions, enter a list of initial conditions.

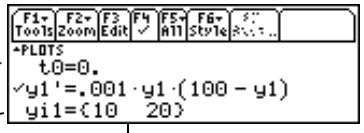

Enter {10,20} even though {10 20} is displayed.

For a 2nd- or higher-order differential equation, you must define a system of 1st-order equations in the Y= Editor.

If you enter initial conditions, you must enter the same number of initial conditions for each equation in the system. Otherwise, a Dimension error occurs.

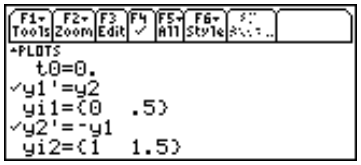

Downloaded from www.Manualslib.com manuals search engine

If You Do Not Enter an Initial Condition in the Y= Editor

If you do not enter initial conditions, the **ncurves** Window variable ([♦] [WINDOW]) specifies the number of solution curves graphed automatically. By default, **ncurves = 0**. You can enter a value from 0 through 10. However, the **Fields** graph format and the **Axes** setting determine whether **ncurves** is used.

If Fields =	Then:
SLPFLD	Uses **ncurves**, if not set to 0, to graph curves.
DIRFLD	Ignores **ncurves**. Does not graph any curves.
FLDOFF	Uses **ncurves** if Axes = TIME (or if Axes = Custom and the x axis is t). Otherwise, a Diff Eq setup error occurs.

When **ncurves** is used, **t0** is set temporarily at the middle of the Graph screen. However, the value of **t0** as set in the Y= Editor or Window Editor is not changed.

Notes:

- Without entering initial conditions, use SLPFLD (with **ncurves=0**) or DIRFLD to display a slope or direction field only.
- SLPFLD is for a single 1st-order equation only. DIRFLD is for a 2nd-order equation (or system of two 1st-order equations) only.


Downloaded from www.Manualslib.com manuals search engine

Selecting an Initial Condition Interactively from the Graph Screen

When a differential equation is graphed (regardless of whether a solution curve is displayed), you can select a point on the Graph screen and use it as an initial condition.

If Fields =	Do this:
SLPFLD – or – DIRFLD	Press: [2nd] [F8] Specify an initial condition. Either: • Move the cursor to the applicable point and press [ENTER]. – or – • For each of the two coordinates, type a value and press [ENTER]. - For SLPFLD (1st-order only), enter values for **t0** and **y(t0)**. - For DIRFLD (2nd-order or system of two 1st-order equations only), enter values for both **y(t0)** initial conditions, where **t0** is the value set in the Y= Editor or Window Editor. A circle marks the initial condition and the solution curve is drawn.

Downloaded from www.Manualslib.com manuals search engine

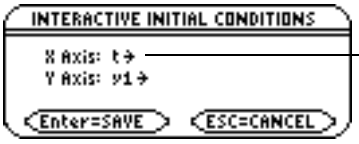If Fields =	Do this:
FLDOFF	• Press: [calculator] [2nd] [F8] You are prompted to select the axes for which you want to enter initial conditions.  t is a valid selection. It will let you specify a value for t0. Your selections will be used as the axes for the graph. • You can accept the defaults or change them. Then press [ENTER]. • Specify an initial condition as described for SLPFLD or DIRFLD.

Note: With SLPFLD or DIRFLD, you can select initial conditions interactively regardless of whether you enter initial conditions in the Y= Editor. With FLDOFF, you can select initial conditions interactively. However, if three or more equations are entered, you must enter a single value (not a list) as the initial condition for each equation in the Y= Editor. Otherwise, a Dimension error occurs when graphing.

Note about Tracing a Solution Curve

When you enter initial conditions in the Y= Editor or let **ncurves** graph solution curves automatically, you can use [F3] to trace the curves. However, you cannot trace a curve drawn by selecting an initial condition interactively. These curves are drawn, not plotted.

Downloaded from www.Manualslib.com manuals search engine

Defining a System for Higher-Order Equations

In the Y= Editor, you must enter all differential equations as 1st-order equations. If you have an nth-order equation, you must transform it into a system of n 1st-order equations.

Transforming an Equation into a 1st-Order System

A system of equations can be defined in various ways, but the following is a general method.

1. Rewrite the original differential equation as necessary.

   $y'' + y' + y = e^x$

   a) Solve for the highest-ordered derivative.

   $y'' = e^x - y' - y$

   b) Express it in terms of y and t.

   $y'' = e^t - y' - y$

   c) On the right side of the equation only, substitute to eliminate any references to derivative values.

   Note: To produce a 1st-order equation, the right side must contain non-derivative variables only.

Downloaded from www.Manualslib.com manuals search engine

In place of:	Substitute:
y	y1
y'	y2
y''	y3
y'''	y4
y(4)	y5
⋮	⋮

y'' = e^t − y2 − y1

Do not substitute on the left side at this time.

d) On the left side of the equation, substitute for the derivative value as shown below.


In place of:	Substitute:
y’	y1’
y’’	y2’
y’’’	y3’
y(4)	y4’
⋮	⋮

y2' = e^t − y2 − y1

Downloaded from www.Manualslib.com manuals search engine

2. On the applicable lines in the Y= Editor, define the system of equations as:

   y1' = y2
   y2' = y3
   y3' = y4
   – up to –
   yn ' = your nth-order equation

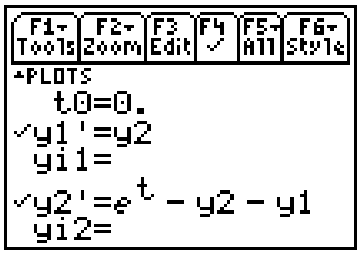

Note: Based on the above substitutions, the y' lines in the Y= Editor represent:
y1' = y'
y2' = y''
etc.

Therefore, this example's 2nd-order equation is entered on the y2' line.

In a system such as this, the solution to the y1' equation is the solution to the nth-order equation. You may want to deselect any other equations in the system.

Example of a 2nd-Order Equation

The 2nd-order differential equation y''+y = 0 represents a simple harmonic oscillator. Transform this into a system of equations for the Y= Editor. Then, graph the solution for initial conditions y(0) = 0 and y'(0) = 1.

Downloaded from www.Manualslib.com manuals search engine

Example

1. Press MODE and set **Graph=DIFF EQUATIONS**.

2. Define a system of equations for the 2nd-order equation.


   Rewrite the equation and make the necessary substitutions.

```
y" + y = 0
y" = ⁻y
y" = ⁻y1
y2' = ⁻y1
```

3. In the Y= Editor (♦ [Y=]), enter the system of equations.

4. Enter the initial conditions:
   yi1=0 and **yi2=1**

   Note: t0 is the time at which the initial conditions occur. It is also the first t evaluated for the graph. By default, **t0=0**.

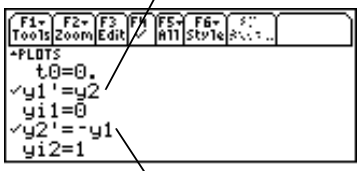


yi1 is the initial condition for y(0).

yi2 is the initial condition for y'(0).

5. Press:
   F1 **9**
   — or —
   [calculator] ♦ | and set **Axes = ON**, **Labels = OFF**, **Solution Method = RK**, and **Fields = DIRFLD**.

   Important: For 2nd-order equations, you must set **Fields=DIRFLD** or **FLDOFF**.

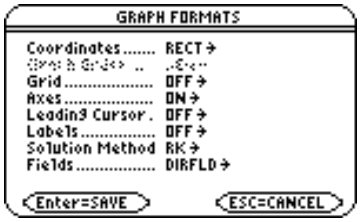

Downloaded from www.Manualslib.com manuals search engine

6. In the Y= Editor, press:
   [2nd] [F7] and make sure **Axes = CUSTOM** with **y1** and **y2** as the axes.




   Important: Fields=DIRFLD cannot plot a time axis. An **Invalid Axes** error occurs if **Axes=TIME** or if t is set as a **CUSTOM** axis.

7. In the Window Editor ([♦] [WINDOW]), set the Window variables.

t0=0	xmin=⁻2	ncurves=0
tmax=10	xmax=2	diftol=.001
tstep=.1	xscl=1	fldres=14
tplot=0	ymin=⁻2	dtime=0
	ymax=2	
	yscl=1	

8. Display the Graph screen ([♦] [GRAPH]).

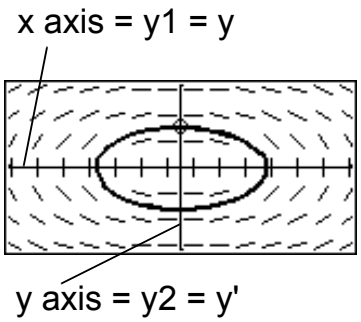


If you select **ZoomSqr** ([F2] **5**), you can see that the phase-plane orbit is actually a circle. However, **ZoomSqr** will change your Window variables.

Downloaded from www.Manualslib.com manuals search engine

To examine this harmonic oscillator in more detail, use a split screen to graph the manner in which y and y' change with respect to time (t).

9. Press [MODE] and change the mode settings on **Page 2** as shown. Then close the **MODE** dialog box, which redraws the graph.


   Note: To display different graphs in both parts of a split screen, you must use the **2-graph** mode.

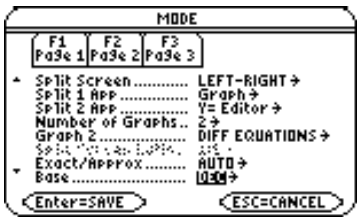

10. Press [2nd] [⊞] to switch to the right side of the split screen.


11. Use [F4] to select **y1'** and **y2'**.

    The right side uses the same equations as the left side. However, no equations are selected initially in the right side.

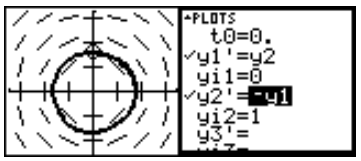

12. Press:
    [F1] **9**
    — or —
    [◆] [|] Set **Fields = FLDOFF**.

    Important: Because **Fields=DIRFLD** cannot plot a time axis, you must change the Fields setting. **FLDOFF** turns off all fields.

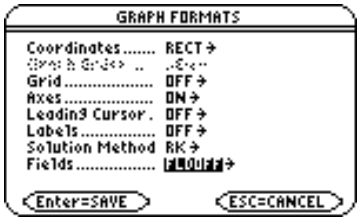

13. In the Y= Editor, press:
    [2nd] [F7] and make sure **Axes = TIME**.



Downloaded from www.Manualslib.com manuals search engine


14. In the Window Editor, change **ymin** and **ymax** as shown to the right.

    Note: When you enter **2-graph** mode, Window variables for the right side are set to their defaults.

ymin=⁻2.
ymax=2.

15. Press ♦ [GRAPH] to display the Graph screen for graph #2.

    The left side shows the phase-plane orbit. The right side shows the solution curve and its derivative.

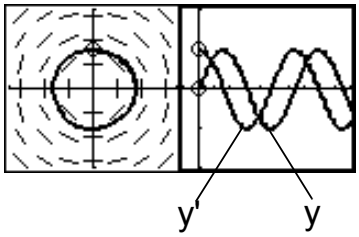

16. To return to a full screen of the original graph, press 2nd [⊟] to switch to the left side. Then press MODE and change the **Split Screen** setting.

Split Screen = FULL

Example of a 3rd-Order Equation

For the 3rd-order differential equation **y'''+2y''+2y'+y = sin(x)**, write a system of equations to enter in the Y= Editor. Then graph the solution as a function of time. Use initial conditions **y(0) = 0**, **y'(0) = 1**, and **y''(0) = 1**.

Downloaded from www.Manualslib.com manuals search engine

Example

1. Press MODE and set **Graph=DIFF EQUATIONS**.

2. Define a system of equations for the 3rd-order equation.


   Rewrite the equation and make the necessary substitutions.

   y''' + 2y'' + 2y' + y = sin(x)
   y''' = sin(x) − 2y'' − 2y' − y
   y''' = sin(t) − 2y'' − 2y' − y
   y''' = sin(t) − 2y3 − 2y2 − y1
   y3' = sin(t) − 2y3 − 2y2 − y1

3. In the Y= Editor (♦ [Y=]), enter the system of equations.

4. Enter the initial conditions: **yi1=0**, **yi2=1**, and **yi3=1**

   Note: t0 is the time at which the initial conditions occur. By default, **t0=0**.

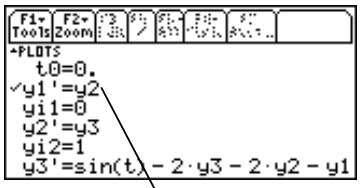


Important: The solution to the y1' equation is the solution to the 3rd-order equation.

5. Be sure that only **y1'** is selected. Use F4 to deselect any other equations.

Downloaded from www.Manualslib.com manuals search engine


6. Press:
   F1 **9**
   — or —
   [calculator] ♦ | Set **Axes = ON**, **Labels = ON**, **Solution Method = RK**, and **Fields = FLDOFF**.

   Important: For 3rd- or higher-order equations, you must set **Fields=FLDOFF**. Otherwise, an **Undefined variable** error occurs when graphing.

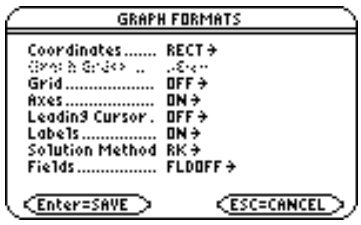

7. In the Y= Editor, press:
   [calculator] 2nd F7 Set **Axes = TIME**.

   Note: With **Axes=TIME**, the solution to the selected equation is plotted against time (t).

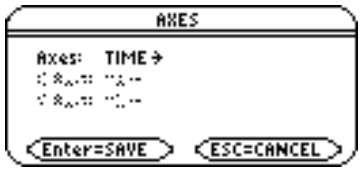


8. In the Window Editor (♦ WINDOW), set the Window variables.

t0=0	xmin=⁻1	ncurves=0
tmax=10	xmax=10	diftol=.001
tstep=.1	xscl=1.	
tplot=0	ymin=⁻3	
	ymax=3	
	yscl=1	

Downloaded from www.Manualslib.com manuals search engine

9. Display the Graph screen (◆ [GRAPH]).

   Note: To find the solution at a particular time, use [F3] to trace the graph.

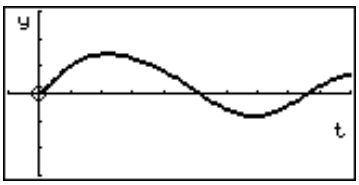

Setting Axes for Time or Custom Plots

Setting the axes can give you great flexibility in graphing differential equations. Custom axes are particularly effective for showing different kinds of relationships.

Displaying the AXES Dialog Box

From the Y= Editor, press:

[2nd] [F7]




If **Fields = SLPFLD**, **Axes** is unavailable.

[2nd] [F7]

Item	Description
Axes	TIME — Plots t on the x axis and y (solutions to all selected differential equations) on the y axis. CUSTOM — Lets you select the x and y axes.

Downloaded from www.Manualslib.com manuals search engine

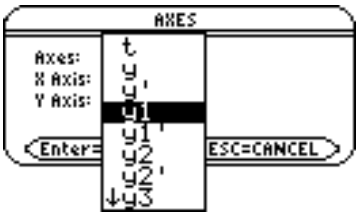Item	Description
X Axis, **Y Axis**	Active only when Axes = CUSTOM, these let you select what you want to plot on the x and y axes. 
	t — time
	y — solutions (y1, y2, etc.) of all selected differential equations
	y' — values of all selected differential equations (y1', y2', etc.)
	y1, y2, etc. — the solution to the corresponding differential equation, regardless of whether that equation is selected
	y1', y2', etc. — the value of the right-hand side of the corresponding differential equation, regardless of whether that equation is selected

Note: t is not valid for either Axis when **Fields=DIRFLD**. If you select t, an Invalid axes error occurs when graphing.

Example of Time and Custom Axes

Using the predator-prey model from biology, determine the numbers of rabbits and foxes that maintain population equilibrium in a certain region. Graph the solution using both time and custom axes.

Downloaded from www.Manualslib.com manuals search engine

Predator-Prey Model

Use the two coupled 1st-order differential equations:

y1' = ⁻y1 + 0.1y1 ∗y2 and y2' = 3y2 −y1 ∗y2

where:

y1 = Population of foxes

yi1 = Initial population of foxes (2)


y2 = Population of rabbits

yi2 = Initial population of rabbits (5)


1. Use [MODE] to set **Graph = DIFF EQUATIONS**.

2. In the Y= Editor ([♦] [Y=]), define the differential equations and enter the initial conditions.

   Note: To speed up graphing times, clear any other equations in the Y= Editor. With **FLDOFF**, all equations are evaluated even if they are not selected.

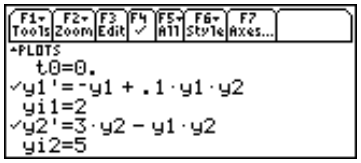

3. Press:
   [F1] **9**
   — or —
   [calculator] [♦] [|] Set **Axes = ON**, **Labels = ON**, **Solution Method = RK**, and **Fields = FLDOFF**.

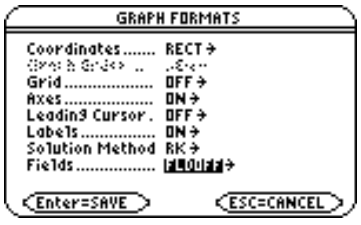

Downloaded from www.Manualslib.com manuals search engine

4. In the Y= Editor, press:
   [2nd] [F7] Set **Axes = TIME**.




5. In the Window Editor ([◆] [WINDOW]), set the Window variables.

t0=0	xmin=⁻1	ncurves=0
tmax=10	xmax=10	diftol=.001
tstep=π/24	xscl=5	
tplot=0	ymin=⁻10	
	ymax=40	
	yscl=5	

6. Graph the differential equations ([◆] [GRAPH]).

7. Press [F3] to trace. Then press **3** [ENTER] to see the number of foxes (**yc** for **y1**) and rabbits (**yc** for **y2**) at **t=3**.


   Note: Use ▲ and ▼ to move the trace cursor between the curves for **y1** and **y2**.

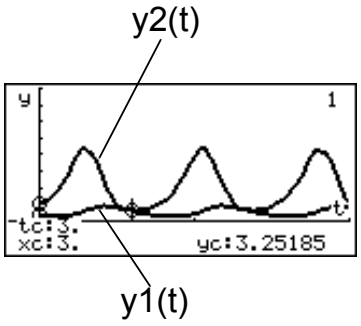

Downloaded from www.Manualslib.com manuals search engine

8. Return to the Y= Editor. Press:
   F1 **9**
   — or —
   ◆ |
   Set **Fields = DIRFLD**.


   Note: In this example, **DIRFLD** is used for two related differential equations that do not represent a 2nd-order equation.

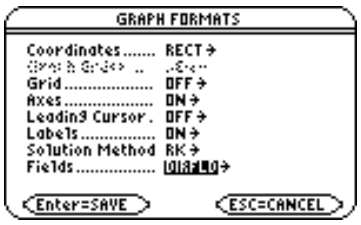


9. Press:
   2nd F7
   Confirm that the axes are set as shown.



10. In the Y= Editor, clear the initial conditions for **yi1** and **yi2**.

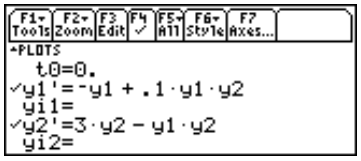


11. Return to the Graph screen, which displays only the direction field.

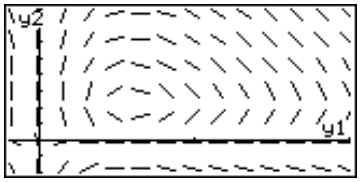

12. To graph a family of solutions, return to the Y= Editor and enter the initial conditions shown below.

    yi1={2,6,7} and **yi2={5,12,18}**

    Note: Use a list to specify more than one initial condition.

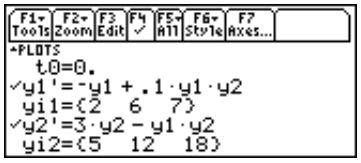


Downloaded from www.Manualslib.com manuals search engine

13. Return to the Graph screen, which displays a curve for each pair of initial conditions.

14. Press F3 to trace. Then press **3** ENTER to see the number of foxes (**xc**) and rabbits (**yc**) at **t=3**.

    Because **t0=0** and **tmax=10**, you can trace in the range $0 \le t \le 10$.

    Note: Use ▲ and ▼ to move the trace cursor from one initial condition curve to another.

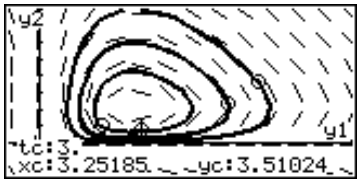

Example Comparison of RK and Euler

Consider a logistic growth model **dP/dt = .001∗P∗(100−P)**, with the initial condition **P(0) = 10**. Use the **BldData** instruction to compare the graphing points calculated by the RK and Euler solution methods. Then plot those points along with a graph of the equation's exact solution.

Example

1. Press MODE and set **Graph=DIFF EQUATIONS**.

Downloaded from www.Manualslib.com manuals search engine

2. Express the 1st-order equation in terms of **y1'** and **y1**.


   y1'=.001y1∗(100−y1)

   Do not use implied multiplication between the variable and parentheses. If you do, it is treated as a function call.

3. Enter the equation in the Y= Editor ([♦] [Y=]).

4. Enter the initial condition:

   yi1=10

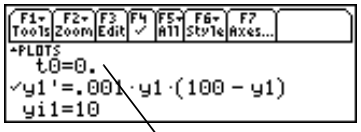

t0 is the time at which the initial condition occurs. By default, t0=0.

5. Press:


   F1 **9**

   — or —

   [calculator] [♦] [I]

   Set **Solution Method = RK** and **Fields = FLDOFF**.

   Note: To speed up graphing times, clear any other equations in the Y= Editor. With **FLDOFF**, all equations are evaluated even if they are not selected.

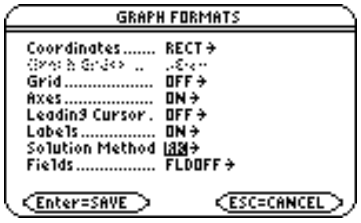

6. In the Window Editor ([♦] [WINDOW]), set the Window variables.

Downloaded from www.Manualslib.com manuals search engine

	t0=0.	xmin=⁻1.	ncurves=0.
	tmax=100.	xmax=100.	diftol=.001
❶	tstep=1.	xscl=1.	
	tplot=0.	ymin=⁻10.	
		ymax=10	
		yscl=1.	


❶ **Important:** Change **tstep** from .1 (its default) to 1. Otherwise, **BldData** calculates too many rows for the data variable and a Dimension error occurs.

7. In the Home screen
   [HOME] [CALC HOME]
   use **BldData** to create a data variable containing the **RK** graphing points.

BldData rklog

8. Return to the Y= Editor, press:
   [F1] **9**
   — or —
   [♦] [|]
   Set **Solution Method = EULER**.

   Note: You do not need to graph the equation before using **BldData**. For more information about **BldData**, refer to the *Technical Reference* module.

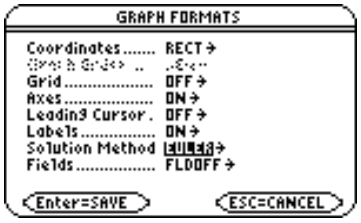


9. Return to the Home screen, and use **BldData** to create a data variable containing the **Euler** graphing points.

BldData eulerlog

Downloaded from www.Manualslib.com manuals search engine

10. Use the **Data/Matrix Editor** (APPS) to create a new data variable named **errorlog**.


    Note: errorlog lets you combine the data in **rklog** and **eulerlog** so that you can view the two sets of data side by side.

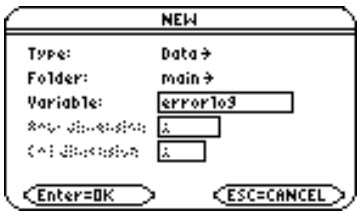

11. In this new data variable, define the **c1**, **c2**, and **c3** column headers to refer to data in **rklog** and **eulerlog**. Also, enter column titles as shown.


    To define a column header, move the cursor to that column, press F4, type the reference expression (such as **rklog[1]** for **c1**), and press ENTER.

    Note: rklog[1] and **rklog[2]** refer to column 1 and 2 in **rklog**, respectively. Likewise with **eulerlog[2]**.

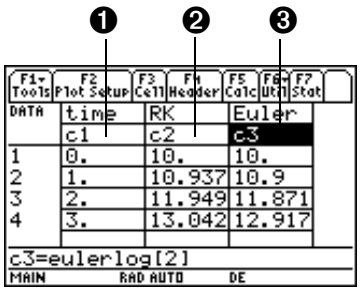

❶ c1=rklog[1] or c1=eulerlog[1]
❷ c2=rklog[2]
❸ c3= eulerlog[2]

12. In the **Data/Matrix Editor**, press F2. Then press F1 and define **Plot 1** for the **RK** data, as shown to the right.

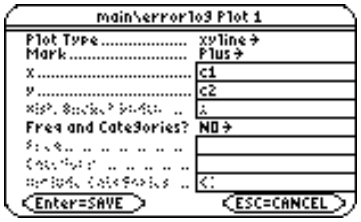

13. Define **Plot 2** for the **Euler** data. Use the values shown to the right.

Plot Type=xyline
Mark=Cross
x=c1
y=c3


14. Return to the Y= Editor, press MODE, and set **Graph = FUNCTION**.

Downloaded from www.Manualslib.com manuals search engine

15. The exact solution to the differential equation is given below. Enter it as y1.

    y1 = (100∗e^(x/10))/(e^(x/10)+9)

    Note: You can use **deSolve( )** to find this exact, general solution. ,

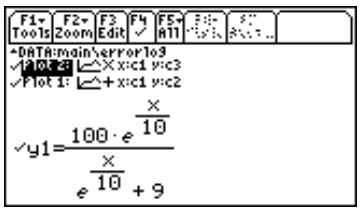


You can use ⊙ to scroll up to see Plot 1 and Plot 2.

16. In the Window Editor, set the Window variables.

xmin=⁻10	ymin=⁻10.	xres=2.
xmax=100	ymax=120.	
xscl=10	yscl=10.	

17. Display the Graph screen (◆ [GRAPH]).

    Note: The fuzzy line on the graph indicates differences between the **RK** and **Euler** values.

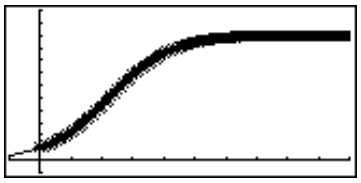


18. In the Window Editor, set the Window variables to zoom in so that you can examine the differences in more detail.

xmin=39.7	ymin=85.5	xres=2
xmax=40.3	ymax=86	
xscl=.1	yscl=.1	

19. Return to the Graph screen.

Downloaded from www.Manualslib.com manuals search engine

20. Press F3 to trace, and then press ▲ or ▼ until **y1** is selected. (1 shows in upper right corner.) Then enter 40.

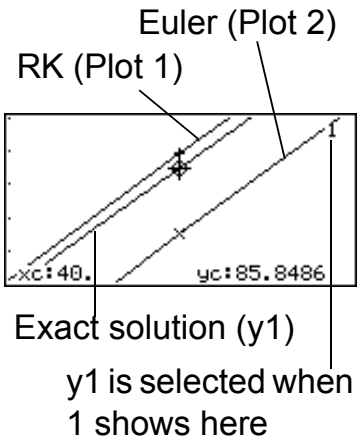

By moving the trace cursor to trace each solution to **xc = 40**, you can find that:

- The exact solution (**y1**) is 85.8486, rounded to six digits.
- The **RK** solution (**Plot 1**) is 85.8952.
- The **Euler** solution (**Plot 2**) is 85.6527.

You can also use the **Data/Matrix Editor** to open the errorlog data variable and scroll to **time = 40**.

Example of the deSolve( ) Function

The **deSolve( )** function lets you solve many 1st- and 2nd-order ordinary differential equations exactly.

Downloaded from www.Manualslib.com manuals search engine

Example

For a general solution, use the following syntax. For a particular solution, refer to the Technical Reference module.

deSolve(*1stOr2ndOrderODE, independentVar, dependentVar***)**

Using the logistic 1st-order differential equation, find the general solution for y with respect to t.

deSolve(y' = 1/1000 y∗(100−y),t,y**)**

For ', type 2nd ['].

Do not use implied multiplication between the variable and parentheses. If you do, it will be treated as a function call.


Notes:

- For maximum accuracy, use 1/1000 instead of .001. A floating-point number can introduce round-off errors.
- This example does not involve graphing, so you can use any Graph mode.

Downloaded from www.Manualslib.com manuals search engine

Before using **deSolve( )**, clear any existing t and y variables. Otherwise, an error occurs.

1. In the Home screen
   [HOME] [CALC HOME] use **deSolve( )** to find the general solution.

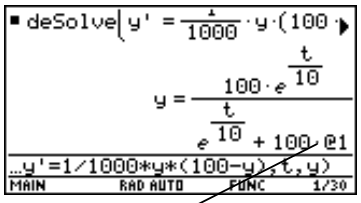


@1 represents a constant. You may get a different constant (@2, etc.).

2. Use the solution to define a function.

   a) Press ▲ to highlight the solution in the history area. Then press [ENTER] to autopaste it into the entry line.


   b) Insert the **Define** instruction at the beginning of the line. Then press [ENTER].

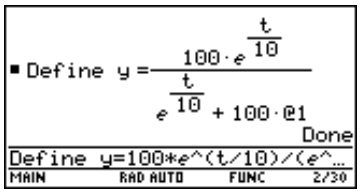

   Note: Press [2nd] ◀ to move to the beginning of the entry line.

3. For an initial condition **y=10** with **t=0**, use **solve( )** to find the @1 constant.


   Note: If you got a different constant (@2, etc.), solve for that constant.

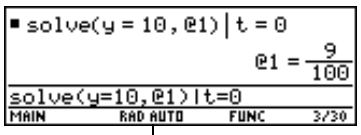

For @, type
[◆] [STO▶]
[2nd] **R**

Downloaded from www.Manualslib.com manuals search engine

4. Evaluate the general solution (**y**) with the constant **@1=9/100** to obtain the particular solution shown.

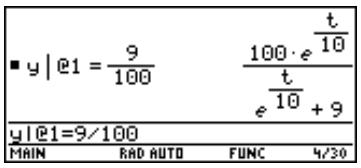

You can also use **deSolve( )** to solve this problem directly. Enter:

deSolve(y' = 1/1000 y∗(100−y) and y(0)=10,t,y**)**

Troubleshooting with the Fields Graph Format

If you have difficulties graphing a differential equation, this section can help you correct the problem. Many problems may be related to your Fields graph format setting.


Setting the Fields Graph Format

From the Y= Editor, Window Editor, or Graph screen, press:

F1 **9**

— or —



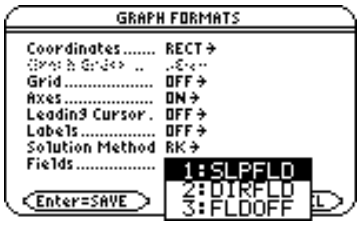


What Order Equation Are You Graphing?

If the equation is:	Valid Fields settings are:
1st-order	SLPFLD or FLDOFF

Downloaded from www.Manualslib.com manuals search engine

If the equation is:	Valid Fields settings are:
2nd-order (system of two 1st-order equations)	DIRFLD or FLDOFF
3rd- or higher-order (system of three or more 1st-order equations)	FLDOFF

Because **Fields = SLPFLD** is the default setting, a common error message is shown to the right.

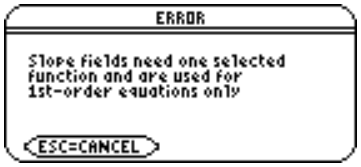

When you see this or any other error message:

- For your order of equation, use the previous table to find the valid Fields settings. Change to the applicable setting.
- For a particular Fields setting, check the following for information that applies to that setting.



Downloaded from www.Manualslib.com manuals search engine

Fields=SLPFLD

In the Y= Editor	Use F4 to select one and only one 1st-order equation. You can enter mulNotele equations, but only one at a time can be selected. The selected equation must not refer to any other equation in the Y= Editor. For example: If **y1'=y2**, an Undefined variable error occurs when you graph. 
In the Graph screen	If the slope field is drawn but no solution curve is plotted, specify an initial condition.

Downloaded from www.Manualslib.com manuals search engine


Fields=DIRFLD

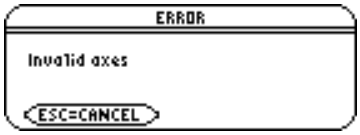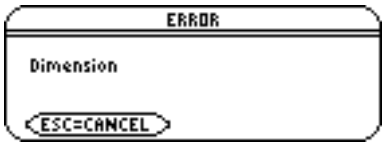In the Y= Editor	Enter a valid system of two 1st-order equations. For information about defining a valid system for a 2nd-order equation, refer to Example of a 2nd-Order Equation. Set **Axes = CUSTOM**: [2nd] [F7] If **Axes = TIME**, an Invalid axes error occurs when you graph.  If you enter initial conditions in the Y= Editor, the equations referenced by the custom axes must have the same number of initial conditions. Otherwise, a Dimension error occurs when you graph. 
With custom axes	Set axes that are valid for your system of equations. Do not select t for either axis. Otherwise, an Invalid axes error occurs when you graph. The two axes must refer to different equations in your system of equations. For example, y1 vs. y2 is valid, but y1 vs. y1' gives an Invalid axes error.


Downloaded from www.Manualslib.com manuals search engine

In the Graph screen	If the direction field is drawn but no curve is plotted, enter initial conditions in the Y= Editor or select one interactively from the Graph screen. If you did enter initial conditions, select **ZoomFit**: [F2] [alpha] **A** The **ncurves** Window variable is ignored with DIRFLD. Default curves are not drawn automatically.
Notes	With DIRFLD, the equations referenced by the custom axes determine which equations are graphed, regardless of which equations are selected in the Y= Editor. If your system of equations refers to t, the direction field (not the plotted curves) is drawn with respect to one particular time, which is set by the dtime Window variable.

Fields=FLDOFF

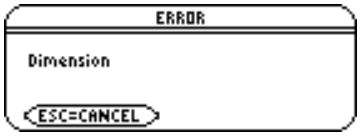In the Y= Editor	If you enter a 2nd- or higher-order equation, enter it as a valid system of equations. All equations (selected or not) must have the same number of initial conditions. Otherwise, a Dimension error occurs when you graph.  To set **Axes = TIME** or **CUSTOM**, press: [2nd] [F7]

Downloaded from www.Manualslib.com manuals search engine

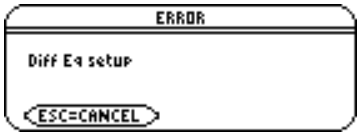With custom axes	If X Axis is not t, you must enter at least one initial condition for each equation in the Y= Editor (whether the equation is selected or not). Otherwise, a Diff Eq setup error occurs when you graph. 
In the Graph screen	If no curve is graphed, set an initial condition. If you did enter initial conditions in the Y= Editor, select **ZoomFit**: [F2] [alpha] **A** A 1st-order equation may look different with FLDOFF than with SLPFLD. This is because FLDOFF uses the **tplot** and **tmax** Window variables (page 9), which are ignored with SLPFLD.
Notes	For 1st-order equations, use FLDOFF and Axes = Custom to plot axes that are not possible with SLPFLD. For example, you can plot t vs. y1' (where SLPFLD plots t vs. y1). If you enter mulNotele 1st-order equations, you can plot one equation or its solution vs. another by specifying them as the axes.

If You Use the Table Screen to View Differential Equations

You can use the Table screen to view the points for a differential equation graph. However, the table may show different equations than those graphed. The table shows only the selected equations, regardless of whether those equations will be plotted with your current **Fields** and **Axes** settings

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Tables


Overview of Steps in Generating a Table

To generate a table of values for one or more functions, use the general steps shown below. For specific information about setting table parameters and displaying the table, refer to the following pages.

Generating a Table


1. Set **Graph** mode and, if necessary, **Angle** mode ([MODE]).

   Note: Tables are not available in **3D Graph** mode.

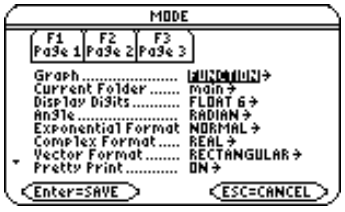


2. Define functions on Y= Editor ([♦] [Y=]).
3. Select ([F4]) which defined functions to display in the table.

   Note: For information on defining and selecting functions with the Y= Editor, refer to *Basic Function Graphing*.

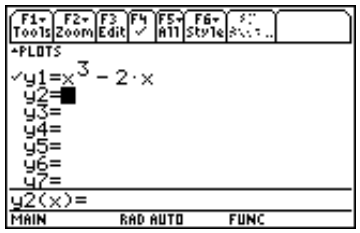


4. Set up the initial table parameters ([♦] [TBLSET]).

   Note: You can specify an automatic table that is based on initial values or that matches a graph, or a manual (ask) table.

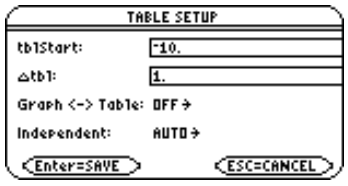

Downloaded from www.Manualslib.com manuals search engine

5. Display the table ([♦] [TABLE]).

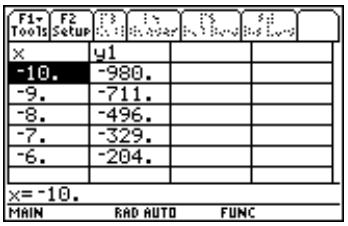

Exploring the Table

From the Table screen, you can:

- Scroll through the table to see values on other pages.
- Highlight a cell to see its full value.
- Change the table's setup parameters. By changing the starting or incremental value used for the independent variable, you can zoom in or out on the table to see different levels of detail.
- Change the cell width.
- Edit selected functions.
- Build or edit a manual table to show only specified values of the independent variable.


Setting Up the Table Parameters

To set up the initial parameters for a table, use the TABLE SETUP dialog box. After the table is displayed, you can also use this dialog box to change the parameters.

Downloaded from www.Manualslib.com manuals search engine

Displaying the TABLE SETUP Dialog Box

To display the TABLE SETUP dialog box, press ♦ [TBLSET]. From the Table screen, you can also press F2.

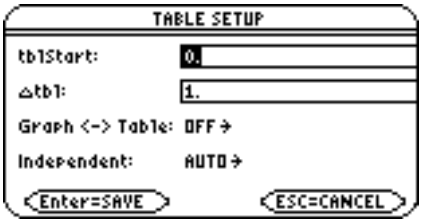

Setup Parameter	Description
tblStart	If **Independent = AUTO** and **Graph < – > Table = OFF**, this specifies the starting value for the independent variable.
Δtbl	If **Independent = AUTO** and **Graph < – > Table = OFF**, this specifies the incremental value for the independent variable. Δtbl can be positive or negative, but not zero.
Graph < – > Table	If **Independent = AUTO**: OFF — The table is based on the values you enter for **tblStart** and **Δtbl**. ON — The table is based on the same independent variable values that are used to graph the functions on the Graph screen. These values depend on the Window variables set in the Window Editor and the split screen size.

Downloaded from www.Manualslib.com manuals search engine

Setup Parameter	Description
Independent	AUTO — The TI-89 Titanium automatically generates a series of values for the independent variable based on **tblStart**, **Δtbl**, and **Graph <–> Table**. ASK — Lets you build a table manually by entering specific values for the independent variable.

Note: The table initially starts at **tblStart**, but you can use ▲ to scroll to prior values.

Which Setup Parameters to Use

To generate:	tblStart	Δtbl	Graph <–> Table	Independent
An automatic table				
• Based on initial values	value	value	**OFF**	**AUTO**
• That matches Graph screen	–	–	**ON**	**AUTO**
A manual table	–	–	–	**ASK**

Note: "–" means that any value entered for this parameter is ignored for the indicated type of table.

In SEQUENCE graphing mode, use integers for **tblStart** and **Δtbl**.

Changing the Setup Parameters

From the **TABLE SETUP** dialog box:

Downloaded from www.Manualslib.com manuals search engine

1. Use ▼ and ▲ to highlight the value or setting to change.
2. Specify the new value or setting.

To change:	Do this:
tblStart or **Δtbl**	Type the new value. The existing value is erased when you start to type. — or — Press ◀ or ▶ to remove the highlighting. Then edit the existing value.
Graph <‒> Table or **Independent**	Press ◀ or ▶ to display a menu of valid settings. Then either: • Move the cursor to highlight the setting and press ENTER. — or — • Press the number for that setting.

Note: To cancel a menu or exit the dialog box without saving any changes, press ESC instead of ENTER.

3. After changing all applicable values or settings, press ENTER to save your changes and close the dialog box.

From the Home Screen or a Program

You can set up a table's parameters from the Home screen or a program. You can:

- Store values directly to the system variables **tblStart** and **Δtbl**. Refer to "Storing and Recalling Variable Values" in *Operating the Calculator*.

Downloaded from www.Manualslib.com manuals search engine

- Set **Graph <–> Table** and Independent by using the **setTable** function. Refer to the *Technical Reference* module.


Displaying an Automatic Table

If **Independent = AUTO** on the **TABLE SETUP** dialog box, a table is generated automatically when you display the Table screen. If **Graph <–> Table = ON**, the table matches the trace values from the Graph screen. If **Graph <–> Table = OFF**, the table is based on the values you entered for **tblStart** and **Δtbl**.

Before You Begin

Define and select the applicable functions on the Y= Editor (◆ [Y=]). This example uses **y1(x) = x^3–x/3**.

Then enter the initial table parameters (◆ [TBLSET]).

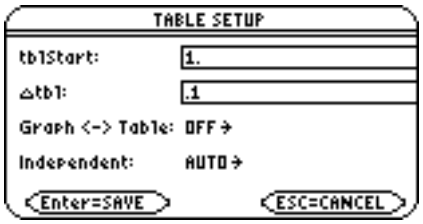


Displaying the Table Screen

To display the Table screen, press ◆ [TABLE] or [APPS] **5**.

The cursor initially highlights the cell that contains the starting value of the independent variable. You can move the cursor to any cell that contains a value.

Downloaded from www.Manualslib.com manuals search engine

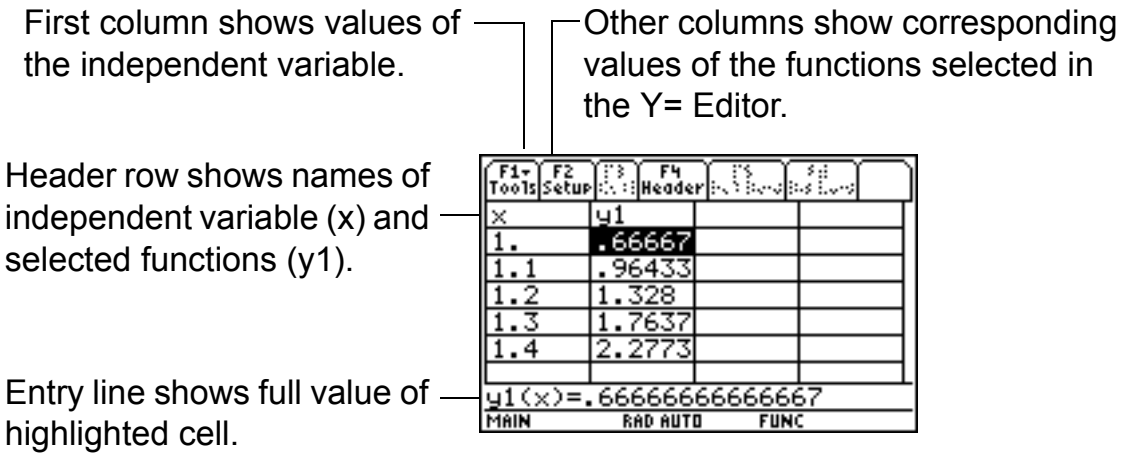

Note: You can scroll back from the starting value by pressing ▲ or 2nd ▲.

To move the cursor:	Press:
One cell at a time	▼, ▲, ▶, or ◀
One page at a time	2nd and then ▼, ▲, ▶, or ◀

The header row and the first column are fixed so that they cannot scroll off the screen.

- When you scroll down or up, the variable and function names are always visible across the top of the screen.
- When you scroll right or left, the values of the independent variable are always visible along the left side of the screen.


Downloaded from www.Manualslib.com manuals search engine

Changing the Cell Width

Cell width determines the maximum number of digits and symbols (decimal point, minus sign, and "E" for scientific notation) that can be displayed in a cell. All cells in the table have the same width.

Note: By default, the cell width is **6**.

To change the cell width from the **Table** screen:

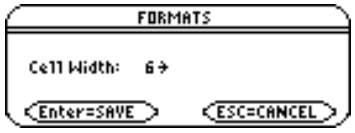

1. Press F1 **9**
   — or —
   [calculator] ◆ |

2. Press ▶ or ◀ to display a menu of valid widths (**3–12**).

3. Move the cursor to highlight a number and press ENTER. (For single-digit numbers, you can type the number and press ENTER.)
4. Press ENTER to close the dialog box and update the table.

How Numbers Are Displayed in a Cell

Whenever possible, a number is shown according to the currently selected display modes (Display Digits, Exponential Format, etc.). The number may be rounded as necessary. However:

Downloaded from www.Manualslib.com manuals search engine

- If a number's magnitude is too large for the current cell width, the number is rounded and shown in scientific notation.
- If the cell width is too narrow even for scientific notation, "..." is shown.

Notes:

- If a function is undefined at a particular value, undef is displayed in the cell.
- Use MODE to set the display modes.

By default, **Display Digits = FLOAT 6**. With this mode setting, a number is shown with up to six digits, even if the cell is wide enough to show more. Other settings similarly affect a displayed number.

	If cell width is:			
Full Precision	**3**	**6**	**9**	**12**
1.2345678901	1.2	1.2346	1.23457	1.23457*
⁻123456.78	...	⁻1.2E5	⁻123457.	⁻123457.*
.000005	...	5.E⁻6	.000005	.000005
1.2345678E19	...	1.2E19	1.2346E19	1.23457E19*
⁻1.23456789012E⁻200	...	...	⁻1.2E⁻200	⁻1.2346E⁻200*

***Note:** Depending on display mode settings, some values are not shown in full precision even when the cell is wide

Note: To see a number in full precision, highlight the cell and look at the entry line.

Downloaded from www.Manualslib.com manuals search engine

If Results are Complex Numbers

A cell shows as much as possible of a complex number (according to the current display modes) and then shows "..." at the end of the displayed portion.

When you highlight a cell containing a complex number, the entry line shows the real and imaginary parts with a maximum of four digits each (FLOAT 4).

Editing a Selected Function

From a table, you can change a selected function without having to use the Y= Editor.

1. Move the cursor to any cell in the column for that function. The table's header row shows the function names (**y1,** etc.).
2. Press F4 to move the cursor to the entry line, where the function is displayed and highlighted.

   Note: You can use this feature to view a function without leaving the table.
3. Make any changes, as necessary.
   - Type the new function. The old function is erased when you begin typing.

     — or —
   - Press CLEAR to clear the old function. Then type the new one.

     — or —
   - Press ◀ or ▶ to remove the highlighting. Then edit the function.

   Note: To cancel any changes and return the cursor to the table, press ESC instead of ENTER.

Downloaded from www.Manualslib.com manuals search engine

4. Press [ENTER] to save the edited function and update the table. The edited function is also saved in the Y= Editor.

If You Want to Change the Setup Parameters

After generating an automatic table, you can change its setup parameters as necessary.

Press [F2] or [♦] [TBLSET] to display the TABLE SETUP dialog box. Then make your changes.

Building a Manual (Ask) Table


If **Independent = ASK** on the TABLE SETUP dialog box, the TI-89 Titanium lets you build a table manually by entering specific values for the independent variable.

Displaying the Table Screen

To display the Table screen, press [♦] [TABLE].

If you set **Independent = ASK** (with [♦] [TBLSET]) before displaying a table for the first time, a blank table is displayed. The cursor highlights the first cell in the independent variable column.

Downloaded from www.Manualslib.com manuals search engine

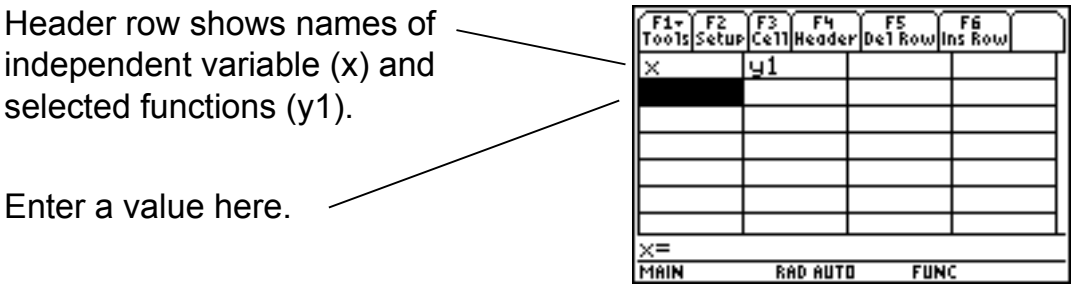

If you first display an automatic table and then change it to **Independent = ASK**, the table continues to show the same values. However, you can no longer see additional values by scrolling up or down off the screen.

Entering or Editing an Independent Variable Value


You can enter a value in column 1 (independent variable) only.

1. Move the cursor to highlight the cell you want to enter or edit.
   - If you start with a blank table, you can enter a value in consecutive cells only (row 1, row 2, etc.). You cannot skip cells (row 1, row 3).
   - If a cell in column 1 contains a value, you can edit that value.
2. Press F3 to move the cursor to the entry line.
3. Type a new value or expression, or edit the existing value.
4. Press ENTER to move the value to the table and update the corresponding function values.

   Note: To enter a new value in a cell, you do not need to press F3. Simply begin typing.

The cursor returns to the entered cell. You can use ⊖ to move to the next row.

Downloaded from www.Manualslib.com manuals search engine

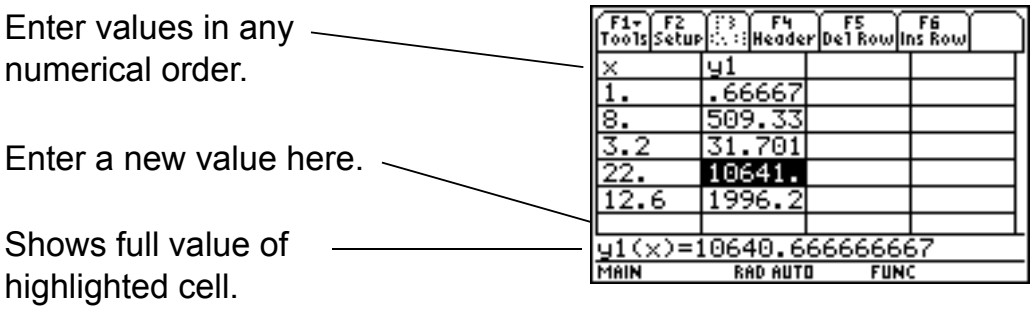

Note: In this example, you can move the cursor to column 2, but you can enter values in column 1 only.

Entering a List in the Independent Variable Column

1. Move the cursor to highlight any cell in the independent variable column.
2. Press F4 to move the cursor to the entry line.
3. Type a series of values, enclosed in braces { } and separated by commas. For example:

   ```
   x={1,1.5,1.75,2}
   ```

   You can also enter a list variable or an expression that evaluates to a list.

   Note: If the independent variable column contains existing values, they are shown as a list (which you can edit).
4. Press ENTER to move the values into the independent variable column. The table is updated to show the corresponding function values.

Downloaded from www.Manualslib.com manuals search engine

Adding, Deleting, or Clearing

To:	Do this:
Insert a new row above a specified row	Highlight a cell in the specified row and press: [calculator] [2nd] [F6] The new row is undefined (undef) until you enter a value for the independent variable.
Delete a row	Highlight a cell in the row and press [F5]. If you highlight a cell in the independent variable column, you can also press [←].
Clear the entire table (but not the selected Y= functions)	Press [F1] **8**. When prompted for confirmation, press [ENTER].

Cell Width and Display Formats

Several factors affect how numbers are displayed in a table.

From the Home Screen or a Program

System variable **tblInput** contains a list of all independent variable values entered in the table, even those not currently displayed. **tblInput** is also used for an automatic table, but it contains only the independent variable values that are currently displayed.

Before displaying a table, you can store a list of values directly to the **tblInput** system variable.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine

Additional Graphing Topics

Collecting Data Points from a Graph


From the Graph screen, you can store sets of coordinate values and/or math results for later analysis. You can store the information as a single-row matrix (vector) on the Home screen or as data points in a system data variable that can be opened in the Data/Matrix Editor.

Collecting the Points

1. Display the graph. (This example shows **y1(x)=5∗cos(x)**.)
2. Display the coordinates or math results you want to collect.
3. Save the information to the Home screen or the *sysData* variable. ◆ (-) (Home screen) or ◆ , (*sysData* variable)
4. Repeat the process as necessary.


   Note: To display coordinates or math results, trace a function with F3 or perform an F5 **Math** operation (such as **Minimum** or **Maximum**). You can also use the free-moving cursor.


Downloaded from www.Manualslib.com manuals search engine

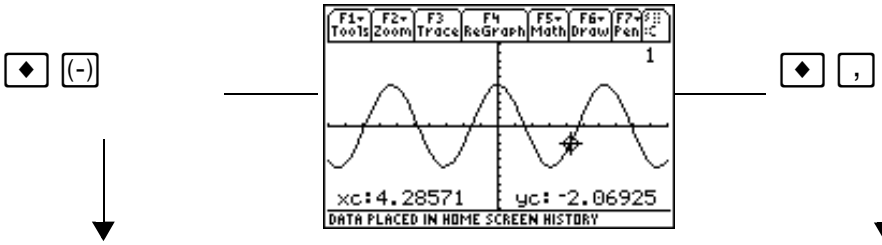

Displayed coordinates are added to the Home screen's history area (but not the entry line) as a single-row matrix or vector.

Displayed coordinates are stored in a data variable named *sysData*, which you can open in the Data/Matrix Editor.

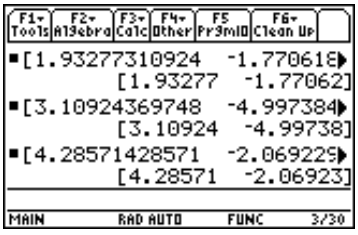

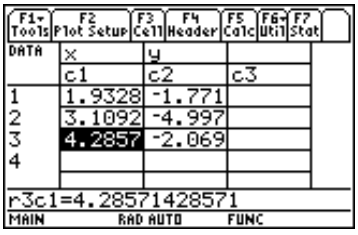

Note: Use a split screen to show a graph and the Home screen or Data/Matrix Editor at the same time.

Notes about SysData Variable

- When you press:
  ◆ ,
  - If *sysData* does not exist, it is created in the **MAIN** folder.
  - If *sysData* already exists, new data is appended to the end of any existing data. Existing titles or column headers (for the affected columns) are cleared; titles are replaced with the applicable titles for the new data.
- The *sysData* variable can be cleared, deleted, etc., just as any other data variable. However, it cannot be locked.

Downloaded from www.Manualslib.com manuals search engine

- If the Graph screen contains a function or stat plot that references the current contents of *sysData*, this command will not operate.

Graphing a Function Defined on the Home Screen

In many cases, you may create a function or expression on the Home screen and then decide to graph it. You can copy an expression to the Y= Editor, or graph it directly from the Home screen without using the Y= Editor.

What Is the "Native" Independent Variable?

On the Y= Editor, all functions must be defined in terms of the current graph mode's "native" independent variable.

Graph Mode	Native Independent Variable
Function	x
Parametric	t
Polar	θ
Sequence	n
3D	x, y
Differential Equation	t

Downloaded from www.Manualslib.com manuals search engine

Copying from the Home Screen to the Y= Editor

If you have an expression on the Home screen, you can use any of the following methods to copy it to the Y= Editor.

Method	Description
Copy and paste	1. Highlight the expression on the Home screen. Press F1 and select **5:Copy**. 2. Display the Y= Editor, highlight the desired function, and press ENTER. 3. Press F1 and select **6:Paste**. Then press ENTER. **Note:** Instead of using F1 **5** or F1 **6** to copy and paste, use: ◆ [COPY] or ◆ [PASTE]
STO▸	Store the expression to a Y= function name. `2x^3+3x^2−4x+12→y1(x)` Use the complete function name: y1(x), not just y1. **Note:** To copy an expression from the Home screen's history area to the entry line, use the auto-paste feature or copy and paste.
Define command	Define the expression as a user-defined Y= function. `Define y1(x)=2x^3+3x^2−4x+12` **Note: Define** is available from the Home screen's F4 toolbar menu.

Downloaded from www.Manualslib.com manuals search engine

Method	Description
[2nd] [RCL]	If the expression is already stored to a variable: 1. Display the Y= Editor, highlight the desired function, and press [ENTER]. 2. Press [2nd] [RCL]. Type the variable name that contains the expression, and press [ENTER] twice. **Important:** To recall a function variable such as **f1(x)**, type only **f1**, not the full function name. 3. Press [ENTER] to save the recalled expression in the Y= Editor's function list. **Note:** [2nd] [RCL] is useful if an expression is stored to a variable or function that does not correspond to the Y= Editor, such as **a1** or **f1(x)**.

Graphing Directly from the Home Screen

The **Graph** command lets you graph an expression from the Home screen without using the Y= Editor. Unlike the Y= Editor, **Graph** lets you specify an expression in terms of any independent variable, regardless of the current graphing mode.

If the expression is in terms of:	Use the Graph command as shown in this example:
The native independent variable	Graph 1.25x∗cos(x) For function graphing, x is the native variable.

Downloaded from www.Manualslib.com manuals search engine

If the expression is in terms of:	Use the Graph command as shown in this example:
A non-native independent variable	Graph 1.25a∗cos(a),a Specify the independent variable; otherwise, you may get an error.

Note: Graph uses the current Window variable settings and is available from the Home screen's F4 toolbar menu.

Graph does not work with sequence graphs or differential equations. For parametric, polar, and 3D graphs, use the following variations.

In PARAMETRIC graphing mode:	**Graph** *xExpr*, *yExpr*, *t*
In POLAR graphing mode:	**Graph** *expr*, θ
In 3D graphing mode:	**Graph** *expr*, *x*, *y*

Note: To create a table from the Home screen, use the **Table** command. It is similar to **Graph**. Both share the same expressions.

Graph does not copy the expression to the Y= Editor. Instead, it temporarily suspends any functions selected on the Y= Editor. You can trace, zoom, or show and edit **Graph** expressions on the Table screen, just the same as Y= Editor functions.

Clearing the Graph Screen

Each time you execute **Graph**, the new expression is added to the existing ones. To clear the graphs:

Downloaded from www.Manualslib.com manuals search engine


- Execute the **ClrGraph** command (available from the Home screen's F4 **Other** toolbar menu).

  – or –

- Display the Y= Editor. The next time you display the Graph screen, it will use the functions selected on the Y= Editor.

Extra Benefits of User-Defined Functions

You can define a user-defined function in terms of any independent variable. For example:

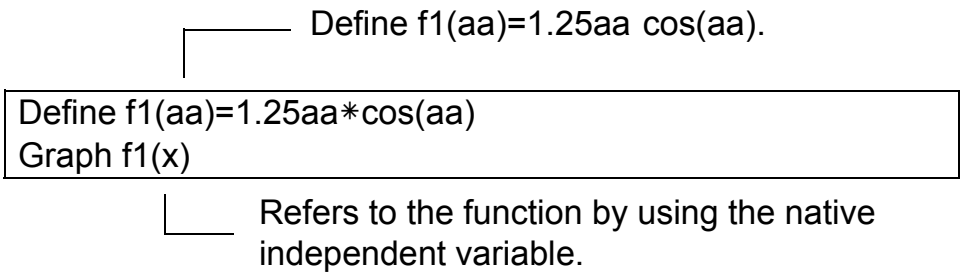
Define f1(aa)=1.25aa cos(aa).
Define f1(aa)=1.25aa∗cos(aa)
Graph f1(x)
Refers to the function by using the native independent variable.

and:

```
Define f1(aa)=1.25aa∗cos(aa)
f1(x)→y1(x)
```

Graphing a Piecewise Defined Function

To graph a piecewise function, you must first define the function by specifying boundaries and expressions for each piece. The **when** function is extremely useful for

Downloaded from www.Manualslib.com manuals search engine

two-piece functions. For three or more pieces, it may be easier to create a multi-statement, user-defined function.


Using the When Function

To define a two-piece function, use the syntax:

when(*condition, trueExpression, falseExpression***)**

For example, suppose you want to graph a function with two pieces.


When:	**Use expression:**
$x < 0$	$-x$
$x \geq 0$	$5\cos(x)$

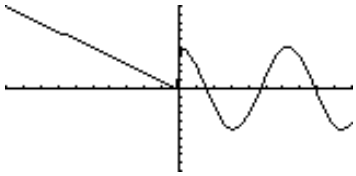

In the Y= Editor:

The function is “pretty printed” in this form.

Enter the function in this form.

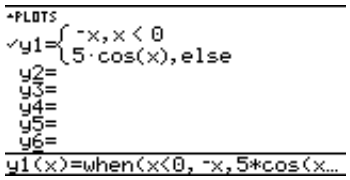


For three or more pieces, you can use nested **when** functions.


Downloaded from www.Manualslib.com manuals search engine

Note: To enter **when**, type it or use the **CATALOG**.

When:	Use expression:
$x < -\pi$	4 sin(x)
$x \geq -\pi$ and $x < 0$	2x + 6
$x \geq 0$	$6 - x^2$

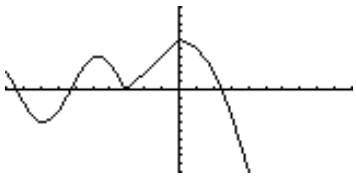

In the Y= Editor:

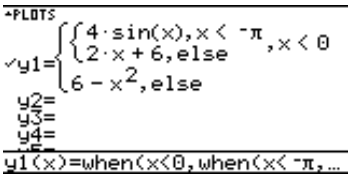

where:

y1(x)=when(x<0,when(x< - π,4∗sin(x),2x+6),6−x^2)

This nested function is in effect when x<0.

Nested functions quickly become complex and difficult to visualize.


Using a Multi-Statement, User-Defined Function

For three or more pieces, you may want to create a multi-statement, user-defined function.

Downloaded from www.Manualslib.com manuals search engine

For example, consider the previous three-piece function.

When:	Use expression:
$x < -\pi$	$4 \sin(x)$
$x \geq -\pi$ and $x < 0$	$2x + 6$
$x \geq 0$	$6 - x^2$

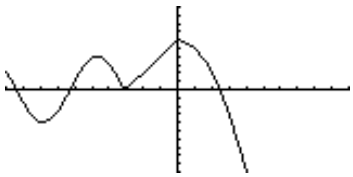

Note: For information about similarities and differences between functions and programs, refer to *Programming*.

A multi-statement, user-defined function can have many of the control and decision-making structures (**If**, **ElseIf**, **Return**, etc.) used in programming. When creating the structure of a function, it may be helpful to visualize it first in a block form.

```
❶ Func
    If x<-π Then
    Return 4*sin(x)
  ElseIf x>=-π and x<0 Then
    Return 2x+6
  Else
    Return 6-x^2
  EndIf
❶ EndFunc
```

❶ **Func** and **EndFunc** must begin and end the function.

When entering a multi-statement function on the Y= Editor or Home screen, you must enter the entire function on a single line.

Downloaded from www.Manualslib.com manuals search engine

Use a colon (:) to separate each statement.

```
Func:If x<⁻π Then:Return 4∗sin(x): ... :EndIf:EndFunc
```

In the Y= Editor:

Only **Func** is shown for a multi-statement function.

Enter a multi-statement function on one line. Be sure to include colons.



From the Home Screen or a Program

From the Home screen, you can also use the **Define** command to create a multi-statement, user-defined function.

Information is available on copying a function from the Home screen to the Y= Editor.

From the Program Editor, you can create a user-defined function. For example, use the Program Editor to create a function named **f1(xx)**. In the Y= Editor, set **y1(x) = f1(x)**.

Graphing a Family of Curves


By entering a list in an expression, you can plot a separate function for each value in the list. (You cannot graph a family of curves in SEQUENCE or 3D graphing mode.)


Downloaded from www.Manualslib.com manuals search engine

Examples Using the Y= Editor

Enter the expression **{2,4,6} sin(x)** and graph the functions.


Note: Enclose list elements in braces (2nd [{] and 2nd [}]) and separate them with commas.

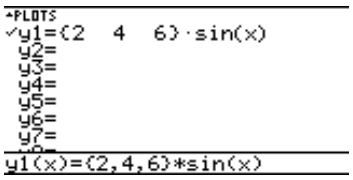


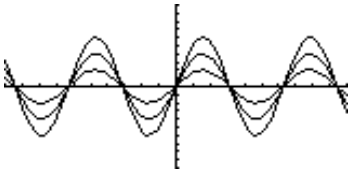

Graphs three functions:
2 sin(x), 4 sin(x), 6 sin(x)

Enter the expression **{2,4,6} sin({1,2,3} x)** and graph the functions.

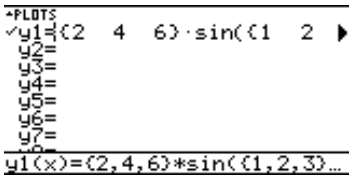

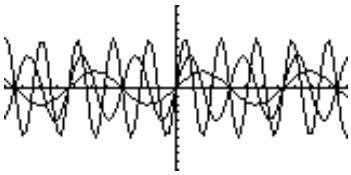

Graphs three functions:
2 sin(x), 4 sin(2x), 6 sin(3x)

Note: The commas are shown in the entry line but not in the function list.

Example Using the Graph Command


Similarly, you can use the Graph command from the Home screen or a program.

Downloaded from www.Manualslib.com manuals search engine

```
graph {2,4,6}sin(x)
graph {2,4,6}sin({1,2,3}x)
```

Simultaneous Graphs with Lists

When the graph format is set for **Graph Order = SIMUL**, the functions are graphed in groups according to the element number in the list.



For these example functions, the TI-89 Titanium / Voyage™ 200 Graphing Calculator graphs three groups.

- 2 sin(x), x+4, cos(x)
- 4 sin(x), 2x+4
- 6 sin(x), 3x+4

The functions within each group are graphed simultaneously, but the groups are graphed sequentially.

Note: To set graph formats from the Y= Editor, Window Editor, or Graph screen, press: ◆ |

When Tracing a Family of Curves

Pressing ▼ or ▲ moves the trace cursor to the next or previous curve in the same family before moving to the next or previous selected function.

Downloaded from www.Manualslib.com manuals search engine

Using the Two-Graph Mode


In two-graph mode, the calculator's graph-related features are duplicated, giving you two independent graphing calculators. The two-graph mode is only available in split screen mode. For more information about split screens, refer to *Split Screens*.

Setting the Mode

Several mode settings affect the two-graph mode, but only two settings are required. Both are on **Page 2** of the **MODE** dialog box.

1. Press MODE. Then press F2 to display **Page 2**.

2. Set the following required modes.
   - **Split Screen = TOP-BOTTOM** or **LEFT-RIGHT**
   - **Number of Graphs = 2**

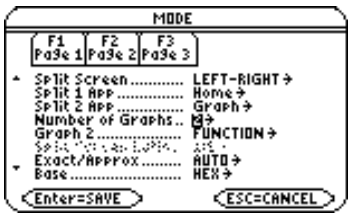

3. Optionally, you can set the following modes.

   Page 1:
   - **Graph = Graph** mode for top or left side of the split

Downloaded from www.Manualslib.com manuals search engine


Page 2:

- **Split 1 App** = application for top or left side
- **Split 2 App** = application for bottom or right side
- **Graph 2 = Graph** mode for bottom or right side
-

4. Press ENTER to close the dialog box.

The Two-Graph Screen

A two-graph screen is similar to a regular split screen.

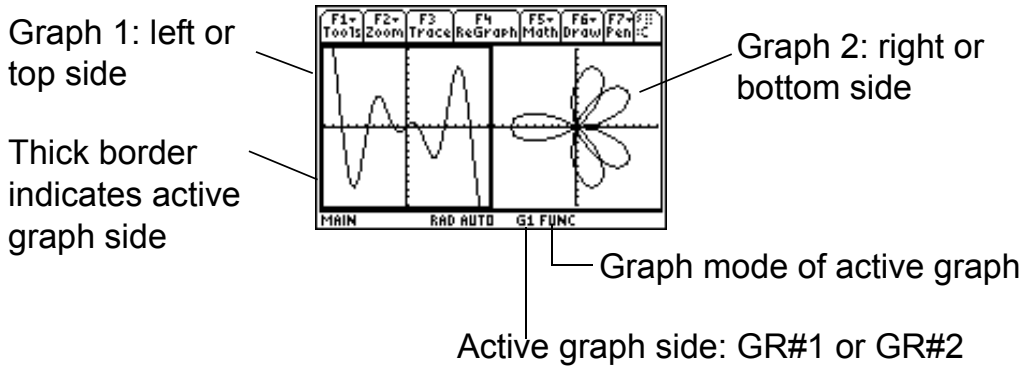

Independent Graph-Related Features

Both Graph 1 and Graph 2 have independent:

- Graph modes (FUNCTION, POLAR, etc.). Other modes such as **Angle**, **Display Digits**, etc., are shared and affect both graphs.

Downloaded from www.Manualslib.com manuals search engine

- Window Editor variables.
- Table setup parameters and Table screens.
- Graph formats such as **Coordinates**, **Axes**, etc.
- Graph screens.
- Y= Editors. However, both graphs share common function and stat plot definitions.

  Note: The Y= Editor is completely independent only when the two sides use different graphing modes (as described below).


Independent graph-related applications (Y= Editor, Graph screen, etc.) can be displayed on both sides of the screen at the same time.

Non-graph-related applications (Home screen, Data/Matrix Editor, etc.) are shared and can be displayed on only one side at a time.

The Y= Editor in Two-Graph Mode


Even in two-graph mode, there is actually only one Y= Editor, which maintains a single function list for each Graph mode setting. However, if both sides use the same graphing mode, each side can select different functions from that single list.

- When both sides use different graphing modes, each side shows a different function list.

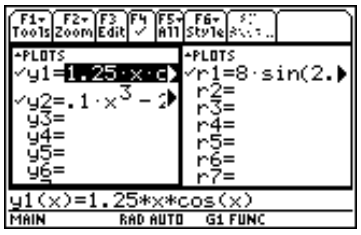

Downloaded from www.Manualslib.com manuals search engine

- When both sides use the same graphing mode, each side shows the same function list.
  - You can use F4 to select different functions and stat plots (indicated by ✓) for each side.
  - If you set a display style for a function, that style is used by both sides.2nd [F6]

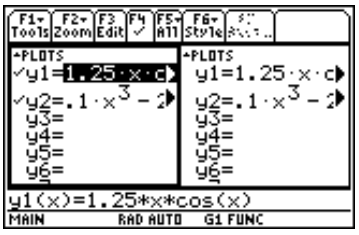

- Suppose Graph 1 and Graph 2 are set for function graphing. Although both sides show the same function list, you can select (✓) different functions for graphing

Note: If you make a change on the active Y= Editor (redefine a function, change a style, etc.), that change is not reflected on the inactive side until you switch to it.

Using a Split Screen

For more complete information about split screens, refer to *Split Screens*.

- To switch from one graph side to the other, press 2nd [⇔] (second function of APPS).
- To display different applications:
  - Switch to the applicable graph side and display the application as you normally would.

    – or –
  - Use MODE to change **Split 1 App** and/or **Split 2 App**.
- To exit two-graph mode:

Downloaded from www.Manualslib.com manuals search engine

- Use [MODE] to set **Number of Graphs = 1**, or exit the split screen by setting **Split Screen = FULL**.

  – or –


- Press [2nd] [QUIT] twice. This always exits a split screen and returns to a full-sized Home screen.

Note: You can display non-graph-related applications (such as the Home screen) on only one side at a time.

Remember that the Two Sides Are Independent

In two-graph mode, the two sides may appear to be related when, in fact, they are not. For example:

For Graph 1, the Y= Editor lists y(x) functions.

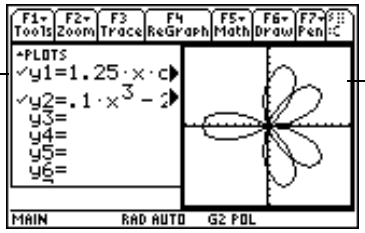

For Graph 2, the polar graph uses r(θ) equations that are not shown.

After the two-graph mode is set up, graph-related operations refer to the active graph side. For example:

```
10→xmax
```

affects either Graph 1 or Graph 2, depending on which is active when you execute the command.

Downloaded from www.Manualslib.com manuals search engine

To switch the active sides, press 2nd [⊟] or use the **switch** function, **switch(1)** or **switch(2)**.

Drawing a Function or Inverse on a Graph

For comparison purposes, you may want to draw a function over your current graph. Typically, the drawn function is some variation of the graph. You can also draw the inverse of a function. (These operations are not available for 3D graphs.)


Drawing a Function, Parametric, or Polar Equation

Execute **DrawFunc**, **DrawParm**, or **DrawPol** from the Home screen or a program. You cannot draw a function or equation interactively from the Graph screen.

DrawFunc *expression*
DrawParm *expression1*, *expression2* [,*tmin*] [,*tmax*] [,*tstep*]
DrawPol *expression* [,θ*min*] [,θ*max*] [,θ*step*]

For example:


1. Define **y1(x)=.1x^3–2x+6** on the Y= Editor, and graph the function.

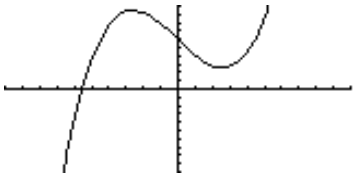

Downloaded from www.Manualslib.com manuals search engine

2. On the Graph screen, press: 2nd [F6] and select **2:DrawFunc**.

   To display the Home screen and put **DrawFunc** in the entry line, press: 2nd [F6] **2**

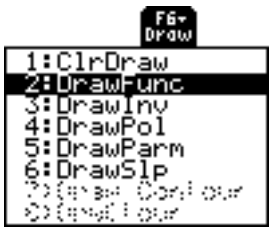


3. On the Home screen, specify the function to draw.

DrawFunc y1(x)−6

4. Press ENTER to draw the function on the Graph screen.

   You cannot trace, zoom, or perform a math operation on a drawn function.

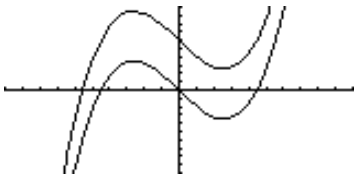

   Note: To clear the drawn function, press F4
   – or –
   2nd [F6] and select **1:ClrDraw**

Drawing the Inverse of a Function

Execute **DrawInv** from the Home screen or a program. You cannot draw an inverse function interactively from the Graph screen.

DrawInv *expression*

For example, use the graph of **y1(x)=.1x^3–2x+6** as shown above.

Downloaded from www.Manualslib.com manuals search engine

1. On the Graph screen, press: 2nd [F6] and select **3:DrawInv**


   To display the Home screen and put **DrawInv** in the entry line, press: 2nd [F6] **3**

2. On the Home screen, specify the inverse function.

   DrawInv y1(x)

3. Press ENTER.

   The inverse is plotted as **(y,x)** instead of **(x,y)**.

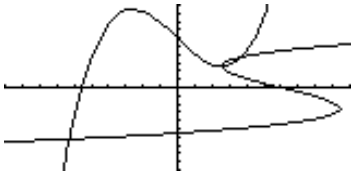

Drawing a Line, Circle, or Text Label on a Graph

You can draw one or more objects on the Graph screen, usually for comparisons. For example, draw a horizontal line to show that two parts of a graph have the same y value. (Some objects are not available for 3D graphs.)

Clearing All Drawings

A drawn object is not part of the graph itself. It is drawn “on top of” the graph and remains on the screen until you clear it.

Downloaded from www.Manualslib.com manuals search engine

From the Graph screen:

- 2nd [F6]
  and select **1:ClrDraw**.

  – or –
- Press F4 to regraph.



Note: You can also enter **ClrDraw** on the Home screen's entry line.

You can also do anything that causes the Smart Graph feature to redraw the graph (such as change the Window variables or deselect a function on the Y= Editor).

Downloaded from www.Manualslib.com manuals search engine

Drawing a Point or a Freehand Line

From the Graph screen:


1. 2nd [F7]
   and select **1:Pencil**.
2. Move the cursor to the applicable location.



To draw a:	Do this:
Point (pixel-sized)	Press ENTER.
Freehand line	Press and hold ↑, and move the cursor to draw the line.

Note: When drawing a freehand line, you can move the cursor diagonally.

After drawing the point or line, you are still in **Pencil** mode.

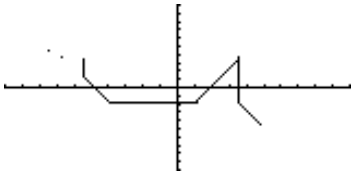

- To continue drawing, move the cursor to another point.
- To quit, press ESC.

Note: If you start drawing on a white pixel, the pencil draws a black point or line. If you start on a black pixel, the pencil draws a white point or line (which can act as an eraser).

Downloaded from www.Manualslib.com manuals search engine

Erasing Individual Parts of a Drawing Object


From the Graph screen:

1. [2nd] [F7]
   and select **2:Eraser**. The cursor is shown as a small box.
2. Move the cursor to the applicable location.

To erase:	Do this:
Area under the box	Press [ENTER].
Along a freehand line	Press and hold [↑], and move the cursor to erase the line.

Note: These techniques also erase parts of graphed functions.

After erasing, you are still in **Eraser** mode.

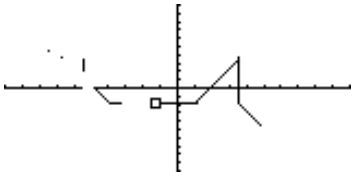

- To continue erasing, move the box cursor to another location.
- To quit, press [ESC].

Drawing a Line Between Two Points

From the Graph screen:


1. [2nd] [F7]
   and select **3:Line**.

Downloaded from www.Manualslib.com manuals search engine

2. Move the cursor to the 1st point, and press [ENTER].
3. Move to the 2nd point, and press [ENTER]. (As you move, a line extends from the 1st point to the cursor.)

   Note: Use [2nd] to move the cursor in larger increments; [2nd] ◗, etc.

After drawing the line, you are still in **Line** mode.

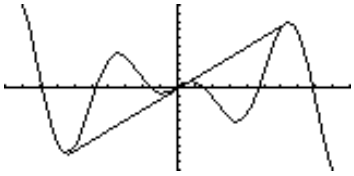


- To continue drawing another line, move the cursor to a new 1st point.
- To quit, press [ESC].

Drawing a Circle

From the Graph screen:

1. [2nd] [F7]
   and select **4:Circle**.

2. Move the cursor to the center of the circle, and press [ENTER].
3. Move the cursor to set the radius, and press [ENTER].

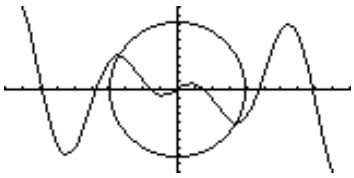

   Note: Use [2nd] to move the cursor in larger increments; [2nd] ◗, etc.

Downloaded from www.Manualslib.com manuals search engine

Drawing a Horizontal or Vertical Line


From the Graph screen:

1. 2nd [F7]
   and select **5:Horizontal** or **6:Vertical**. A horizontal or vertical line and a flashing cursor are displayed on the screen.

   If the line is initially displayed on an axis, it may be difficult to see. However, you can easily see the flashing cursor.
2. Use the cursor pad to move the line to the appropriate position. Then press ENTER.

   After drawing the line, you are still in "line" mode.

   - To continue, move the cursor to another location.
   - To quit, press ESC.

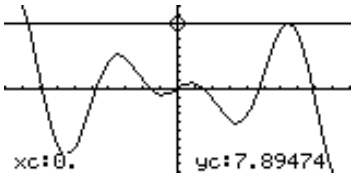   Note: Use 2nd to move the cursor in larger increments; 2nd ⊙, etc.

Drawing a Tangent Line

To draw a tangent line, use the F5 **Math** toolbar menu. From the Graph screen:


1. Press F5 and select **A:Tangent**.

Downloaded from www.Manualslib.com manuals search engine

2. As necessary, use ⊖ and ⊕ to select the applicable function.

3. Move the cursor to the tangent point, and press ENTER.

   The tangent line is drawn, and its equation is displayed.

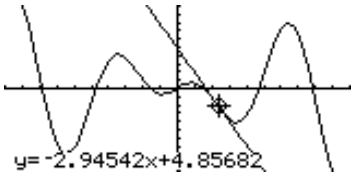

Note: To set the tangent point, you can also type its **x** value and press ENTER.

Drawing a Line Based on a Point and a Slope

To draw a line through a specified point with a specified slope, execute the **DrawSlp** command from the Home screen or a program. Use the syntax:

DrawSlp *x*, *y*, *slope*


You can also access **DrawSlp** from the Graph screen.

1. 2nd [F6]
   and select **6:DrawSlp**. This switches to the Home screen and puts **DrawSlp** in the entry line.

2. Complete the command, and press ENTER.

   The calculator automatically switches to the **Graph** screen and draws the line.

```
DrawSlp 4,0,6.37
```

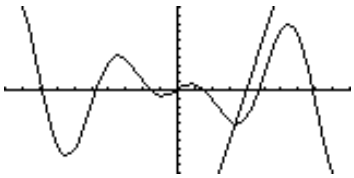

Downloaded from www.Manualslib.com manuals search engine


Typing Text Labels

From the Graph screen:

1. 2nd [F7]
   and select **7:Text**.
2. Move the text cursor to the location where you want to begin typing.
3. Type the text label.

   After typing the text, you are still in "text" mode.

   - To continue, move the cursor to another location.
   - To quit, press ENTER or ESC.

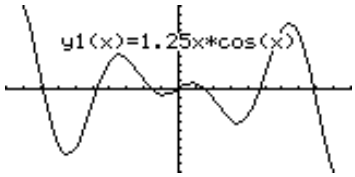

Note: The text cursor indicates the upper-left corner of the next character you type.

From the Home Screen or a Program

Commands are available for drawing any of the objects described in this section. There are also commands (such as **PxlOn**, **PxlLine**, etc.) that let you draw objects by specifying exact pixel locations on the screen.

For a list of the available drawing commands, refer to "Drawing on the Graph Screen" in *Programming*.

Downloaded from www.Manualslib.com manuals search engine

Saving and Opening a Picture of a Graph

You can save an image of the current Graph screen in a PICTURE (or PIC) variable. Then, at a later time, you can open that variable and display the image. This saves the image only, not the graph settings used to produce it.

Saving a Picture of the Whole Graph Screen

A picture includes any plotted functions, axes, tick marks, and drawn objects. The picture does not include lower and upper bound indicators, prompts, or cursor coordinates.

Display the Graph screen as you want to save it; and then:

1. Press F1 and select **2:Save Copy As**.



2. Specify the type (**Picture**), folder, and a unique variable name.
3. Press ENTER. After typing in an input box such as **Variable**, you must press ENTER twice.



Important: By default, Type = GDB (for graph database). You must set Type = Picture.

Downloaded from www.Manualslib.com manuals search engine

Saving a Portion of the Graph Screen

You can define a rectangular box that encloses only the portion of the Graph screen that you want to save.

1. [2nd] [F7] and select **8:Save Picture**.


   A box is shown around the outer edge of the screen.

   Note: You cannot save a portion of a 3D graph.



2. Set the 1st corner of the box by moving its top and left sides. Then press [ENTER].


   Note: Use ▼ and ▲ to move the top or bottom, and use ▶ and ◀ to move the sides.

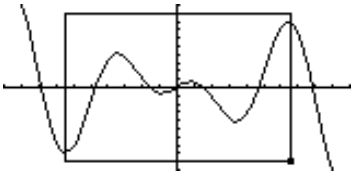

3. Set the 2nd corner by moving the bottom and right sides. Then press [ENTER].

4. Specify the folder and a unique variable name.

5. Press [ENTER]. After typing in an input box such as **Variable**, you must press [ENTER] twice.

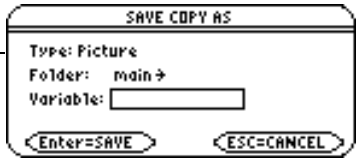

Note: When saving a portion of a graph, Type is automatically fixed as Picture.

Downloaded from www.Manualslib.com manuals search engine

Opening a Graph Picture

When you open a graph picture, it is superimposed over the current Graph screen. To display only the picture, use the Y= Editor to deselect any other functions before opening the graph picture.


From the Graph screen:

1. Press F1 and select **1:Open**.

2. Select the type (**Picture**), folder, and variable that contain the graph picture you want to open.

   Note: If a variable name is not shown on the dialog box, there are no graph pictures in the folder.

3. Press ENTER.

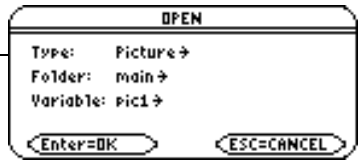

Important: By default, Type = GDB (for graph database). Be sure to set Type = Picture.

A graph picture is a drawing object. You cannot trace any curve on a picture.

For Pictures Saved from a Portion of the Graph Screen

When you press F1 and select **1:Open**, the picture is superimposed starting at the upper-left corner of the Graph screen. If the picture was saved from a portion of the Graph screen, it may appear shifted from the underlying graph.

You can specify which screen pixel to use as the upper-left corner.

Downloaded from www.Manualslib.com manuals search engine

Deleting a Graph Picture

Unwanted Picture variables take up calculator memory. To delete a variable, use the VAR-LINK screen ([2nd] [VAR-LINK]) as described in *Memory and Variable Management*.

From a Program or the Home Screen

To save (**store**) and open (**recall**) a graph picture, use the **StoPic**, **RclPic**, **AndPic**, **XorPic**, and **RplcPic** commands as described in the *Technical Reference* module.

To display a series of graph pictures as an animation, use the **CyclePic** command. For an example, refer to CyclePic Command.

Animating a Series of Graph Pictures

As described earlier in this module, you can save a picture of a graph. By using the **CyclePic** command, you can flip through a series of graph pictures to create an animation.

CyclePic Command

Before using **CyclePic**, you must have a series of graph pictures that have the same base name and are sequentially numbered starting with 1 (such as pic1, pic2, pic3, . . .).

To cycle the pictures, use the syntax:

Downloaded from www.Manualslib.com manuals search engine

CyclePic *picNameString*, *n* [,*wait*] [,*cycles*] [,*direction*]
❶ ❷ ❸ ❹ ❺

❶ base name of pictures in quotes, such as "pic"
❷ # of pictures to cycle
❸ seconds between
❹ # of times to repeat cycle

Example


This example program (named **cyc**) generates 10 views of a 3D graph, with each view rotated 10 ° further around the Z axis. For information about each command, refer to the

Downloaded from www.Manualslib.com manuals search engine

Technical Reference module. For information about using the Program Editor, refer to *Programming*.

Program Listing	Every Other Graph from Program

```
:cyc()
:Prgm
:local I
:©Set mode and Window variables
:setMode("graph","3d")
:70→eyeϕ
:-10→xmin
:10→xmax
:14→xgrid
:-10→ymin
:10→ymax
:14→ygrid
:-10→zmin
:10→zmax
:1→zscl
:©Define the function
:(x^3*y-y^3*x)/390→z1(x,y)
:©Generate pics and rotate
:For i,1,10,1
:  i*10→eyeθ
:  DispG
:  StoPic #("pic" & string(i))
:EndFor
:©Display animation
:CyclePic "pic",10,.5,5,-1
:EndPrgm
```

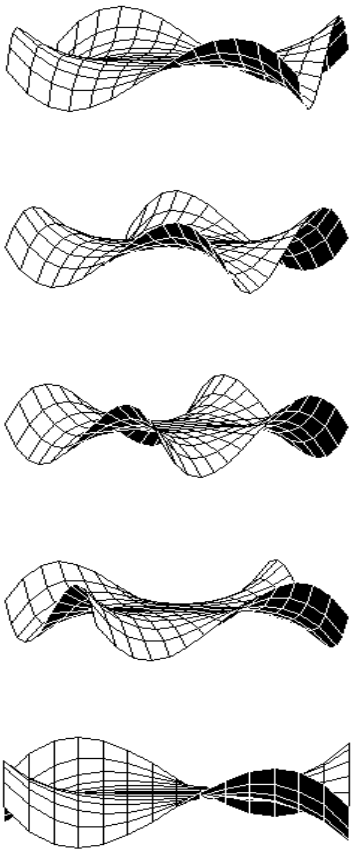

Downloaded from www.Manualslib.com manuals search engine

Comments start with ◉. Press:
◆)

Note: Due to its complexity, this program takes several minutes to run.

After entering this program on the Program Editor, go to the Home screen and enter **cyc( )**.

Saving and Opening a Graph Database

A graph database is the set of all elements that define a particular graph. By saving a graph database as a GDB variable, you can recreate that graph at a later time by opening its stored database variable.

Elements in a Graph Database

A graph database consists of:

- Mode settings (MODE) for **Graph**, **Angle**, **Complex Format**, and **Split Screen** (only if you are using the two-graph mode).
- All functions in the Y= Editor (◆ [Y=]), including display styles and which functions are selected.
- Table parameters (◆ [TBLSET]), Window variables (◆ [WINDOW]), and graph formats:
  F1 **9**
  – or –
  ◆ I

Downloaded from www.Manualslib.com manuals search engine


A graph database does not include drawn objects or stat plots.

Note: In two-graph mode, the elements for both graphs are saved in a single database.

Saving the Current Graph Database

From the Y= Editor, Window Editor, Table screen, or Graph screen:

1. Press F1 and select **2:Save Copy As**.
2. Specify the folder and a unique variable name.
3. Press ENTER. After typing in an input box such as Variable, you must press ENTER twice.

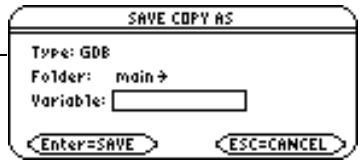

Note: If you start from the Graph screen, be sure to use Type=GDB.

Opening a Graph Database

Caution: When you open a graph database, all information in the current database is replaced. You may want to store the current graph database before opening a stored database.

Downloaded from www.Manualslib.com manuals search engine

From the Y= Editor, Window Editor, Table screen, or Graph screen:

1. Press [F1] and select **1:Open**.
2. Select the folder and variable that contain the graph database you want to open.
3. Press [ENTER].



Note: If you start from the Graph screen, be sure to use Type=GDB.

Deleting a Graph Database

Unused GDB variables take up calculator memory. To delete them, use the VAR-LINK screen ([2nd] [VAR-LINK]) described in *Memory and Variable Management*.

From a Program or the Home Screen

You can save (**store**) and open (**recall**) a graph database by using the **StoGDB** and **RclGDB** commands as described in the *Technical Reference* module.

Downloaded from www.Manualslib.com manuals search engine

Split Screens

Setting and Exiting the Split Screen Mode

To set up a split screen, use the MODE dialog box to specify the applicable mode settings. After you set up the split screen, it remains in effect until you change it.

Setting the Split Screen Mode


1. Press MODE to display the **MODE** dialog box.
2. Because the modes related to split screens are listed on the second page of the **MODE** dialog box, either:
   - Use ⊙ to scroll down.

     — or —

   - Press F2 to display **Page 2**.
3. Set the **Split Screen** mode to either of the following settings. For the procedure used to change a mode setting, refer to *Operating the Calculator*.

Split Screen Settings
TOP-BOTTOM
LEFT-RIGHT

Downloaded from www.Manualslib.com manuals search engine

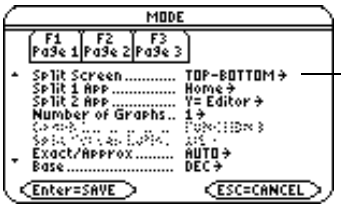

When you set Split Screen = TOP-BOTTOM or LEFT-RIGHT, previously dimmed modes such as Split 2 App become active.

Setting the Initial Applications

Before pressing ENTER to close the MODE dialog box, you can use the **Split 1 App** and **Split 2 App** modes to select the applications you want to use.



Mode	Specifies the application in the:
Split 1 App	Top or left part of the split screen.
Split 2 App	Bottom or right part of the split screen.

If you set **Split 1 App** and **Split 2 App** to the same application, the calculator exits the split screen mode and displays the application full screen.

You can open different applications after the split screen is displayed.

Note: In two-graph mode, described in *Additional Graphing Topics*, the same application can be in both parts of a split screen.

Downloaded from www.Manualslib.com manuals search engine

Other Modes that Affect a Split Screen

Mode	Description
Number of Graphs **Note:** Leave this set to 1 unless you have read the applicable section in *Additional Graphing Topics*.	Lets you set up and display two independent sets of graphs. This is an advanced graphing feature as described in "Using the Two-Graph Mode" in *Additional Graphing Topics*.

Split Screens and Pixel Coordinates

The calculator has commands that use pixel coordinates to draw lines, circles, etc., on the Graph screen. The following charts show how the **Split Screen** and **Split Screen Ratio** mode settings affect the number of pixels available on the Graph screen.

Note:

- For a list of drawing commands, refer to "Drawing on the Graph Screen" in *Programming*.
- Due to the border that indicates the active application, split screens have a smaller displayable area than a full screen.

TI-89 Titanium:

		Split 1 App		Split 2 App	
Split	**Ratio**	**x**	**y**	**x**	**y**
FULL	N/A	0 – 158	0 – 76	N/A	N/A

Downloaded from www.Manualslib.com manuals search engine

		Split 1 App		Split 2 App	
Split	**Ratio**	**x**	**y**	**x**	**y**
TOP–BOTTOM	1:1	0 – 154	0 – 34	0 – 154	0 – 34
LEFT–RIGHT	1:1	0 – 76	0 – 72	0 – 76	0 – 72

Voyage™ 200:

		Split 1 App		Split 2 App	
Split	**Ratio**	**x**	**y**	**x**	**y**
FULL	N/A	0 – 238	0 – 102	N/A	N/A
TOP–BOTTOM	1:1	0 – 234	0 – 46	0 – 234	0 – 46
	1:2	0 – 234	0 – 26	0 – 234	0 – 68
	2:1	0 – 234	0 – 68	0 – 234	0 – 26
LEFT–RIGHT	1:1	0 – 116	0 – 98	0 –116	0 – 98
	1:2	0 – 76	0 – 98	0 – 156	0 – 98
	2:1	0 – 156	0 – 98	0 – 76	0 – 98

Exiting the Split Screen Mode

Method 1: Press MODE to display the MODE dialog box. Then set **Split Screen = FULL**. When you press ENTER to close the dialog box, the full-sized screen shows the application specified in **Split 1 App**.

Downloaded from www.Manualslib.com manuals search engine

Method 2: Press 2nd [QUIT] twice to display a full-sized Home screen.

When You Turn Off the Calculator

Turning the calculator off does not exit the split screen mode.

If the calculator is turned off:	When you turn the calculator on again:
When you press 2nd [OFF]	The split screen is still in effect, but the Home screen is always displayed in place of the application that was active when you pressed 2nd [OFF].
By the Automatic Power Down™ (APD™) feature, or when you press ◆ [OFF].	The split screen is just as you left it.


Split-Screen Status Indicators on the Apps Desktop

To return to the Apps desktop, press APPS. The split-screen status appears at the top of the Apps desktop with the names of the open Apps and the portions of the screen in which each App is displayed.

Note: The Apps desktop always appears in the full-screen view.

Downloaded from www.Manualslib.com manuals search engine

Split-screen indicator Names of open Apps

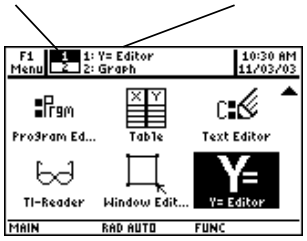

Split screen indicator	Description
	Top-bottom split screen • **1** indicates the application that will appear in the top portion of the screen. • **2** indicates the application that will appear in the bottom portion of the screen. The highlighted numeral indicates the active portion of the split screen.
	Left-right split screen • **1** indicates the application that will appear in the left portion of the screen. • **2** indicates the application that will appear in the right portion of the screen. The highlighted numeral indicates the active portion of the split screen.

Downloaded from www.Manualslib.com manuals search engine

Selecting the Active Application

With a split screen, only one of the two applications can be active at a time. You can easily switch between existing applications, or you can open a different application.


The Active Application

- The active application is indicated by a thick border.
- The toolbar and status line, which are always the full width of the display, are associated with the active application.
- For applications that have an entry line (such as the Home screen and Y= Editor), the entry line is the full width of the display only when that application is active.

Toolbar is for Y= Editor.

Thick border indicates the Y= Editor is active.


Entry line is full width when Y= Editor is active.

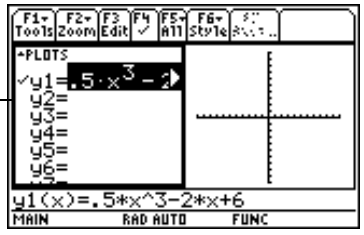

Switching between Applications

Press 2nd [⊞] (second function of APPS) to switch from one application to the other.

Downloaded from www.Manualslib.com manuals search engine

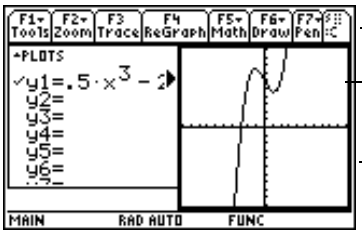

Toolbar is for Graph screen.

Thick border indicates the Graph screen is active.

Graph screen does not have an entry line.

Opening a Different Application

Method 1:

1. Use [2nd] [⇔] to switch to the application you want to replace.
2. Use [APPS] or [◆] (such as [◆] [WINDOW]) to select the new application.

If you select an application that is already displayed, the calculator switches to that application.

Method 2:

3. Press [MODE] and then [F2].
4. Change **Split 1 App** and/or **Split 2 App**.

   If you set **Split 1 App** and **Split 2 App** to the same application, the calculator exits the split screen mode and displays the application full screen.

Note: In two-graph mode, described in *Additional Graphing Topics*, the same application can be in both parts of a split screen.

Downloaded from www.Manualslib.com manuals search engine

Using 2nd QUIT to Display the Home Screen


Note: Pressing 2nd [QUIT] twice always exits the split screen mode.

If the Home screen:	Pressing 2nd [QUIT]:
Is not already displayed	Opens the Home screen in place of the active application.
Is displayed, but is not the active application	Switches to the Home screen and makes it the active application.
Is the active application	Exits the split screen mode and displays a full-sized Home screen.


When Using a Top-Bottom Split

When you select a TOP-BOTTOM split, remember that the entry line and the toolbar are always associated with the active application. For example:

Entry line is for the active Y= Editor, *not* the Graph screen.

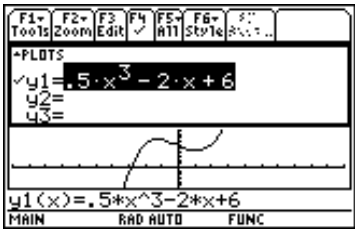

Toolbar is for the active Graph screen, *not* the Y= Editor.

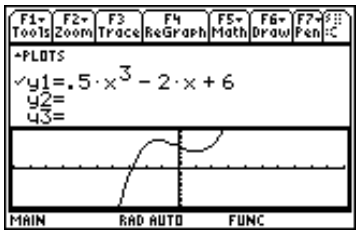

Downloaded from www.Manualslib.com manuals search engine

Note: Both **Top-Bottom** and **Left-Right** splits use the same methods to select an application.

Downloaded from www.Manualslib.com manuals search engine

Data/Matrix Editor


Overview of List, Data, and Matrix Variables

To use the Data/Matrix Editor effectively, you must understand list, data, and matrix variables.

List Variable

A list is a series of items (numbers, expressions, or character strings) that may or may not be related. Each item is called an element. In the Data/Matrix Editor, a list variable:

- Is shown as a single column of elements, each in a separate cell.
- Must be continuous; blank or empty cells are not allowed within the list.
- Can have up to 999 elements.

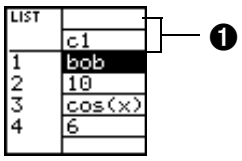


❶ Column title and header cells are not saved as part of the list.

If you enter more than one column of elements in a list variable, it is converted automatically into a data variable.


Downloaded from www.Manualslib.com manuals search engine

On the Home screen (or anywhere else you can use a list), you can enter a list as a series of elements enclosed in braces { } and separated by commas.

Although you must use commas to separate elements on the entry line, spaces separate the elements in the history area.



To refer to a specified element in a list, use the format shown to the right.

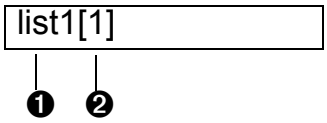

❶ Name of list variable
❷ Element number (or index number)

Note: After creating a list in the Data/Matrix Editor, you can use the list in any application (such as the Home screen).

Data Variable

A data variable is essentially a collection of lists that may or may not be related. In the Data/Matrix Editor, a data variable:


- Can have up to 99 columns.
- Can have up to 999 elements in each column. Depending on the kind of data, all columns may not have to be the same length.
- Must have continuous columns; blank or empty cells are not allowed within a column.

DATA			
	c1	c2	c3
1	fred	stone	95
2	sally	ross	75
3	jane	smith	97
4	nick	castle	83

Downloaded from www.Manualslib.com manuals search engine


Note: For stat calculations, columns must have the same length.

From the Home screen or a program, you can use the **NewData** command to create a data variable that consists of existing lists.

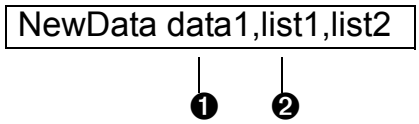


❶ Name of data variable to create
❷ Names of existing list

Although you cannot directly display a data variable on the Home screen, you can display a specified column or element.

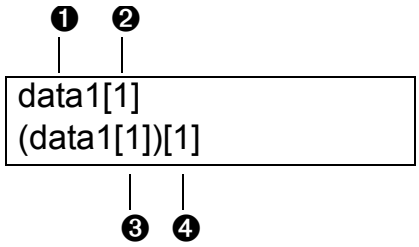

❶ Name of data variable
❷ Column number
❸ Column number
❹ Element number in the column

For example:

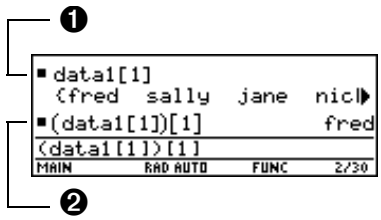


❶ Displays column 1 of the variable data1.
❷ Displays element 1 in column 1 of the variable data1.

Downloaded from www.Manualslib.com manuals search engine


Matrix Variable

A matrix is a rectangular array of elements. When you create a matrix in the Data/Matrix Editor, you must specify the number of rows and columns (although you can add or delete rows and columns later). In the Data/Matrix Editor, a matrix variable:

- Looks similar to a data variable, but all columns must have the same length.
- Is initially created with 0 in each cell. You can then enter the applicable value in place of 0.

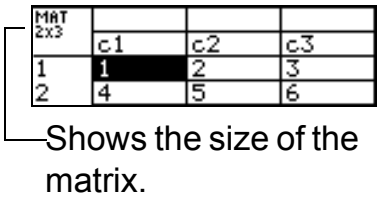


From the Home screen or a program, you can use STO▸ to store a matrix with either of the equivalent methods shown to the right.

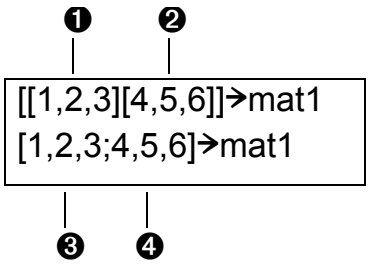

❶ row 1
❷ row 2
❸ row 1
❹ row 2

Although you enter the matrix as shown above, it is pretty printed in the history area in traditional matrix form.



After creating a matrix in the Data/Matrix Editor, you can use the matrix in any application (such as the Home screen).

Note: Use brackets to refer to a specific element in a matrix. For example, enter **mat1[2,1]** to access the 1st element in the 2nd row.


Downloaded from www.Manualslib.com manuals search engine

Starting a Data/Matrix Editor Session

Each time you start the Data/Matrix Editor, you can create a new variable, resume using the current variable (the variable that was displayed the last time you used the Data/Matrix Editor), or open an existing variable.


Creating a New Data, Matrix, or List Variable

1. Press APPS and then select the Data/Matrix icon. Press ENTER.

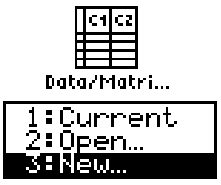

2. Select **3:New**.


3. Specify the applicable information for the new variable.

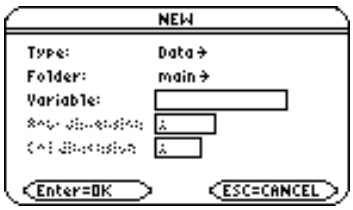

Item	Lets you:
Type	Select the type of variable to create. Press ▶ to display a menu of available types. 
Folder	Select the folder in which the new variable will be stored. Press ▶ to display a menu of existing folders. For information about folders, refer to *the Calculator Home Screen module*.

Downloaded from www.Manualslib.com manuals search engine

Item	Lets you:
Variable	Type a new variable name. If you specify a variable that already exists, an error message will be displayed when you press ENTER. When you press ESC or ENTER to acknowledge the error, the **NEW** dialog box is redisplayed.
Row dimension and Col dimension	If Type = Matrix, type the number of rows and columns in the matrix.

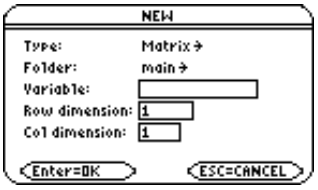

Note: If you do not type a variable name, your calculator displays the Home screen.

4. Press ENTER (after typing in an input box such as **Variable**, press ENTER twice) to create and display an empty variable in the Data/Matrix Editor.

Using the Current Variable


You can leave the Data/Matrix Editor and go to another application at any time. To return to the variable that was displayed when you left the Data/Matrix Editor, launch Data/Matrix Editor again and select **1:Current**.

Downloaded from www.Manualslib.com manuals search engine

Creating a New Variable from the Data/Matrix Editor

From the Data/Matrix Editor:

1. Press F1 and select **3:New**.
2. Specify the type, folder, and variable name. For a matrix, also specify the number of rows and columns.

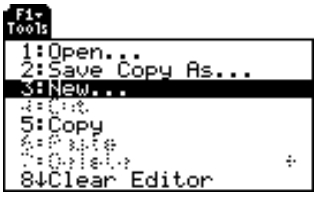

Opening Another Variable


You can open another variable at any time.

1. From the Data/Matrix Editor, press F1 and select **1:Open**.

   – or –

   From any application, launch Data/Matrix Editor again and select **2:Open**.

2. Select the type, folder, and variable to open.
3. Press ENTER.

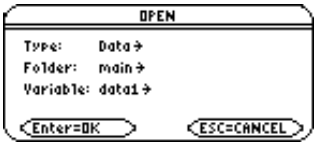

Note: Variable shows the first existing variable in alphabetic order. If there are no existing variables, nothing is displayed.

Downloaded from www.Manualslib.com manuals search engine

Deleting a Variable

Because all Data/Matrix Editor variables are saved automatically, you can accumulate quite a few variables, which take up memory.

To delete a variable, use the VAR-LINK screen ([2nd] [VAR-LINK]). For information about VAR-LINK, refer to *Memory and Variable Management*.


Entering and Viewing Cell Values

If you create a new variable, the Data/Matrix Editor is initially blank (for a list or data variable) or filled with zeros (for a matrix). If you open an existing variable, the values in that variable are displayed. You can then enter additional values or edit the existing ones.

The Data/Matrix Editor Screen

A blank Data/Matrix Editor screen is shown below. When the screen is displayed initially, the cursor highlights the cell at row 1, column 1.

❶ Variable type
❷ Column headers
❸ Row numbers
❹ Row and column number of highlighted cell
❺ Column title cells, used to type a title for each column

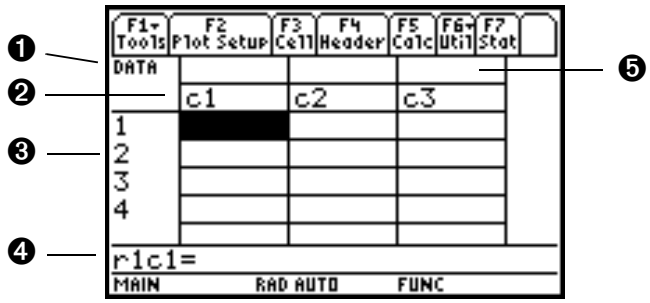

Downloaded from www.Manualslib.com manuals search engine

When values are entered, the entry line shows the full value of the highlighted cell.

Note: Use the title cell at the very top of each column to identify the information in that column.

Entering or Editing a Value in a Cell

You can enter any type of expression in a cell (number, variable, function, string, etc.).

1. Move the cursor to highlight the cell you want to enter or edit.
2. Press ENTER or F3 to move the cursor to the entry line.
3. Type a new value or edit the existing one.
4. Press ENTER to enter the value into the highlighted cell.

When you press ENTER, the cursor automatically moves to highlight the next cell so that you can continue entering or editing values. However, the variable type affects the direction that the cursor moves.

Note: To enter a new value, you can start typing without pressing ENTER or F3 first. However, you must use ENTER or F3 to edit an existing value.

Variable Type	After pressing ENTER, the cursor moves:
List or data	Down to the cell in the next row.
Matrix	Right to the cell in the next column. From the last cell in a row, the cursor automatically moves to the first cell in the next row. This lets you enter values for row1, row2, etc.

Downloaded from www.Manualslib.com manuals search engine

Scrolling through the Editor

To move the cursor:	Press:
One cell at a time	⏷, ⏶, ⏵, or ⏴
One page at a time	2nd and then ⏷, ⏶, ⏵, or ⏴
Go to row 1 in the current column or to the last row that contains data for any column on the screen, respectively. If the cursor is in or past that last row, ◆ ⏷ goes to row 999.	◆ ⏶ or ◆ ⏷
Go to column 1 or to the last column that contains data, respectively. If the cursor is in or past that last column, ◆ ⏵ goes to column 99.	◆ ⏴ or ◆ ⏵

Note: To enter a value from the entry line, you can also use ⏷ or ⏶.


When you scroll down/up, the header row remains at the top of the screen so that the column numbers are always visible. When you scroll right/left, the row numbers remain on the left side of the screen so that they are always visible.

How Rows and Columns Are Filled Automatically

When you enter a value in a cell, the cursor moves to the next cell. However, you can move the cursor to any cell and enter a value. If you leave gaps between cells, your device handles the gaps automatically.


Downloaded from www.Manualslib.com manuals search engine

- In a list variable, a cell in the gap is undefined until you enter a value for the cell.

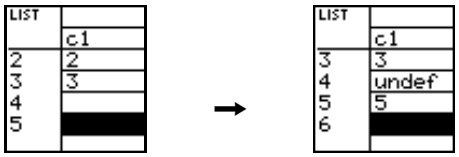


Note: If you enter more than one column of elements in a list variable, it is converted automatically into a data variable.

- In a data variable, gaps in a column are handled the same as a list. However, if you leave a gap between columns, that column is blank.

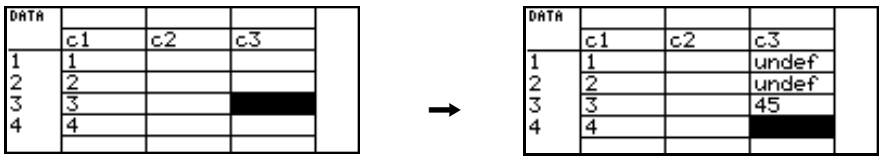

- In a matrix variable, when you enter a value in a cell outside the current boundaries, additional rows and/or columns are added automatically to the matrix to include the new cell. Other cells in the new rows and/or columns are filled with zeros.

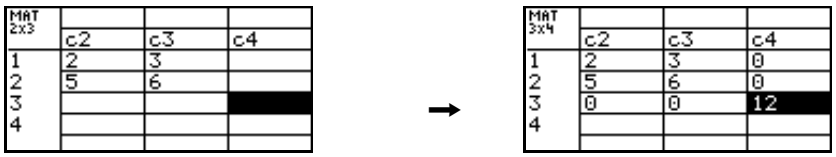

Note: Although you specify the size of a matrix when you create it, you can easily add additional rows and/or columns.

Downloaded from www.Manualslib.com manuals search engine

Changing the Cell Width

The cell width affects how many characters are displayed in any cell. To change the cell width in the Data/Matrix Editor:

1. To display the **FORMATS** dialog box, press:
   F1 **9**
   – or –
   ◆ |



Cell width is the maximum number of characters that can be displayed in a cell. All cells have the same cell width.

   Note: Remember, to see a number in full precision, you can always highlight the cell and look at the entry line.

2. With the current **Cell Width** setting highlighted, press ▶ or ◀ to display a menu of digits (**3** through **12**).
3. Move the cursor to highlight a number and press ENTER. (For single-digit numbers, you can type the number and press ENTER.)
4. Press ENTER to close the dialog box.

Downloaded from www.Manualslib.com manuals search engine

Clearing a Column or all Columns

This procedure erases the contents of a column. It does not delete the column.

To clear:	Do this:
A column	1. Move the cursor to any cell in the column. 2. Press: [2nd] [F6] and select **5:Clear Column**. (This item is not available for a matrix.)
All columns	Press [F1] and select **8:Clear Editor**. When prompted for confirmation, press [ENTER] (or [ESC] to cancel).

Note: For a list or data variable, a clear column is empty. For a matrix, a clear column contains zeros.

Defining a Column Header with an Expression

For a list variable or a column in a data variable, you can enter a function in the column header that automatically generates a list of elements. In a data variable, you can also define one column in terms of another.

Entering a Header Definition

In the Data/Matrix Editor:

Downloaded from www.Manualslib.com manuals search engine

1. Move the cursor to any cell in the column and press F4.

   – or –

   Move the cursor to the header cell (**c1**, **c2**, etc.) and press ENTER.

   Notes:

   - ENTER is not required if you want to type a new definition or replace the existing one. However, if you want to edit the existing definition, you must press ENTER.
   - To view an existing definition, press F4 or move the cursor to the header cell and look at the entry line.

2. Type the new expression, which replaces any existing definition.

   If you used F4 or ENTER in Step 1, the cursor moved to the entry line and highlighted the existing definition, if any. You can also:

   - Press CLEAR to clear the highlighted expression. Then type the new expression.

     – or –

Downloaded from www.Manualslib.com manuals search engine


- Press ◀ or ▶ to remove the highlighting. Then edit the old expression.

Note: To cancel any changes, press ESC before pressing ENTER.

You can use an expression that:	For example:
Generates a series of numbers.	c1=seq(x^2,x,1,5) c1={1,2,3,4,5}
Refers to another column.	c2=2∗c1 c4=c1∗c2–sin(c3)

Note: The seq function is described in the Technical Reference module. If you refer to an empty column, you will get an error message unless **Auto-calculate = OFF**.

3. Press ENTER, ▼, or ▲ to save the definition and update the columns.

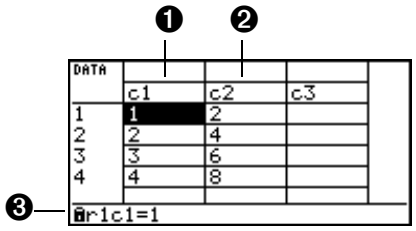

❶ c1=seq(x,x,1,7); ❷ c2=2∗c1; ❸ You cannot directly change a locked cell (🔒) since it is defined by the column header.

Note: For a data variable, header definitions are saved when you leave the Data/ Matrix Editor. For a list variable, the definitions are not saved (only their resulting cell values).

Downloaded from www.Manualslib.com manuals search engine

Clearing a Header Definition

1. Move the cursor to any cell in the column and press F4.

   – or –

   Move the cursor to the header cell (**c1**, **c2**, etc.) and press ENTER.
2. Press CLEAR to clear the highlighted expression.
3. Press ENTER, ⏷, or ⏶.

Using an Existing List as a Column

Suppose you have one or more existing lists, and you want to use those existing lists as columns in a data variable.

From the:	Do this:
Data/Matrix Editor	In the applicable column, use F4 to define the column header. Refer to the existing list variable. For example: c1=list1
Home screen or a program	Use the **NewData** command as described in the *Technical Reference* module. For example: **NewData** *datavar, list1* [*, list2*] [*, list3*] ... ❶ ❷

❶ Data variable. If this data variable already exists, it will be redefined based on the specified lists.
❷ Existing list variables to copy to columns in the data variable.

Downloaded from www.Manualslib.com manuals search engine

Note: If you have a CBL 2™ or CBR™, use these techniques for your collected lists. Use 2nd [VAR-LINK] to see existing list variables.

To Fill a Matrix with a List

You cannot use the Data/Matrix Editor to fill a matrix with a list. However, you can use the **list▶mat** command from the Home screen or a program. For information, refer to the *Technical Reference* module.

The Auto-calculate Feature

For list and data variables, the Data/Matrix Editor has an Auto-calculate feature. By default, Auto-calculate = ON. Therefore, if you make a change that affects a header definition (or any column referenced in a header definition), all header definitions are recalculated automatically. For example:

- If you change a header definition, the new definition is applied automatically.
- If column 2's header is defined as c2=2∗c1, any change you make in column 1 is automatically reflected in column 2.

To turn Auto-calculate off and on from the Data/Matrix Editor:

1. Press:
   F1 **9**

   – or –
2. ◆ [I] Change **Auto-Calculate** to **OFF** or **ON**.
3. Press ENTER to close the dialog box.



Downloaded from www.Manualslib.com manuals search engine

If **Auto-calculate = OFF** and you make changes as described above, the header definitions are not recalculated until you set **Auto-calculate = ON**.

Note: You may want to set **Auto-calculate = OFF** to make changes without recalculating each time, enter a definition such as c1=c2+c3 before you enter columns 2 and 3, or override any errors in a definition until you can debug the error.

Using Shift and CumSum Functions in a Column Header

When defining a column header, you can use the shift and **cumSum** functions as described below. These descriptions differ slightly from the *Technical Reference* module. This section describes how to use the functions in the Data/Matrix Editor. The *Technical Reference* module gives a more general description for the Home screen or a program.

Using the Shift Function

The **shift** function copies a base column and shifts it up or down by a specified number of elements. Use F4 to define a column header with the syntax:


shift (*column* [,*integer*]**)**

❶ ❷

❶ Column used as the base for the shift.
❷ Number of elements to shift (positive shifts up; negative shifts down). Default is -1.

For example, for a two-element shift up and down:

Downloaded from www.Manualslib.com manuals search engine

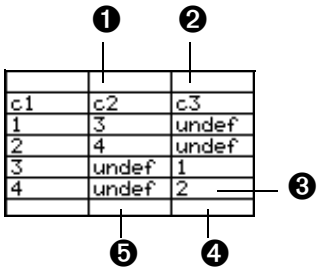

❶ c2=shift(c1,2)
❷ c3=shift(c1,-2)
❸ Shifted columns have the same length as the base
❹ Last two elements of c1 shift down and out the bottom; undefined elements shift into the top.
❺ First two elements of c1 shift up and out the top; undefined elements shift into the bottom.

Note: To enter shift, type it from the keyboard or select it from the CATALOG.


Using the CumSum Function

The **cumSum** function returns a cumulative sum of the elements in a base column. Use F4 to define a column header with the syntax:

cumSum (*column***)**

column — Column used as the base for the cumulative sum.

For example:

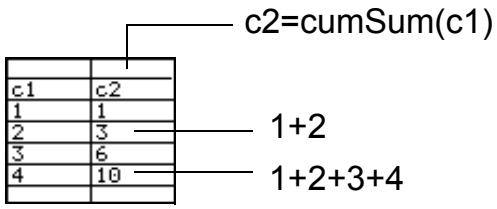

Note: To enter **cumSum**, type it, select it from the CATALOG, or press 2nd [MATH] and select it from the List submenu.

Downloaded from www.Manualslib.com manuals search engine

Sorting Columns

After entering information in a data, list, or matrix variable, you can easily sort a specified column in numeric or alphabetical order. You can also sort all columns as a whole, based on a “key” column.

Sorting a Single Column


In the Data/Matrix Editor:



1. Move the cursor to any cell in the column.
2. Press:
   2nd [F6] and select **3:Sort Column**.

   Numbers are sorted in ascending order.

   Character strings are sorted in alphabetical order.

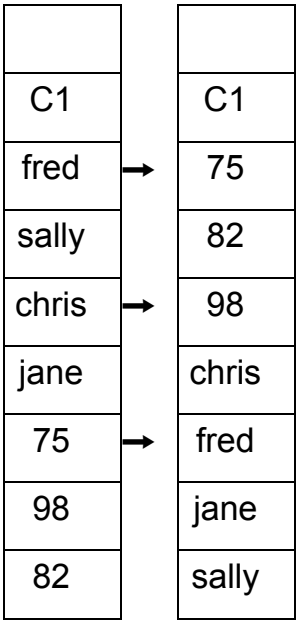

Downloaded from www.Manualslib.com manuals search engine


Sorting All Columns Based on a “Key” Column

Consider a database structure in which each column along the same row contains related information (such as a student’s first name, last name, and test scores). In such a case, sorting only a single column would destroy the relationship between the columns.

In the Data/Matrix Editor:

1. Move the cursor to any cell in the “key” column.
2. In this example, move the cursor to the second column (**c2**) to sort by last name.


   Note: For a **list** variable, this is the same as sorting a single column.

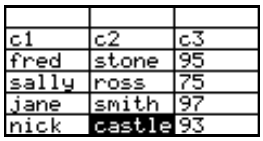

c1	c2	c3
fred	stone	95
sally	ross	75
jane	smith	97
nick	castle	93

3. Press:
   2nd [F6] and select **4:Sort Col**, adjust all.

   Note: This menu item is not available if any column is locked.

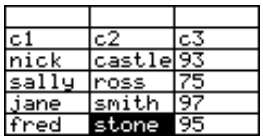

c1	c2	c3
nick	castle	93
sally	ross	75
jane	smith	97
fred	stone	95

When using this procedure for a data variable:

- All columns must have the same length.
- None of the columns can be locked (defined by a function in the column header). When the cursor is in a locked column, 🔒 is shown at the beginning of the entry line.

Downloaded from www.Manualslib.com manuals search engine

Saving a Copy of a List, Data, or Matrix Variable

You can save a copy of a list, data, or matrix variable. You can also copy a list to a data variable, or you can select a column from a data variable and copy that column to a list.

Valid Copy Types

You can copy a:	To a:
List	List or data
Data	Data
Data column	List
Matrix	Matrix

Note: A list is automatically converted to a data variable if you enter more than one column of information.

Procedure

From the Data/Matrix Editor:

1. Display the variable that you want to copy.


Downloaded from www.Manualslib.com manuals search engine

2. Press F1 and select **2:Save Copy As**.

3. In the dialog box:

   - Select the **Type** and **Folder** for the copy.
   - Type a variable name for the copy.
   - When available, select the column to copy from.

   Note: If you type the name of an existing variable, its contents will be replaced.

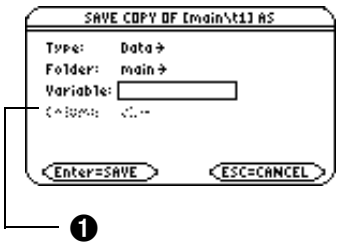


❶ Column is dimmed unless you copy a data column to a list. The column information is not used for other types of copies.

4. Press ENTER (after typing in an input box such as Variable, you must press ENTER twice).

To Copy a Data Column to a List

A data variable can have multiple columns, but a list variable can have only one column. Therefore, when copying from a data variable to a list, you must select the column that you want to copy.

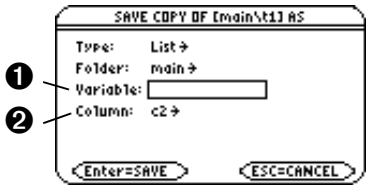

❶ List variable to copy to.

❷ Data column that will be copied to the list. By default, this shows the column that contains the cursor.

Downloaded from www.Manualslib.com manuals search engine

Downloaded from www.Manualslib.com manuals search engine


Statistics and Data Plots

Overview of Steps in Statistical Analysis


This section gives an overview of the steps used to perform a statistical calculation or graph a statistical plot. For detailed descriptions, refer to the following pages.

1. Set Graph mode (MODE) to **FUNCTION**.
2. Enter stat data in the Data/Matrix Editor.

   Note: Refer to the Data/Matrix Editor module for details on entering data in the Data/Matrix Editor.

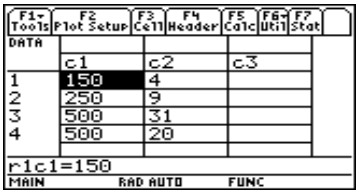


3. Perform stat calculations to find stat variables or fit data to a model (F5).

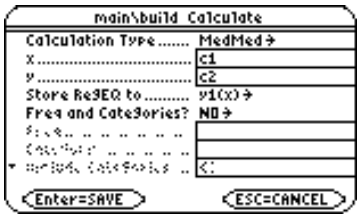

4. Define and select stat plots (F2 and then F1).

   Note: You can also use the Y= Editor to define and select stat plots and **y(x)** functions.

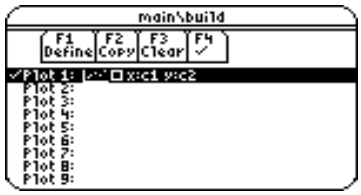


5. Define the viewing window (♦ [WINDOW]).

Downloaded from www.Manualslib.com manuals search engine

6. Change the graph format if necessary.

7. F1 **9**
   — or —
   [calculator] [◆] [|]
   Graph the selected equations ([◆] [GRAPH]).

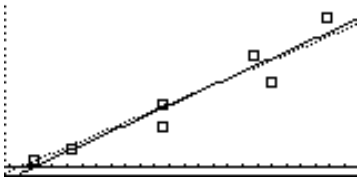

Performing a Statistical Calculation

From the Data/Matrix Editor, use the F5 **Calc** toolbar menu to perform statistical calculations. You can analyze one-variable or two-variable statistics, or perform several types of regression analyses.

The Calculate Dialog Box

You must have a data variable opened. The Data/Matrix Editor will not perform statistical calculations with a list or matrix variable.


Downloaded from www.Manualslib.com manuals search engine

From the Data/Matrix Editor:

1. Press F5 to display the **Calculate** dialog box.

   This example shows all items as active. On your calculator, items are active only if they are valid for the current settings of **Calculation Type** and **Freq and Categories.**

   Note: If an item is not valid for the current settings, it will appear dimmed. You cannot move the cursor to a dimmed item

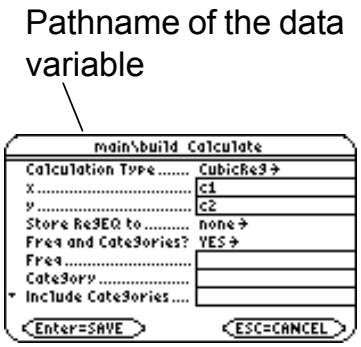

Downloaded from www.Manualslib.com manuals search engine

2. Specify applicable settings for the active items.

Item	Description
Calculation Type	Select the type of calculation.
x	Type the column number in the Data/Matrix Editor (**C1**, **C2**, etc.) used for x values, the independent variable.
Y	Type the column number used for y values, the dependent variable. This is required for all **Calculation Types** except **OneVar**.
Store RegEQ to	If Calculation Type is a regression analysis, you can select a function name (**y1(x)**, **y2(x)**, etc.). This lets you store the regression equation so that it will be displayed in the Y= Editor.
Use Freq and Categories?	Select **NO** or **YES**. Note that Freq, Category, and Include Categories are active only when Use Freq and Categories? = YES.
Freq	Type the column number that contains a “weight” value for each data point. If you do not enter a column number, all data points are assumed to have the same weight (1).
Category	Type the column number that contains a category value for each data point.
Include Categories	If you specify a Category column, you can use this item to limit the calculation to specified category values. For example, if you specify {1,4}, the calculation uses only data points with a category value of 1 or 4.


Downloaded from www.Manualslib.com manuals search engine

Note: To use an existing list variable for x, y, Freq, or Category, type the list name instead of a column number. An example using Freq, Category, and Include Categories is available.

3. Press ENTER after typing in an input box, press ENTER twice).

   The results are displayed on the **STAT VARS** screen. The format depends on the **Calculation Type**. For example:

For Calculation Type = OneVar

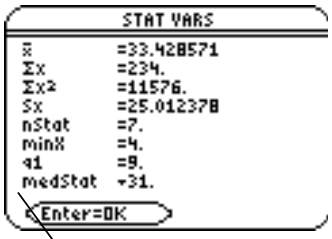

When ▼ is shown instead of =, you can scroll for additional results.

For Calculation Type = LinReg



Note: Any undefined data points (shown as **undef**) are ignored in a stat calculation.

4. To close the **STAT VARS** screen, press ENTER.

Redisplaying the STAT VARS Screen

The Data/Matrix Editor's Stat toolbar menu redisplays the previous calculation results (until they are cleared from memory).

2nd [F7]

Downloaded from www.Manualslib.com manuals search engine

Previous results are cleared when you:

- Edit the data points or change the Calculation Type.
- Open another data variable or reopen the same data variable (if the calculation referred to a column in a data variable). Results are also cleared if you leave and then reopen the Data/Matrix Editor with a data variable.
- Change the current folder (if the calculation referred to a list variable in the previous folder).

Statistical Calculation Types


As described in the previous section, the Calculate dialog box lets you specify the statistical calculation you want to perform. This section gives more information about the calculation types.

Downloaded from www.Manualslib.com manuals search engine

Selecting the Calculation Type

From the Calculate dialog box (F5), highlight the current setting for the **Calculation Type** and press ⊙.

You can then select from a menu of available types.

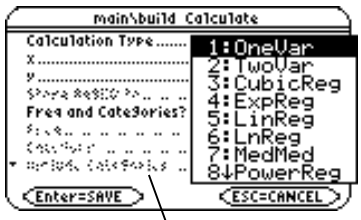

If an item is dimmed, it is not valid for the current Calculation Type.

Calc Type	Description
OneVar	One-variable statistics — Calculates the statistical variables.
TwoVar	Two-variable statistics — Calculates the statistical variables.
CubicReg	Cubic regression — Fits the data to the third-order polynomial $\mathbf{y=ax^3+bx^2+cx+d}$. You must have at least four data points. • For four points, the equation is a polynomial fit. • For five or more points, it is a polynomial regression.
ExpReg	Exponential regression — Fits the data to the model equation $\mathbf{y=ab^x}$ (where a is the y-intercept) using a least-squares fit and transformed values **x** and **ln(y)**.

Downloaded from www.Manualslib.com manuals search engine

Calc Type	Description
LinReg	Linear regression — Fits the data to the model **y=ax+b** (where a is the slope, and b is the y-intercept) using a least-squares fit and x and y.
LnReg	Logarithmic regression — Fits the data to the model equation **y=a+b ln(x)** using a least-squares fit and transformed values **ln(x)** and **y**.
Logistic	Logistic regression — Fits the data to the model **y=a/(1+b∗e^(c∗x))+d** and updates all the system statistics variables.
MedMed	Median-Median — Fits the data to the model **y=ax+b** (where a is the slope, and b is the y-intercept) using the median-median line, which is part of the resistant line technique. Summary points **medx1**, **medy1**, **medx2**, **medy2**, **medx3**, and **medy3** are calculated and stored to variables, but they are not displayed on the STAT VARS screen.
PowerReg	Power regression — Fits the data to the model equation $\mathbf{y=ax^b}$ using a least-squares fit and transformed values **ln(x)** and **ln(y)**.
QuadReg	Quadratic regression — Fits the data to the second-order polynomial $\mathbf{y=ax^2+bx+c}$. You must have at least three data points. • For three points, the equation is a polynomial fit. • For four or more points, it is a polynomial regression.

Downloaded from www.Manualslib.com manuals search engine

Calc Type	Description
QuartReg	Quartic regression — Fits the data to the fourth-order polynomial **$y=ax^4+bx^3+cx^2+dx+e$**. You must have at least five data points. • For five points, the equation is a polynomial fit. • For six or more points, it is a polynomial regression.
SinReg	Sinusoidal regression — Calculates the sinusoidal regression and updates all the system statistics variables. The output is always in radians, regardless of the angle mode setting.

Note: For **TwoVar** and all regression calculations, the columns that you specify for x and y (and optionally, Freq or Category) must have the same length.

From the Home Screen or a Program

Use the applicable command for the calculation that you want to perform. The commands have the same name as the corresponding Calculation Type. Refer to the *Technical Reference* module for information about each command.

Important: These commands perform a statistical calculation but do not automatically display the results. Use the **ShowStat** command to show the calculation results.

Statistical Variables

Statistical calculation results are stored to variables. To access these variables, type the variable name or use the VAR-LINK screen as described in *Memory and Variable*

Downloaded from www.Manualslib.com manuals search engine

Management. All statistical variables are cleared when you edit the data or change the calculation type. Other conditions that clear the variables are listed.

Calculated Variables

Statistical variables are stored as system variables. However, **regCoef** and **regeq** are treated as a list and a function variable, respectively.

	One Var	Two Var	Regressions
mean of x values	$\bar{x}$	$\bar{x}$	
sum of x values	Σx	Σx	
sum of x^2 values	Σx^2	Σx^2	
sample std. deviation of x	Sx	Sx	
population std. deviation of x	σx	σx	
number of data points	nStat	nStat	
mean of y values		$\bar{y}$	
sum of y values		Σy	
sum of y^2 values		Σy^2	
sample standard deviation of y		Sy	
population std. deviation of y		σy	
sum of x ∗y values		Σxy	
minimum of x values	minX	minX	

Downloaded from www.Manualslib.com manuals search engine

	One Var	Two Var	Regressions
maximum of x values	maxX	maxX	
minimum of y values		minY	
maximum of y values		maxY	
1st quartile	q1		
median	medStat		
3rd quartile	q3		
regression equation			regeq
regression coefficients (a, b, c, d, e)			regCoef
correlation coefficient ††			corr
coefficient of determination ††			R^2
summary points (MedMed only) †			medx1, medy1, medx2, medy2, medx3, medy3

†† **corr** is defined for a linear regression only; **R^2** is defined for all polynomial regressions.

Note:

- If **regeq** is 4x + 7, then **regCoef** is {4 7}. To access the "*a*" coefficient (the 1st element in the list), use an index such as **regCoef[1]**.

Downloaded from www.Manualslib.com manuals search engine

- 1st quartile is the median of points between **minX** and **medStat**, and 3rd quartile is the median of points between **medStat** and **maxX**.


Defining a Statistical Plot

From the Data/Matrix Editor, you can use the entered data to define several types of statistical plots. You can define up to nine plots at a time.

Procedure

From the **Data/Matrix Editor**:


1. Press F2 to display the **Plot Setup** screen. Initially, none of the plots are defined.
2. Move the cursor to highlight the plot number that you want to define.

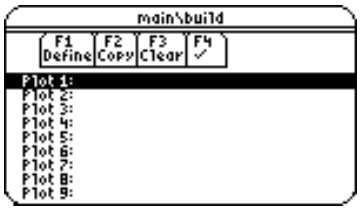

3. Press F1 to define the plot.

   This example shows all items as active. On your calculator, items are active only if they are valid for the current setting of **Plot Type** and use **Freq and Categories?**.

   Note: If an item is not valid for the current settings, it will appear dimmed. You cannot move the cursor to a dimmed item.

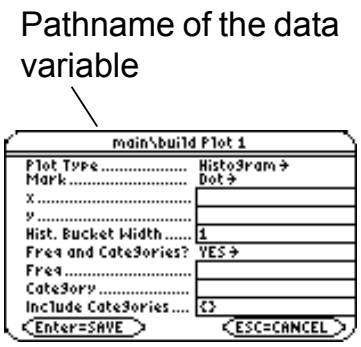

Downloaded from www.Manualslib.com manuals search engine

4. Specify applicable settings for the active items.

Item	Description
Plot Type	Select the type of plot.
Mark	Select the symbol used to plot the data points: Box (□), Cross (x), Plus (+), Square (▭), or Dot (•).
x	Type the column number in the Data/Matrix Editor (**C1**, **C2**, etc.) used for x values, the independent variable.
y	Type the column number used for y values, the dependent variable. This is active only for Plot Type = Scatter or xyline.
Hist. Bucket Width	Specifies the width of each bar in a histogram.
Freq and Categories?	Select **NO** or **YES**. Note that Freq, Category, and Include Categories are active only when Freq and Categories? = YES. (Freq is active only for Plot Type = Box Plot or Histogram.)
Freq	Type the column number that contains a “weight” value for each data point. If you do not enter a column number, all data points are assumed to have the same weight (1).
Category	Type the column number that contains a category value for each data point.
Include Categories	If you specify a Category, you can use this to limit the calculation to specified category values. For example, if you specify {1,4}, the plot uses only data points with a category value of 1 or 4.

Note:

Downloaded from www.Manualslib.com manuals search engine


- Plots defined with column numbers always use the last data variable in the Data/Matrix Editor, even if that variable was not used to create the definition.
- To use an existing list variable for x, y, Freq, or Category, type the list name instead of the column number.
- An example using Freq, Category, and Include Categories is available.


5. Press ENTER (after typing in an input box, press ENTER twice).

   The **Plot Setup** screen is redisplayed.

   The plot you just defined is automatically selected for graphing.

   Notice the shorthand definition for the plot.

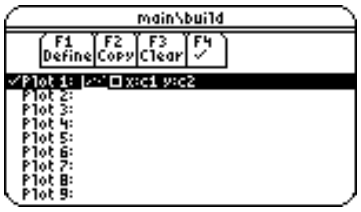

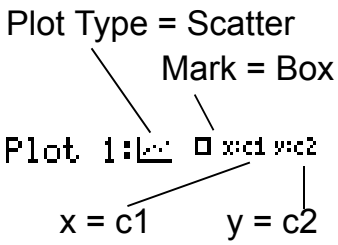

Note: Any undefined data points (shown as **undef**) are ignored in a stat plot.

Selecting or Deselecting a Plot

From Plot Setup, highlight the plot and press F4 to toggle it on or off. If a stat plot is selected, it remains selected when you:

- Change the graph mode. (Stat plots are not graphed in 3D mode.)


Downloaded from www.Manualslib.com manuals search engine

- Execute a Graph command.
- Open a different variable in the Data/Matrix Editor.

Copying a Plot Definition

From **Plot Setup**:

1. Highlight the plot and press F2.
2. Press ▶ and select the plot number that you want to copy to.
3. Press ENTER.

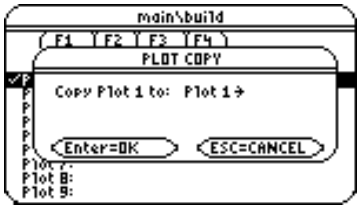

Note: If the original plot was selected (✓), the copy is also selected.

Clearing a Plot Definition

From Plot Setup, highlight the plot and press F3. To redefine an existing plot, you do not necessarily need to clear it first; you can make changes to the existing definition. To prevent a plot from graphing, you can deselect it.

Statistical Plot Types


When you define a plot as described in the previous section, the Plot Setup screen lets you select the plot type. This section gives more information about the available plot types.

Downloaded from www.Manualslib.com manuals search engine

Scatter


Data points from x and y are plotted as coordinate pairs. Therefore, the columns or lists that you specify for x and y must be the same length.

- Plotted points are shown with the symbol that you select as the Mark.
- If necessary, you can specify the same column or list for both x and y.

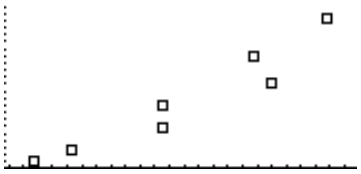

Xyline

This is a scatter plot in which data points are plotted and connected in the order in which they appear in x and y.

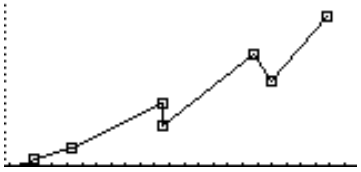

You may want to sort all the columns in the Data/Matrix Editor before plotting.


[2nd] [F6] **3** or [2nd] [F6] **4**

Downloaded from www.Manualslib.com manuals search engine

Box Plot

This plots one-variable data with respect to the minimum and maximum data points (**minX** and **maxX**) in the set.

- A box is defined by its first quartile (**Q1**), median (**Med**), and third quartile (**Q3**).
- Whiskers extend from **minX** to **Q1** and from **Q3** to **maxX**.

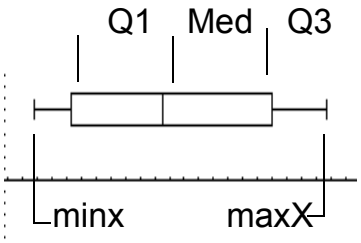

- When you select multiple box plots, they are plotted one above the other in the same order as their plot numbers.
- Use NewPlot to show statistical data as a modified box plot.
- Select Mod Box Plot as the Plot Type when you define a plot in the Data/Matrix Editor.

A modified box plot excludes points outside the interval [**Q1**−**X, Q3+X**], where X is defined as **1.5 (Q3**−**Q1)**. These points, called outliers, are plotted individually beyond the box plot's whiskers, using the mark that you select.


Downloaded from www.Manualslib.com manuals search engine

Histogram

This plots one-variable data as a histogram. The x axis is divided into equal widths called buckets or bars. The height of each bar (its y value) indicates how many data points fall within the bar's range.

- When defining the plot, you can specify the **Hist. Bucket Width** (default is 1) to set the width of each bar.
- A data point at the edge of a bar is counted in the bar to the right.


$$\text{Number of bars} = \frac{\text{xmax} - \text{xmin}}{\text{Hist. Bucket Width}}$$

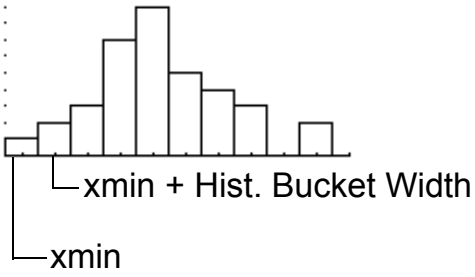

- **ZoomData** (F2 **9** from the Graph screen, Y= Editor, or Window Editor) adjusts **xmin** and **xmax** to include all data points, but it does not adjust the y axis.
  - Use ♦ [WINDOW] to set **ymin = 0** and **ymax** = the number of data points expected in the tallest bar.

Downloaded from www.Manualslib.com manuals search engine

- When you trace (F3) a histogram, the screen shows information about the traced bar.

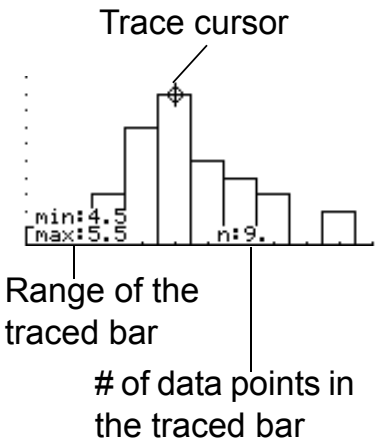

Using the Y= Editor with Stat Plots


The previous sections described how to define and select stat plots from the Data/Matrix Editor. You can also define and select stat plots from the Y= Editor.

Downloaded from www.Manualslib.com manuals search engine

Showing the List of Stat Plots

Press ◆ [Y=] to display the Y= Editor. Initially, the nine stat plots are located “off the top” of the screen, above the **y(x)** functions. However, the PLOTS indicator provides some information.


For example, PLOTS 23 means that Plots 2 & 3 are selected.

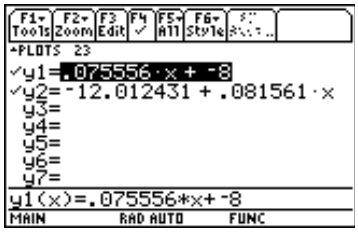

To see the list of stat plots, use ▲ to scroll above the **y(x)** functions.

If a Plot is highlighted, this shows the data variable that will be used for the plots.

If a Plot is defined, it shows the same shorthand notation as the Plot Setup screen.

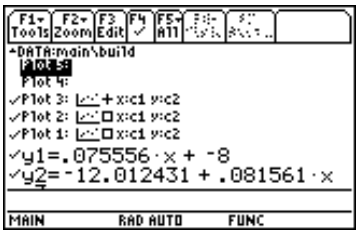

From the Y= Editor, you can perform most of the same operations on a stat plot as you can on any other **y(x)** function.

Downloaded from www.Manualslib.com manuals search engine

Note: Plots defined with column numbers always use the last data variable in the Data/Matrix Editor, even if that variable was not used to create the definition.

To:	Do this:
Edit a plot definition	Highlight the plot and press F3. You will see the same definition screen that is displayed in the Data/Matrix Editor.
Select or deselect a plot	Highlight the plot and press F4.
Turn all plots and/or functions off	Press F5 and select the applicable item. You can also use this menu to turn all functions on.

Note: You can not use 2nd F6 to set a plot's display style. However, the plot definition lets you select the mark used for the plot.

To Graph Plots and Y= Functions

As necessary, you can select and graph stat plots and **y(x)** functions at the same time.

Graphing and Tracing a Defined Stat Plot

After entering the data points and defining the stat plots, you can graph the selected plots by using the same methods you used to graph a function from the Y= Editor (as described in *Basic Function Graphing*).

Downloaded from www.Manualslib.com manuals search engine


Defining the Viewing Window

Stat plots are displayed on the current graph, and they use the Window variables that are defined in the Window Editor.

Use ♦ [WINDOW] to display the Window Editor. You can either:

- Enter appropriate values.
  — or —
- Select **9:ZoomData** from the F2 **Zoom** toolbar menu. (Although you can use any zoom, **ZoomData** is optimized for st plots.)

ZoomData sets the viewing window to display all statistical data points.

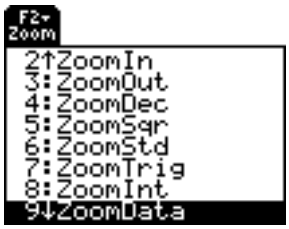


For histograms and box plots, only **xmin** and **xmax** are adjusted. If the top of a histogram is not shown, trace the histogram to find the value for **ymax**.

Note: F2 **Zoom** is available on the Y= Editor, Window Editor, and Graph screen.

Downloaded from www.Manualslib.com manuals search engine

Changing the Graph Format

Press:
F1 **9**
— or —
[calculator] ♦ |
from the Y= Editor, Window Editor, or Graph screen.

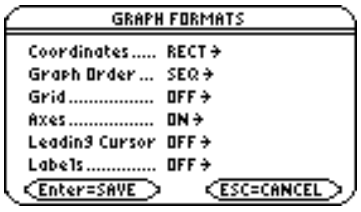

Then change the settings as necessary.

Tracing a Stat Plot

From the Graph screen, press F3 to trace a plot. The movement of the trace cursor depends on the Plot Type.

Plot Type	Description
Scatter or xyline	Tracing begins at the first data point.
Box plot	Tracing begins at the median. Press ◀ to trace to **Q1** and **minX**. Press ▶ to trace to **Q3** and **maxX**.
Histogram	The cursor moves from the top center of each bar, starting from the leftmost bar.

Note: When a stat plot is displayed, the Graph screen does not automatically pan if you trace off the left or right side of the screen. However, you can still press ENTER to center the screen on the trace cursor.

Downloaded from www.Manualslib.com manuals search engine

When you press ▲ or ▼ to move to another plot or **y(x)** function, tracing moves to the current or beginning point on that plot (not to the nearest pixel).

Using Frequencies and Categories

To manipulate the way in which data points are analyzed, you can use frequency values and/or category values. Frequency values let you “weight” particular data points. Category values let you analyze a subset of the data points.

Example of a Frequency Column

In a data variable, you can use any column in the Data/Matrix Editor to specify a frequency value (or weight) for the data points on each row. A frequency value must be an integer ≥ 0 if Calculation Type = OneVar or MedMed or if Plot Type = Box Plot. For other statistical calculations or plots, the frequency value can be any number ≥ 0.

For example, suppose you enter a student’s test scores, where:

- The mid-semester exam is weighted twice as much as other tests.
- The final exam is weighted three times as much.

Downloaded from www.Manualslib.com manuals search engine

- In the Data/Matrix Editor, you can enter the test scores and frequency values in two columns.

Test scores	Frequency values
c1	c2
85	1
97	1
92	2
89	1
91	1
95	3

These weighted scores are equivalent to the single column of scores listed to the right.


c1
85
97
92 ❶
92 ❶
89
91
95 ❷
95 ❷
95 ❷

❶ Frequency of 2
❷ Frequency of 3

Note: A frequency value of 0 effectively removes the data point from analysis.

To use frequency values, specify the frequency column when you perform a statistical calculation or define a stat plot. For example:

Downloaded from www.Manualslib.com manuals search engine

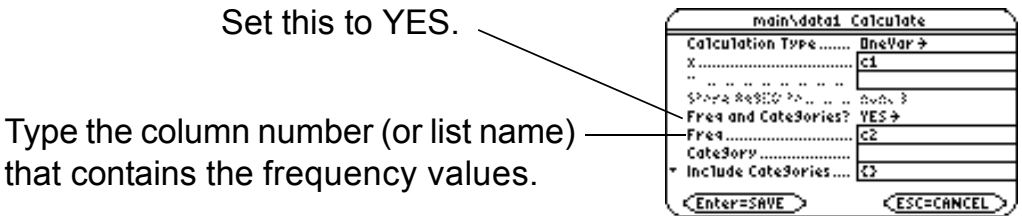

Note: You can also use frequency values from a list variable instead of a column.

Example of a Category Column

In a data variable, you can use any column to specify a category (or subset) value for the data points on each row. A category value can be any number.

Suppose you enter the test scores from a class that has 10th and 11th grade students. You want to analyze the scores for the whole class, but you also want to analyze categories such as 10th grade girls, 10th grade boys, 10th grade girls and boys, etc.

First, determine the category values you want to use.

Category Value	Used to indicate:
1	10th grade girl
2	10th grade boy
3	11th grade girl
4	11th grade boy

Note: You do not need a category value for the whole class. Also, you do not need category values for all 10th graders or all 11th graders since they are combinations of other categories.


Downloaded from www.Manualslib.com manuals search engine

In the Data/Matrix Editor, you can enter the scores and the category values in two columns.

Test scores	Category values
c1	c2
85	1
97	3
92	2
88	3
90	2
95	1
79	4
68	2
92	4
84	3
82	1

To use category values, specify the category column and the category values to include in the analysis when you perform a statistical calculation or define a stat plot.

Downloaded from www.Manualslib.com manuals search engine

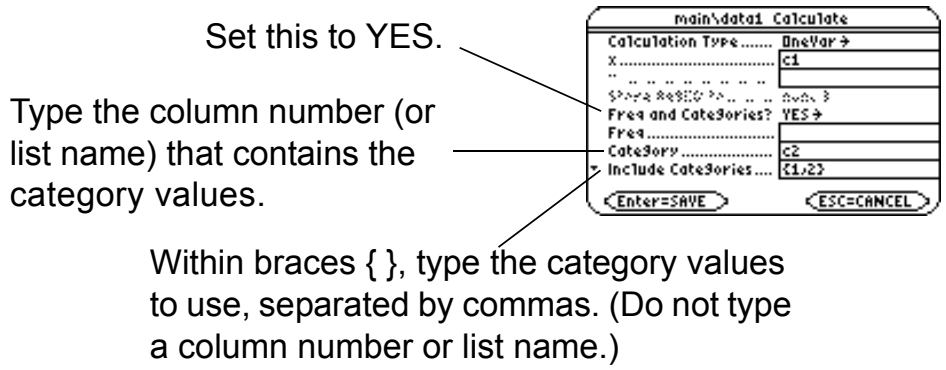
Set this to YES.
Type the column number (or list name) that contains the category values.
Within braces { }, type the category values to use, separated by commas. (Do not type a column number or list name.)
main\data1 Calculate
Calculation Type..... OneVar
X..... c1
Freq and Categories? YES
Freq.....
Category..... c2
Include Categories.... {1,2}
Enter=SAVE
ESC=CANCEL

Note: You can also use category values from a list variable instead of a column.

To analyze:	Include Categories:
10th grade girls	{1}
10th grade boys	{2}
10th grade girls and boys	{1,2}
11th grade girls	{3}
11th grade boys	{4}
11th grade girls and boys	{3,4}
all girls (10th and 11th)	{1,3}
all boys (10th and 11th)	{2,4}

Note: To analyze the whole class, leave the Category input box blank. Any category values are ignored.

Downloaded from www.Manualslib.com manuals search engine

If You Have a CBL 2™ or CBR™

The Calculator-Based Laboratory™ System (CBL 2) and Calculator-Based Ranger™ System (CBR) are optional accessories, available separately, that let you collect data from a variety of real-world experiments. TI-89 Titanium, CBL 2 and CBR programs are available from the TI web site at education.ti.com.

How CBL 2™ Data Is Stored

When you collect data with the CBL 2, that data is initially stored in the CBL 2 unit itself. You must then retrieve the data (transfer it to the TI-89 Titanium) by using the **Get** command, which is described in the *Technical Reference* module.

Although each set of retrieved data can be stored in several variable types (list, real, matrix, pic), using list variables makes it easier to perform statistical calculations.

When you transfer the collected information to the TI-89 Titanium, you can specify the list variable names that you want to use.

For example, you can use the CBL 2 to collect temperature data over a period of time. When you transfer the data, suppose you store:

- Temperature data in a list variable called *temp*.
- Time data in a list variable called *time*.


After you store the CBL 2 information on the TI-89 Titanium, there are two ways to use the CBL 2 list variables.

Downloaded from www.Manualslib.com manuals search engine

Note: For specifics about using the CBL 2 and retrieving data to the TI-89 Titanium, refer to the guidebook that comes with the CBL 2 unit.

Referring to the CBL 2™ Lists

When you perform a statistical calculation or define a plot, you can refer explicitly to the CBL 2 list variables. For example:

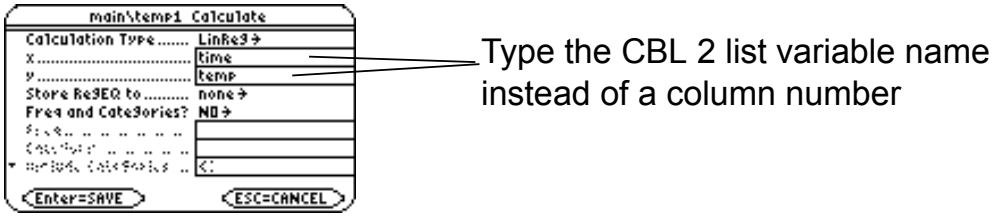

Creating a Data Variable with the CBL 2™ Lists

You can create a new data variable that consists of the necessary CBL 2 list variables.

Downloaded from www.Manualslib.com manuals search engine

- From the Home screen or a program, use the **NewData** command.

  NewData *dataVar*, *list1* [,*list2*] [,*list3*] ...

  list1 [,*list2*] [,*list3*] ... — CBL 2 list variable names. In the new data variable, list1 will be copied to column 1, list 2 to column 2, etc.

  dataVar — Name of the new data variable that you want to create.


  For example:

  NewData *temp1*, *time*, *temp*

  creates a data variable called *temp1* in which time is in column 1 and *temp* is in column 2.

- From the Data/Matrix Editor, create a new, empty data variable with the applicable name. For each CBL 2 list that you want to include, define a column header as that list name.

  For example, define column 1 as time, column 2 as temp.

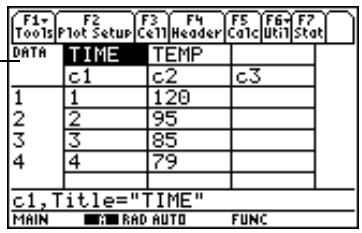

  Note: To define or clear a column header, use F4. For more information, refer to the *Data/Matrix Editor* module.

  At this point, the columns are linked to the CBL 2 lists. If the lists are changed, the columns will be updated automatically. However, if the lists are deleted, the data will be lost.

  To make the data variable independent of the CBL 2 lists, clear the column header for each column. The information remains in the column, but the column is no longer linked to the CBL 2 list.

Downloaded from www.Manualslib.com manuals search engine

CBR™

You can also use the Calculator-Based Ranger™ (CBR) to explore the mathematical and scientific relationships between distance, velocity, acceleration, and time using data collected from activities you perform.

Downloaded from www.Manualslib.com manuals search engine

Programming

Running an Existing Program

After a program is created (as described in the remaining sections of this module), you can run it from the Home screen. The program's output, if any, is displayed on the Program I/O screen, in a dialog box, or on the Graph screen.

Running a Program

On the Home screen:

1. Type the name of the program.

2. You must always type a set of parentheses after the name.

   Some programs require you to pass an argument to the program.

   Note: Use [2nd] [VAR-LINK] to list existing **PRGM** variables. Highlight a variable and press [ENTER] to paste its name to the entry line.

   ```
   prog1()
   ```
   └ If arguments are not required

   ```
   prog1(x,y)
   ```
   └ If arguments are required

3. Press [ENTER].

Downloaded from www.Manualslib.com manuals search engine

Note: Arguments specify initial values for a program.


When you run a program, the TI-89 Titanium automatically checks for errors. For example, the following message is displayed if you:

- Do not enter ( ) after the program name.



This error message appears if you:

- Do not enter enough arguments, if required.

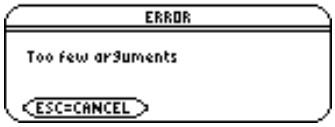

To cancel program execution if an error occurs, press ESC. You can then correct any problems and run the program again.

Note: The TI-89 Titanium also checks for run-time errors that are found within the program itself.

"Breaking" a Program

When a program is running, the BUSY indicator is displayed in the status line.

Downloaded from www.Manualslib.com manuals search engine

Press [ON] to stop program execution. A message is then displayed.



- To display the program in the Program Editor, press [ENTER]. The cursor appears at the command where the break occurred.
- To cancel program execution, press [ESC].

Where Is the Output Displayed?

Depending on the commands in the program, the TI-89 Titanium automatically displays information on the applicable screen.


- Most output and input commands use the Program I/O screen. (Input commands prompt the user to enter information.)
- Graph-related commands typically use the Graph screen.

After the program stops, the TI-89 Titanium shows the last screen that was displayed.

The Program I/O Screen

On the Program I/O screen, new output is displayed below any previous output (which may have been displayed earlier in the same program or a different program). After a full page of output, the previous output scrolls off the top of the screen.

Downloaded from www.Manualslib.com manuals search engine

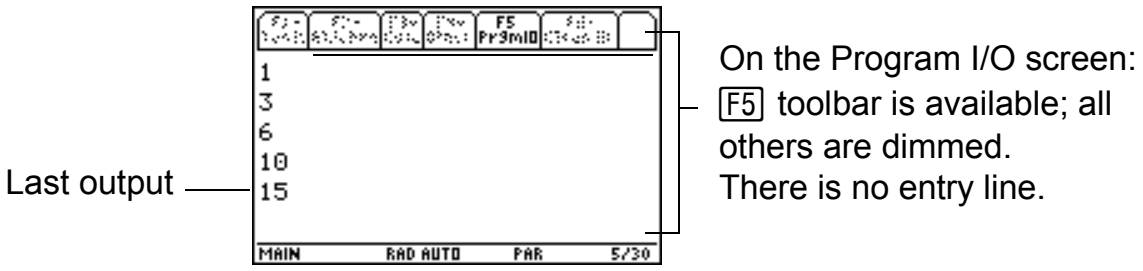

Note: To clear any previous output, enter the **ClrIO** command in your program. You can also execute **ClrIO** from the Home screen.

When a program stops on the Program I/O screen, you need to recognize that it is not the Home screen (although the two screens are similar). The Program I/O screen is used only to display output or to prompt the user for input. You cannot perform calculations on this screen.

Note: If Home screen calculations don't work after you run a program, you may be on the Program I/O screen.

Leaving the Program I/O Screen

From the Program I/O screen:

- Press F5 to toggle between the Home screen and the Program I/O screen.

  – or –

- Press ESC, 2nd [QUIT], or
  HOME
  [CALC HOME]to display the Home screen.

  – or –

- Display any other application screen (with APPS, ◆ [Y=], etc.).


Downloaded from www.Manualslib.com manuals search engine

Starting a Program Editor Session

Each time you start the Program Editor, you can resume the current program or function (that was displayed the last time you used the Program Editor), open an existing program or function, or start a new program or function.

Starting a New Program or Function

1. Press APPS and then select **Program Editor**.
2. Select **3:New**.
3. Specify the applicable information for the new program or function.

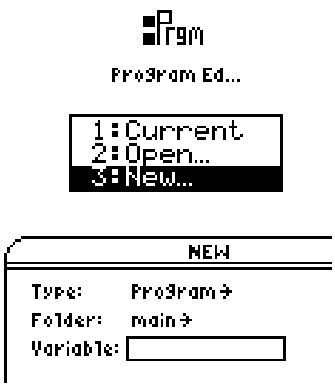


Item	Lets you:
Type	Select whether to create a new program or function. 
Folder	Select the folder in which the new program or function will be stored. For information about folders, refer to the *Calculator Home Screen* module.

Downloaded from www.Manualslib.com manuals search engine

Item	Lets you:
Variable	Type a variable name for the program or function. If you specify a variable that already exists, an error message will be displayed when you press ENTER. When you press ESC or ENTER to acknowledge the error, the **NEW** dialog box is redisplayed.

4. Press ENTER (after typing in an input box such as **Variable**, you must press ENTER twice) to display an empty "template."

This is the template for a program. Functions have a similar template.

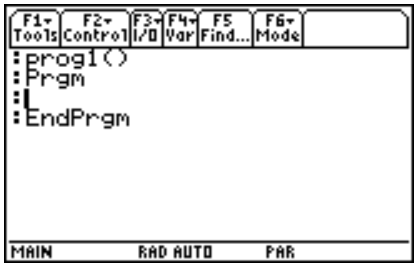

You can now use the Program Editor as described in the remaining sections of this module.

Note: A program (or function) is saved automatically as you type. You do not need to save it manually before leaving the Program Editor, starting a new program, or opening a previous one.

Resuming the Current Program


You can leave the Program Editor and go to another application at any time. To return to the program or function that was displayed when you left the Program Editor, launch Program Editor again and select **1:Current**.

Downloaded from www.Manualslib.com manuals search engine

Starting a New Program from the Program Editor

To leave the current program or function and start a new one:

1. Press F1 and select **3:New**.
2. Specify the type, folder, and variable for the new program or function.
3. Press ENTER twice.

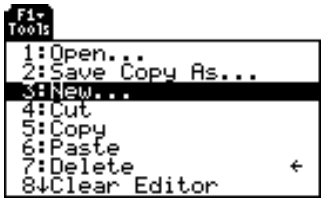

Opening a Previous Program


You can open a previously created program or function at any time.

1. From within the **Program Editor**, press F1 and select **1:Open**.

   – or –

   From another application, launch Program Editor again and select **2:Open**.

2. Select the applicable type, folder, and variable.
3. Press ENTER.

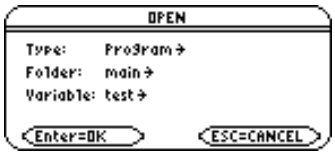

Note: By default, Variable shows the first existing program or function in alphabetical order.

Downloaded from www.Manualslib.com manuals search engine

Copying a Program

In some cases, you may want to copy a program or function so that you can edit the copy while retaining the original.

1. Display the program or function you want to copy.
2. Press F1 and select **2:Save Copy As**.
3. Specify the folder and variable for the copy.
4. Press ENTER twice.

Note about Deleting a Program

Because all Program Editor sessions are saved automatically, you can accumulate quite a few previous programs and functions, which take up memory storage space.

To delete programs and functions, use the VAR-LINK screen (2nd [VAR-LINK]). For information about VAR-LINK, refer to the *Memory and Variable Management* module.

Overview of Entering a Program

A program is a series of commands executed in sequential order (although some commands alter the program flow). In general, anything that can be executed from the Home screen can be included in a program. Program execution continues until it reaches the end of the program or a **Stop** command.

Downloaded from www.Manualslib.com manuals search engine


Entering and Editing Program Lines

On a blank template, you can begin entering commands for your new program.

Program name, which you specify when you create a new program.

Enter your program commands between **Prgm** and **EndPrgm**.

All program lines begin with a colon.

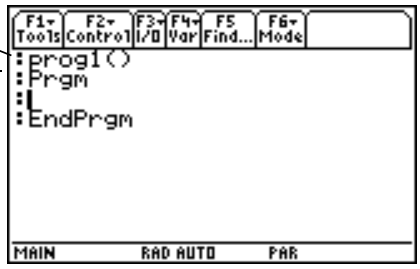

Note: Use the cursor pad to scroll through the program for entering or editing commands. Use ♦ ▲ or ♦ ▼ to go to the top or bottom of a program, respectively.

You enter and edit program commands in the Program Editor by using the same techniques used to enter and edit text in the Text Editor. Refer to “Entering and Editing Text” in the *Text Editor* module.

After typing each program line, press ENTER. This inserts a new blank line and lets you continue entering another line. A program line can be longer than one line on the screen; if so, it will wrap to the next screen line automatically.

Note: Entering a command does not execute that command. It is not executed until you run the program.

Entering Multi- Command Lines

To enter more than one command on the same line, separate them with a colon by pressing 2nd [:].

Downloaded from www.Manualslib.com manuals search engine

Entering Comments

A comment symbol (◕) lets you enter a remark in a program. When you run the program, all characters to the right of ◕ are ignored.

```
  :prog1()
  :Prgm
❶ :◕Displays sum of 1 thru n
  :Request "Enter an integer",n
❷ :expr(n)→n:◕Convert to numeric expression
  :------
```

❶ Description of the program .
❷ Description of **expr**.

Note: Use comments to enter information that is useful to someone reading the program code.

To enter the comment symbol, press:

- ◆)

  – or –

- Press F2 and select **9**:◕

Controlling the Flow of a Program

When you run a program, the program lines are executed in sequential order. However, some commands alter the program flow. For example:

Downloaded from www.Manualslib.com manuals search engine

- Control structures such as **If...EndIf** commands use a conditional test to decide which part of a program to execute.
- Loops commands such as **For...EndFor** repeat a group of commands.

Using Indentation

For more complex programs that use **If...EndIf** and loop structures such as **For...EndFor**, you can make the programs easier to read and understand by using indentation.

```
:If x>5 Then
:  Disp "x is > 5"
:Else
:  Disp "x is < or = 5"
:EndIf
```

Displaying Calculated Results

In a program, calculated results are not displayed unless you use an output command. This is an important difference between performing a calculation on the Home screen and in a program.

These calculations will not display a result in a program (although they will on the Home screen).

```
:12*6
:cos(π/4)
:solve(x^2-x-2=0,x)
```

Output commands such as **Disp** will display a result in a program.

```
:Disp 12*6
:Disp cos(π/4)
:Disp solve(x^2-x-2=0,x)
```


Downloaded from www.Manualslib.com manuals search engine

Displaying a calculation result does not store that result. If you need to refer to a result later, store it to a variable.

```
:cos(π/4)→maximum
:Disp maximum
```

Note: A list of output commands is available.

Getting Values into a Program

To input values into a program, you can:

- Require the users to store a value (with STO▸) to the necessary variables before running the program. The program can then refer to these variables.

- Enter the values directly into the program itself.

```
:Disp 12*6
:cos(π/4)→maximum
```

- Include input commands that prompt the users to enter the necessary values when they run the program.

```
:Input "Enter a value",i
:Request "Enter an
integer",n
```

- Require the users to pass one or more values to the program when they run it.

```
prog1(3,5)
```

Note: A list of input commands is available.

Downloaded from www.Manualslib.com manuals search engine

Example of Passing Values to a Program

The following program draws a circle on the Graph screen and then draws a horizontal line across the top of the circle. Three values must be passed to the program: x and y coordinates for the circle's center and the radius r.

- When you write the program in the Program Editor:

  In the ( ) beside the program name, specify the variables that will be used to store the passed values.

  Notice that the program also contains commands that set up the Graph screen.

```
:circ(x,y,r) ❶
:Prgm
:FnOff
:ZoomStd
:ZoomSqr
:Circle x,y,r
:LineHorz y+r
:EndPrgm
```

❶ Only **circ( )** is initially displayed on the blank template; be sure to edit this line.


Note: In this example, you cannot use circle as the program name because it conflicts with a command name.

Before drawing the circle, the program turns off any selected Y= Editor functions, displays a standard viewing window, and "squares" the window.


Downloaded from www.Manualslib.com manuals search engine

- To run the program from the Home screen:

  The user must specify the applicable values as arguments within the ( ).

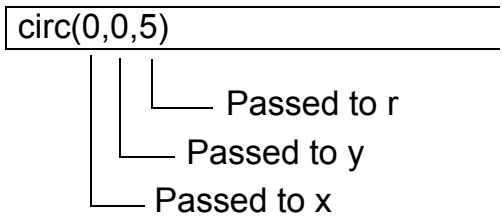

  The arguments, in order, are passed to the program.

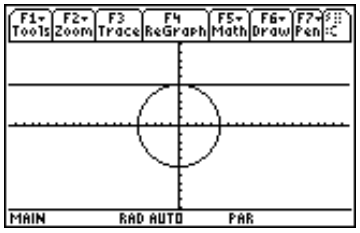

Note: This example assumes that the user enters values that can be displayed by the viewing window set up by **ZoomStd** and **ZoomSqr**.

Overview of Entering a Function

A function created in the Program Editor is very similar to the functions and instructions that you typically use from the Home screen.

Why Create a User-Defined Function?

Functions (as well as programs) are ideal for repetitive calculations or tasks. You only need to write the function once. Then you can reuse it as many times as necessary. Functions, however, have some advantages over programs.

Downloaded from www.Manualslib.com manuals search engine

- You can create functions that expand on the TI-89 Titanium's built-in functions. You can then use the new functions the same as any other function.
- Functions return values that can be graphed or entered in a table; programs cannot.
- You can use a function (but not a program) within an expression. For example: **3∗func1(3)** is valid, but not **3∗prog1(3)**.
- Because you pass arguments to a function, you can write generic functions that are not tied to specific variable names.

Note: You can create a function from the Home screen, but the Program Editor is more convenient for complex, multi-line functions.

Differences Between Functions and Programs

This guidebook sometimes uses the word command as a generic reference to instructions and functions. When writing a function, however, you must differentiate between instructions and functions.

A user-defined function:

- Can use the following instructions only. Any others are invalid.

Cycle	**Define**	**Exit**
For...EndFor	**Goto**	**If...EndIf** (all forms)
Lbl	**Local**	**Loop...EndLoop**
Return	**While...EndWhile**	→ (STO▸ key)

Downloaded from www.Manualslib.com manuals search engine

- Can use all built-in TI-89 Titanium / Voyage™ 200 functions except:

setFold	**setGraph**	**setMode**
setTable	**switch**	

- Can refer to any variable; however, it can store a value to a local variable only.
  - The arguments used to pass values to a function are treated as local variables automatically. If you store to any other variables, you must declare them as local from within the function.
- Cannot call a program as a subroutine, but it can call another user-defined function.
- Cannot define a program.
- Cannot define a global function, but it can define a local function.

Note: Information about local variables is available.

Entering a Function

When you create a new function in the Program Editor, the TI-89 Titanium displays a blank “template.”


Note: Use the cursor pad to scroll through the function for entering or editing commands.

Downloaded from www.Manualslib.com manuals search engine

Function name, which you specify when you create a new function.

Enter your commands between **Func** and **EndFunc**.

All function lines begin with a colon.

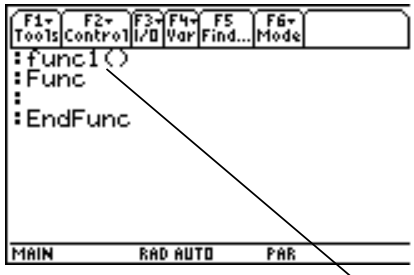

Be sure to edit this line to include any necessary arguments. Remember to use argument names in the definition that will never be used when calling the function.

If the function requires input, one or more values must be passed to the function. (A user-defined function can store to local variables only, and it cannot use instructions that prompt the user for input.)

How to Return a Value from a Function

There are two ways to return a value from a function:

- As the last line in the function (before **EndFunc**), calculate the value to be returned.

```
:cube(x)
:Func
:x^3
:EndFunc
```


Downloaded from www.Manualslib.com manuals search engine

- Use **Return**. This is useful for exiting a function and returning a value at some point other than the end of the function.

```
:cube(x)
:Func
:If x<0
:  Return 0
:x^3
:EndFunc
```

Note: This example calculates the cube if **x**≥**0**; otherwise, it returns a `0`.

The argument x is automatically treated as a local variable. However, if the example needed another variable, the function would need to declare it as local by using the Local command.


There is an implied **Return** at the end of the function. If the last line is not an expression, an error occurs.

Example of a Function

The following function returns the xth root of a value y ($\sqrt[x]{y}$). Two values must be passed to the function: x and y.

Downloaded from www.Manualslib.com manuals search engine

Note: Because x and y in the function are local, they are not affected by any existing x or y variable.

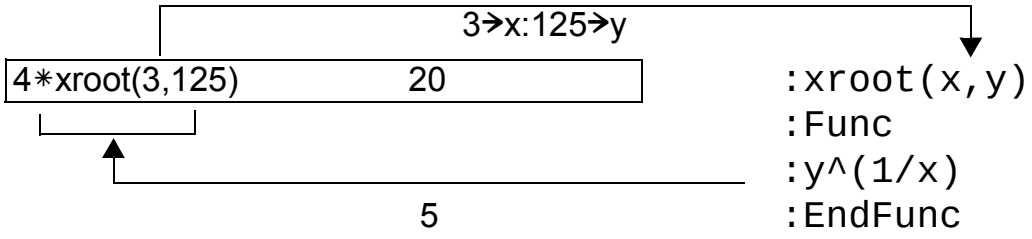Function as called from the Home Screen	Function as defined in the Program Editor
	:xroot(x,y) :Func :y^(1/x) :EndFunc

Calling One Program from Another

One program can call another program as a subroutine. The subroutine can be external (a separate program) or internal (included in the main program). Subroutines are useful when a program needs to repeat the same group of commands at several different places.

Downloaded from www.Manualslib.com manuals search engine

Calling a Separate Program

To call a separate program, use the same syntax used to run the program from the Home screen.

```
:subtest1()
:Prgm
:For i,1,4,1
:  subtest2(i,i*1000)
:EndFor
:EndPrgm
```

```
:subtest2(x,y)
:Prgm
:  Disp x,y
:EndPrgm
```

Calling an Internal Subroutine

To define an internal subroutine, use the **Define** command with **Prgm...EndPrgm**. Because a subroutine must be defined before it can be called, it is a good practice to define subroutines at the beginning of the main program.

Downloaded from www.Manualslib.com manuals search engine

An internal subroutine is called and executed in the same way as a separate program.

```
  :subtest1()
  :Prgm
❶ :local subtest2
❷ :Define subtest2(x,y)=Prgm
⋮ :  Disp x,y
❷ :EndPrgm
  :●Beginning of main program
  :For i,1,4,1
❸ :  subtest2(i,I*1000)
  :EndFor
  :EndPrgm
```

❶ Declares the subroutine as a local variable.
❷ Defines the subroutine.
❸ Calls the subroutine.

Note: Use the Program Editor's F4 **Var** toolbar menu to enter the Define and **Prgm...EndPrgm** commands.

Notes about Using Subroutines

At the end of a subroutine, execution returns to the calling program. To exit a subroutine at any other time, use the **Return** command.

A subroutine cannot access local variables declared in the calling program. Likewise, the calling program cannot access local variables declared in a subroutine.

Downloaded from www.Manualslib.com manuals search engine

Lbl commands are local to the programs in which they are located. Therefore, a **Goto** command in the calling program cannot branch to a label in a subroutine or vice versa.

Using Variables in a Program

Programs use variables in the same general way that you use them from the Home screen. However, the “scope” of the variables affects how they are stored and accessed.

Scope of Variables

Scope	Description
System (Global) Variables	Variables with reserved names that are created automatically to store data about the state of the calculator. For example, Window variables (**xmin**, **xmax**, **ymin**, **ymax**, etc.) are globally available from any folder. • You can always refer to these variables by using the variable name only, regardless of the current folder. • A program cannot create system variables, but it can use the values and (in most cases) store new values.

Downloaded from www.Manualslib.com manuals search engine

Scope	Description
Folder Variables	Variables that are stored in a particular folder. • If you store to a variable name only, it is stored in the current folder. For example: 5→start • If you refer to a variable name only, that variable must be in the current folder. Otherwise, it cannot be found (even if the variable exists in a different folder). • To store or refer to a variable in another folder, you must specify a path name. For example: 5→class\start (class = Variable name; start = Folder Name) After the program stops, any folder variables created by the program still exist and still take up memory.
Local Variables	Temporary variables that exist only while a program is running. When the program stops, local variables are deleted automatically. • To create a local variable in a program, use the **Local** command to declare the variable. • A local variable is treated as unique even if there is an existing folder variable with the same name. • Local variables are ideal for temporarily storing values that you do not want to save.

Downloaded from www.Manualslib.com manuals search engine

Note: If a program has local variables, a graphed function cannot access them. For example:

```
Local a
5→a
Graph a*cos(x)
```

may display an error or an unexpected result (if **a** is an existing variable in the current folder).

Circular Definition Errors

When evaluating a user-defined function or running a program, you can specify an argument that includes the same variable that was used to define the function or create the program. However, to avoid Circular definition errors, you must assign a value for x or i variables that are used in evaluating the function or running the program.
For example:

```
❶ x+1→x

  – or –

  For i,i,10,1
❶ Disp i
  EndFor
```

❶ Causes a `Circular definition` error message if x or i does not have a value. The error does not occur if x or i has already been assigned a value.

Downloaded from www.Manualslib.com manuals search engine

Variable-Related Commands and Functions

Command	Description
STO▸ key	Stores a value to a variable. As on the Home screen, pressing STO▸ enters a → symbol.
Archive	Moves specified variables from RAM to user data archive memory.
BldData	Lets you create a data variable based on the graph information entered in the Y= Editor, Window Editor, etc.
CopyVar	Copies the contents of a variable.
Define	Defines a program (subroutine) or function variable within a program.
DelFold	Deletes a folder. All variables in that folder must be deleted first.
DelType	Deletes unarchived variables of the specified type in all folders.
DelVar	Deletes a variable.
getFold	Returns the name of the current folder.
getType	Returns a string that indicates the data type (EXPR, LIST, etc.) of a variable.
isArchiv()	Indicates if the variable is archived or not.
isLocked()	Indicates if the variable is locked or not.
isVar()	Indicates if the variable is in the symbol table or not.
Local	Declares one or more variables as local variables.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
Lock	Locks a variable so that it cannot be accidentally changed or deleted without first being unlocked.
MoveVar	Moves a variable from one folder to another.
NewData	Creates a data variable whose columns consist of a series of specified lists.
NewFold	Creates a new folder.
NewPic	Creates a picture variable based on a matrix.
Rename	Renames a variable.
Unarchiv	Moves specified variables from user data archive memory to RAM.
Unlock	Unlocks a locked variable.

Note: The **Define**, **DelVar**, and **Local** commands are available from the Program Editor's F4 **Var** toolbar menu.

Using Local Variables in Functions or Programs

A local variable is a temporary variable that exists only while a user-defined function is being evaluated or a user-defined program is running.

Downloaded from www.Manualslib.com manuals search engine

Example of a Local Variable

The following program segment shows a **For...EndFor loop** (which is discussed later in this module). The variable i is the loop counter. In most cases, the variable i is used only while the program is running.

```
❶ :Local I
  :For i,0,5,1
  :  Disp I
  :EndFor
  :Disp i
```

❶ Declares variable i as local.

Note: As often as possible, use local variables for any variable that is used only within a program and does not need to be stored after the program stops.

If you declare variable i as local, it is deleted automatically when the program stops so that it does not use up memory.

What Causes an Undefined Variable Error Message?

An **Undefined** variable error message displays when you evaluate a user-defined function or run a user-defined program that references a local variable that is not initialized (assigned a value).

This example is a multi-statement function, rather than a program. Line breaks are shown here, but you would type the text in the entry line as one continuous line, such as: **Define fact(n)=Func:Local…** where the ellipsis indicates the entry line text continues off-screen.

Downloaded from www.Manualslib.com manuals search engine

For example:

```
  Define fact(n)=Func:
❶ Local m:
  While n>1:
    n*m→m: n-1→n:
  EndWhile:
  Return m:
  EndFunc
```

❶ Local variable m is not assigned an initial value.

In the example above, the local variable m exists independently of any variable m that exists outside of the function.

You Must Initialize Local Variables

All local variables must be assigned an initial value before they are referenced.

```
  Define fact(n)=Func:
❶ Local m: 1→m:
  While n>1:
    n*m→m: n-1→n:
  EndWhile:
  Return m:
  EndFunc
```

❶ 1 is stored as the initial value for m.

The calculator cannot use a local variable to perform symbolic calculations.

Downloaded from www.Manualslib.com manuals search engine

To Perform Symbolic Calculations

If you want a function or program to perform symbolic calculations, you must use a global variable instead of a local. However, you must be certain that the global variable does not already exist outside of the program. The following methods can help.

- Refer to a global variable name, typically with two or more characters, that is not likely to exist outside of the function or program.
- Include **DelVar** within the function or program to delete the global variable, if it exists, before referring to it. (**DelVar** does not delete locked or archived variables.)

String Operations

Strings are used to enter and display text characters. You can type a string directly, or you can store a string to a variable.

Downloaded from www.Manualslib.com manuals search engine

How Strings Are Used

A string is a sequence of characters enclosed in "quotes." In programming, strings allow the program to display information or prompt the user to perform some action. For example:

```
Disp "The result is",answer

– or –

Input "Enter the angle in degrees",ang1

– or –

"Enter the angle in degrees"→str1
Input str1,ang1
```

Some input commands (such as **InputStr**) automatically store user input as a string and do not require the user to enter quotation marks.

A string cannot be evaluated mathematically, even if it appears to be a numeric expression. For example, the string "61" represents the characters "6" and "1", not the number 61.

Although you cannot use a string such as "61" or "2x+4" in a calculation, you can convert a string into a numeric expression by using the **expr** command.

Downloaded from www.Manualslib.com manuals search engine

String Commands

Note: See the *Technical Reference* module for syntax for all commands and functions.

Command	Description
#	Converts a string into a variable name. This is called indirection.
&	Appends (concatenates) two strings into one string.
char	Returns the character that corresponds to a specified character code. This is the opposite of the **ord** command.
dim	Returns the number of characters in a string.
expr	Converts a string into an expression and executes that expression. This is the opposite of the **string** command. **Important:** Some user input commands store the entered value as a string. Before you can perform a mathematical operation on that value, you must convert it to a numeric expression.
format	Returns an expression as a character string based on the format template (fixed, scientific, engineering, etc.)
inString	Searches a string to see if it contains a specified substring. If so, **inString** returns the character position where the first occurrence of the substring begins.
left	Returns a specified number of characters from the left side (beginning) of a string.
mid	Returns a specified number of characters from any position within a string.
ord	Returns the character code of the first character within a string. This is the opposite of the **char** command.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
right	Returns a specified number of characters from the right side (end) of a string.
rotate	Rotates the characters in a string. The default is -1 (rotate right one character).
shift	Shifts the characters in a string and replaces them with spaces. The default is -1 (shift right one character and replace with one space). Examples: shift("abcde",2)⇒"cde " and shift("abcde")⇒" abcd"
string	Converts a numeric expression into a string. This is the opposite of the **expr** command.

Conditional Tests


Conditional tests let programs make decisions. For example, depending on whether a test is true or false, a program can decide which of two actions to perform. Conditional tests are used with control structures such as **If...EndIf** and loops such as **While...EndWhile** (described later in this module).

Downloaded from www.Manualslib.com manuals search engine

Entering a Test Operator

- Type the operator directly from the keyboard.
  – or –
- Press [2nd] [MATH] and select **8:Test**. Then select the operator from the menu.

  – or –
- Display the built-in functions. Press: [CATALOG] The test operators are listed near the bottom of the [F2] Built-in menu.

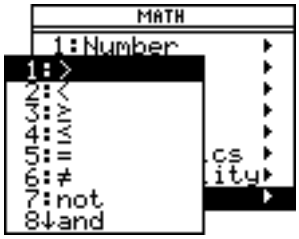

Relational Tests

Relational operators let you define a conditional test that compares two values. The values can be numbers, expressions, lists, or matrices (but they must match in type and dimension).

Operator	True if:	Example
>	Greater than	a>8
<	Less than	a<0
≥	Greater than or equal to	a+b≥100
≤	Less than or equal to	a+6≤b+1
=	Equal	list1=list2
≠	Not equal to	mat1≠mat2

Downloaded from www.Manualslib.com manuals search engine

Note: From the keyboard, you can type:
>= for ≥
<= for ≤
/= for ≠
(To get the / character, press ÷.)

Boolean Tests

Boolean operators let you combine the results of two separate tests.

Operator	True if:	Example
and	Both tests are true	a>0 and a≤10
or	At least one test is true	a≤0 or b+c>10
xor	One test is true and the other is false	a+6<b+1 xor c<d

The Not Function

The **not** function changes the result of a test from true to false and vice versa. For example:

not x>2	is true if	x≤2
	is false if	x>2

Note: If you use **not** from the Home screen, it is shown as **~** in the history area. For example, **not x>2** is shown as **~(x>2)**.

Downloaded from www.Manualslib.com manuals search engine

Using If, Lbl, and Goto to Control Program Flow

An **If...EndIf** structure uses a conditional test to decide whether or not to execute one or more commands. **Lbl** (label) and **Goto** commands can also be used to branch (or jump) from one place to another in a program.

F2 Control Toolbar Menu

To enter **If...EndIf** structures, use the Program Editor's F2 **Control** toolbar menu.



The If command is available directly from the F2 menu.

To see a submenu that lists other **If** structures, select **2:If...Then**.



When you select a structure such as **If...Then...EndIf**, a template is inserted at the cursor location.

```
:If | Then ❶
:EndIf
```

❶ The cursor is positioned so that you can enter a conditional test.

Downloaded from www.Manualslib.com manuals search engine

If Command

To execute only one command if a conditional test is true, use the general form:

```
  :If x>5
❶ :   Disp "x is greater than 5"
❷ :Disp x
```

❶ Executed only if x>5; otherwise, skipped.
❷ Always displays the value of x.

In this example, you must store a value to x before executing the **If** command.

Note: Use indentation to make your programs easier to read and understand.

If...Then...EndIf Structures

To execute one group of commands if a conditional test is true, use the structure:

```
  :If x>5 Then
❶ :  Disp "x is greater than 5"
❶ :  2*x→x
❷ :EndIf
  :Disp x
```

❶ Executed only if x>5.
❷ Displays value of:
- 2x if x>5
- x if x≤5

Downloaded from www.Manualslib.com manuals search engine

Note: EndIf marks the end of the **Then** block that is executed if the condition is true.

If...Then...Else... EndIf Structures

To execute one group of commands if a conditional test is true and a different group if the condition is false, use this structure:

```
  :If x>5 Then
❶ :  Disp "x is greater than 5"
❶ :  2*x→x
  :Else
❷ :  Disp "x is less than or
❷    equal to 5"
  :  5*x→x
  :EndIf
❸ :Disp x
```

❶ Executed only if x>5.
❷ Executed only if x≤5.
❸ Displays value of:
- 2x if x>5
- 5x if x≤5

If...Then...ElseIf... EndIf Structures

A more complex form of the If command lets you test a series of conditions. Suppose your program prompts the user for a number that corresponds to one of four options. To test for each option (**If Choice=1**, **If Choice = 2**, etc.), use the **If...Then...ElseIf...EndIf** structure.

Downloaded from www.Manualslib.com manuals search engine

Refer to the *Technical Reference* module for more information and an example.

Lbl and Goto Commands

You can also control the flow of your program by using **Lbl** (label) and **Goto** commands.

Use the **Lbl** command to label (assign a name to) a particular location in the program.

Lbl *labelName*

└ name to assign to this location (use the same naming convention as a variable name)

You can then use the **Goto** command at any point in the program to branch to the location that corresponds to the specified label.

Goto *labelName*

└ specifies which **Lbl** command to branch to

Downloaded from www.Manualslib.com manuals search engine

Because a **Goto** command is unconditional (it always branches to the specified label), it is often used with an **If** command so that you can specify a conditional test. For example:

```
  :If x>5
❶ :  Goto GT5
❷ :Disp x
  :--------
  :--------
  :Lbl GT5
  :Disp "The number was > 5"
```


❶ If x>5, branches directly to label GT5.
❷ For this example, the program must include commands (such as **Stop**) that prevent **Lbl** GT5 from being executed if x≤5.

Using Loops to Repeat a Group of Commands

To repeat the same group of commands successively, use a loop. Several types of loops are available. Each type gives you a different way to exit the loop, based on a conditional test.

F2 Control Toolbar Menu

To enter most of the loop-related commands, use the Program Editor's F2 **Control** toolbar menu.

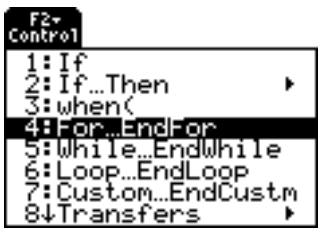

Downloaded from www.Manualslib.com manuals search engine

When you select a loop, the loop command and its corresponding **End** command are inserted at the cursor location.

```
:For | ❶
:EndFor
```

❶ If the loop requires arguments, the cursor is positioned after the command.

You can then begin entering the commands that will be executed in the loop.

Note: A loop command marks the start of the loop. The corresponding **End** command marks the end of the loop.

For...EndFor Loops

A **For...EndFor loop** uses a counter to control the number of times the loop is repeated. The syntax of the **For** command is:


Note: The ending value can be less than the beginning value, but the increment must be negative.

For(*variable*, *begin*, *end* [, *increment*]**)**
❶ ❷ ❸ ❹

❶ variable used as a counter
❷ counter value used the first time **For** is executed
❸ exits the loop when variable exceeds this value
❹ added to the counter each subsequent time **For** is executed

Downloaded from www.Manualslib.com manuals search engine

When **For** is executed, the variable value is compared to the end value. If variable does not exceed end, the loop is executed; otherwise, program control jumps to the command following **EndFor**.

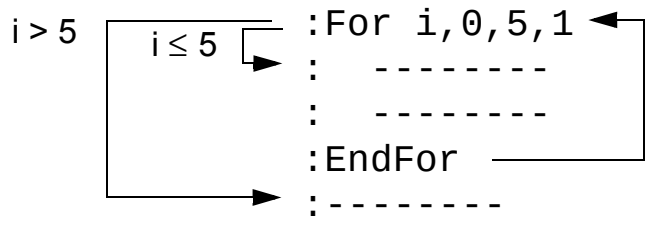

Note: The **For** command automatically increments the counter variable so that the program can exit the loop after a certain number of repetitions.

At the end of the loop (**EndFor**), program control jumps back to the **For** command, where variable is incremented and compared to *end*.

For example:

```
  :For i,0,5,1
❶ :  Disp I
  :EndFor
❷ :Disp i
```

❶ Displays 0, 1, 2, 3, 4, and 5.
❷ Displays 6. When *variable* increments to 6, the loop is not executed.

Note: You can declare the counter variable as local if it does not need to be saved after the program stops.


Downloaded from www.Manualslib.com manuals search engine

While...EndWhile Loops

A **While...EndWhile** loop repeats a block of commands as long as a specified condition is true. The syntax of the **While** command is:

While *condition*

When **While** is executed, the condition is evaluated. If condition is true, the loop is executed; otherwise, program control jumps to the command following **EndWhile**.

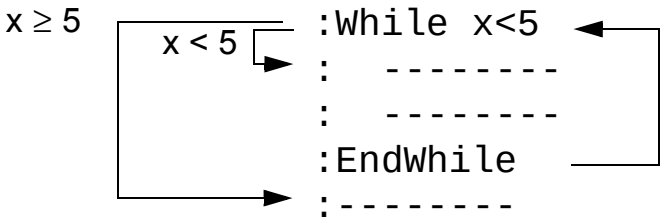

Note: The **While** command does not automatically change the condition. You must include commands that allow the program to exit the loop.

At the end of the loop (**EndWhile**), program control jumps back to the **While** command, where condition is re-evaluated.

To execute the loop the first time, the condition must initially be true.

- Any variables referenced in the condition must be set before the **While** command. (You can build the values into the program or prompt the user to enter the values.)
- The loop must contain commands that change the values in the condition, eventually causing it to be false. Otherwise, the condition is always true and the program cannot exit the loop (called an infinite loop).

Downloaded from www.Manualslib.com manuals search engine


For example:

```
❶ :0→x
  :While x<5
❷ :  Disp x
❸ :  x+1→x
  :EndWhile
❹ :Disp x
```

❶ Initially sets x.
❷ Displays 0, 1, 2, 3, and 4.
❸ Increments x.
❹ Displays 5. When x increments to 5, the loop is not executed.

Loop...EndLoop Loops

A **Loop...EndLoop** creates an infinite loop, which is repeated endlessly. The **Loop** command does not have any arguments.

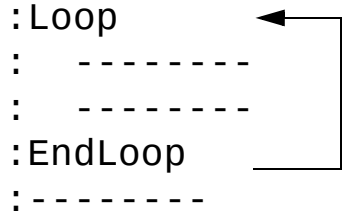

Downloaded from www.Manualslib.com manuals search engine

Typically, the loop contains commands that let the program exit from the loop. Commonly used commands are: **If**, **Exit**, **Goto**, and **Lbl** (label). For example:

```
  :0→x
  :Loop
  :  Disp x
  :  x+1→x
❶ :  If x>5
  :    Exit
  :EndLoop
❷ :Disp x
```

❶ An **If** command checks the condition.
❷ Exits the loop and jumps to here when x increments to 6.

Note: The **Exit** command exits from the current loop.

In this example, the **If** command can be anywhere in the loop.

When the If command is:	The loop is:
At the beginning of the loop	Executed only if the condition is true.
At the end of the loop	Executed at least once and repeated only if the condition is true.

The **If** command could also use a **Goto** command to transfer program control to a specified **Lbl** (label) command.


Downloaded from www.Manualslib.com manuals search engine

Repeating a Loop Immediately

The **Cycle** command immediately transfers program control to the next iteration of a loop (before the current iteration is complete). This command works with **For...EndFor**, **While...EndWhile**, and **Loop...EndLoop**.

Lbl and Goto Loops

Although the **Lbl** (label) and **Goto** commands are not strictly loop commands, they can be used to create an infinite loop. For example:

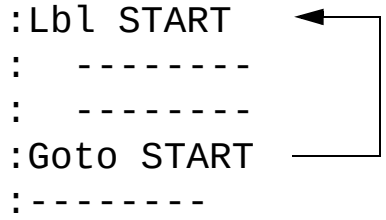

As with **Loop...EndLoop**, the loop should contain commands that let the program exit from the loop.

Configuring the TI-89 Titanium

Programs can contain commands that change the configuration of the calculator. Because mode changes are particularly useful, the Program Editor's **Mode** toolbar menu makes it easy to enter the correct syntax for the **setMode** command.

Downloaded from www.Manualslib.com manuals search engine

Configuration Commands

Command	Description
getConfg	Returns a list of calculator characteristics.
getFold	Returns the name of the current folder.
getMode	Returns the current setting for a specified mode.
getUnits	Returns a list of default units.
setFold	Sets the current folder.
setGraph	Sets a specified graph format (**Coordinates**, **Graph Order**, etc.).
setMode	Sets any mode except **Current Folder**.
setTable	Sets a specified table setup parameter (**tblStart**, **Δtbl**, etc.)
setUnits	Sets default units for displayed results.
switch	Sets the active window in a split screen, or returns the number of the active window.

Note: The parameter/mode strings used in the **setMode( )**, **getMode( )**, **setGraph( )**, and **setTable( )** functions do not translate into other languages when used in a program. See the *Technical Reference* module.

Entering the SetMode Command


In the Program Editor:

Downloaded from www.Manualslib.com manuals search engine

1. Position the cursor where you want to insert the **setMode** command.

2. Press:
   2nd [F6] to display a list of modes.

   Note: The **Mode** menu does not let you set the **Current Folder** mode. To set this mode, use the **setFold** command.

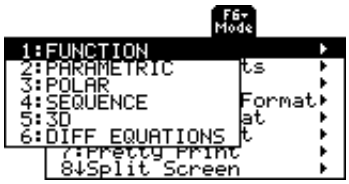

3. Select a mode to display a menu of its valid settings.
4. Select a setting.

The correct syntax is `:setMode("Graph","FUNCTION")` inserted into your program.

Getting Input from the User and Displaying Output

Although values can be built into a program (or stored to variables in advance), a program can prompt the user to enter information while the program is running. Likewise, a program can display information such as the result of a calculation.

F3 I/O Toolbar Menu

To enter most of the commonly used input/output commands, use the Program Editor's [F3] **I/O** toolbar menu.



Downloaded from www.Manualslib.com manuals search engine

To see a submenu that lists additional commands, select **1:Dialog**.



Input Commands

Command	Description
getKey	Returns the key code of the next key pressed. See the *Technical Reference* module for a listing of key codes.
Input	Prompts the user to enter an expression. The expression is treated according to how it is entered. For example: • A numeric expression is treated as an expression. • An expression enclosed in "quotes" is treated as a string. **Input** can also display the Graph screen and let the user update the variables xc and yc (rc and θc in polar mode) by positioning the graph cursor.
InputStr	Prompts the user to enter an expression. The expression is always treated as a string; the user does not need to enclose the expression in "quotes".
PopUp	Displays a pop-up menu box and lets the user select an item.
Prompt	Prompts the user to enter a series of expressions. As with **Input**, each expression is treated according to how it is entered.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
Request	Displays a dialog box that prompts the user to enter an expression. **Request** always treats the entered expression as a string.

Note: String input cannot be used in a calculation. To convert a string to a numeric expression, use the **expr** command.

Output Commands

Command	Description
ClrIO	Clears the Program I/O screen.
Disp	Displays an expression or string on the Program I/O screen. **Disp** can also display the current contents of the Program I/O screen without displaying additional information.
DispG	Displays the current contents of the Graph screen.
DispHome	Displays the current contents of the Home screen.
DispTbl	Displays the current contents of the Table screen.
Output	Displays an expression or string starting at specified coordinates on the Program I/O screen.
Format	Formats the way in which numeric information is displayed.
Pause	Suspends program execution until the user presses ENTER. Optionally, you can display an expression during the pause. A pause lets users read your output and decide when they are ready to continue.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
Text	Displays a dialog box that contains a specified character string.

Notes:

- In a program, simply performing a calculation does not display the result. You must use an output command.
- After **Disp** and **Output**, the program immediately continues. You may want to add a **Pause** command.

Graphical User Interface Commands

Command	Description
Dialog... EndDlog	Defines a program block (consisting of **Title**, **Request**, etc., commands) that displays a dialog box.
Toolbar... EndTbar	Defines a program block (consisting of Title, Item, etc., commands) that replaces the toolbar menus. The redefined toolbar is in effect only while the program is running and only until the user selects an item. Then the original toolbar is redisplayed.
CustmOn... CustmOff	Activates or removes a custom toolbar.
Custom... EndCustm	Defines a program block that displays a custom toolbar when the user presses 2nd [CATALOG]. That toolbar remains in effect until the user presses 2nd [CATALOG] again or changes applications.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
DropDown	Displays a drop-down menu within a dialog box.
Item	Displays a menu item for a redefined toolbar.
Request	Creates an input box within a dialog box.
Text	Displays a character string within a dialog box.
Title	Displays the title of a dialog box or a menu title within a toolbar.

Notes:

- When you run a program that sets up a custom toolbar, that toolbar is still available even after the program has stopped.
- **Request** and **Text** are stand-alone commands that can also be used outside of a dialog box or toolbar program block.

Creating a Custom Menu

The custom menu feature lets you create your own toolbar menu. A custom menu can contain any available function, instruction, or set of characters. The calculator has a default custom menu that you can modify or redefine.

Downloaded from www.Manualslib.com manuals search engine

Turning the Custom Menu On and Off

When you create a custom menu, you can let the user turn it on and off manually, or you can let a program turn it on and off automatically.

To:	Do this:
Turn on the custom menu	From the Home screen or any other application: • Press 2nd [CATALOG]. From the Home screen or a program: • Execute the **CustmOn** command.
Turn off the custom menu	From any application: • Press 2nd [CATALOG] again. – or – • Go to a different application. Using the default custom menu on the Home screen: 1. Select the **Tools** menu: 2nd [F7] Select **3:CustmOff**. This pastes **CustmOff** in the entry line. 2. Press ENTER. You can also use **CustmOff** in a program.



CustmOff


Note: When the custom menu is turned on, it replaces the normal toolbar menu. Unless a different custom menu has been created, the default custom menu is displayed.

Downloaded from www.Manualslib.com manuals search engine

Defining a Custom Menu

To create a custom menu, use the following general structure.

```
Custom
: Title title of F1 menu:
:     Item item 1
:     Item item 2
:   …
: Title title of F2 menu
:   …
: Title title of F3 menu
:   …
```

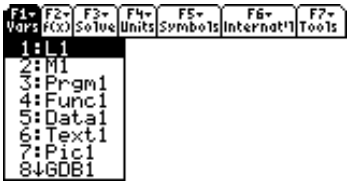

Note: When the user selects a menu item, the text defined by that **Item** command is pasted to the current cursor location.

For example:

```
:Custom
:Title "Vars"
:Item "L1":Item "M1":Item "Prgm1":Item "Func1":Item "Data1"
:Item "Text1":Item "Pic1":Item "GDB1":Item "Str1"

❶ :Title "f(x)"
❶ :Item "f(x)":Item "g(x)":Item "f(x,y)":Item "g(x,y)"
❶ :Item "f(x+h)":Item "Define f(x) ="

:Title "Solve"
:Item "Solve(":Item " and ":Item "{x,y}"
:Item "Solve( and ,{x,y})"
```


Downloaded from www.Manualslib.com manuals search engine

```
❷  :Title "Units"
❷  :Item "_m/_s^2":Item "_ft/_s^2":Item "_m":Item "_ft":Item "_l"
❷  :Item "_gal":Item "_\o\C":Item "_\o\F":Item "_kph":Item "_mph"

   :Title "Symbols"
   :Item "#":Item "\beta\":Item "?":Item "~":Item "&"


   :Title "Internat'l"
   :Item "\e`\":Item "\e'\":Item "\e^\":Item "\a`\"
   :Item "\u`\":Item "\u^\":Item "\o^\":Item "\c,\":Item "\u..\"

   :Title "Tools"
   :Item "ClrHome":Item "NewProb":Item "CustmOff"


:EndCustm

:CustmOn
```

Note: The following may be slightly different than the default custom menu on your calculator.

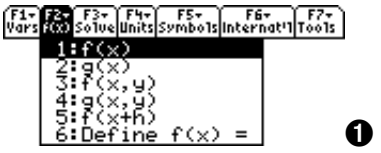

❶

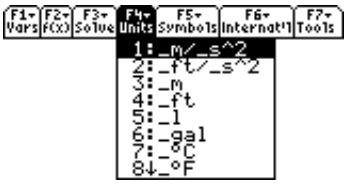

❷

Note: See how "_\o\C" and "_\o\F" display as °C and °F in the menu. Similarly, see the international accented characters.

To modify the default custom menu, use **3:Restore custom default** (as described below) to get the commands for the default menu. Copy those commands, use the Program

Downloaded from www.Manualslib.com manuals search engine

Editor to create a new program, and paste them into the blank program. Then modify the commands as necessary.

Note: This inserts all the commands on a single line. You do not need to split them into separate lines.

You can create and use only one custom menu at a time. If you need more, write a separate program for each custom menu. Then run the program for the menu you need.

Restoring the Default Custom Menu

To restore the default:

1. From the Home screen's normal menu (not the custom menu), select **Clean Up**: 2nd [F6]

2. Select **3:Restore custom default**.

   This pastes the commands used to create the default menu into the entry line.



3. Press ENTER to execute the commands and restore the default.

When you restore the default, any previous custom menu is erased. If the previous menu was created with a program, you can run the program again if you want to reuse the menu later.

Downloaded from www.Manualslib.com manuals search engine

Creating a Table or Graph

To create a table or a graph based on one or more functions or equations, use the commands listed in this section.

Table Commands

Command	Description
DispTbl	Displays the current contents of the Table screen.
setTable	Sets the Graph <–> Table or Independent table parameters. (To set the other two table parameters, you can store the applicable values to the **tblStart** and **Δtbl** system variables.)
Table	Builds and displays a table based on one or more expressions or functions.

Graphing Commands

Command	Description
ClrGraph	Erases any functions or expressions that were graphed with the **Graph** command.
Define	Creates a user-defined function.
DispG	Displays the current contents of the Graph screen.
FnOff	Deselects all (or only specified) Y= functions.
FnOn	Selects all (or only specified) Y= functions.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
Graph	Graphs one or more specified expressions, using the current graphing mode.
Input	Displays the Graph screen and lets the user update the variables xc and yc (rc and θc in polar mode) by positioning the graph cursor.
NewPlot	Creates a new stat plot definition.
PlotsOff	Deselects all (or only specified) stat data plots.
PlotsOn	Selects all (or only specified) stat data plots.
setGraph	Changes settings for the various graph formats (**Coordinates**, **Graph Order**, etc.).
setMode	Sets the Graph mode, as well as other modes.
Style	Sets the display style for a function.
Trace	Lets a program trace a graph.
ZoomBox – to – **ZoomTrig**	Perform all of the **Zoom** operations that are available from the F2 toolbar menu on the Y= Editor, Window Editor, and Graph screen.

Note: More information is available about using **setMode**.

Graph Picture and Database Commands

Command	Description
AndPic	Displays the Graph screen and superimposes a stored graph picture by using **AND** logic.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
CyclePic	Animates a series of stored graph pictures.
NewPic	Creates a graph picture variable based on a matrix.
RclGDB	Restores all settings stored in a graph database.
RclPic	Displays the Graph screen and superimposes a stored graph picture by using **OR** logic.
RplcPic	Clears the Graph screen and displays a stored graph picture.
StoGDB	Stores the current graph settings to a graph database variable.
StoPic	Copies the Graph screen (or a specified rectangular portion) to a graph picture variable.
XorPic	Displays the Graph screen and superimposes a stored graph picture by using **XOR** logic.

Note: For information about graph pictures and databases, also refer to *Additional Graphing Topics*.

Drawing on the Graph Screen

To create a drawing object on the Graph screen, use the commands listed in this section.


Pixel vs. Point Coordinates

When drawing an object, you can use either of two coordinate systems to specify a location on the screen.


Downloaded from www.Manualslib.com manuals search engine

- **Pixel coordinates** — Refer to the pixels that physically make up the screen. These are independent of the viewing window because the screen is always:
  159 (0 to 158) pixels wide and 77 (0 to 76) pixels tall.

- **Point coordinates** — Refer to the coordinates in effect for the current viewing window (as defined in the Window Editor).

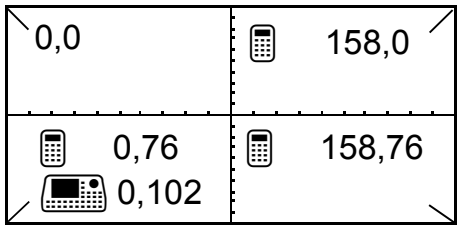

Pixel coordinates
(independent of viewing window)

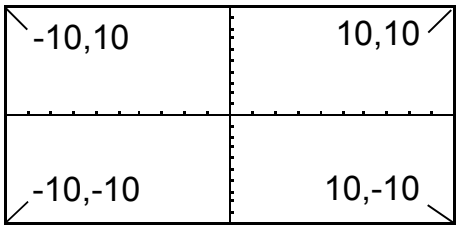

Point coordinates
(for standard viewing window)

Note: For information about pixel coordinates in split screens, refer to the *Data/Matrix Editor* module.

Many drawing commands have two forms: one for pixel coordinates and one for point coordinates.

Note: Pixel commands start with **Pxl**, such as **PxlChg**.

Erasing Drawn Objects

Command	Description
ClrDraw	Erases all drawn objects from the Graph screen.

Downloaded from www.Manualslib.com manuals search engine

Drawing a Point or Pixel

Command	Description
PtChg or **PxlChg**	Toggles (inverts) a pixel at the specified coordinates. **PtChg**, which uses point coordinates, affects the pixel closest to the specified point. If the pixel is off, it is turned on. If the pixel is on, it is turned off.
PtOff or **PxlOff**	Turns off (erases) a pixel at the specified coordinates. **PtOff**, which uses point coordinates, affects the pixel closest to the specified point.
PtOn or **PxlOn**	Turns on (displays) a pixel at the specified coordinates. **PtOn**, which uses point coordinates, affects the pixel closest to the specified point.
PtTest or **PxlTest**	Returns true or false to indicate if the specified coordinate is on or off, respectively.
PtText or **PxlText**	Displays a character string at the specified coordinates.

Drawing Lines and Circles

Command	Description
Circle or **PxlCrcl**	Draws, erases, or inverts a circle with a specified center and radius.
DrawSlp	Draws a line with a specified slope through a specified point.
Line or **PxlLine**	Draws, erases, or inverts a line between two sets of coordinates.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
LineHorz or **PxlHorz**	Draws, erases, or inverts a horizontal line at a specified row coordinate.
LineTan	Draws a tangent line for a specified expression at a specified point. (This draws the tangent line only, not the expression.)
LineVert or **PxlVert**	Draws, erases, or inverts a vertical line at a specified column coordinate.

Drawing Expressions

Command	Description
DrawFunc	Draws a specified expression.
DrawInv	Draws the inverse of a specified expression.
DrawParm	Draws a parametric equation using specified expressions as its x and y components.
DrawPol	Draws a specified polar expression.
DrwCtour	Draws contours in 3D graphing mode.
Shade	Draws two expressions and shades the areas where *expression1* < *expression2*.

Downloaded from www.Manualslib.com manuals search engine


Accessing Another TI-89 Titanium, a CBL 2, or a CBR

If you link two graphing calculators (described in the *Connectivity* module), programs on both units can transmit variables between them. If you link a TI-89 Titanium to a Calculator-Based Laboratory™ (CBL 2™) or a Calculator-Based Ranger™ (CBR™), a program on the TI-89 Titanium can access the CBL 2 or CBR.

F3 I/O Toolbar Menu

Use the Program Editor's F3 **I/O** toolbar menu to enter the commands in this section.

1. Press F3 and select **8:Link**.
2. Select a command.

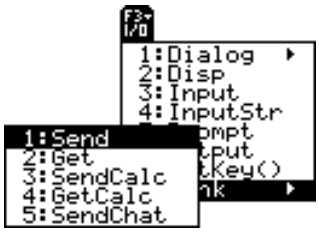

Downloaded from www.Manualslib.com manuals search engine

Accessing Another TI-89 Titanium

When two calculators are linked, one acts as a receiving unit and the other as a sending unit.

Command	Description
GetCalc	Executed on the receiving unit. Sets up the unit to receive a variable via the I/O port. • After the receiving unit executes **GetCalc**, the sending unit must execute **SendCalc**. • After the sending unit executes **SendCalc**, the sent variable is stored on the receiving unit (in the variable name specified by **GetCalc**).
SendCalc	Executed on the sending unit. Sends a variable to the receiving unit via the I/O port. • Before the sending unit executes **SendCalc**, the receiving unit must execute **GetCalc**.

Note: For a sample program that synchronizes the receiving and sending units so that **GetCalc** and **SendCalc** are executed in the proper sequence, refer to “Transmitting Variables under Program Control” in *Connectivity*.

Accessing a CBL 2 or CBR

For additional information, refer to the manual that comes with the CBL 2 or CBR unit.

Command	Description
Get	Gets a variable from an attached CBL 2 or CBR and stores it in the graphing calculator.

Downloaded from www.Manualslib.com manuals search engine

Command	Description
Send	Sends a list variable from the graphing calculator to the CBL 2 or CBR.


Debugging Programs and Handling Errors

After you write a program, you can use several techniques to find and correct errors. You can also build an error-handling command into the program itself.

Run-Time Errors

The first step in debugging your program is to run it. The graphing calculator automatically checks each executed command for syntax errors. If there is an error, a message indicates the nature of the error.

- To display the program in the Program Editor, press ENTER. The cursor appears in the approximate area of the error.

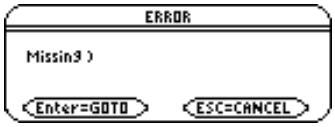

- To cancel program execution and return to the Home screen, press ESC.

If your program allows the user to select from several options, be sure to run the program and test each option.

Downloaded from www.Manualslib.com manuals search engine

Debugging Techniques

Run-time error messages can locate syntax errors but not errors in program logic. The following techniques may be useful.

- During testing, do not use local variables so that you can check the variable values after the program stops. When the program is debugged, declare the applicable variables as local.
- Within a program, temporarily insert **Disp** and **Pause** commands to display the values of critical variables.
  - **Disp** and **Pause** cannot be used in a user-defined function. To temporarily change the function into a program, change **Func** and **EndFunc** to **Prgm** and **EndPrgm**. Use **Disp** and **Pause** to debug the program. Then remove **Disp** and **Pause** and change the program back into a function.
- To confirm that a loop is executed the correct number of times, display the counter variable or the values in the conditional test.
- To confirm that a subroutine is executed, display messages such as `Entering subroutine` and `Exiting subroutine` at the beginning and end of the subroutine.

Error-Handling Commands

Command	Description
Try...EndTry	Defines a program block that lets the program execute a command and, if necessary, recover from an error generated by that command.
ClrErr	Clears the error status and sets the error number in system variable Errornum to zero.
PassErr	Passes an error to the next level of the **Try...EndTry** block.

Downloaded from www.Manualslib.com manuals search engine

Example: Using Alternative Approaches

The example in the *Previews* module shows a program that prompts the user to enter an integer, sums all integers from 1 to the entered integer, and displays the result. This section gives several approaches that you can use to achieve the same goal.

Example 1

This example uses **InputStr** for input, a **While...EndWhile** loop to calculate the result, and **Text** to display the result.

```
  :prog1()
  :Prgm
❶ :InputStr "Enter an integer",n
❷ :expr(n)→n
  :0→temp:1→I
❸ :While i≤n
:  :  temp+i→temp
:  :  i+1→I
❸ :EndWhile
❹ :Text "The answer is "&string(temp)
  :EndPrgm
```

❶ Prompts for input on Program I/O screen.
❷ Converts string entered with **InputStr** to an expression.
❸ Loop calculation.
❹ Displays output in a dialog box.

Downloaded from www.Manualslib.com manuals search engine

Note: For ≤, type ♦ 0 (zero). For **&**, press: ♦ × (times)

Example 2

This example uses **Prompt** for input, **Lbl**, and **Goto** to create a loop, and **Disp** to display the result.

```
  :prog2()
  :Prgm
❶ :Prompt n
  :0→temp:1→I
❷ :Lbl top
⋮ :  temp+i→temp
⋮ :  i+1→I
⋮ :  If i≤n
❷ :    Goto top
❸ :Disp temp
  :EndPrgm
```

❶ Prompts for input on Program I/O screen.
❷ Loop calculation.
❸ Displays output on Program I/O screen.

Note: Because **Prompt** returns n as a number, you do not need to use **expr** to convert n.

Downloaded from www.Manualslib.com manuals search engine

Example 3

This example uses **Dialog...EndDlog** to create dialog boxes for input and output. It uses **Loop...EndLoop** to calculate the result.

```
  :prog3()
  :Prgm
❶ :Dialog
⋮ :  Title "Enter an integer"
⋮ :  Request "Integer",n
❶ :EndDlog
❷ :expr(n)→n
  :0→temp:0→I
❸ :Loop
⋮ :  temp+i→temp
⋮ :  i+1→I
⋮ :  If i>n
⋮ :    Exit
❸ :EndLoop
❹ :Dialog
⋮ :  Title "The answer is"
⋮ :  Text string(temp)
❹ :EndDlog
  :EndPrgm
```

❶ Defines a dialog box for input.
❷ Converts string entered with **Request** to an expression.
❸ Loop calculation.
❹ Defines a dialog box for output.

Downloaded from www.Manualslib.com manuals search engine

Example 4

This example uses built-in functions to calculate the result without using a loop.

```
  :prog4()
  :Prgm
❶ :Input "Enter an integer",n
❷ :sum(seq(i,i,1,n))→temp
❸ :Disp temp
  :EndPrgm
```

❶ Prompts for input on Program I/O.
❷ Calculates sum.
❸ Displays output on Program I/O screen.

Note: Because **Input** returns n as a number, you do not need to use **expr** to convert n.

Function	Used in this example to:
seq	Generate the sequence of integers from **1** to **n**. **seq(***expression*, *var*, *low*, *high* [,*step*]**)** ❶ ❷ ❸ ❸ ❹ ❶ expression used to generate the sequence ❷ variable that will be incremented ❸ initial and final values of *var* ❹ increment for *var* ; if omitted, uses 1
sum	Sum the integers in the list generated by **seq**.

Downloaded from www.Manualslib.com manuals search engine

Assembly-Language Programs

You can run programs written for the TI-89 Titanium in assembly language. Typically, assembly-language programs run much faster and provide greater control than the keystroke programs that you write with the built-in Program Editor.

Where to Get Assembly-Language Programs

Assembly-language programs, as well as keystroke programs, are available on the Texas Instruments web site at education.ti.com.

The programs available from this site provide additional functions or features that are not built into the TI-89 Titanium. Check the Texas Instruments web site for up-to-date information.

After downloading a program from the web to your computer, use a USB cable or TI-GRAPH LINK™ computer-to-calculator cable and TI Connect software to send the program to your TI-89 Titanium.

For Flash App installation instructions, see education.ti.com/guides.

Note about TI-GRAPH LINK

If you have a TI-GRAPH LINK™ computer-to-calculator cable and software for the TI-89 or TI-92 Plus, be aware that the TI-GRAPH LINK software is not compatible with the TI-89 Titanium. The cable, however, works with all units. Use TI Connect software on your computer.

Downloaded from www.Manualslib.com manuals search engine

You can purchase computer-to-calculator and unit-to-unit cables from the TI Online Store at education.ti.com/buy.

Running an Assembly-Language Program

After a TI-89 Titanium assembly-language program is stored on your unit, you can run the program from the Home screen just as you would any other program.

- If the program requires one or more arguments, type them within the ( ). Refer to the program's documentation to find out about required arguments.



- If the program is not in the current folder, be sure to specify the pathname.

You can call an assembly-language program from another program as a subroutine, delete it, or use it the same as any other program.

Shortcuts to Run a Program

On the Home screen, you can use keyboard shortcuts to run up to six user-defined or assembly-language programs. However, the programs must have the following names.

On Home screen, press:	To run a program, if any, named:
◆ 1	kbdprgm1( )
⋮	⋮
◆ 6	kbdprgm6( )

Downloaded from www.Manualslib.com manuals search engine

The programs must be stored in the MAIN folder. Also, you cannot use a shortcut to run a program that requires an argument.

If you have a program with a different name and you would like to run it with a keyboard shortcut, copy or rename the existing program to **kbdprgm1( )**, etc.

You Cannot Edit an Assembly-Language Program

You cannot use your TI-89 Titanium to edit an assembly-language program. The built-in Program Editor will not open assembly-language programs.


Displaying a List of Assembly-Language Programs

To list the assembly-language programs stored in memory:

1. Display the **VAR-LINK** screen (2nd [VAR-LINK]).
2. Press F2 **View**.
3. Select the applicable folder (or All folders) and set **Var Type = Assembly**.



4. Press ENTER to display the list of assembly-language programs.

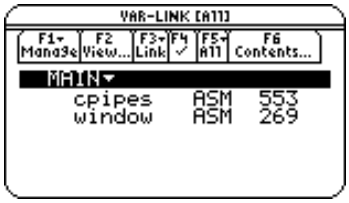

Note: Assembly-language programs have an ASM data type.

Downloaded from www.Manualslib.com manuals search engine

For Information about Writing an Assembly-Language Program

The information required to teach a novice programmer how to write an assembly-language program is beyond the scope of this book. However, if you have a working knowledge of assembly language, please check the Texas Instruments web site (education.ti.com) for specific information about how to access TI-89 Titanium features.

The graphing calculator also includes an **Exec** command that executes a string consisting of a series of Motorola 68000 op-codes. These codes act as another form of an assembly-language program. Check the Texas Instruments web site for available information.

Note: You must use a computer to write assembly-language programs. You cannot create assembly-language programs from the calculator keyboard.

Warning: Exec gives you access to the full power of the microprocessor. Please be aware that you can easily make a mistake that locks up the calculator and causes you to lose your data. We suggest you make a backup of the calculator contents before attempting to use the **Exec** command.

Downloaded from www.Manualslib.com manuals search engine

Text Editor

Starting a Text Editor Session

Each time you start the Text Editor, you can start a new text session, resume the current session (the session that was displayed the last time you used the Text Editor), or open a previous session.

Starting a New Session

1. Press APPS and then select the Text Editor icon. Press ENTER.




2. Select **3:New**.

   The **NEW** dialog box is displayed.



3. Specify a folder and text variable that you want to use to store the new session.

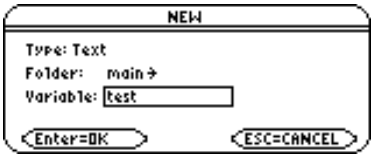


Item	Description
Type	Automatically set as **Text** and cannot be changed.
Folder	Shows the folder in which the text variable will be stored. For information about folders, refer to the *Calculator Home Screen module*. To use a different folder, press ▶ to display a menu of existing folders. Then select a folder.

Downloaded from www.Manualslib.com manuals search engine

Item	Description
Variable	Type a variable name. If you specify a variable that already exists, an error message will be displayed when you press ENTER. When you press ESC or ENTER to acknowledge the error, the **NEW** dialog box is redisplayed.

4. Press ENTER (after typing in an input box such as **Variable**, you must press ENTER twice) to display an empty Text Editor screen.

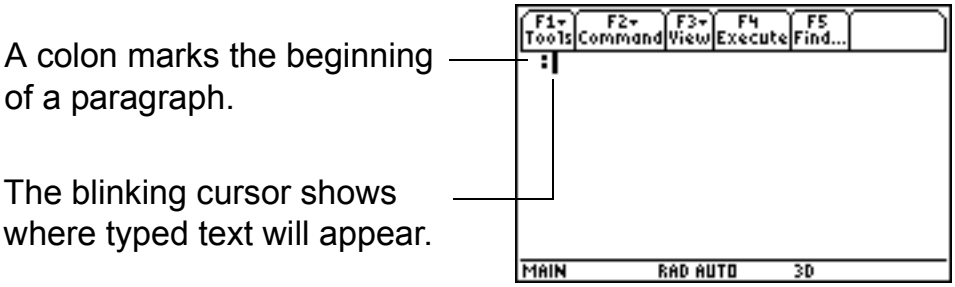

You can now use the Text Editor as described in the remaining sections of this module.

Note: Your session is saved automatically as you type. You do not need to save a session manually before leaving the Text Editor, starting a new session, or opening a previous one.


Resuming the Current Session

You can leave the Text Editor and go to another application at any time. To return to the session that was displayed when you left the Text Editor, launch Text Editor again and select **1:Current**.

Downloaded from www.Manualslib.com manuals search engine

Starting a New Session from the Text Editor

To leave the current Text Editor session and start a new one:

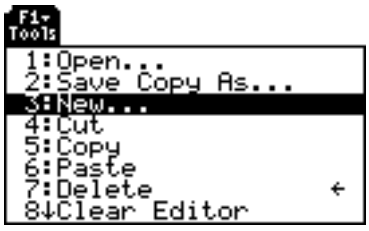

1. Press F1 and select **3:New**.
2. Specify a folder and text variable for the new session.
3. Press ENTER twice.

Opening a Previous Session

You can open a previous Text Editor session at any time.

1. From within the Text Editor, press F1 and select **1:Open**.
   — or —

   From any application, launch Text Editor again and select **2:Open**.

2. Select the applicable folder and text variable.
3. Press ENTER.



Note: By default, **Variable** shows the first existing text variable in alphabetic order.

Downloaded from www.Manualslib.com manuals search engine

Copying a Session

In some cases, you may want to copy a session so that you can edit the copy while retaining the original.

1. Display the session you want to copy.
2. Press F1 and select **2:Save Copy As**.
3. Specify the folder and text variable for the copied session.
4. Press ENTER twice.

Note about Deleting a Session

Because all Text Editor sessions are saved automatically, you can accumulate quite a few previous sessions, which take up memory storage space.

To delete a session, use the VAR-LINK screen (2nd [VAR-LINK]) to delete that session's text variable. For information about VAR-LINK, refer to *Memory and Variable Management*.


Entering and Editing Text

After beginning a Text Editor session, you can enter and edit text. In general, use the same techniques that you have already used to enter and edit information on the Home screen's entry line.

Downloaded from www.Manualslib.com manuals search engine

Typing Text

When you create a new Text Editor session, you see an empty screen. When you open a previous session or return to the current session, you see the existing text for that session.

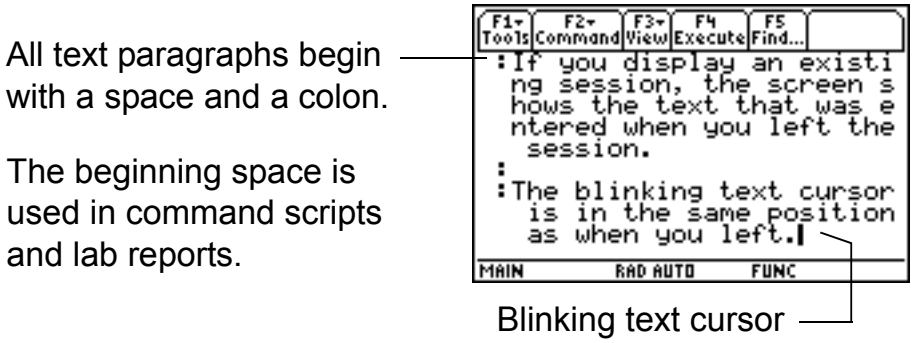
All text paragraphs begin with a space and a colon.
The beginning space is used in command scripts and lab reports.
F1 Tools
F2 Command
F3 View
F4 Execute
F5 Find...
:If you display an existi ng session, the screen s hows the text that was e ntered when you left the session.
:
:The blinking text cursor is in the same position as when you left.
MAIN
RAD AUTO
FUNC
Blinking text cursor

You do not need to press ENTER at the end of each line. At the end of a line, the next character you type wraps to the next line. Press ENTER only when you want to start a new paragraph.

As you reach the bottom of the screen, previous lines scroll off the top of the screen.

Using a USB cable and TI Connect™ software with the TI-89 Titanium, you can use the computer keyboard to type a text file and then send that file to the TI-89 Titanium. This is useful if you need to create a lengthy text file.

For information about obtaining cables or updated TI Connect™ software, check the TI web site at education.ti.com, or contact Texas Instruments at TI-Cares™.

Notes:

- Use the cursor pad to scroll through a session or position the text cursor.

Downloaded from www.Manualslib.com manuals search engine

- Press [2nd] ▲ or [2nd] ▼ to scroll up or down one screen at a time, and [♦] ▲ or [♦] ▼ to go to the top or bottom of the text session.

Typing Alphabetic Characters

To:	Press:
Type a single lowercase alpha character.	[alpha] and then the letter key (status line shows a)
Type a single uppercase alpha character.	[⇧] and then the letter key (status line shows A)
Type a space.	[alpha] [␣] (alpha function of the [(-)]·key)
Turn on lowercase alpha-lock.	[2nd] [a-lock] (status line shows a)
Turn on uppercase ALPHA-lock.	[⇧] [a-lock] (status line shows A)
Turn off alpha-lock.	[alpha] (turns off upper- and lowercase lock)

Note: On the TI-89 Titanium, you do not need [alpha] or alpha-lock to type x, y, z, or t. But you must use [⇧] or uppercase ALPHA-lock for X, Y, Z, or T. On the TI-89 Titanium, alpha-lock is always turned off when you change applications, such as going from the Text Editor to the Home screen.

Downloaded from www.Manualslib.com manuals search engine

On the TI-89 Titanium, while either type of alpha-lock is on:

- To type a period, comma, or other character that is the primary function of a key, you must turn alpha-lock off.
- To type a second function character such as 2nd [{], you do not need to turn alpha-lock off. After you type the character, alpha-lock remains on.


Deleting Characters

To delete:	Press:
The character to the left of the cursor	← or F1 **7**
The character to the right of the cursor	♦ [DEL] (same as ♦ ←)
All characters to the right of the cursor through the end of the paragraph	CLEAR
All characters in the paragraph (regardless of the cursor's position in that paragraph)	CLEAR CLEAR

Note: If there are no characters to the right of the cursor, CLEAR erases the entire paragraph.

Downloaded from www.Manualslib.com manuals search engine

Highlighting Text

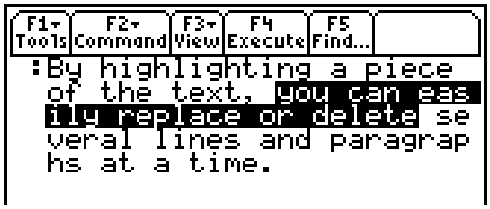To:	Do this:
Highlight text	Move the cursor to the beginning or end of the text. Hold [↑] and press: • ◀ or ▶ to highlight characters to the left or right of the cursor, respectively. • ▼ or ▲ to highlight all characters up to the cursor position on the next or previous line, respectively. 

Note: To remove highlighting without replacing or deleting, move the cursor.

Replacing or Deleting Highlighted Text

To:	Do this:
Replace highlighted text	Type the new text.
Delete highlighted text	Press [←].

Downloaded from www.Manualslib.com manuals search engine


Cutting, Copying, and Pasting Text

Cutting and copying both place highlighted text into the clipboard of the TI-89 Titanium. Cutting deletes the text from its current location (used to move text) and copying leaves the text.

1. Highlight the text you want to move or copy.

2. Press F1.
3. Select the applicable menu item.
   - To move the text, select **4:Cut**.
     — or —
   - To copy the text, select **5:Copy**.

   Note: You can press:
   ♦ [CUT], ♦ [COPY], ♦ [PASTE]
   to cut, copy, and paste without having to use the F1 toolbar menu.

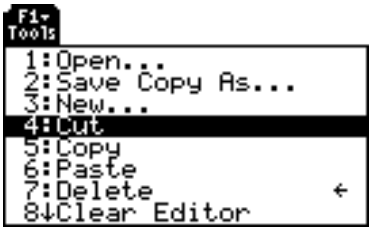

4. Move the text cursor to the location where you want to insert the text.
5. Press F1 and then select **6:Paste**.

You can use this general procedure to cut, copy, and paste text:

- Within the same text session.
- From one text session to another. After cutting or copying text in one session, open the other session and then paste the text.
- From a text session to a different application. For example, you can paste the text into the Home screen's entry line.


Downloaded from www.Manualslib.com manuals search engine

Finding Text

From the Text Editor:

1. Place the text cursor at any location preceding the text you want to search for. All searches start at the current cursor location.

2. Press F5.



3. Type the search text.

   The search is not case sensitive. For example: CASE, case, and Case have the same effect.

   Note: The **FIND** dialog box retains the last search text you entered. You can type over it or edit it.



4. Press ENTER twice.

If the search text is:	The cursor:
Found	Moves to beginning of the search text.
Not found	Does not move.

Downloaded from www.Manualslib.com manuals search engine

Inserting or Overtyping a Character

By default, the TI-89 Titanium is in insert mode. To toggle between insert and overtype mode, press 2nd [INS].

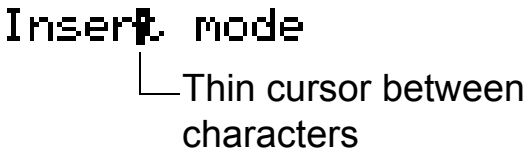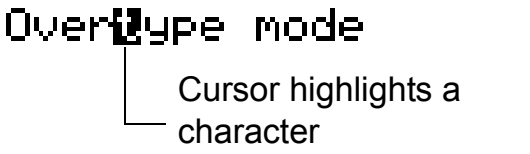If the TI-89 Titanium is in:	The next character you type:
	Will be inserted at the cursor.
	Will replace the highlighted character.

Note: Look at the shape of the cursor to see if you're in insert or overtype mode.

Clearing the Text Editor

To erase all existing paragraphs and display an empty text screen, press F1 and then select **8:Clear Editor**.

Entering Special Characters

You can use the CHAR menu to select any special character from a list. You can also type certain commonly used characters from the keyboard. To see which characters are available from the keyboard, you can display a map that shows the characters and their corresponding keys.

Downloaded from www.Manualslib.com manuals search engine

Selecting Characters from the CHAR Menu

1. Press 2nd [CHAR].
2. Select the applicable category.

   A menu lists the characters in that category.
3. Select a character. You may need to scroll through the menu.

   Note: For accented characters, select International. Commonly used international characters are also available from the default custom menu (2nd [CUSTOM]).



↓ indicates that you can scroll.

Displaying the Keyboard Map

The keyboard map shows several shortcuts that let you enter certain special characters from the keyboard. It also shows some shortcuts for other calculator features.

The keyboard map does not display all available shortcuts. Refer to the inside front and the inside back covers of this guidebook for a complete list of shortcut keys.


To access the shortcuts, first press the 2nd key. Some special characters are marked on the keyboard, but most are not.

On the TI-89 Titanium:

- Press ◆ EE to display the keyboard map.

Downloaded from www.Manualslib.com manuals search engine

- Press [ESC] to exit the map.

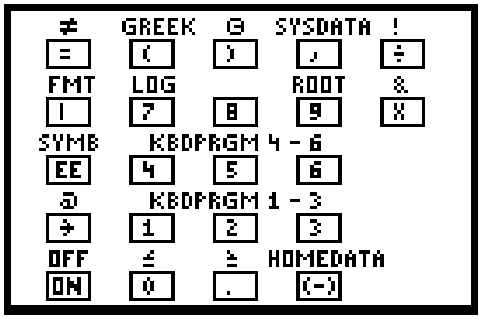

TI-89 Titanium Keyboard map

To access the TI-89 Titanium shortcuts, first press the [♦] key.

TI-89 Titanium keyboard map feature shortcuts:

- GREEK ([♦] [(]) — Accesses the Greek character set (described later in this section).
- SYSDATA ([♦] [,]) — Copies the current graph coordinates to the system variable sysdata.
- FMT ([♦] [|]) — Displays the FORMATS dialog box.
- KBDPRGM1 – 6([♦] 1 through [♦] 6) — If you have user-defined or assembly-language programs named kbdprgm1() through kbdprgm6(), these shortcuts run the corresponding program.
- OFF ([♦] [OFF]) — Similar to [2nd] [OFF] except:
  - You can use [♦] [OFF] if an error message is displayed.
  - When you turn the TI-89 Titanium on again, it will be exactly as you left it.

Downloaded from www.Manualslib.com manuals search engine


- HOMEDATA ([♦] [(-)]) — Copies the current graph coordinates to the Home screen's history area.

Typing Special Symbols from the Keyboard

Note: To help you find the applicable keys, these maps show only the special symbols.

On the TI-89 Titanium:

▶ Press [♦] and then the key for the symbol. For example: [♦] [×] (times) displays &.

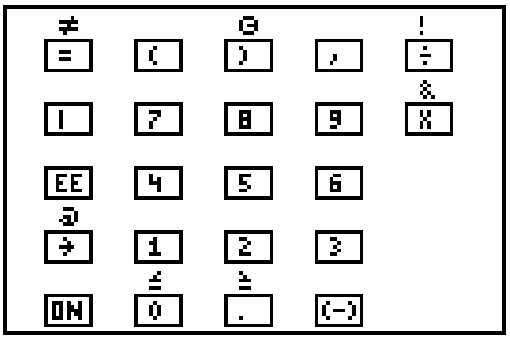

These special symbols are not affected by whether Alpha-Lock is on or off.


Typing Greek Letters from the Keyboard

Press the key combination that accesses the Greek character set on your calculator. Then select the applicable alpha character on the keyboard to enter a Greek letter.

Downloaded from www.Manualslib.com manuals search engine

On the TI-89 Titanium:

- Press ♦ (to access the Greek character set.

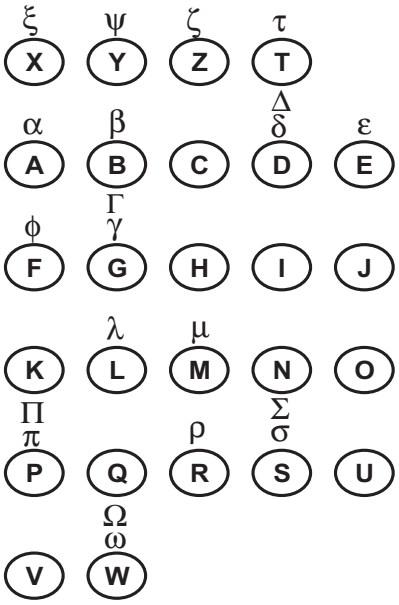

Note: If you press a key combination that does not access a Greek letter, you get the normal letter for that key. Your calculator does not display a map of Greek letters; the map shown here is for reference only.

Several keys let you access lowercase and uppercase Greek letters. For example:

On the TI-89 Titanium:

- Press ♦ (to access the Greek character set.
- Press ♦ (alpha + letter to access lowercase Greek letters. Example: ♦ (alpha [W] displays ω

Downloaded from www.Manualslib.com manuals search engine

- Press ◆ (⬆ + letter to access uppercase Greek letters. Example: ◆ (⬆ [W] displays Ω

The exact keys that you press on the TI-89 Titanium depend on whether alpha-lock is on or off. For example:

On the TI-89 Titanium, if:	Then:
Alpha-lock is off.	◆ (**X** or ◆ (alpha **X** displays ξ. (alpha is not required for X, Y, Z, or T.) ◆ (alpha **W** displays ω. ◆ (⬆ **W** displays Ω. (⬆ is used for uppercase letters.)
Lowercase alpha-lock (2nd [a-lock]) is on.	◆ (**X** displays ξ. ◆ (**W** displays ω. ◆ (⬆ **W** displays Ω.
Uppercase ALPHA-LOCK (⬆ [a-lock]) is on.	◆ (**X** displays ξ. ◆ (**W** displays Ω. ◆ (⬆ **W** displays Ω.

Important: If you press alpha on the TI-89 Titanium to access a Greek letter while alpha-lock is on, it turns alpha-lock off.

For a List of All Special Characters

For a list of all special characters, refer to the *Technical Reference* module.

Downloaded from www.Manualslib.com manuals search engine


Entering and Executing a Command Script

By using a command script, you can use the Text Editor to type a series of command lines that can be executed at any time on the Home screen. This lets you create interactive example scripts in which you predefine a series of commands and then execute them individually.

Inserting a Command Mark

In the Text Editor:

1. Place the cursor on the line for the command.
2. Press F2 to display the Command toolbar menu.

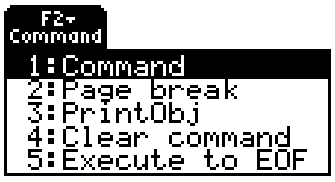

3. Select **1:Command**.

   C is displayed at the beginning of the text line (to the left of the colon).

   Note: This does not insert a new line for the command, it simply marks an existing line as a command line.

Downloaded from www.Manualslib.com manuals search engine

4. Type a command just as you would on the Home screen.

   The line can contain only the command, with no additional text.

   Note: You can mark a line as a command either before or after typing the command on that line.



You can type multiple commands on the same line if you type a colon to separate the commands.

Deleting a Command Mark

This deletes only the **C** mark; it does not delete the command text itself.

1. Place the cursor anywhere on the marked line.
2. Press F2 and select **4:Clear command**.

Executing a Command

To execute a command, you must first mark the line with a **C**. If you execute a line that is not marked with **C**, it will be ignored.

1. Place the cursor anywhere on the command line.
2. Press F4.

Downloaded from www.Manualslib.com manuals search engine

The command is copied to the entry line on the Home screen and executed. The Home screen is displayed temporarily during execution, and then the Text Editor is redisplayed.

After execution, the cursor moves to the next line in the script so that you can continue to execute a series of commands.

Note: To examine the result on the Home screen, use a split screen or press [HOME]

Splitting the Text Editor/ Home Screen

With a split screen, you can view your command script and see the result of an executed command at the same time.

To:	Press:	
Split the screen	[F3] and select **1:Script view**.	
Return to a full screen Text Editor	[F3] and select **2:Clear split**.	

You can also use [MODE] to set up a split screen manually. However, [F3] sets up a Text Editor/Home screen split much easier than [MODE].

- The active application is indicated by a thick border. (By default, the Text Editor is the active application.)
- To switch between the Text Editor and the Home screen, press [2nd] [⊞] (second function of [APPS]).

Downloaded from www.Manualslib.com manuals search engine

Creating a Script from Your Home Screen Entries


From the Home screen, you can save all the entries in the history area to a text variable. The entries are automatically saved in a script format so that you can open the text variable in the Text Editor and execute the entries as commands.

For information, refer to “Saving the Home Screen Entries as a Text Editor Script” in the *Calculator Home Screen* module.

Downloaded from www.Manualslib.com manuals search engine

Example

1. Type your script. Press F2 and select **1:Command** to mark the command lines.
2. Press F3 and select **1:Script view**.

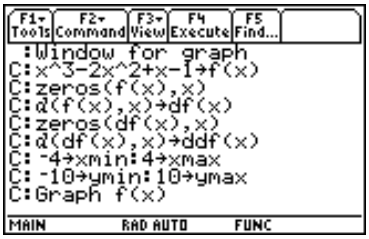


3. Move the cursor to the first command line. Then press F4 to execute the command.

   Note: Some commands take longer to execute. Wait until the **Busy** indicator disappears before pressing F4 again.



4. Continue using F4 to execute each command, but stop just before executing the Graph command.
5. Execute the Graph command.

   Note: In this example, the Graph command displays the Graph screen in place of the Home screen.

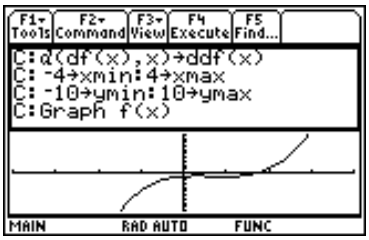

6. Press F3 and select **2:Clear split** to return to a full screen Text Editor.

Downloaded from www.Manualslib.com manuals search engine


Numeric Solver

Displaying the Solver and Entering an Equation

After you display the Numeric Solver, start by entering the equation that you want to solve.

Displaying the Numeric Solver


To display the Numeric Solver, press APPS and then select the Numeric Solver icon. Press ENTER.



The Numeric Solver screen shows the last entered equation, if any.

Entering an Equation

On the **eqn:** line, type in your equation.



You can:	For example:
Type an equation directly.	**a=(m2−m1)/(m2+m1)∗g** **a+b=c+sin(d)**

Downloaded from www.Manualslib.com manuals search engine

You can:	For example:
Refer to a function or equation defined elsewhere. **Notes:** • Do not use system function names (such as **y1(x)** or **r1(θ)**) as simple variables (**y1** or **r1**). • Be careful with implied multiplication. For example, **a(m2+m1)** is treated as a function reference, not as **a∗(m2+m1)**.	Suppose you defined **y1(x)** on either the: • Y= Editor: **y1(x)=1.25x∗cos(x)** – or – • Home screen: **Define y1(x)=1.25x∗cos(x)** In the Numeric Solver, you then would enter: **y1(x)=0** or **y1(t)=0**, etc. The argument does not have to match the one used to define the function or equation.
Type an expression without an = sign. **Note:** When you define the variables, you can either define **exp** or solve for it.	**e+f−ln(g)** After you press ENTER, the expression is set equal to a system variable called exp and entered as: exp=e+f−ln(g)
Recall a previously entered equation or open a saved equation. **Note:** After you press ENTER the current equation is stored automatically to the system variable **eqn**.	Refer to the applicable heading later in this section.


Downloaded from www.Manualslib.com manuals search engine

Recalling Previously Entered Equations

Your most recently entered equations (up to 11 with the default setting) are retained in memory. To recall one of these equations:


1. From the Numeric Solver screen, press F5.

   A dialog box displays the most recently entered equation.

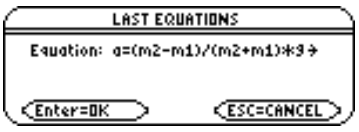

2. Select an equation.

   - To select the displayed equation, press ENTER.
   - To select a different equation, press ▶ to display a list. Then select the one you want.

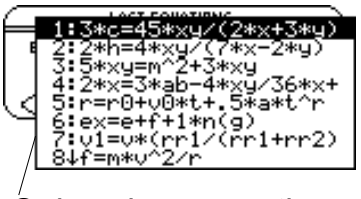

Only unique equations are listed. If you re-enter the same equation 5 times, it appears only once.

   Note: You can specify how many equations are retained. From the Numeric Solver, press F1 and select **9:Format** (or use ▣ ◆ I). Then select a number from 1 through 11.


3. Press ENTER.

Downloaded from www.Manualslib.com manuals search engine


Saving Equations for Future Use

Because the number of equations that you can recall with F5 **Eqns** is limited, a particular equation may not be retained indefinitely.

To store the current equation for future use, save it to a variable.

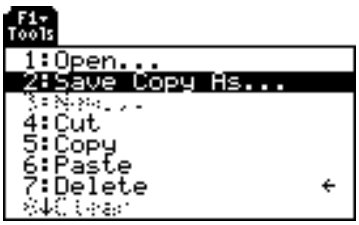


1. From the Numeric Solver screen, press F1 and select **2:Save Copy As**.
2. Specify a folder and a variable name for the equation.
3. Press ENTER twice.

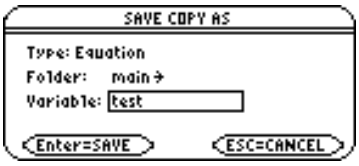

Note: An equation variable has an EXPR data type, as shown on the MEMORY and VAR-LINK screens.

Opening a Saved Equation


To open a previously saved equation variable:

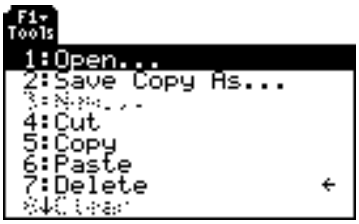

1. From the Numeric Solver screen, press F1 and select **1:Open**.

Downloaded from www.Manualslib.com manuals search engine

2. Select the applicable folder and equation variable.
3. Press ENTER.

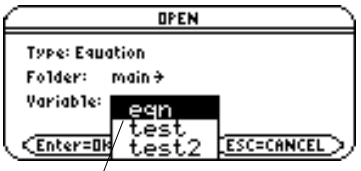

Variable eqn contains the current equation; it always appears alphabetically in the list.

Defining the Known Variables


After you type an equation in the Numeric Solver, enter the applicable values for all variables except the unknown variable.

Defining the List of Variables

After typing your equation on the **eqn:** line, press ENTER or ⊙.

The screen lists the variables in the order they appear in the equation. If a variable is already defined, its value is shown. You can edit these variable values.

Note: If an existing variable is locked or archived, you cannot edit its value.

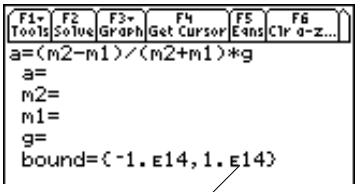


The solution must be within the specified bounds, which you can edit.

Downloaded from www.Manualslib.com manuals search engine

Enter a number or expression for all variables except the one you want to solve for.

Notes and Common Errors


- If you define a variable:
  - In terms of another variable in the equation, that variable must be defined first.
  - In terms of another variable that is not in the equation, that variable must already have a value; it cannot be undefined.
  - As an expression, it is evaluated when you move the cursor off the line. The expression must evaluate to a real number

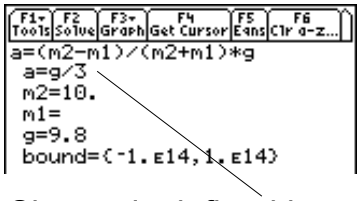

Since a is defined in terms of g, you must define g before a. When you move the cursor to another line, g/3 is evaluated.

- If the equation contains a variable already defined in terms of other variables, those other variables are listed.


  Note: When you assign a value to a variable in the Numeric Solver, that variable is defined globally. It still exists after you leave the solver.

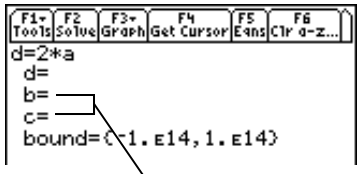

If variable a was defined previously as b+c→a, then b and c are listed instead of a.

Downloaded from www.Manualslib.com manuals search engine


- If you refer to a previously defined function, any variables used as arguments in the function call are listed, not the variables used to define the function.

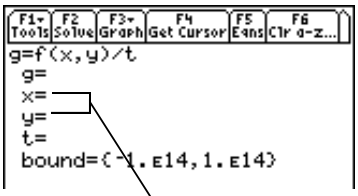

If f(a,b) was defined previously as √(a^2+b^2) and your equation contains f(x,y), then x and y are listed, not a and b.


- If the equation contains a system variable (**xmin**, **xmax**, etc.), that variable is not listed. The solver uses the system variable's existing value.

  Note: You cannot solve for a system variable other than exp. Also, if the equation contains a system variable, you cannot use F3 to graph.

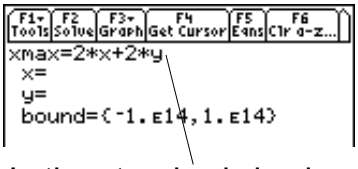

In the standard viewing window, xmax=10.


- Although you can use a system variable in the equation, an error occurs if you use F3 to graph the solution.

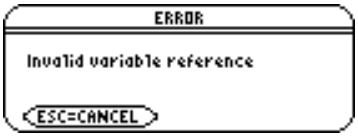

Downloaded from www.Manualslib.com manuals search engine

- If you see the error shown to the right, delete the entered variable value. Then edit the equation to use a different variable.

  Note: This error occurs if you use a reserved name incorrectly or refer to an undefined system function as a simple variable without parentheses.

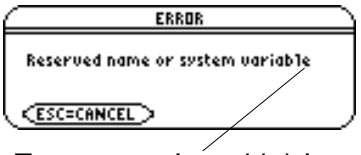

For example, y1(x) is undefined and you use y1.


Editing the Equation

In the Numeric Solver, press ▲ until the cursor is on the equation. The screen automatically changes to show only the **eqn:** line. Make your changes, and then press ENTER or ▼ to return to the list of variables.

Specifying an Initial Guess and/or Bounds (Optional)

To find a solution more quickly or to find a particular solution (if multiple solutions exist), you can optionally:

- Enter an initial guess for the unknown variable. The guess must be within the specified bounds.
- Enter lower and upper bounds close to the solution.

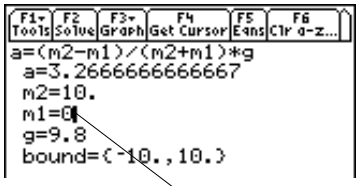

Initial guess must be within the bounds.

Downloaded from www.Manualslib.com manuals search engine

For the bounds, you can also enter variables or expressions that evaluate to appropriate values (**bound={lower,upper}**) or a valid list variable that contains a two-element list (**bound=list**). The bounds must be two floating point elements with the first one less than or equal to the second one.

Note: You can also select an initial guess graphically.


Solving for the Unknown Variable

After you type an equation in the Numeric Solver and enter values for the known variables, you are ready to solve for the unknown variable.

Finding the Solution


With all known variables defined:

1. Move the cursor to the unknown variable.

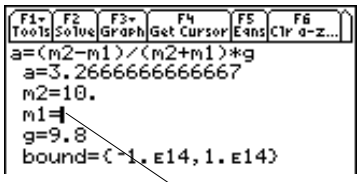

Put the cursor on the variable you want to solve for.


2. Press F2 **Solve**.
3. A ▪ marks the solution and **left**–**rt**. The ▪ disappears when you edit a value, move the cursor to the equation, or leave the solver.

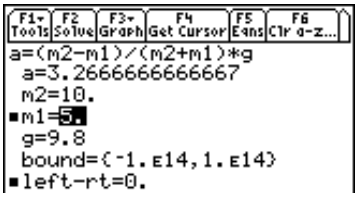

Downloaded from www.Manualslib.com manuals search engine

Note: To stop (break) a calculation, press ON. The unknown variable shows the value being tested when the break occurred.

Using the solution and your entered values, the left and right sides of the equation are evaluated separately. **left**–**rt** shows the difference, which indicates the solution's accuracy. The smaller the value, the more accurate the solution. If the solution is precise, **left**–**rt=0**.

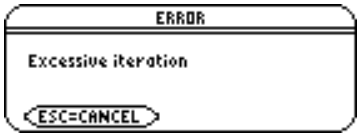If you:	Do this:
Want to solve for other values	Edit the equation or variable values.
Want to find a different solution for an equation with multiple solutions	Enter an initial guess and/or a new set of bounds close to the other solution.
See the message: 	Press ESC. The unknown variable shows the value being tested when the error occurred. • The **left**–**rt** value may be small enough for you to accept the result. • If not, enter a different set of bounds.

Note: An iterative process is used to solve an equation. If the iterative process cannot converge on a solution, this error occurs.

Graphing the Solution

You can graph an equation's solutions any time after defining the known variables, either before or after you solve for the unknown variable. By graphing the solutions, you can


Downloaded from www.Manualslib.com manuals search engine

see how many solutions exist and use the cursor to select an accurate initial guess and bounds.

Displaying the Graph

In the Numeric Solver, leave the cursor on the unknown variable. Press F3 and select:

1:Graph View
– or –
3:ZoomStd
– or –
4:ZoomFit

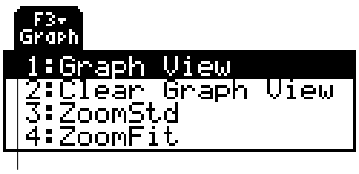

Graph View uses the current Window variable values.


For information about **ZoomStd** and **ZoomFit**, refer to *Basic Function Graphing*.

The graph is shown in a split screen, where:

- The unknown variable is plotted on the x axis.
- **left**–**rt** is plotted on the y axis.

Solutions for the equation exist at **left**–**rt=0**, where the graph crosses the x axis.

Note: For more information, refer to the *Split Screens* module.

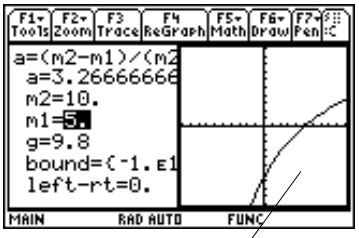

The current graph format settings are used.

Downloaded from www.Manualslib.com manuals search engine

You can explore the graph by using the free-moving cursor, tracing, zooming, etc., as described in *Basic Function Graphing*.

How the Graph Affects Various Settings

When you use the Numeric Solver to display a graph:

- The following modes are changed automatically to these settings:

Mode	Setting
Graph	FUNCTION Any functions selected in the Y= Editor will not be graphed.
Split Screen	LEFT-RIGHT
Number of Graphs	1

  Note: If you were previously using different mode settings, you will need to reselect those settings manually.

- All stat plots are deselected.
- After you leave the Numeric Solver, the Graph screen may continue to display the equation's solution, ignoring any selected Y= functions. If so, display the Y= Editor and then return to the Graph screen. Also, the graph is reset when you change the Graph mode or use **ClrGraph** from the Home screen (F4 **5**) or a program.

Downloaded from www.Manualslib.com manuals search engine


Selecting a New Initial Guess from the Graph

To use the graph cursor to select an initial guess:

1. Move the cursor (either free-moving or trace) to the point that you want to use as the new guess.

2. Use [2nd] [⊞] to make the Numeric Solver screen active.
3. Make sure the cursor is on the unknown variable, and press [F4].

   Note: Cursor coordinate xc is the unknown variable value, and yc is the **left**–**rt** value.
4. Press [F2] to re-solve the equation.

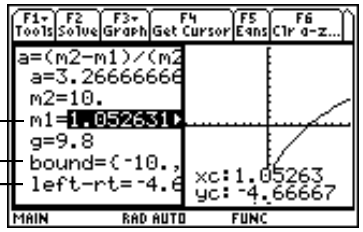

[F4] sets the graph cursor's xc value as an initial guess and the yc value as left–rt. The graph's xmin and xmax values are set as the bounds.

Returning to a Full Screen

From the split screen:

- To display the Numeric Solver full screen, use [2nd] [⊞] to make the solver screen active, press [F3], and then select **2:Clear Graph View**.
  – or –
- To display the Home screen, press [2nd] [QUIT] twice.

Downloaded from www.Manualslib.com manuals search engine

Clearing Variables Before Leaving the Numeric Solver

When you solve an equation, its variables still exist after you leave the Numeric Solver. If the equation contains single-character variables, their values may inadvertently affect later symbolic calculations. Before leaving the Numeric Solver, you may want to:

1. Press:
   [calculator] [2nd] [F6]
   to clear all single-character variables in the current folder.
2. Press [ENTER] to confirm the action.

   The screen returns to the solver's **eqn:** line.

Note: Any time you want to clear single-character variables listed in the solver, use: [calculator] [2nd] [F6].

Downloaded from www.Manualslib.com manuals search engine

Number Bases

Entering and Converting Number Bases

Regardless of the Base mode, you must always use the appropriate prefix when entering a binary or hexadecimal number.

Entering a Binary or Hexadecimal Number

To enter a binary number, use the form:

0b *binaryNumber* (for example: **0b11100110**)

- *binaryNumber*: Binary number with up to 32 digits
- **0b**: Zero, not the letter O, and the letter b

To enter a hexadecimal number, use the form:

0h *hexadecimalNumber* (for example: **0h89F2C**)

- *hexadecimalNumber*: Hexadecimal number with up to 8 digits
- **0h**: Zero, not the letter O, and the letter h

Note: You can type the **b** or **h** in the prefix, as well as hex characters **A – F**, in uppercase or lowercase.

If you enter a number without the **0b** or **0h** prefix, such as 11, it is always treated as a decimal number. If you omit the **0h** prefix on a hexadecimal number containing **A – F**, all or part of the entry is treated as a variable.

Downloaded from www.Manualslib.com manuals search engine

Converting between Number Bases

Use the ▶ conversion operator

integerExpression ▶ **Bin**
integerExpression ▶ **Dec**
integerExpression ▶ **Hex**

For ▶, press 2nd [▶]. Also, you can select base conversions from the MATH/Base menu.

For example, to convert 256 from decimal to binary:


256 ▶ Bin

Note: If your entry is not an integer, a Domain error is displayed.

To convert 101110 from binary to hexadecimal:

0b101110 ▶ Hex

For a binary or hex entry, you must use the 0b or 0h prefix.

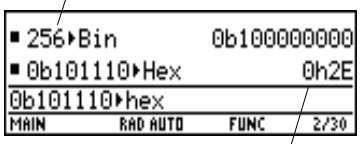


Results use the 0b or 0h prefix to identify.

Alternate Method for Conversions

Instead of using ▶, you can:

1. Use MODE to set the **Base** mode to the base that you want to convert to.


If Base mode = BIN:



Downloaded from www.Manualslib.com manuals search engine

2. From the Home screen, type the number that you want to convert (using the correct prefix) and press ENTER.

If Base mode = HEX:




Performing Math Operations with Hex or Bin Numbers

For any operation that uses an integer number, you can enter a hexadecimal or binary number. Results are displayed according to the Base mode. However, results are restricted to certain size limits when Base = HEX or BIN.

Setting the Base Mode for Displayed Results

1. Press MODE F2 to display **Page 2** of the **MODE** screen.
2. Scroll to the **Base** mode, press ▶, and select the applicable setting.
3. Press ENTER to close the **MODE** screen.

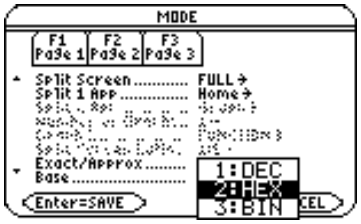


Downloaded from www.Manualslib.com manuals search engine

The **Base** mode controls the displayed format of integer results only.

Note: The Base mode affects output only. You must always use the **0h** or **0b** prefix to enter a hex or binary number.

Fractional and floating-point results are always shown in decimal form.

If Base mode = HEX:

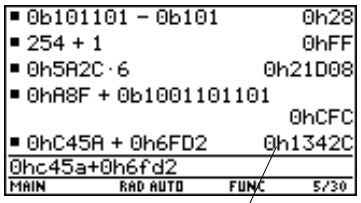


0h prefix in result identifies the base.

Dividing When Base = HEX or BIN

When Base=HEX or BIN, a division result is displayed in hexadecimal or binary form only if the result is an integer.

To ensure that division always produces an integer, use **intDiv( )** instead of ÷.

If Base mode = HEX:

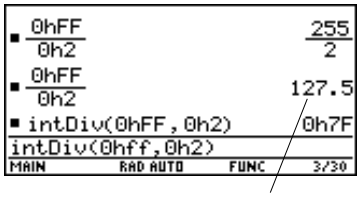


Press ◆ ENTER to display the result in APPROXIMATE form.

Downloaded from www.Manualslib.com manuals search engine

Size Limitations When Base = HEX or BIN

When Base=HEX or BIN, an integer result is stored internally as a signed, 32-bit binary number, which uses the range (shown in hexadecimal and decimal):

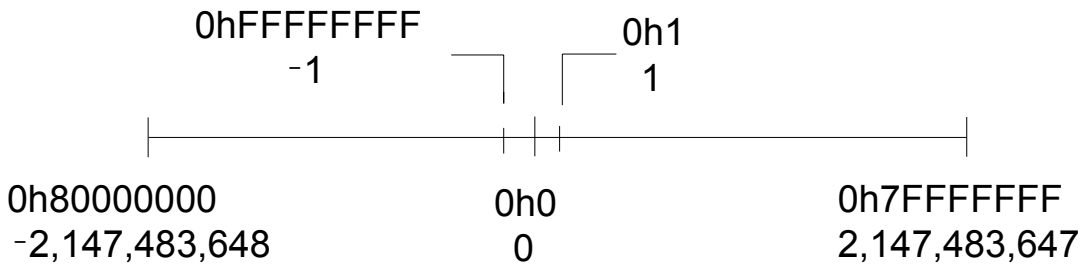

If a result's magnitude is too large to be stored in a signed, 32-bit binary form, a symmetric modulo operation brings the result into the range. Any number greater than 0h7FFFFFFF is affected. For example, 0h80000000 through 0hFFFFFFFF become negative numbers.

Comparing or Manipulating Bits

The following operators and functions let you compare or manipulate bits in a binary number. You can enter an integer in any number base. Your entries are converted to binary automatically for the bitwise operation, and results are displayed according to the Base mode.Boolean Operations

Operator with syntax	Description
not *integer*	Returns the one's complement, where each bit is flipped.
(-) *integer*	Returns the two's complement, which is the one's complement + 1.

Downloaded from www.Manualslib.com manuals search engine

Operator with syntax	Description
integer1 **and** *integer2*	In a bit-by-bit **and** comparison, the result is 1 if both bits are 1; otherwise, the result is 0. The returned value represents the bit results.
integer1 **or** *integer2*	In a bit-by-bit **or** comparison, the result is 1 if either bit is 1; the result is 0 only if both bits are 0. The returned value represents the bit results.
integer1 **xor** *integer2*	In a bit-by-bit **xor** comparison, the result is 1 if either bit (but not both) is 1; the result is 0 if both bits are 0 or both bits are 1. The returned value represents the bit results.

Note: You can select these operators from the MATH/Base menu. For an example using each operator, refer to the *Technical Reference* module.

Suppose you enter:

0h7AC36 **and** 0h3D5F


Internally, the hexadecimal integers are converted to a signed, 32-bit binary number.

Then corresponding bits are compared.

If Base mode = HEX:



If Base mode = BIN:



Downloaded from www.Manualslib.com manuals search engine

```
0h7AC36 =  0b00000000000001111010110000110110
  and            and
0h3D5F     0b00000000000000000011110101011111
           0b00000000000000000010110000010110 = 0h2C16
                 └─Leading zeros are not shown in the result.
```

Note: If you enter an integer that is too large to be stored in a signed, 32-bit binary form, a symmetric modulo operation brings the value into the range.

The result is displayed according to the Base mode.

Rotating and Shifting Bits

Function with syntax	Description
rotate(*integer***)** – or – **rotate(***integer,#ofRotations***)**	If #*ofRotations* is: • omitted — bits rotate once to the right (default is ⁻1). • negative — bits rotate the specified number of times to the right. • positive — bits rotate the specified number of times to the left. In a right rotation, the rightmost bit rotates to the leftmost bit; vice versa for a left rotation.

Downloaded from www.Manualslib.com manuals search engine

Function with syntax	Description
shift(*integer***)** – or – **shift(***integer,#ofShifts***)**	If *#ofShifts* is: • omitted — bits shift once to the right (default is ⁻1). • negative — bits shift the specified number of times to the right. • positive — bits shift the specified number of times to the left. In a right shift, the rightmost bit is dropped and 0 or 1 is inserted to match the leftmost bit. In a left shift, the leftmost bit is dropped and 0 is inserted as the rightmost bit.


Suppose you enter:

shift(0h7AC36**)**


Internally, the hexadecimal integer is converted to a signed, 32-bit binary number.

Then the shift is applied to the binary number.


If Base mode = HEX:



If Base mode = BIN:



Downloaded from www.Manualslib.com manuals search engine

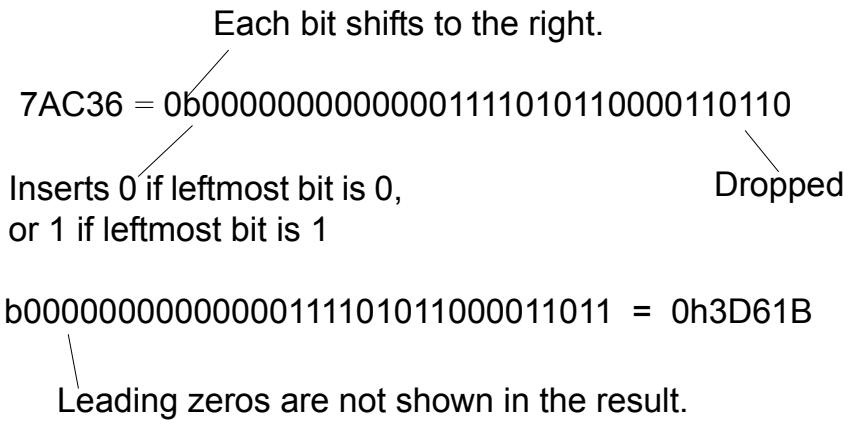
Each bit shifts to the right.
7AC36 = 0b00000000000001111010110000110110
Inserts 0 if leftmost bit is 0,
or 1 if leftmost bit is 1
Dropped
b00000000000001111010110000011011 = 0h3D61B
Leading zeros are not shown in the result.

The result is displayed according to the Base mode.

Note: If you enter an integer that is too large to be stored in a signed, 32-bit binary form, a symmetric modulo operation brings the value into the range.

Downloaded from www.Manualslib.com manuals search engine


Memory and Variable Management

Checking and Resetting Memory

The **MEMORY** screen shows the amount of memory (in bytes) used by all variables in each data type, regardless of whether the variables are stored in RAM or the user data archive. You can also use this screen to reset the memory.

Displaying the MEMORY Screen

Press [2nd] [MEM]. (The numbers on your **MEMORY** screen may vary from those shown.)

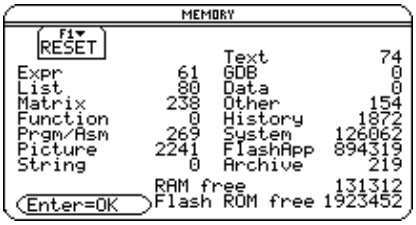

Prgm/Asn: Includes programs written for the TI-89 Titanium as well as any assembly-language programs you have loaded.
History: Size of history pairs saved in the Home screen's history area.
FlashApp: Size of Flash applications.
RAM free: Free space in RAM.
Flash ROM free: Free space in Flash ROM.

Note: To display the size of individual variables and determine if they are in the user data archive, use the **VAR-LINK** screen.

To close the screen, press [ENTER]. To reset the memory, use the following procedure.

Downloaded from www.Manualslib.com manuals search engine

Resetting the Memory

From the **MEMORY** screen:

1. Press F1.
2. Select the applicable item.



Item	Description
RAM	**1:All RAM:** Resetting RAM erases all data and programs from RAM. **2:Default:** Resets all system variables and modes to their original factory settings. This does not affect any user-defined variables, functions, or folders.
Flash ROM	**1:Archive:** Resetting Archive erases all data and programs from Flash ROM. **2:Flash Apps:** Resetting Flash Apps erases all Flash applications from Flash ROM. **3:Both:** Resetting both erases all data, programs, and Flash applications from Flash ROM.
All Memory	Resetting will delete all data, programs, and Flash applications from RAM and Flash ROM.

Important: To delete individual (instead of all) variables, use **VAR-LINK**.

3. When prompted for confirmation, press ENTER.

   The TI-89 Titanium displays a message when the reset is complete.

   Note: To cancel the reset, press ESC instead of ENTER.

4. Press ENTER to acknowledge the message.


Downloaded from www.Manualslib.com manuals search engine

Displaying the VAR-LINK Screen

The **VAR-LINK** screen lists the variables and folders that are currently defined. After displaying the screen, you can manipulate the variables and/or folders.

Displaying the VAR-LINK Screen

Press [2nd] [VAR-LINK]. By default, the **VAR-LINK** screen lists all user-defined variables in all folders and with all data types.

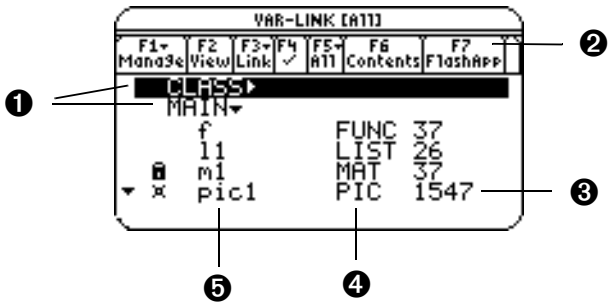

❶ Folder names (alphabetically listed)
❷ Shows installed Flash applications
❸ Size in bytes
❹ Data type
❺ Variable names (alphabetically listed)

This...	Indicates this...
▸	Collapsed folder view (to right of folder name).

Downloaded from www.Manualslib.com manuals search engine

This...	Indicates this...
▼	Expanded folder view (to right of folder name).
▼	You can scroll for more variables and/or folders (in bottom left corner of screen).
✓	If selected with F4.
🔒	Locked
⌘	Archived

To scroll through the list:

- Press ▼ or ▲. (Use 2nd ▼ or 2nd ▲ to scroll one page at a time.)

  – or –

- Type a letter. If there are any variable names that start with that letter, the cursor moves to highlight the first of those variable names.

Note: Type a letter repeatedly to cycle through the names that start with that letter.

Downloaded from www.Manualslib.com manuals search engine

Variable Types as Listed on VAR-LINK

Type	Description
ASM	Assembly-language program
DATA	Data
EXPR	Expression (includes numeric values)
FUNC	Function
GDB	Graph database
LIST	List
MAT	Matrix
PIC	Picture of a graph
PRGM	Program
STR	String
TEXT	Text Editor session

Types not listed above are miscellaneous data types used by software applications.

Closing the VAR-LINK Screen

To close the **VAR-LINK** screen and return to the current application, use [ENTER] or [ESC] as described below.

Press:	To:
[ENTER]	Paste the highlighted variable or folder name to the cursor location in the current application.

Downloaded from www.Manualslib.com manuals search engine

Press:	To:
ESC	Return to the current application without pasting the highlighted name.

Displaying Information about Variables on the Home Screen

From the Home screen, you can display information about variables without opening the VAR-LINK screen.

- To determine if a variable with a given name exists in the system table, Enter the **IsVar()** function on the Home screen.

  IsVar (*var_name*)

  IsVar is a function, which requires you to enclose the variable name in parentheses.

- To determine if a variable is archived, use the **IsArchiv()** function.

  IsArchiv *(var_name)*

- To determine if a variable is locked, use the **IsLocked()** function.

  IsLocked *(var_name)*

Manipulating Variables and Folders with VAR-LINK

On the **VAR-LINK** screen, you can show the contents of a variable. You can also select one or more listed items and manipulate them by using the operations in this section.

Downloaded from www.Manualslib.com manuals search engine

Showing the Contents of a Variable

You can show all variable types except **ASM**, **DATA**, **GDB, and variables created by Flash Apps**. For example, you must open a **DATA** variable in the Data/Matrix Editor.

1. On **VAR-LINK**, move the cursor to highlight the variable.

2. Press:
   2nd [F6]

   If you highlight a folder, the screen shows the number of variables in that folder.



3. To return to **VAR-LINK**, press any key.

Note: You cannot edit the contents from this screen.

Selecting Items from the List

For other operations, select one or more variables and/or folders.

To select:	Do this:
A single variable or folder	Move the cursor to highlight the item, then press [F4].
A group of variables or folders	Highlight each item and press [F4]. A ✓ is displayed to the left of each selected item. (If you select a folder, all variables in that folder are selected.) Use [F4] to select or deselect an item.

Downloaded from www.Manualslib.com manuals search engine

To select:	Do this:
All folders and all variables 	Press ▶ to expand the folder, then press F5 **All** and select **1:Select All**. Choosing **3:Select Current** selects the last set of items transmitted to your unit during the current **VAR-LINK** session. Choosing **4:Expand All** or **5:Collapse All** expands or collapses your folders or Flash applications.

Note: Press either ◀ or ▶ to toggle between expanded or collapsed view when you have a folder highlighted.

Folders and Variables

Folders give you a convenient way to manage variables by organizing them into related groups.


The TI-89 Titanium has one built-in folder named **MAIN**. Unless you create other folders and designate a user-created folder as the current folder, all variables are stored in the **MAIN** folder by default. A system variable or a variable with a reserved name can be stored in the **MAIN** folder only.

Example of variables that can be stored in MAIN only
Window variables (**xmin**, **xmax**, etc.)
Table setup variables (**TblStart**, **ΔTbl**, etc.)
Y= Editor functions (**y1(x)**, etc.)

Downloaded from www.Manualslib.com manuals search engine

By creating additional folders, you can store independent sets of user-defined variables (including user-defined functions). For example, you can create separate folders for different TI-89 Titanium applications (Math, Text Editor, etc.) or classes. You can store a user-defined variable in any existing folder.

The user-defined variables in one folder are independent of the variables in any other folder. Therefore, folders can store separate sets of variables with the same names but different values.

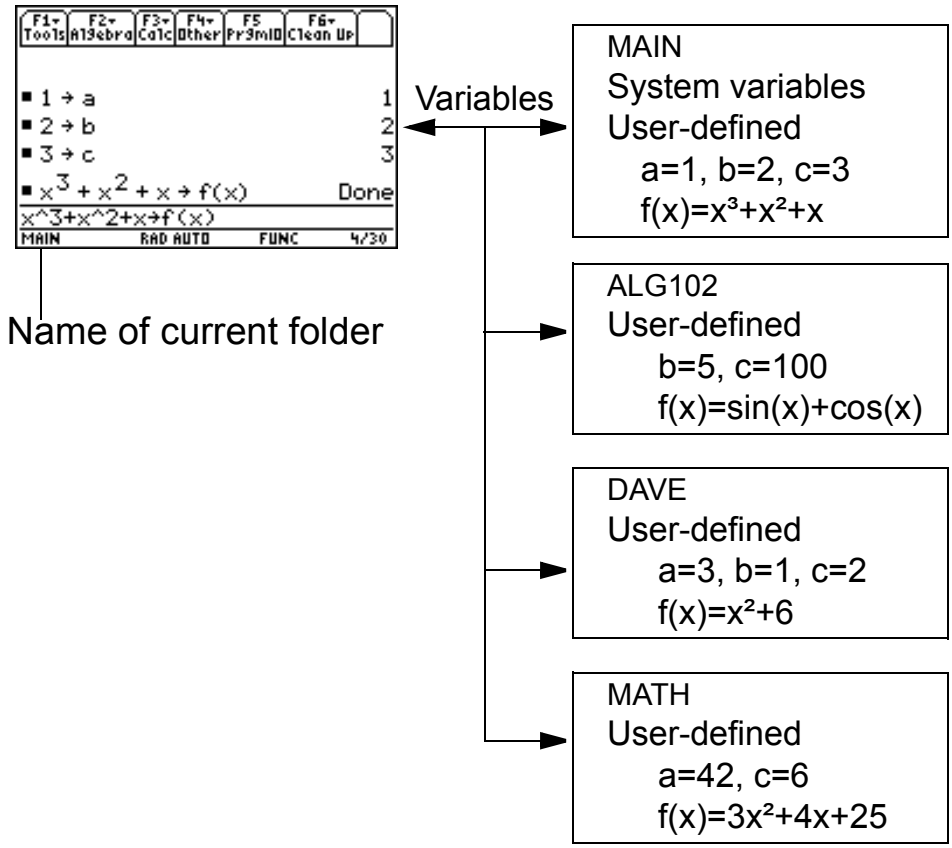

You cannot create a folder within another folder.

Downloaded from www.Manualslib.com manuals search engine

The system variables in the **MAIN** folder are always directly accessible, regardless of the current folder.

Note: User-defined variables are stored in the “current folder” unless you specify otherwise.

Creating a Folder from the VAR-LINK Screen

1. Press 2nd [VAR-LINK].

2. Press F1 **Manage** and select **5:Create Folder**.



3. Type a unique folder name up to eight characters, and press ENTER twice.

After you create a new folder from **VAR-LINK**, that folder is not automatically set as the current folder.

Creating a Folder from the Home Screen

Enter the **NewFold** command on the Home screen.

NewFold *folderName*

folderName — Folder name to create. This new folder is set automatically as the current folder.

Downloaded from www.Manualslib.com manuals search engine

Setting the Current Folder from the Home Screen

Enter the **setFold** function on the Home screen.

setFold (*folderName*)

setFold is a function, which requires you to enclose the folder name in parentheses.

When you execute **setFold**, it returns the name of the folder that was previously set as the current folder.


Setting the Current Folder from the MODE Dialog Box

1. Press MODE.

2. Highlight the **Current Folder** setting.

3. Press ▶ to display a menu of existing folders.

   Note: To cancel the menu or exit the dialog box without saving any changes, press ESC.

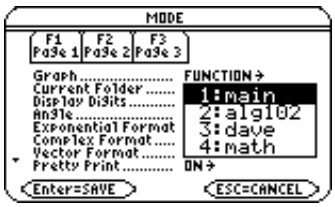

4. Select the applicable folder. Either:
   - Highlight the folder name and press ENTER.

     – or –

   - Press the corresponding number or letter for that folder.
5. Press ENTER to save your changes and close the dialog box.

Downloaded from www.Manualslib.com manuals search engine

Renaming Variables or Folders

Remember, if you use F4 to select a folder, the variables in that folder are selected automatically. As necessary, use F4 to deselect individual variables.

1. On **VAR-LINK**, select the variables and/or folders.
2. Press F1 **Manage** and select **3:Rename**.
3. Type a unique name, and press ENTER twice.

   If you selected multiple items, you are prompted to enter a new name for each one.



Using Variables in Different Folders



You can access a user-defined variable or function that is not in the current folder. Specify the complete pathname instead of only the variable name.

A pathname has the form:

folderName \ *variableName*
– or –
folderName \ *functionName*

Downloaded from www.Manualslib.com manuals search engine

For example:

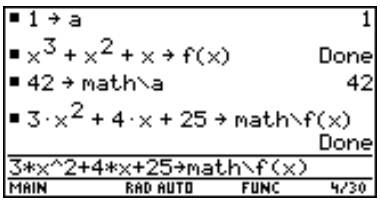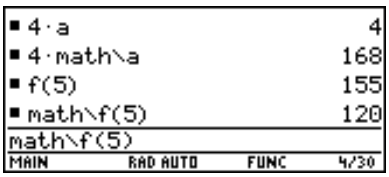If Current Folder = MAIN	Folders and Variables
	MAIN a=1 f(x)=x³+x²+x
	MATH a=42 f(x)=3x²+4x+25

To see a list of existing folders and variables, press 2nd [VAR-LINK]. On the **VAR-LINK** screen, you can highlight a variable and press ENTER to paste that variable name to the open application's entry line. If you paste a variable name that is not in the current folder, the pathname (*folderName\variableName*) is pasted.


Listing Only a Specified Folder and/or Variable Type, or Flash application

If you have a lot of variables, folders, or Flash applications, it may be difficult to locate a particular variable. By changing **VAR-LINK's** view, you can specify the information you want to see.


Downloaded from www.Manualslib.com manuals search engine

From the **VAR-LINK** screen:

1. Press F2 **View**.
2. Highlight the setting you want to change, and press ▶. This displays a menu of valid choices. (To cancel a menu, press ESC.)

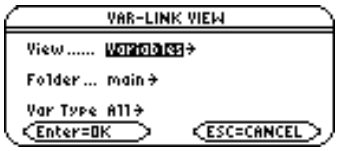


View — Allows you to choose variables, Flash applications, or system variables to view.

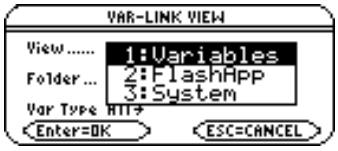

Note: To list system variables (window variables, etc.), select **3:System.**

Folder — Always lists **1:All** and **2:main**, but lists other folders only if you have created them.

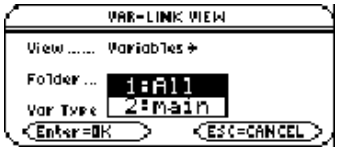

Var Type — Lists the valid variable types.

↓ — indicates that you can scroll for additional variable types.



3. Select the new setting.
4. When you are back on the **VAR-LINK VIEW** screen, press ENTER.

The **VAR-LINK** screen is updated to show only the specified folder, variable type, or Flash application.

Downloaded from www.Manualslib.com manuals search engine

Copying or Moving Variables from One Folder to Another

You must have at least one folder other than **MAIN**. You cannot use **VAR-LINK** to copy variables within the same folder.

1. On **VAR-LINK**, select the variables.
2. Press F1 **Manage** and select **2:Copy** or **4:Move**.
3. Select the destination folder.



4. Press ENTER. The copied or moved variables retain their original names.

   Note: To copy a variable to a different name in the same folder, use STO▸ (such as a1→a2) or the CopyVar command from the Home screen.

Locking or Unlocking Variables Folders, or Flash Applications


When a variable is locked, you cannot delete, rename, or store to it. However, you can copy, move, or display its contents. When a folder is locked, you can manipulate the variables in the folder (assuming the variables are not locked), but you cannot delete the folder. When a Flash application is locked, you cannot delete it.

1. On **VAR-LINK**, select the variables, folders, or Flash application.

Downloaded from www.Manualslib.com manuals search engine

2. Press F1 **Manage** and select **6:Lock** or **7:UnLock**.

- indicates a locked variable or folder in RAM.
- indicates an archived variable, which is locked automatically.

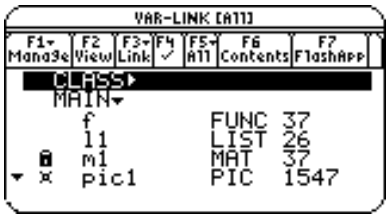

Deleting a Folder from the VAR-LINK Screen

When you delete a folder from the **VAR-LINK** screen, all of the variables in that folder are also deleted. You cannot delete the **MAIN** folder.


1. Press 2nd [VAR-LINK].
2. Press F4 to select the folder(s) to delete. (The folder's variables become selected automatically.)



3. Press F1 **1:Delete** or ←.



4. Press ENTER to confirm the deletion of the folder and all its variables.

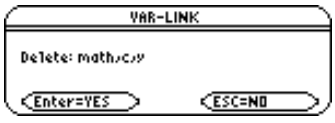

Downloaded from www.Manualslib.com manuals search engine

Deleting a Variable or a Folder from the Home Screen

Before deleting a folder from the Home screen, you must first delete all the variables stored in that folder.

- To delete a variable, enter the **DelVar** command on the calculator Home screen.

  DelVar *var1* [, *var2*] [, *var3*] ...

- To delete all variables of a specific type, enter the **DelType** command on the calculator Home screen.

  DelType *var_type* where *var_type* is the variable type.

  Note: The **DelType** command deletes all variables of the specified type in all folders.

- To delete an empty folder, enter the **DelFold** command on the calculator Home screen.

  DelFold *folder1* [, *folder2*] [, *folder3*] ...

  Note: You cannot delete the **MAIN** folder.

Pasting a Variable Name to an Application

Suppose you are typing an expression on the Home screen and can't remember which variable to use. You can display the **VAR-LINK** screen, select a variable from the list, and paste that variable name directly onto the Home screen's entry line.

Which Applications Can You Use?

From the following applications, you can paste a variable name to the current cursor location.

Downloaded from www.Manualslib.com manuals search engine

- Home screen, Y= Editor, Table Editor, or Data/Matrix Editor — The cursor must be on the entry line.
- Text Editor, Window Editor, Numeric Solver, or Program Editor — The cursor can be anywhere on the screen.

You can also paste a variable name to the current cursor location in many Flash applications.

Procedure

Starting from an application listed above:


1. Position the cursor where you want to insert the variable name.

   sin(|

2. Press 2nd [VAR-LINK].

3. Highlight the applicable variable.

   Note: You can also highlight and paste folder names.

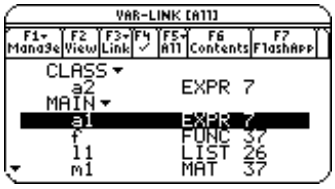

4. Press ENTER to paste the variable name.

   Note: This pastes the variable's name, not its contents. Use 2nd [RCL], instead of 2nd [VAR-LINK], to recall a variable's contents.

   sin(a1|

5. Finish typing the expression.

   sin(a1)|

Downloaded from www.Manualslib.com manuals search engine

If you paste a variable name that is not in the current folder, the variable's pathname is pasted.

```
sin(class\a2
```

Assuming that CLASS is *not* the current folder, this is pasted if you highlight the a2 variable in CLASS.

Archiving and Unarchiving a Variable

To archive or unarchive one or more variables interactively, use the **VAR-LINK** screen. You can also perform these operations from the Home screen or a program.

Why Would You Want to Archive a Variable?

The user data archive lets you:

- Store data, programs, or any other variables to a safe location where they cannot be edited or deleted inadvertently.
- Create additional free RAM by archiving variables. For example:
  - You can archive variables that you need to access but do not need to edit or change, or variables that you are not using currently but need to retain for future use.

    Note: You cannot archive variables with reserved names or system variables.
  - If you acquire additional programs for your TI-89 Titanium, particularly if they are large, you may need to create additional free RAM before you can install those programs.

Downloaded from www.Manualslib.com manuals search engine

Additional free RAM can improve performance times for certain types of calculations.

From the VAR-LINK Screen

To archive or unarchive:

1. Press 2nd [VAR-LINK] to display the **VAR-LINK** screen.
2. Select one or more variables, which can be in different folders. (You can select an entire folder by selecting the folder name.)


   Note: To select a single variable, highlight it. To select multiple variables, highlight each variable and press F4 ✓.

3. Press F1 and select either:

   8:Archive Variable
   – or –
   9:Unarchive Variable



If you select **8:Archive Variable**, the variables are moved to the user data archive.

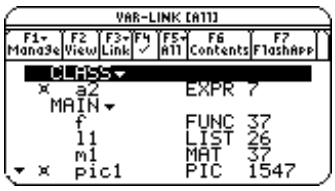

⌑ = archived variables

You can access an archived variable just as you would any locked variable. For all purposes, an archived variable is still in its original folder; it is simply stored in the user data archive instead of RAM.

Note: An archived variable is locked automatically. You can access the variable, but you cannot edit or delete it.

Downloaded from www.Manualslib.com manuals search engine

From the Home Screen or a Program

Use the **Archive** and **Unarchiv** commands:

Archive *variable1*, *variable2*, …

Unarchiv *variable1*, *variable2*, …

If a Garbage Collection Message Is Displayed

If you use the user data archive extensively, you may see a Garbage Collection message. This occurs if you try to archive a variable when there is not enough free archive memory. However, the TI-89 Titanium will attempt to rearrange the archived variables to make additional room.

Responding to the Garbage Collection Message

When you see the message to the right:



- To continue archiving, press ENTER.

  – or –

- To cancel, press ESC.

Note: If batteries are low, replace them before performing garbage collection, or archive memory may be lost.

After garbage collection, depending on how much additional space is freed, the variable may or may not be archived. If not, you can unarchive some variables and try again.

Downloaded from www.Manualslib.com manuals search engine

Why not Perform Garbage Collection Automatically, without a Message?

The message:

- Lets you know why an archive will take longer than usual. It also alerts you that the archive may fail if there is not enough memory.
- Can alert you when a program is caught in a loop that repetitively fills the user data archive. Cancel the archive and investigate the reason.


Why Is Garbage Collection Necessary?

The user data archive is divided into sectors. When you first begin archiving, variables are stored consecutively in sector 1. This continues to the end of the sector. If there is not enough space left in the sector, the next variable is stored at the beginning of the next sector. Typically, this leaves an empty block at the end of the previous sector.

Each variable that you archive is stored in the first empty block large enough to hold it.

Note: An archived variable is stored in a continuous block within a single sector; it cannot cross a sector boundary.

Downloaded from www.Manualslib.com manuals search engine

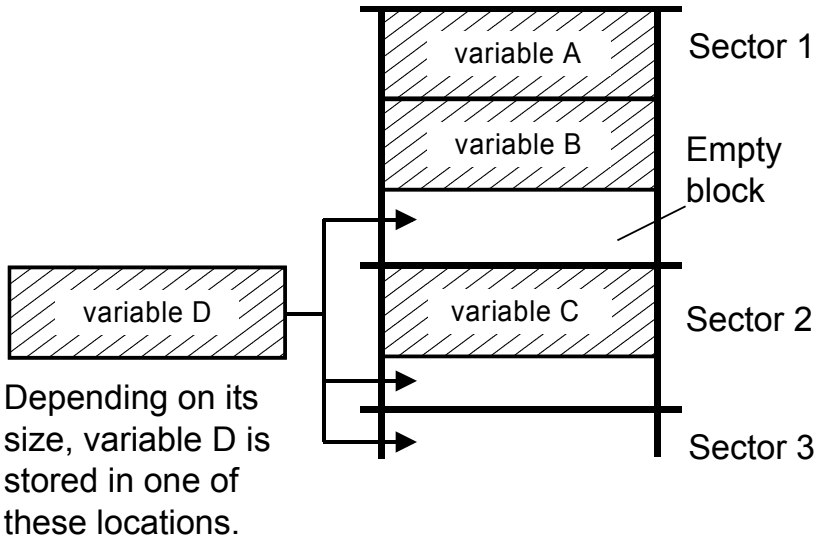


This process continues to the end of the last sector. Depending on the size of individual variables, the empty blocks may account for a significant amount of space.

Note: Garbage collection occurs when the variable you are archiving is larger than any empty block.

How Unarchiving a Variable Affects the Process

When you unarchive a variable, it is copied to RAM but it is not actually deleted from user data archive memory.

Downloaded from www.Manualslib.com manuals search engine

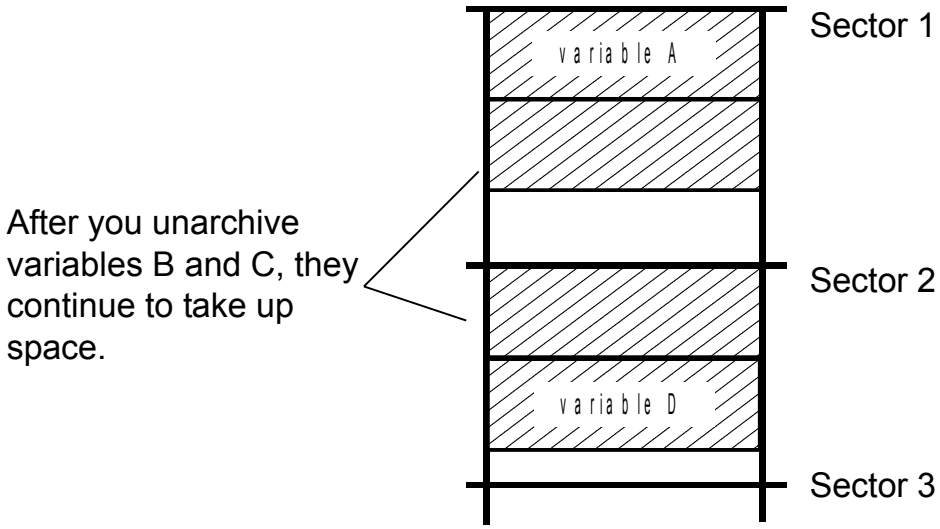


Unarchived variables are “marked for deletion,” meaning they will be deleted during the next garbage collection.

If the MEMORY Screen Shows Enough Free Space

Even if the **MEMORY** screen shows enough free space to archive a variable, you may still get a Garbage Collection message.

This TI-89 Titanium memory screen shows free space that will be available after all “marked for deletion” variables are deleted.

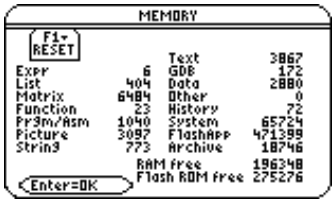


When you unarchive a variable, the Flash ROM free amount increases immediately, but the space is not actually available until after the next garbage collection.

Downloaded from www.Manualslib.com manuals search engine

The Garbage Collection Process

The garbage collection process:

- Deletes unarchived variables from the user data archive.
- Rearranges the remaining variables into consecutive blocks.

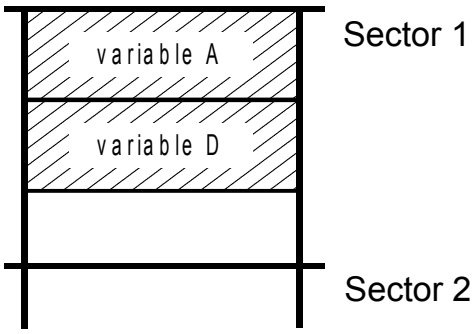

Memory Error When Accessing an Archived Variable

An archived variable is treated the same as a locked variable. You can access the variable, but you cannot edit or delete it. In some cases, however, you may get a **Memory Error** when you try to access an archived variable.

What Causes the Memory Error?

The **Memory Error** message is displayed if there is not enough free RAM to access the archived variable. This may cause you to ask, “If the variable is in the user data archive, why does it matter how much RAM is available?” The answer is that the following operations can be performed only if a variable is in RAM.

Downloaded from www.Manualslib.com manuals search engine

- Opening a text variable in the Text Editor.
- Opening a data variable, list, or matrix in the Data/Matrix Editor.
- Opening a program or function in the Program Editor.
- Running a program or referring to a function.

Note: A temporary copy lets you open or execute an archived variable. However, you cannot save any changes to the variable.

So that you do not have to unarchive variables unnecessarily, the TI-89 Titanium performs a “behind-the scenes” copy. For example, if you run a program that is in the user data archive, the TI-89 Titanium:

1. Copies the program to RAM.
2. Runs the program.
3. Deletes the copy from RAM when the program is finished.

The error message is displayed if there is not enough free RAM for the temporary copy.

Note: Except for programs and functions, referring to an archived variable does not copy it. If variable ab is archived, it is not copied if you perform **6∗ab**.

Correcting the Error

To free up enough RAM to access the variable:

1. Use the **VAR-LINK** screen (2nd [VAR-LINK]) to determine the size of the archived variable that you want to access.
2. Use the **MEMORY** screen (2nd [MEM]) to check the RAM free size.

Downloaded from www.Manualslib.com manuals search engine

3. Free up the needed amount of memory by:
   - Deleting unnecessary variables from RAM.
   - Archiving large variables or programs (moving them from RAM to the user data archive).

   Note: Typically, the RAM free size must be larger than the archived variable.

Downloaded from www.Manualslib.com manuals search engine

Connectivity

Connecting Two Units

The TI-89 Titanium comes with a cable that lets you connect two units. Once connected, you can transmit information between two units. A USB unit-to-unit cable is included with the TI-89 Titanium; use the calculator's USB port with this cable.


Note: The TI-89 Titanium features both a USB port and an I/O port, so you can connect TI graphing calculators with either type of link port. However, using the I/O port requires the I/O unit-to-unit cable (sold separately) or the USB Silver Edition cable (also sold separately), which is used to connect to a computer.

Connecting before Sending or Receiving


Using firm pressure, insert one end of the cable into the link port of each unit. Either unit can send or receive, depending on how you set them up from the **VAR-LINK** screen.

You can link a TI-89 Titanium or Voyage™ 200 to another TI-89 Titanium, Voyage™ 200, TI-89, or TI-92 Plus.

Downloaded from www.Manualslib.com manuals search engine

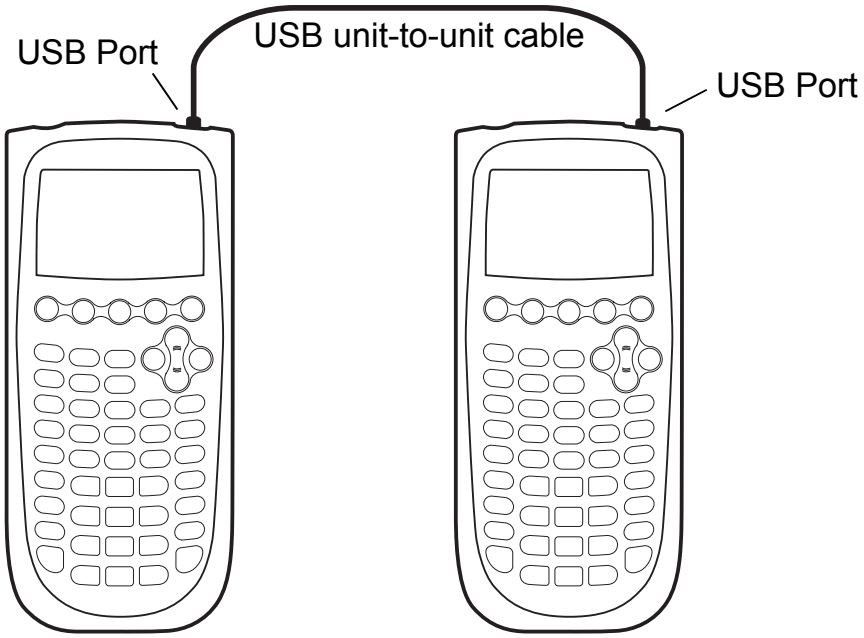


Two TI-89 Titanium calculators linked together

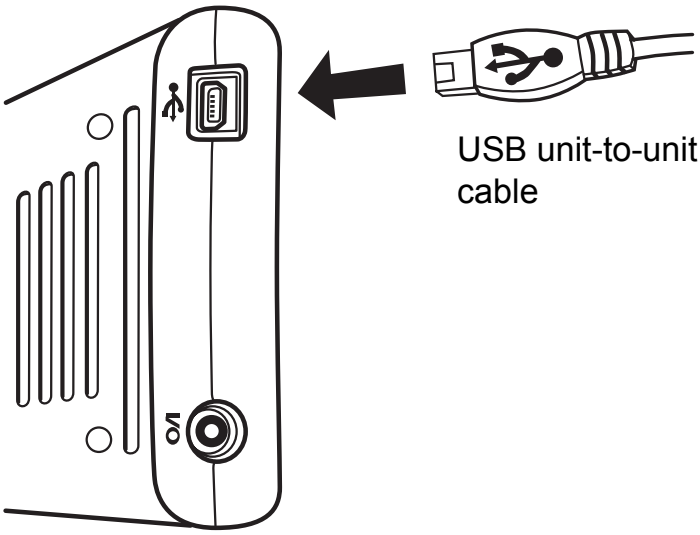


Position so that the USB symbols face each other; then insert the connector.

Downloaded from www.Manualslib.com manuals search engine

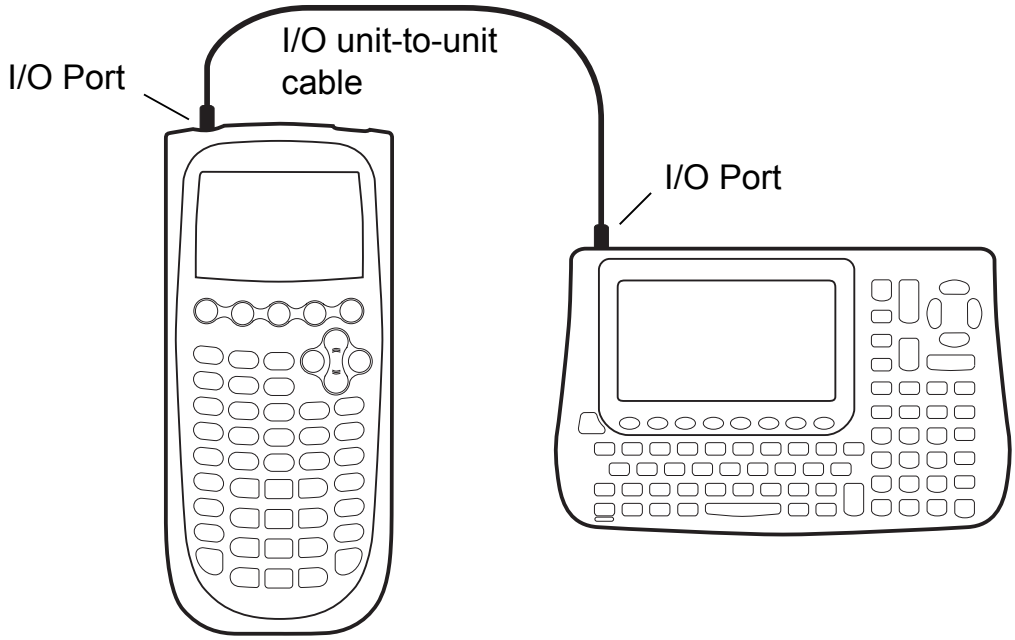

A TI-89 Titanium and a Voyage™ 200 linked together

Downloaded from www.Manualslib.com manuals search engine

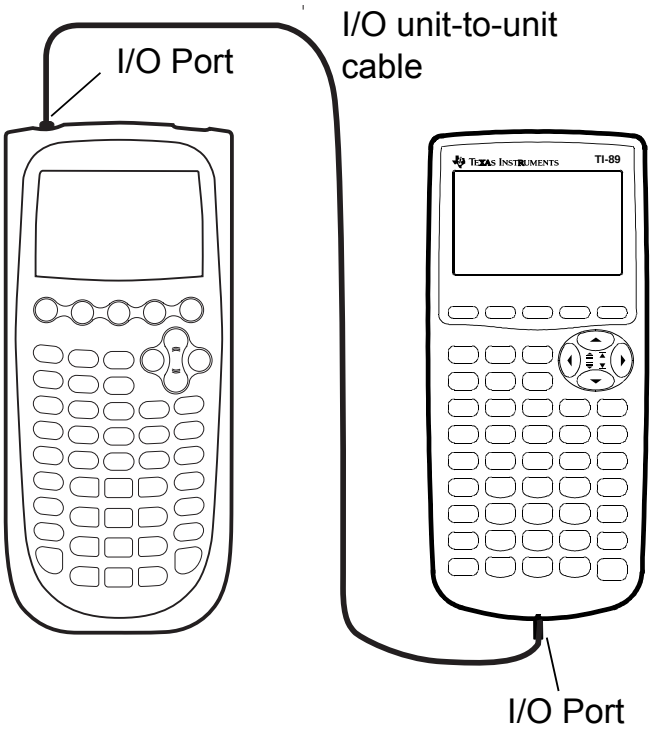

A TI-89 Titanium and a TI-89 linked together

Transmitting Variables, Flash Applications, and Folders


Transmitting variables is a convenient way to share any variable listed on the **VAR-LINK** screen — functions, programs, etc. You can also transmit Flash applications (Apps) and folders.

Downloaded from www.Manualslib.com manuals search engine


Setting Up the Units

Flash applications will transfer only between certain units. For example, you can transfer an App from a TI-89 Titanium to another TI-89 Titanium, or from a TI-89 Titanium to a TI-89.


1. Connect two graphing calculators using the appropriate cable.
2. On the *sending* unit, press 2nd [VAR-LINK] to display the **VAR-LINK** screen.

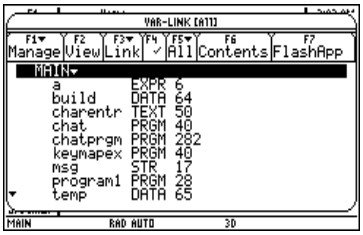

3. On the *sending* unit, select the variables, folders, or Flash applications you want to send.
   - To select a single variable, Flash application, or folder, move the cursor to highlight it and press F4 to place a checkmark (✓) beside it.

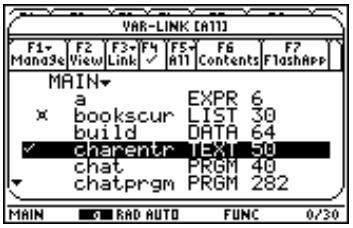

     - If on the default **VAR-LINK** screen, this selects the folder and its contents. Collapsed folders become expanded when selected.

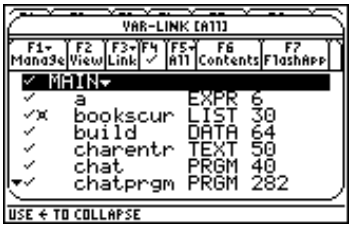

Downloaded from www.Manualslib.com manuals search engine


- If selecting a Flash App (from the F7 tab), this selects the App folder and its contents. A checkmark appears beside the folder, but not beside the contents. Collapsed Flash App folders do not automatically become expanded.




- To select multiple variables, Flash applications, or folders, highlight each one and press [F4] to place a checkmark (✓) beside it. Use [F4] again to deselect any that you do not want to transmit.



- To select all variables, Flash applications, or folders use [F5] **All 1:Select All**.

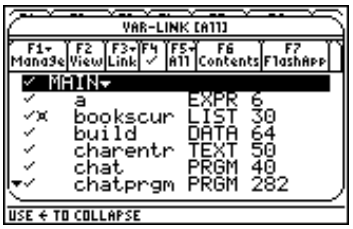


4. On the *receiving* unit, press [2nd] [VAR-LINK] to display the **VAR-LINK** screen. (The sending unit remains on the **VAR-LINK** screen.)

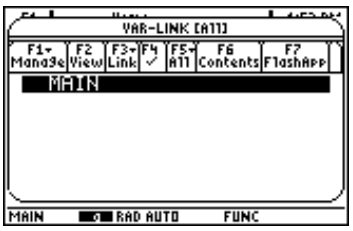

Downloaded from www.Manualslib.com manuals search engine

5. On both the *receiving* and the sending unit, press F3 **Link** to display the menu options.

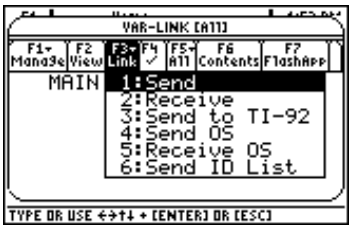

6. On the *receiving* unit, select **2:Receive**.

   The message **VAR-LINK: WAITING TO RECEIVE** and the **BUSY** indicator are displayed in the status line of the receiving unit.

7. On the *sending* unit, select **1:Send**

   This starts the transmission.

During transmission, a progress bar is displayed in the status line of the receiving unit. When transmission is complete, the **VAR-LINK** screen is updated on the receiving unit.

Note: Before transferring a purchased App, the receiving unit must have the appropriate certificate, if required. A certificate is a file that is generated by TI. Free and concept Apps do not require a certificate.

Rules for Transmitting Variables, Flash Applications, or Folders

Unlocked and unarchived variables that have the same name on both the sending and receiving units will be overwritten from the sending unit.

Downloaded from www.Manualslib.com manuals search engine

Locked variables that have the same name on both the sending and receiving units must be unlocked on the receiving unit before they can be overwritten from the sending unit. If archived variables have the same names on both the sending and receiving units, a message asks you to confirm that you will allow the variables to be overwritten.

If you select:	What happens:
Unlocked variable	The variable is transmitted to the current folder and it remains unlocked on the receiving unit.
Locked variable	The variable is transmitted to the current folder and it remains locked on the receiving unit.
Archived variable	The variable is transmitted to the current folder and it remains archived on the receiving unit.
Unlocked Flash application	If the receiving unit has the correct certification, the Flash application is transmitted. It remains unlocked on the receiving unit.
Locked Flash application	If the receiving unit has the correct certification, the Flash application is transmitted. It remains locked on the receiving unit.
Unlocked Folder	The folder and its selected contents are transmitted. The folder remains unlocked on the receiving unit.
Locked Folder	The folder and its selected contents are transmitted. The folder becomes unlocked on the receiving unit.


Downloaded from www.Manualslib.com manuals search engine

Canceling a Transmission

From either the sending or receiving unit:


1. Press [ON].

   An error message is displayed.


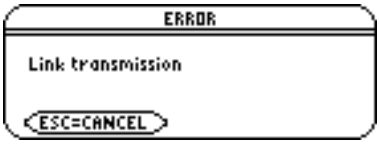


2. Press [ESC] or [ENTER].

Common Error and Notification Messages

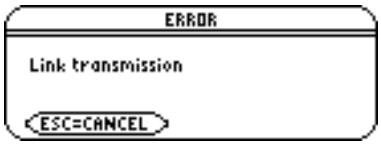Shown on:	Message and Description:
Sending unit	 This is displayed after several seconds if: • A cable is not attached to the sending unit's link port. – or – • A receiving unit is not attached to the other end of the cable. – or – • The receiving unit is not set up to receive. Press [ESC] or [ENTER] to cancel the transmission. **Note:** The sending unit may not always display this message. Instead, it may remain **BUSY** until you cancel the transmission.

Downloaded from www.Manualslib.com manuals search engine

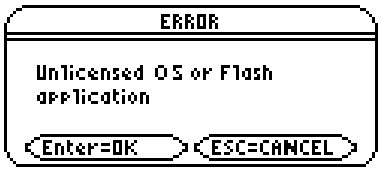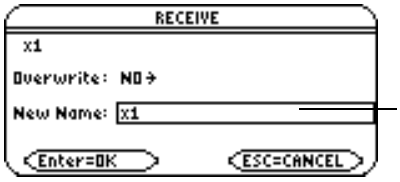Shown on:	Message and Description:
Sending unit	 The receiving unit does not have the correct certification for the operating system (OS) or Flash application being sent.
Receiving unit	 New Name is active only if you change Overwrite to NO. The receiving unit has a variable with the same name as the specified variable being sent. • To overwrite the existing variable, press ENTER. (By default, **Overwrite = YES**.) • To store the variable to a different name, set **Overwrite = NO**. In the **New Name** input box, type a variable name that does not exist in the receiving unit. Then press ENTER twice. • To skip this variable and continue with the next one, set **Overwrite = SKIP** and press ENTER. • To cancel the transmission, press ESC.

Downloaded from www.Manualslib.com manuals search engine

Shown on:	Message and Description:
Receiving unit	 The receiving unit does not have enough memory for what is being sent. Press [ESC] or [ENTER] to cancel the transmission.

Deleting Variables, Flash Applications, or Folders

1. Press [2nd] [VAR-LINK] to display the **VAR-LINK** screen.
2. Select the variables, folders, or Flash applications to delete.
   - To select a single variable, Flash application, or folder, move the cursor to highlight it and press [F4] to place a checkmark (✓) beside it.
     - If on the default **VAR-LINK** screen, this selects the folder and its contents. Collapsed folders become expanded when selected.
     - If selecting a Flash App (from the F7 tab), this selects the App folder and its contents. A checkmark appears beside the folder, but not beside the contents. Collapsed Flash App folders do not automatically become expanded.

     Note: You cannot delete the **Main** folder.
   - To select multiple variables, Flash applications, or folders highlight each one and press [F4] to place a checkmark (✓) beside it. Use [F4] again to deselect any that you do not want to transmit.
   - To select all variables, Flash applications, or folders use [F5] **All 1:Select All**.

Downloaded from www.Manualslib.com manuals search engine

3. Press F1 and choose **1:Delete**.
   – or –
   Press ←. A confirmation message appears.
4. Press ENTER to confirm the deletion.

Where to Get Flash Applications (Apps)

For up-to-date information about available Flash applications, check the Texas Instruments Web site at education.ti.com.

Many Apps no longer require a certificate. If you try to transfer an App from one unit to another and receive an **Unlicensed OS or Flash application** message, try downloading the App again from the Texas Instruments Web site at education.ti.com.

You can download a Flash application and/or certificate from the Texas Instruments Web site to a computer, and use a TI Connectivity Cable USB to install the application or certificate on your TI-89 Titanium.

For Flash App installation instructions, see education.ti.com/guides.

Transmitting Variables under Program Control

You can use a program containing **GetCalc** and **SendCalc** to transmit a variable from one device to another.

SendCalc sends a variable to the link port, where a linked device can receive the variable. The linked device must be on the Home screen or must execute **GetCalc** from a program.

Downloaded from www.Manualslib.com manuals search engine

You can use optional parameters with the SendCalc or GetCalc command to specify either the USB port or I/O port. (See Appendix A for details.) If you do not include these parameters, the TI-89 Titanium communicates through the USB port.

The “Chat” Program

The following program uses **GetCalc** and **SendCalc**. The program sets up two loops that let the linked devices take turns sending and receiving/displaying a variable named **msg**. **InputStr** lets each user enter a message in the **msg** variable.

Downloaded from www.Manualslib.com manuals search engine

```
:Chat()
:Prgm
:ClrIO
:Disp "On first unit to send,","
 enter 1;","On first to receive,"
:InputStr " enter 0",msg
:If msg="0" Then
:   While true
❶ :      GetCalc msg
:      Disp msg
❷ :      InputStr msg
:      SendCalc msg
:   EndWhile                    ❸
:Else
:   While true
❹ :     InputStr msg
:     SendCalc msg
❺ :     GetCalc msg
:     Disp msg
:  EndWhile                     ❻
:EndIf
:EndPrgm
```

Notes:

❶ Sets up this unit to receive and display the variable msg.
❷ Then lets this user enter a message in msg and send it.
❸ Loop executed by the unit that receives the first message.
❹ Lets this user enter a message in msg and send it.
❺ Then sets up this unit to receive and display msg.
❻ Loop executed by the unit that sends the first message.

Downloaded from www.Manualslib.com manuals search engine

To synchronize **GetCalc** and **SendCalc**, the loops are arranged so that the receiving unit executes **GetCalc** while the sending unit is waiting for the user to enter a message.

Running the Program

This procedure assumes that:

- The two devices are linked with the connecting cable.
- The Chat program is loaded on both devices.
  - Use each device's Program Editor to enter the program.
    – or –
  - Enter the program on one device and then use **VAR-LINK** to transmit the program variable to the other device.

To run the program on both devices:

1. On the Home screen of each device, enter **chat( )**.
2. When each device displays its initial prompt, respond as shown below.

On the:	Type:
Device that will send the first message.	**1** and press ENTER.
Device that will receive the first message.	**0** and press ENTER.

3. Take turns typing a message and pressing ENTER to send the variable **msg** to the other device.

Downloaded from www.Manualslib.com manuals search engine

Stopping the Program

Because the **Chat** program sets up an infinite loop on both devices, press ON (on both devices) to break the program. If you press ESC to acknowledge the error message, the program stops on the Program I/O screen. Press F5 or ESC to return to the Home screen.

Upgrading the Operating System (OS)

You can upgrade the OS on your TI-89 Titanium using your computer. You can also transfer the OS from one unit to another identical model (for example, from a TI-89 Titanium to a TI-89 Titanium or from a Voyage™ 200 to a Voyage™ 200).

Installing OS software resets all device memory to the original factory settings. This means that all user-defined variables (in both RAM and the user data archive), functions, programs, lists, and folders (except the Main folder) will be deleted. It is possible that Flash applications could also be deleted. You should use TI Connect software to back up your data to your computer before installing a new OS on your calculator.

See the important information concerning batteries before performing an OS upgrade.

Important Operating System Download Information

New batteries should be installed before beginning an OS download.

If you are operating your TI-89 Titanium in a language other than English, you should ensure that you have the most current localizer application installed when you upgrade the OS software. If you do not have the most current localizer installed, prompts, error

Downloaded from www.Manualslib.com manuals search engine

messages and status information related to new functionality in the OS may not display correctly.

When in OS download mode, the Automatic Power Down™ (APD™) feature does not function. If you leave your device in download mode for an extended time before you actually start the downloading process, your batteries may become depleted. You will then need to replace the depleted batteries with new batteries before downloading.

If you accidentally interrupt the transfer before it is complete, you will need to reinstall the OS. Again, remember to install new batteries before downloading.

Backing Up Your Unit Before an Operating System Installation

When you install an OS upgrade, the installation process:

- Deletes all user-defined variables (in both RAM and the user data archive), functions, programs, and folders.
- Could delete all Flash applications.
- Resets all system variables and modes to their original factory settings. This is equivalent to using the **MEMORY** screen to reset all memory.

To retain any existing variables or Flash applications, do the following before installing the upgrade:

- **Important:** Install new batteries.
- Transmit the variables or Flash applications to another device.
  – or –

Downloaded from www.Manualslib.com manuals search engine

- Use a USB cable or TI Connectivity Cable USB and TI Connect™ software (education.ti.com/downloadticonnect) to send the variables and/or Flash applications to a computer.

Where to Get Operating System Upgrades

For up-to-date information about available OS upgrades, check the Texas Instruments Web site at education.ti.com/downloadticonnect.

You can download an OS upgrade, Localizer or Flash application from the Texas Instruments Web site to a computer, and use a USB computer cable to install the OS or application on your TI-89 Titanium.

For complete information, refer to the instructions on the web.

Transferring the Operating System

OS software will transfer only from a TI-89 Titanium to a TI-89 Titanium, TI-89 to a TI-89, from a Voyage™ 200 to a Voyage™ 200, or from a TI-92 Plus to a TI-92 Plus.

To transfer the Operating System (OS) from unit to unit:

1. Link two like units together, for example, a TI-89 Titanium to a TI-89 Titanium; or a Voyage™ 200 to a Voyage™ 200.
2. On the receiving and the sending unit, press 2nd [VAR-LINK] to display the **VAR-LINK** screen.
3. On the receiving and the sending unit, press F3 **Link** to display the menu options.

Downloaded from www.Manualslib.com manuals search engine

4. On the receiving unit, select **5:Receive OS**.

   A warning message displays. Press [ESC] to halt the process, or press [ENTER] to proceed. Pressing [ENTER], displays **VAR-LINK: WAITING TO RECEIVE** and **BUSY** in the status line of the receiving unit.

5. On the sending unit, select **4:Send OS**.

   A warning message displays. Press [ESC] to halt the process, or press [ENTER] to start the transmission.

Important:

- For each receiving unit, remember to back up information as necessary and install new batteries.
- Be sure both the sending and receiving units are in the **VAR-LINK** screen.

During the transfer, the receiving unit shows how the transfer is progressing. When the transfer is complete:

- The sending unit returns to the **VAR-LINK** screen.
- The receiving unit returns to either the Apps desktop or the Home screen. You may need to use [♦] [−] (lighten) or [♦] [+] (darken) to adjust the contrast.

Do Not Attempt to Cancel an Operating System Transfer

After the transfer starts, the receiving unit's existing OS is effectively deleted. If you interrupt the transfer before it is complete, the receiving unit will not operate properly. You will then need to reinstall the OS upgrade.




Downloaded from www.Manualslib.com manuals search engine

If You are Upgrading the Operating System on Multiple Units

To perform an OS upgrade on multiple units, download and install the OS into one unit and then transfer the OS upgrade from one unit to another. This method is faster than installing it on each unit via a computer. OS upgrades are released free of charge and you do not need to obtain a certificate before you download or install them.

Error Messages

Most error messages are displayed on the sending unit. Depending on when the error occurs during the transfer process, you may see an error message on the receiving unit.

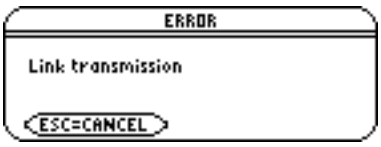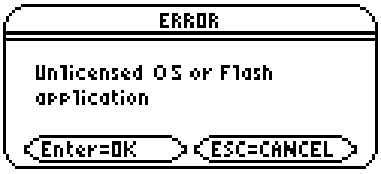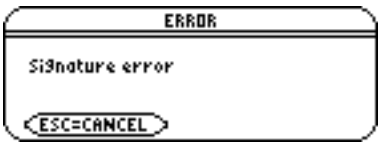Error Message	Description
	The sending and receiving units are not connected properly, or the receiving unit is not set up to receive.
	The certificate on the receiving unit is not valid for the operating system (OS) or App on the sending unit. You must obtain and install a valid certificate. If the App no longer requires a certificate, you can download it again from the Texas Instruments Web site at education.ti.com and then install the App again on your calculator.
	An error occurred during the transfer. The current OS in the receiving unit is corrupted. You must reinstall the product software from a computer.

Downloaded from www.Manualslib.com manuals search engine

Error Message	Description
	Replace the batteries on the unit displaying this message.

Collecting and Transmitting ID Lists

The **VAR-LINK** screen F3 **6:Send ID List** menu option allows collection of electronic ID numbers from individual TI-89 Titanium, TI-89, Voyage™ 200, or TI-92 Plus devices.

ID Lists and Group Certificates

The ID list feature provides a convenient way to collect device IDs for group purchase of commercial applications. After the IDs are collected, transmit them to Texas Instruments so a group certificate can be issued.


A group certificate allows distribution of purchased software to multiple TI-89 Titanium, TI-89, Voyage™ 200, or TI-92 Plus units. The software can be loaded, deleted from, and reloaded to the devices as often as needed for as long as the software remains listed in the group certificate. You may add new ID numbers and/or new commercial applications to a group certificate.

Collecting ID Lists

You can use one device to collect all of the IDs, or use several collection units and then consolidate their ID lists onto one device.

Downloaded from www.Manualslib.com manuals search engine

To send an ID number from one device to another, first connect two units by using a USB unit-to-unit cable or I/O unit-to-unit cable.

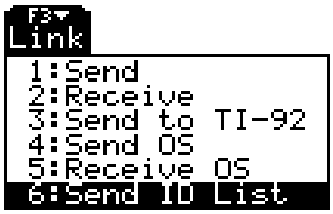Step:	On the:	Do this:
1.	Collecting unit (Receiving unit)	Display the Home screen. Press: HOME
2.	Sending unit	a. Press 2nd [VAR-LINK] to display the **VAR-LINK** screen.
		b. Press F3 **Link** and select **6:Send ID List**. 
		The sending unit adds a copy of its unique ID number to the collection unit's ID list. The sending unit always retains its own ID number, which cannot be deleted from the device.
3.	Additional units	Repeat steps 1 and 2 until all the IDs are collected onto one device. Depending on available memory in the collection device, it is possible to collect over 4,000 IDs.

Notes:

- You cannot view the ID list on the sending or collecting units.

Downloaded from www.Manualslib.com manuals search engine

- Each time an ID list is successfully sent from one device to another, the ID list is automatically deleted from the sending unit.
- If an ID is collected from a device twice, the duplicate ID is automatically deleted from the list.

Clearing the ID List

The ID list remains on the collection device after it is uploaded to the computer. You can then use the collection device to upload the list to other computers.

To clear the ID list from the collection unit:

1. Press 2nd [VAR-LINK] to display the **VAR-LINK** screen.
2. Press F1 **Manage** and select **A:Clear ID List**.



Compatibility among the TI-89 Titanium, Voyage™ 200, TI-89, and TI-92 Plus

In general, TI-89 Titanium, TI-89, Voyage™ 200, and TI-92 Plus data and programs are compatible with each other, with a few exceptions.

Downloaded from www.Manualslib.com manuals search engine

Most functions of the TI-89 Titanium are compatible with the TI-89, Voyage™ 200, and TI-92 Plus. The TI-89 Titanium and the TI-89 are similar, except that the TI-89 Titanium has more memory (more room for Apps and user archive) and the TI-89 Titanium has a USB port. The Voyage™ 200 is the same as the TI-92 Plus except it has more memory, and thus more room for applications (Apps).

All data is compatible among the TI-89 Titanium, TI-89, Voyage™ 200, and TI-92 Plus, but some programs written for one may not run or may not run the same on the other because of differences in the device's screen sizes and keyboards and the USB port on the TI-89 Titanium.

Other incompatibilites can occur because of different version the operating system. To download the latest version of the operating system, visit the Texas Instruments Web site at education.ti.com/downloadticonnect.

Downloaded from www.Manualslib.com manuals search engine

Link Transmission Table

To → From ↓	TI-89 Titanium	TI-89	Voyage™ 200	TI-92 Plus
TI-89 Titanium	OS Apps Variables	Apps Variables	Variables	Variables
TI-89	Apps Variables	OS Apps Variables	Variables	Variables
Voyage™ 200	Variables	Variables	OS Apps Variables	Apps Variables
TI-92 Plus	Variables	Variables	Apps Variables	OS Apps Variables

Downloaded from www.Manualslib.com manuals search engine

Activities

Analyzing the Pole-Corner Problem


A ten-foot-wide hallway meets a five-foot-wide hallway in the corner of a building. Find the maximum length pole that can be moved around the corner without tilting the pole.

Maximum Length of Pole in Hallway

The maximum length of a pole **c** is the shortest line segment touching the interior corner and opposite sides of the two hallways as shown in the diagram below.


Use proportional sides and the Pythagorean theorem to find the length **c** with respect to **w**. Then find the zeros of the first derivative of **c(w)**. The minimum value of **c(w)** is the maximum length of the pole.

Downloaded from www.Manualslib.com manuals search engine

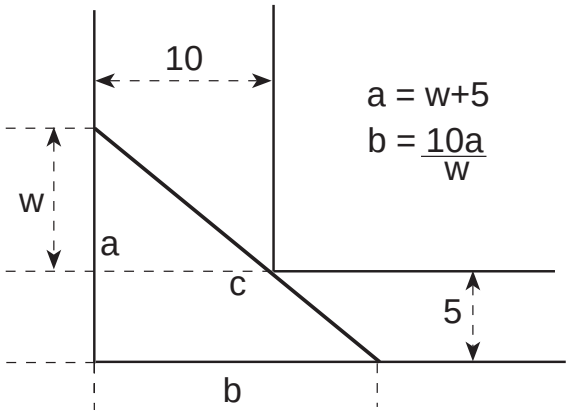


1. Define the expression for side **a** in terms of **w** and store it in **a(w)**.

   Note: When you want to define a function, use multiple character names as you build the definition.

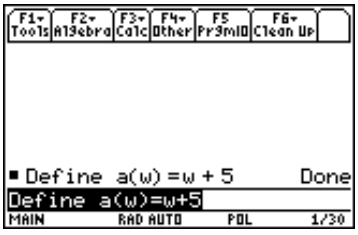


2. Define the expression for side **b** in terms of **w** and store it in **b(w).**

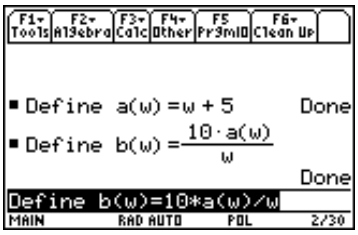

3. Define the expression for side **c** in terms of **w** and store it in **c(w)**.


   Enter: **Define c(w)= √(a(w)^2+b(w)^2)**

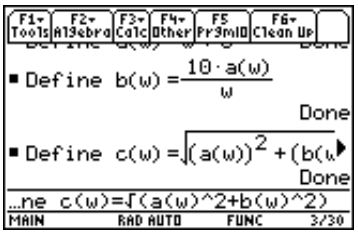

Downloaded from www.Manualslib.com manuals search engine


4. Use the **zeros( )** function to compute the zeros of the first derivative of **c(w)** to find the minimum value of **c(w)**.

   Note: The maximum length of the pole is the minimum value of **c(w)**.

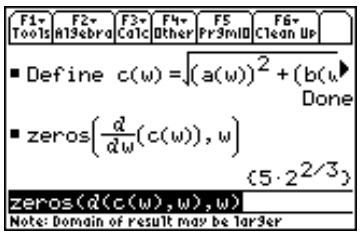
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
Define c(w) = √((a(w))^2 + (b(w
Done
zeros(d/dw(c(w)), w)
{5·2^(2/3)}
zeros(d(c(w),w),w)
Note: Domain of result may be larger

5. Compute the exact maximum length of the pole.


   Enter: **c** ([2nd] [ANS])

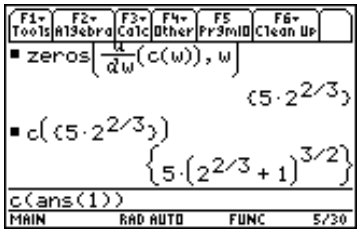

6. Compute the approximate maximum length of the pole.

   Result: Approximately 20.8097 feet.

   Note: Use the auto-paste feature to copy the result from step 4 to the entry line inside the parentheses of c( ) and press [◆] [ENTER].

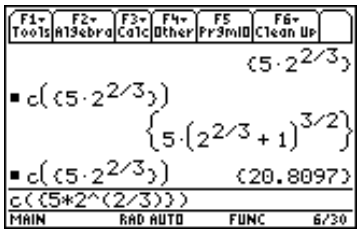

Deriving the Quadratic Formula

This activity shows you how to derive the quadratic formula:

$$x = \frac{-b \pm \sqrt{b^2 - 4ac}}{2a}$$

Downloaded from www.Manualslib.com manuals search engine

Detailed information about using the functions in this example can be found in *Symbolic Manipulation*.

Performing Computations to Derive the Quadratic Formula


Perform the following steps to derive the quadratic formula by completing the square of the generalized quadratic equation.

1. Clear all one-character variables in the current folder.

   2nd [F6]

   Choose **1:Clear a-z** and press ENTER to confirm.


2. On the Home screen, enter the generalized quadratic equation: **$ax^2+bx+c=0$**.

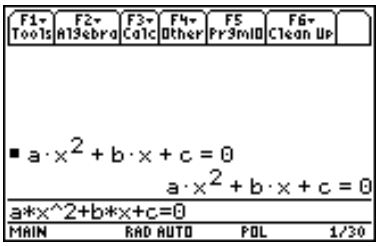

3. Subtract c from both sides of the equation.

   2nd [ANS] − alpha **C**


   Note: This example uses the result of the last answer to perform computations on the TI-89 Titanium. This feature reduces keystroking and chances for error.

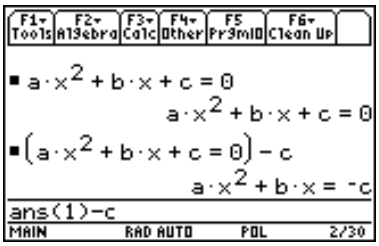


Downloaded from www.Manualslib.com manuals search engine

4. Divide both sides of the equation by the leading coefficient **a**.


   Note: Continue to use the last answer ([2nd] [ANS]) as in step 3 in steps 4 through 9.

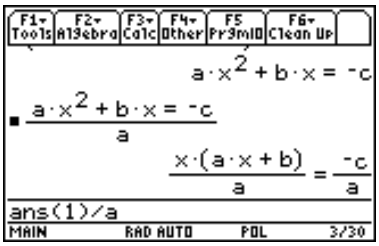
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlIO F6 Clean Up
$a \cdot x^2 + b \cdot x = -c$
$\frac{a \cdot x^2 + b \cdot x = -c}{a}$
$\frac{x \cdot (a \cdot x + b)}{a} = \frac{-c}{a}$
ans(1)/a
MAIN RAD AUTO FOL 3/30


5. Use the **expand( )** function to expand the result of the last answer.

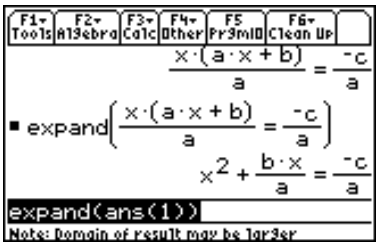
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlIO F6 Clean Up
$\frac{x \cdot (a \cdot x + b)}{a} = \frac{-c}{a}$
$\text{expand}\left(\frac{x \cdot (a \cdot x + b)}{a} = \frac{-c}{a}\right)$
$x^2 + \frac{b \cdot x}{a} = \frac{-c}{a}$
expand(ans(1))
Note: Domain of result may be larger


6. Complete the square by adding $\mathbf{((b/a)/2)^2}$ to both sides of the equation.

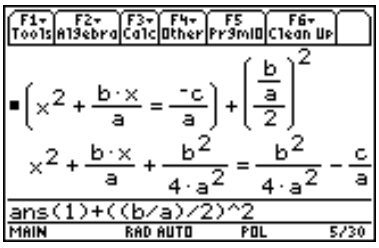
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlIO F6 Clean Up
$\left(x^2 + \frac{b \cdot x}{a} = \frac{-c}{a}\right) + \left(\frac{\frac{b}{a}}{2}\right)^2$
$x^2 + \frac{b \cdot x}{a} + \frac{b^2}{4 \cdot a^2} = \frac{b^2}{4 \cdot a^2} - \frac{c}{a}$
ans(1)+((b/a)/2)^2
MAIN RAD AUTO FOL 5/30

7. Factor the result using the **factor( )** function.

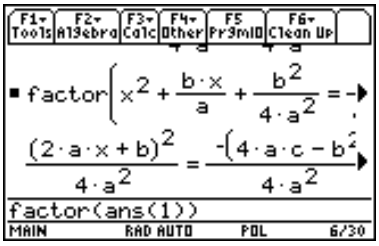

F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlIO F6 Clean Up
$\text{factor}\left(x^2 + \frac{b \cdot x}{a} + \frac{b^2}{4 \cdot a^2} = \right.$
$\frac{(2 \cdot a \cdot x + b)^2}{4 \cdot a^2} = \frac{-(4 \cdot a \cdot c - b^2}{4 \cdot a^2}$
factor(ans(1))
MAIN RAD AUTO FOL 6/30

8. Multiply both sides of the equation by $\mathbf{4a^2}$.

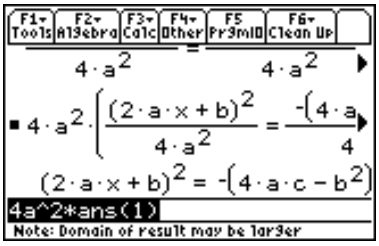

F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlIO F6 Clean Up
$\frac{}{4 \cdot a^2} = \frac{}{4 \cdot a^2}$
$4 \cdot a^2 \cdot \left(\frac{(2 \cdot a \cdot x + b)^2}{4 \cdot a^2} = \frac{-(4 \cdot a}{4}\right.$
$(2 \cdot a \cdot x + b)^2 = -(4 \cdot a \cdot c - b^2)$
4a^2*ans(1)
Note: Domain of result may be larger

Downloaded from www.Manualslib.com manuals search engine


9. Take the square root of both sides of the equation with the constraint that **a>0** and **b>0** and **x>0**.

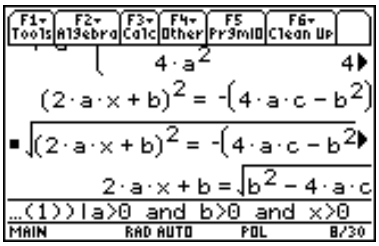
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlO F6 Clean Up
$4 \cdot a^2$ 4
$(2 \cdot a \cdot x + b)^2 = -(4 \cdot a \cdot c - b^2)$
$\sqrt{(2 \cdot a \cdot x + b)^2} = \sqrt{-(4 \cdot a \cdot c - b^2)}$
$2 \cdot a \cdot x + b = \sqrt{b^2 - 4 \cdot a \cdot c}$
...(1))|a>0 and b>0 and x>0
MAIN RAD AUTO FOL 8/30

10. Solve for **x** by subtracting **b** from both sides and then dividing by **2a**.

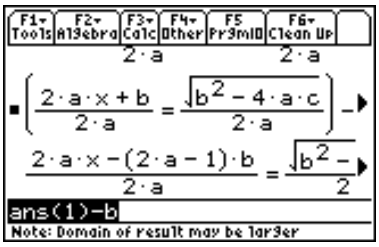
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlO F6 Clean Up
$2 \cdot a$ $2 \cdot a$
$\frac{2 \cdot a \cdot x + b}{2 \cdot a} = \frac{\sqrt{b^2 - 4 \cdot a \cdot c}}{2 \cdot a}$
$\frac{2 \cdot a \cdot x - (2 \cdot a - 1) \cdot b}{2 \cdot a} = \frac{\sqrt{b^2 -}}{2}$
ans(1)-b
Note: Domain of result may be larger

Note: This is only one of the two general quadratic solutions due to the constraint in step 9.

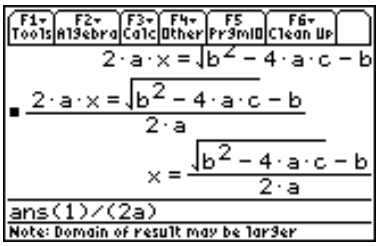
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrSmlO F6 Clean Up
$2 \cdot a \cdot x = \sqrt{b^2 - 4 \cdot a \cdot c} - b$
$\frac{2 \cdot a \cdot x}{2 \cdot a} = \frac{\sqrt{b^2 - 4 \cdot a \cdot c} - b}{2 \cdot a}$
$x = \frac{\sqrt{b^2 - 4 \cdot a \cdot c} - b}{2 \cdot a}$
ans(1)/(2a)
Note: Domain of result may be larger

Exploring a Matrix


This activity shows you how to perform several matrix operations.

Downloaded from www.Manualslib.com manuals search engine


Exploring a 3x3 Matrix

Perform these steps to generate a random matrix, augment and find the identity matrix, and then solve to find an invalid value of the inverse.

1. On the Home screen, use **RandSeed** to set the random number generator seed to the factory default, and then use **randMat( )** to create a random 3x3 matrix and store it in **a**.

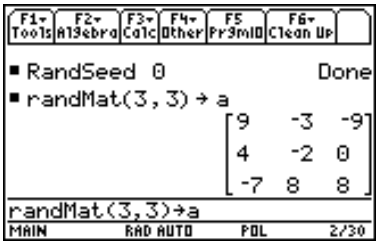


2. Replace the **[2,3]** element of the matrix with the variable **x**, and then use the **augment( )** function, to augment the 3x3 identity to **a** and store the result in **b**.

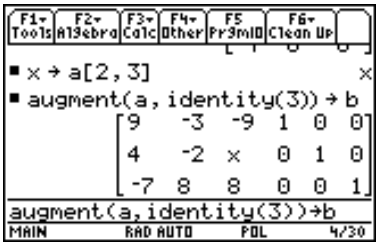

3. Use **rref( ) to** “row reduce” matrix **b**:

   The result will have the identity matrix in the first three columns and **a^-1** in the last three columns.

   Note: Use the cursor in the history area to scroll the result.

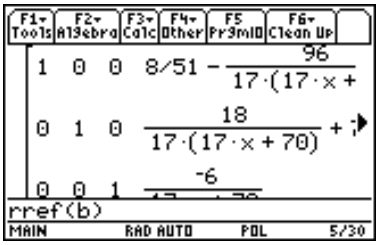


Downloaded from www.Manualslib.com manuals search engine

4. Solve for the value of **x** that will cause the inverse of the matrix to be invalid.

   Enter:
   solve(getDenom(2nd [ANS] **[1,4])=0,x)**

   Result: **x= ⁻70/17**

   Note: Use the cursor in the history area to scroll the result.

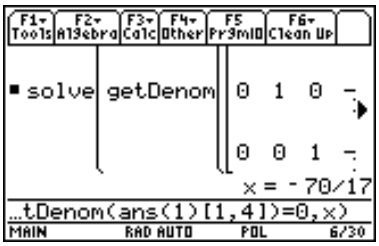


Exploring cos(x) = sin(x)

This activity uses two methods to find where **cos(x) = sin(x)** for the values of **x** between 0 and 3π.

Method 1: Graph Plot

Perform the following steps to observe where the graphs of the functions **y1(x)=cos(x)** and **y2(x)=sin(x)** intersect.


1. In the **Y= Editor**, set **y1(x)=cos(x)** and **y2(x)=sin(x)**.
2. In the **Window Editor**, set **xmin=0** and **xmax=3π**.
3. Press F2 and select **A:ZoomFit**.

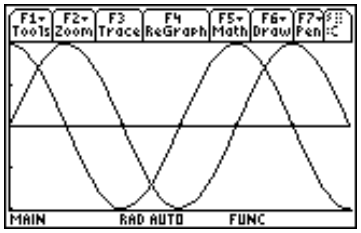

Downloaded from www.Manualslib.com manuals search engine

4. Find the intersection point of the two functions.

   Note: Press F5 and select **5:Intersection**. Respond to the screen prompts to select the two curves, and the lower and upper bounds for intersection **A**.

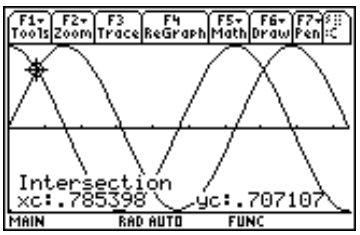


5. Note the **x** and **y** coordinates. (Repeat steps 4 and 5 to find the other intersections.)

Method 2: Symbolic Manipulation

Perform the following steps to solve the equation **sin(x)=cos(x)** with respect to **x**.


1. On the Home screen, enter **solve(sin(x)= cos(x),x)**.

   The solution for **x** is where **@n1** is any integer.

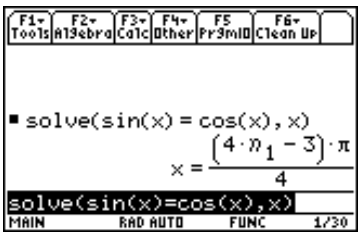

2. Using the **ceiling( )** and **floor( )** functions, find the ceiling and floor values for the intersection points as shown.

   Note: Move the cursor into the history area to highlight the last answer. Press ENTER to copy the result of the general solution.

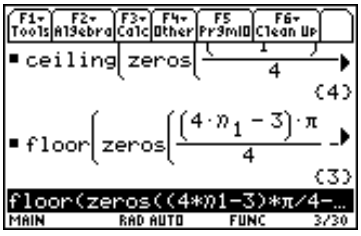

F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
ceiling(zeros((1)/4)) → 4
(4)
floor(zeros((4·n1 − 3)·π/4)) → 3
(3)
floor(zeros((4*n1-3)*π/4-...
MAIN RAD AUTO FUNC 3/30

Downloaded from www.Manualslib.com manuals search engine

3. Enter the general solution for x and apply the constraint for **@n1** as shown.

   Compare the result with Method 1.

   Note: To get the *with* operator, press: [|]

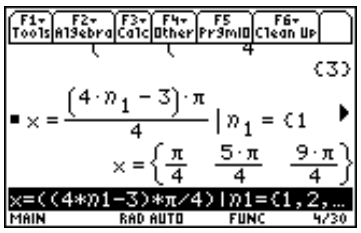

Finding Minimum Surface Area of a Parallelepiped


This activity shows you how to find the minimum surface area of a parallelepiped having a constant volume **V**. Detailed information about the steps used in this example can be found in *Symbolic Manipulation* and *3D Graphing*.

Exploring a 3D Graph of the Surface Area of a Parallelepiped

Perform the following steps to define a function for the surface area of a parallelepiped, draw a 3D graph, and use the **Trace** tool to find a point close to the minimum surface area.


1. On the Home screen, define the function **sa(x,y,v)** for the surface area of a parallelepiped.

   Enter: **define sa(x,y,v)=2∗x∗y + 2v/x+2v/y**

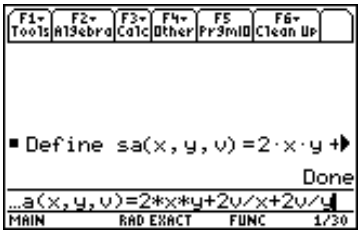


Downloaded from www.Manualslib.com manuals search engine

2. Select the 3D Graph mode. Then enter the function for **z1(x,y)** as shown in this example with volume **v=300**.

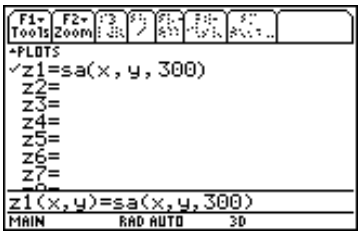


3. Set the Window variables to:

   eye= [60,90,0]
   x= [0,15,15]
   y= [0,15,15]
   z= [260,300]
   ncontour= [5]

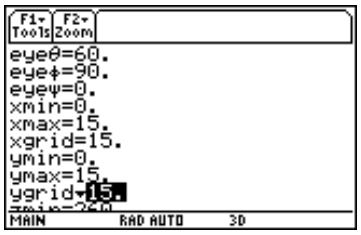

4. Graph the function and use **Trace** to go to the point close to the minimum value of the surface area function.

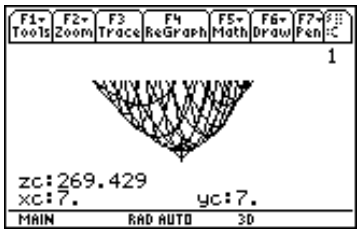


Finding the Minimum Surface Area Analytically

Perform the following steps to solve the problem analytically on the Home screen.

1. Solve for **x** and **y** in terms of **v**.

   Enter: **solve(d(sa(x,y,v),x)=0** and **d(sa(x,y,v),y)=0,{x,y})**

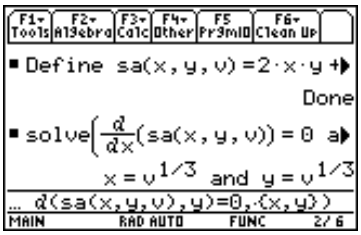


Downloaded from www.Manualslib.com manuals search engine

2. Find the minimum surface area when the value of **v** equals 300.

   Enter: **300→v**
   Enter: **sa(v^(1/3), v^(1/3),v)**

   Note: Press ENTER to obtain the exact result in symbolic form. Press ♦ ENTER to obtain the approximate result in decimal form.

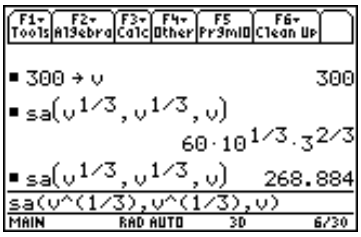


Running a Tutorial Script Using the Text Editor

This activity shows you how to use the **Text Editor** to run a tutorial script.

Running a Tutorial Script

Perform the following steps to write a script using the **Text Editor,** test each line, and observe the results in the history area on the Home screen.

1. Open the **Text Editor**, and create a new variable named **demo1**.

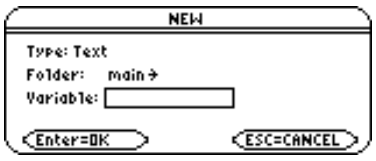


   Note: The command symbol **C** is accessed from the F2 **1:Command** toolbar menu.


Downloaded from www.Manualslib.com manuals search engine

2. Type the following lines into the **Text Editor**.

```
   : Compute the maximum value of f on the closed interval [a,b]
   : assume that f is differentiable on [a,b]
C  : define f(x)=x^3−2x^2+x−7
C  : 1→a:3.22→b
C  : d(f(x),x)→df(x)
C  : zeros(df(x),x)
C  : f(ans(1))
C  : f({a,b})
   : The largest number from the previous two commands is the
   maximum value of the function. The smallest number is the
   minimum value.
```

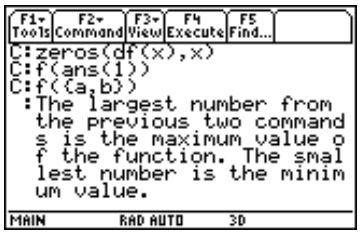


3. Press F3 and select **1:Script view** to show the **Text Editor** and the Home screen on a split-screen. Move the cursor to the first line in the **Text Editor**.

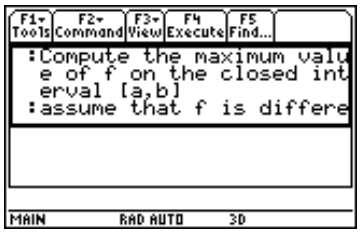


Downloaded from www.Manualslib.com manuals search engine

4. Press F4 repeatedly to execute each line in the script one at a time.


   Note: Press F4 and select **2:Clear split** to go back to a full-sized **Text Editor** screen.

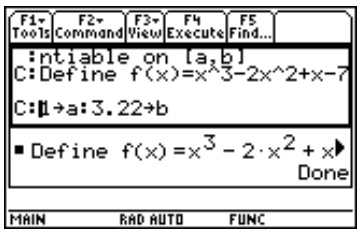

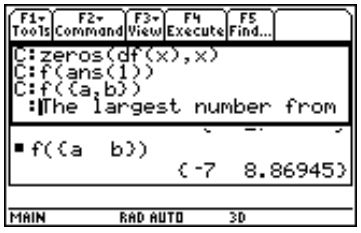

5. To see the results of the script on a full-sized screen, go to the Home screen.

   Note: Press 2nd [QUIT] twice to display the Home screen.

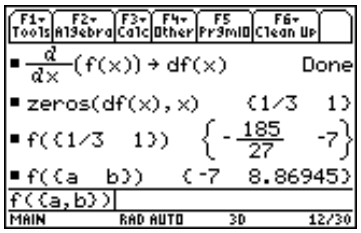

Decomposing a Rational Function

This activity examines what happens when a rational function is decomposed into a quotient and remainder. Detailed information about the steps used in this example can be found in *Basic Function Graphing* and *Symbolic Manipulation*.

Downloaded from www.Manualslib.com manuals search engine


Decomposing a Rational Function

To examine the decomposition of the rational function **f(x)=(x^3−10x^2−x+50)/(x−2)** on a graph:


1. On the Home screen, enter the rational function as shown below and store it in a function **f(x)**.

   Enter: **(x^3−10x^2−x+50)/(x−2)→f(x)**

   Note: Actual entries are displayed in reverse type in the example screens.

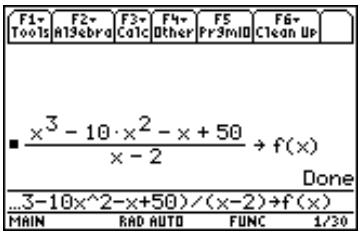


2. Use the proper fraction function (**propFrac**) to split the function into a quotient and remainder.

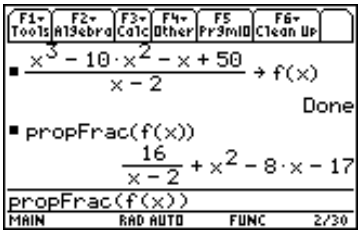
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
(x^3 − 10·x^2 − x + 50)/(x − 2) → f(x)
Done
propFrac(f(x))
16/(x − 2) + x^2 − 8·x − 17
propFrac(f(x))
MAIN RAD AUTO FUNC 2/30


3. Copy the last answer to the entry line.
   –or–
   Enter: **16/(x−2)+x^2−8∗x−17**

   Note: Move the cursor into the history area to highlight the last answer. Press ENTER to copy it to the entry line.

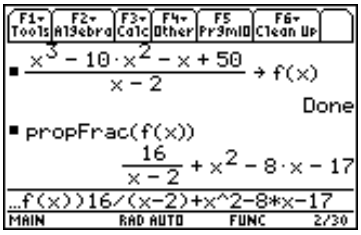
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
(x^3 − 10·x^2 − x + 50)/(x − 2) → f(x)
Done
propFrac(f(x))
16/(x − 2) + x^2 − 8·x − 17
...f(x))16/(x−2)+x^2−8∗x−17
MAIN RAD AUTO FUNC 2/30


4. Edit the last answer in the entry line. Store the remainder to **y1(x)** and the quotient to **y2(x)** as shown.

   Enter: **16/(x−2)→y1(x): x^2−8∗x−17→y2(x)**

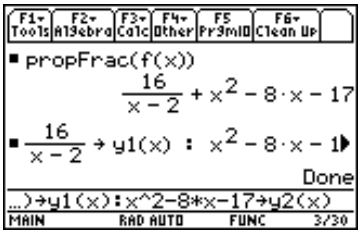

F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
propFrac(f(x))
16/(x − 2) + x^2 − 8·x − 17
16/(x − 2) → y1(x) : x^2 − 8·x − 1
Done
...)→y1(x):x^2−8∗x−17→y2(x)
MAIN RAD AUTO FUNC 3/30

Downloaded from www.Manualslib.com manuals search engine

5. In the **Y= Editor**, select the thick graphing style for **y2(x)**.

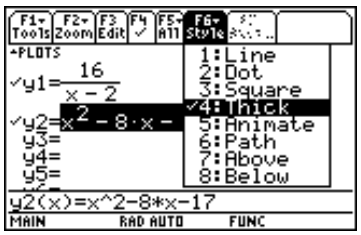


6. Add the original function **f(x)** to **y3(x)** and select the square graphing style.

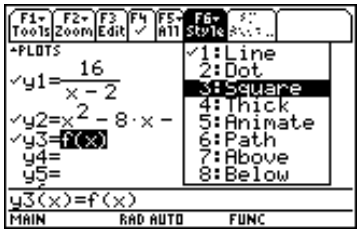

7. In the **Window Editor**, set the window variables to:

   x= [⁻10,15,10]
   y= [⁻100,100,10]

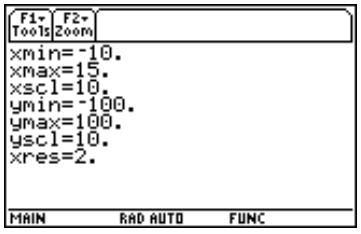


8. Draw the graph.


   Note: Be sure the Graph mode is set to Function.

Downloaded from www.Manualslib.com manuals search engine

Observe that the global behavior of the **f(x)** function is basically represented by the quadratic quotient **y2(x)**. The rational expression is basically a quadratic function as **x** gets very large in both the positive and negative directions.

The lower graph is **y3(x)=f(x)** graphed separately using the line style.

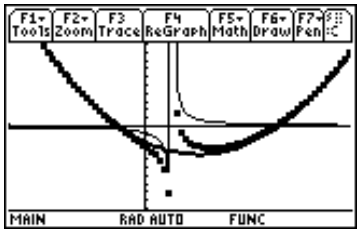

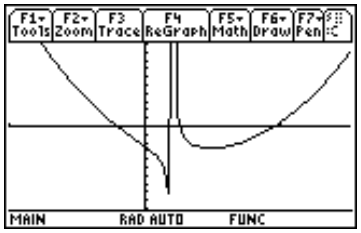

Studying Statistics: Filtering Data by Categories

This activity provides a statistical study of the weights of high school students using categories to filter the data.

Downloaded from www.Manualslib.com manuals search engine

Filtering Data by Categories

Each student is placed into one of eight categories depending on the student's sex and academic year (freshman, sophomore, junior, or senior). The data (weight in pounds) and respective categories are entered in the **Data/Matrix Editor**.

Table 1: Category vs. Description

Category (C2)	Academic Year and Sex
1	Freshman boys
2	Freshman girls
3	Sophomore boys
4	Sophomore girls
5	Junior boys
6	Junior girls
7	Senior boys
8	Senior girls


Table 2: C1 (weight of each student in pounds) vs. C2 (category)

C1	C2	C1	C2	C1	C2	C1	C2
110	1	115	3	130	5	145	7
125	1	135	3	145	5	160	7
105	1	110	3	140	5	165	7
120	1	130	3	145	5	170	7
140	1	150	3	165	5	190	7
85	2	90	4	100	6	110	8
80	2	95	4	105	6	115	8
90	2	85	4	115	6	125	8
80	2	100	4	110	6	120	8
95	2	95	4	120	6	125	8


Downloaded from www.Manualslib.com manuals search engine

Perform the following steps to compare the weight of high school students to their year in school.

1. Start the **Data/Matrix Editor**, and create a new Data variable named **students**.

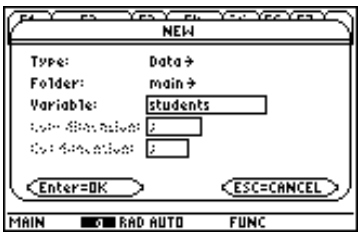


2. Enter the data and categories from Table 2 into columns **c1** and **c2**, respectively.

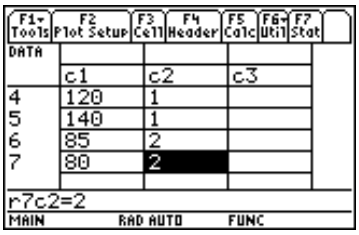


3. Open the F2 **Plot Setup** toolbar menu.

   Note: Set up several box plots to compare different subsets of the entire data set.

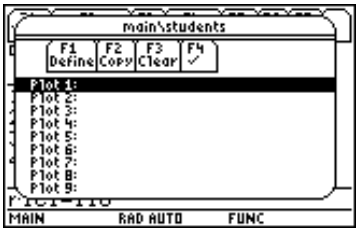


4. Define the plot and filter parameters for **Plot 1** as shown in this screen.

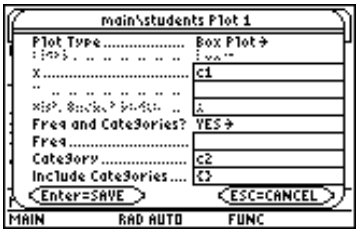


Downloaded from www.Manualslib.com manuals search engine

5. Copy **Plot 1** to **Plot 2**.

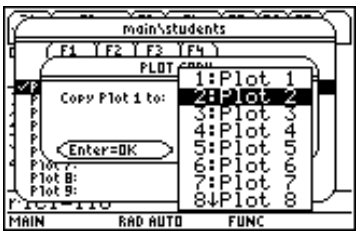



6. Repeat step 5 and copy **Plot 1** to **Plot 3**, **Plot 4**, and **Plot 5**.

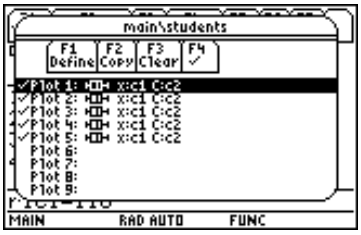

7. Press F1, and modify the **Include Categories** item for **Plot 2** through **Plot 5** to the following:


   Plot 2: {1,2}
   (freshman boys, girls)
   Plot 3: {7,8}
   (senior boys, girls)
   Plot 4: {1,3,5,7}
   (all boys)
   Plot 5: {2,4,6,8}
   (all girls)

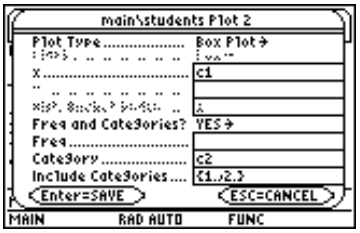

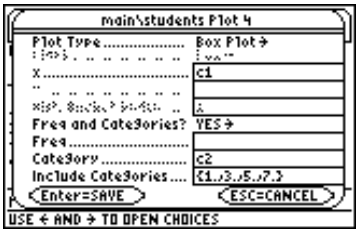


8. In the **Y= Editor**, deselect any functions that may be selected from a previous activity.

   Note: Only **Plot 1** through **Plot 5** should be selected.

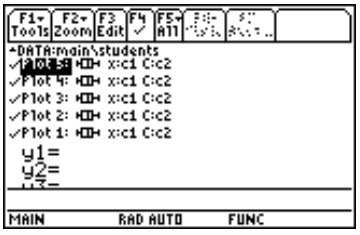


Downloaded from www.Manualslib.com manuals search engine

9. Display the plots by pressing F2 and selecting **9:Zoomdata**.

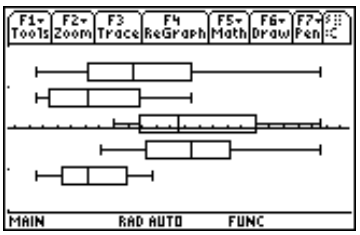

10. Use the **Trace** tool to compare the median student weights for different subsets.

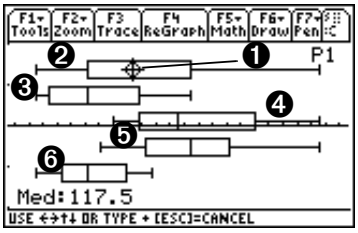

❶ median, all students
❷ all students
❸ all freshmen
❹ all seniors
❺ all boys
❻ all girls

CBL 2™ Program for the TI-89 Titanium

This activity provides a program that can be used when the TI-89 Titanium is connected to a Calculator-Based Laboratory™ (CBL 2™) unit. This program works with the "Newton's Law of Cooling" experiment. You can use your computer keyboard to type lengthy text and then use TI Connect™ software to send it to the calculator. More CBL 2™ programs are available from the TI Web site at educaton.ti.com.

Program Instruction	Description
:cooltemp( )	Program name
:Prgm	
:Local i	Declare local variable; exists only at run time.

Downloaded from www.Manualslib.com manuals search engine

Program Instruction	Description
:setMode("Graph","FUNCTION")	Set up the TI-89 Titanium for function graphing.
:PlotsOff	Turn off any previous plots.
:FnOff	Turn off any previous functions.
:ClrDraw	Clear any items previously drawn on graph screens.
:ClrGraph	Clear any previous graphs.
:ClrIO	Clear the TI-89 Titanium Program IO (input/output) screen.
:⁻10→xmin:99→xmax:10→xscl	Set up the Window variables.
:⁻20→ymin:100→ymax:10→yscl	
:{0}→data	Create and/or clear a list named data.
:{0}→time	Create and/or clear a list named time.
:Send{1,0}	Send a command to clear the CBL 2™ unit.
:Send{1,2,1}	Set up Chan. 2 of the CBL 2™ to AutoID to record temp.
:Disp "Press ENTER to start"	Prompt the user to press [ENTER].
:Disp "graphingTemperature."	
:Pause	Wait until the user is ready to start.
:PtText "TEMP(C)",2,99	Label the y axis of the graph.
:PtText "T(S)",80,⁻5	Label the x axis of the graph.

Downloaded from www.Manualslib.com manuals search engine

Program Instruction	Description
:Send{3,1,⁻1,0}	Send the Trigger command to the CBL 2™; collect data in real-time.
:For i,1,99	Repeat next two instructions for 99 temperature readings.
:Get data[i]	Get a temperature from the CBL 2™ and store it in a list.
:PtOn i,data[i]	Plot the temperature data on a graph.
:EndFor	
:seq(i,i,1,99,1)→time	Create a list to represent time or data sample number.
:NewPlot 1,1,time,data,,,,4	Plot time and data using NewPlot and the Trace tool.
:DispG	Display the graph.
:PtText "TEMP(C)",2,99	Re-label the axes.
:PtText "T(S)",80,⁻5	
:EndPrgm	Stop the program.

You can also use the Calculator-Based Ranger™ system (CBR™) to explore the mathematical and scientific relationships between distance, velocity, acceleration, and time using data collected from activities you perform.

Studying the Flight of a Hit Baseball


This activity uses the split screen settings to show a parametric graph and a table at the same time to study the flight of a hit baseball.

Downloaded from www.Manualslib.com manuals search engine


Setting Up a Parametric Graph and Table

Perform the following steps to study the flight of a hit baseball that has an initial velocity of 95 feet per second and an initial angle of 32 degrees.

1. Set the modes for **Page 1** as shown in this screen.

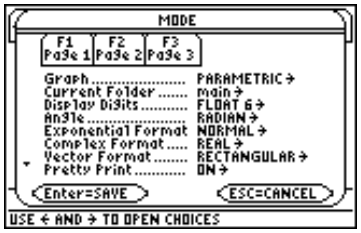


2. Set the modes for **Page 2** as shown in this screen.

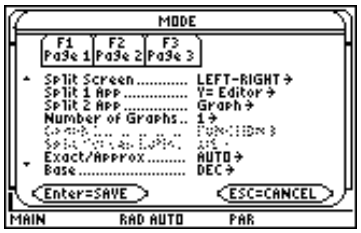

3. In the **Y= Editor** on the left side, enter the equation for the distance of the ball at time **t** for **xt1(t)**.


   xt1(t)=95∗t∗cos(32°)

   Note: Press 2nd [°] to obtain the degree symbol.

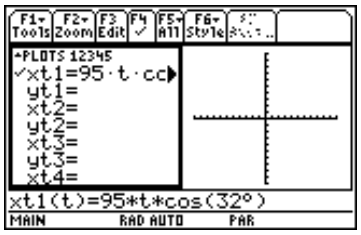

4. In the **Y= Editor**, enter the equation for the height of the ball at time t for **yt1(t)**.


   yt1(t)=⁻16∗t^2+95∗t∗sin(32°)

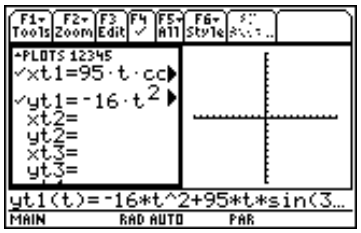

Downloaded from www.Manualslib.com manuals search engine


5. Set the Window variables to:

   t values= [0,4,.1]
   x values= [0,300,50]
   y values= [0,100,10]

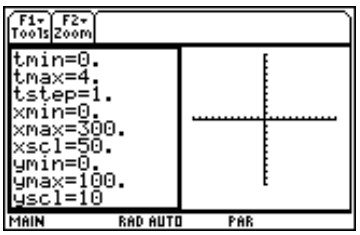


6. Switch to the right side and display the graph.

   Note: Press 2nd [⊞].

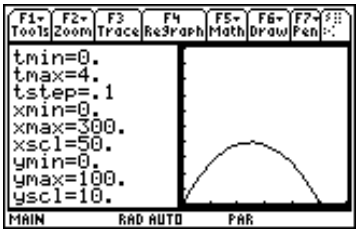


7. Display the **TABLE SETUP** dialog box, and change **tblStart** to **0** and **Δtbl** to **0.1**.

   Note: Press ♦ [TBLSET].

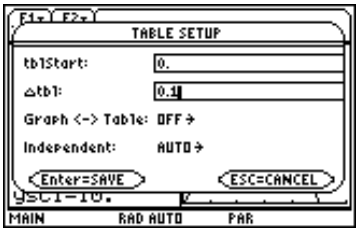


8. Display the table in the left side and press ▼ to highlight **t=2**.

   Note: Press ♦ [TABLE].

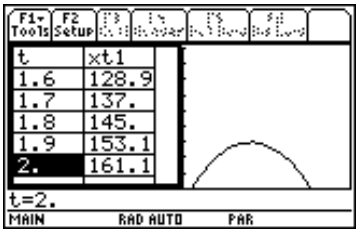

9. Switch to the right side. Press F3, and trace the graph to show the values of **xc** and **yc** when **tc=2**.

   Note: As you move the trace cursor from **tc=0.0** to **tc=3.1**, you will see the position of the ball at time **tc**.

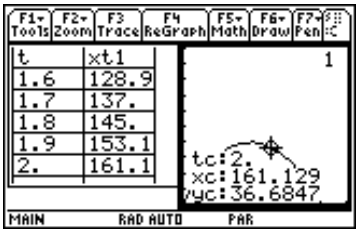

Downloaded from www.Manualslib.com manuals search engine

Optional Exercise

Assuming the same initial velocity of 95 feet per second, find the angle that the ball should be hit to achieve the greatest distance.


Visualizing Complex Zeros of a Cubic Polynomial

This activity describes graphing the complex zeros of a cubic polynomial.

Visualizing Complex Roots


Perform the following steps to expand the cubic polynomial **(x−1)(x−*i*)(x+*i*)**, find the absolute value of the function, graph the modulus surface, and use the **Trace** tool to explore the modulus surface.

1. On the Home screen, use the **expand( )** function to expand the cubic expression **(x−1)(x−*i*)(x+*i*)** and see the first polynomial.

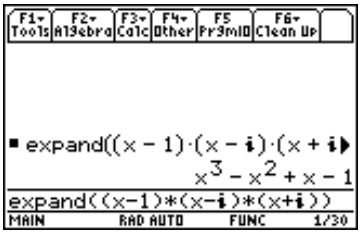

2. Copy and paste the last answer to the entry line and store it in the function **f(x)**.

   Note: Move the cursor into the history area to highlight the last answer and press ENTER, to copy it to the entry line.

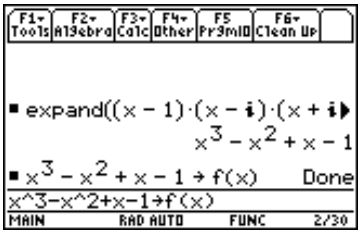


Downloaded from www.Manualslib.com manuals search engine

3. Use the **abs( )** function to find the absolute value of **f(x+y*i*)**.


   (This calculation may take about 2 minutes.)

   Note: The absolute value of a function forces any roots to visually just touch rather than cross the **x** axis. Likewise, the absolute value of a function of two variables will force any roots to visually just touch the **xy** plane.

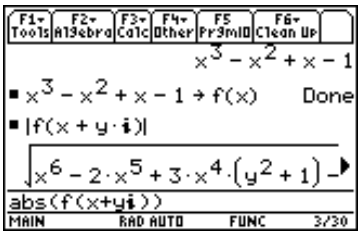
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
x^3 − x^2 + x − 1
x^3 − x^2 + x − 1 → f(x) Done
|f(x + y·i)|
√(x^6 − 2·x^5 + 3·x^4·(y^2 + 1)) ▸
abs(f(x+yi))
MAIN RAD AUTO FUNC 3/30


4. Copy and paste the last answer to the entry line and store it in the function **z1(x,y)**.

   Note: The graph of **z1(x,y)** will be the modulus surface.

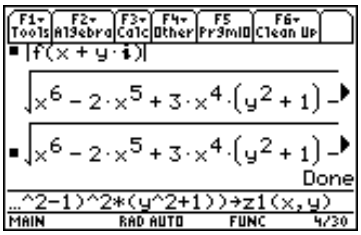
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
|f(x + y·i)|
√(x^6 − 2·x^5 + 3·x^4·(y^2 + 1)) ▸
√(x^6 − 2·x^5 + 3·x^4·(y^2 + 1)) ▸
Done
…^2−1)^2*(y^2+1))→z1(x,y)
MAIN RAD AUTO FUNC 4/30

5. Set the unit to 3D graph mode, turn on the axes for graph format, and set the Window variables to:

   eye= [20,70,0]
   x= [−2,2,20]
   y= [−2,2,20]
   z= [−1,2]
   ncontour= [5]

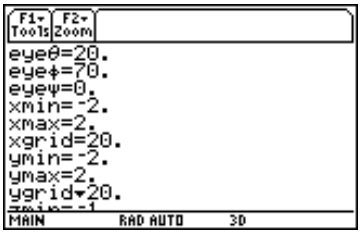


Downloaded from www.Manualslib.com manuals search engine

6. In the **Y=Editor**, press:
   ◆ |
   and set the Graph Format variables to:


   Axes= ON
   Labels= ON
   Style= HIDDEN SURFACE

   Note: Calculating and drawing the graph takes about three minutes.

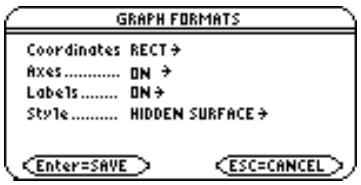


7. Graph the modulus surface.


   The 3D graph is used to visually display a picture of the roots where the surface touches the **xy** plane.

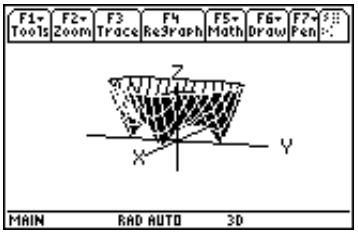

8. Use the Trace tool to explore the function values at **x=1** and **y=0**.

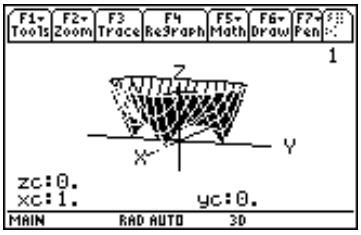


9. Use the Trace tool to explore the function values at **x=0** and **y=1**.

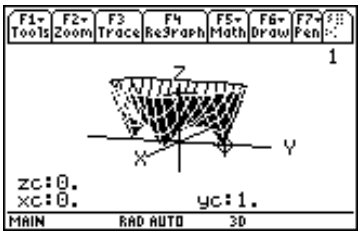

Downloaded from www.Manualslib.com manuals search engine

10. Use the Trace tool to explore the function values at **x=0** and **y=⁻1**.

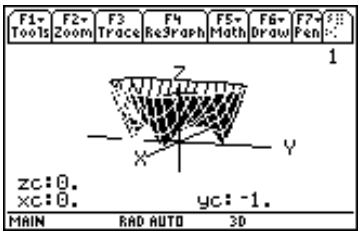

Summary

Note that **zc** is zero for each of the function values in steps 7–9. Thus, the complex zeros $1, -i, i$ of the polynomial $\mathbf{x^3-x^2+x-1}$ can be visualized with the three points where the graph of the modulus surface touches the **xy** plane.

Solving a Standard Annuity Problem


This activity can be used to find the interest rate, starting principal, number of compounding periods, and future value of an annuity.

Downloaded from www.Manualslib.com manuals search engine


Finding the Interest Rate of an Annuity

Perform the following steps to find the interest rate (**i**) of an annuity where the starting principal (**p**) is 1,000, number of compounding periods (**n**) is 6, and the future value (**s**) is 2,000.

1. On the Home screen, enter the equation to solve for **p**.

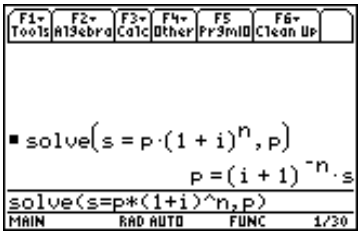


2. Enter the equation to solve for **n**.

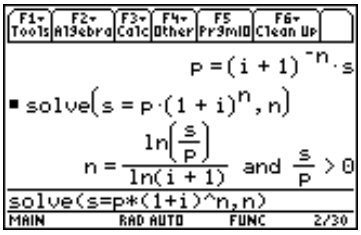
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
p = (i + 1)^-n·s
solve(s = p·(1 + i)^n, n)
n = ln(s/p) / ln(i + 1) and s/p > 0
solve(s=p*(1+i)^n,n)
MAIN RAD AUTO FUNC 2/30

3. Enter the equation to solve for i using the *with* operator.

   solve(s=p∗(1+i)^n,i) | s=2000 and **p=1000** and **n=6**

   Result: The interest rate is 12.246%.

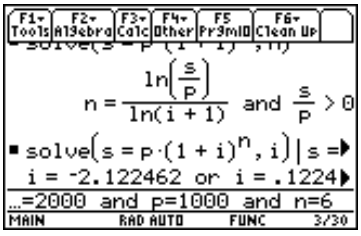
F1 Tools F2 Algebra F3 Calc F4 Other F5 PrgmIO F6 Clean Up
n = ln(s/p) / ln(i + 1) and s/p > 0
solve(s = p·(1 + i)^n, i) | s =
i = -2.122462 or i = .1224
…=2000 and p=1000 and n=6
MAIN RAD AUTO FUNC 3/30

   Note:

   - To enter the "*with*" (|) operator: [|]
   - Press [♦] [ENTER] to obtain a floating-point result.


Downloaded from www.Manualslib.com manuals search engine

Finding the Future Value of an Annuity

Find the future value of an annuity using the values from the previous example where the interest rate is 14%.

Enter the equation to solve for **s**.

solve(s=p∗(1+i)^n,s) | i=.14 and **p=1000** and **n=6**

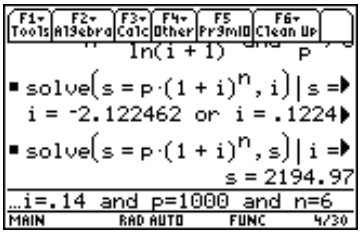

Result: The future value at 14% interest is 2,194.97.

Computing the Time-Value-of-Money

This activity creates a function that can be used to find the cost of financing an item. Detailed information about the steps used in this example can be found in the electronic chapter *Programming*, which is available from the TI Web site at education.ti.com and on the CD in this package.

Time-Value-of- Money Function

In the Program Editor, define the following Time-Value-of-Money (**tvm**) function where **temp1** = number of payments, **temp2** = annual interest rate, **temp3** = present value, **temp4** = monthly payment, **temp5** = future value, and **temp6** = begin- or end-of-payment

Downloaded from www.Manualslib.com manuals search engine

period (1 = beginning of month, 0 = end of month).

```
:tvm(temp1,temp2,temp3,temp4,temp5,temp6)
:Func
:Local tempi,tempfunc,tempstr1
:⁻temp3+(1+temp2/1200 temp6) temp4 ((1−(1+temp2/1200)^
    (⁻temp1))/(temp2/1200))−temp5 (1+temp2/1200)^(⁻temp1)
    →tempfunc
:For tempi,1,5,1
:"temp"&exact(string(tempi))→tempstr1
:If when(#tempstr1=0,false,false,true) Then
:If tempi=2
:Return approx(nsolve(tempfunc=0,#tempstr1) | #tempstr1>0 and
    #tempstr1<100)
:Return approx(nsolve(tempfunc=0,#tempstr1))
:EndIf
:EndFor
:Return "parameter error"
:EndFunc
```

Note: You can use your computer keyboard to type lengthy text and then use TI Connect™ software to send it to the TI-89 Titanium.


Downloaded from www.Manualslib.com manuals search engine

Finding the Monthly Payment

Find the monthly payment on 10,000 if you make 48 payments at 10% interest per year.

On the Home screen, enter the **tvm** values to find **pmt**.

Result: The monthly payment is 251.53.

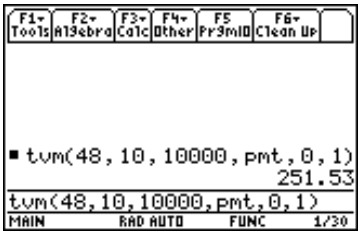


Finding the Number of Payments

Find the number of payments it will take to pay off the loan if you could make a 300 payment each month.

On the Home screen, enter the **tvm** values to find **n**.

Result: The number of payments is 38.8308.

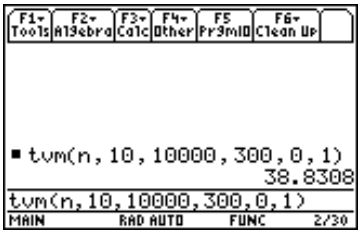

Finding Rational, Real, and Complex Factors


This activity shows how to find rational, real, or complex factors of expressions. Detailed information about the steps used in this example can be found in *Symbolic Manipulation*.

Downloaded from www.Manualslib.com manuals search engine


Finding Factors

Enter the expressions shown below on the Home screen.


1. **factor(x^3−5x)** ENTER displays a rational result.

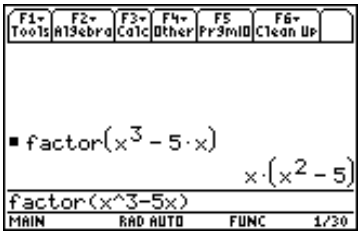


2. **factor(x^3+5x)** ENTER displays a rational result.

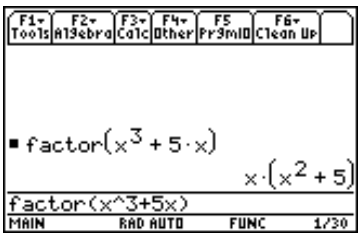

3. **factor(x^3−5x,x)** ENTER displays a real result.

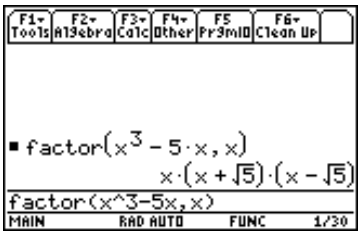

4. **cfactor(x^3+5x,x)** ENTER displays a complex result.

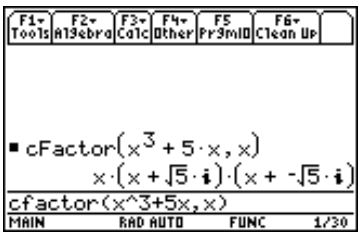

Downloaded from www.Manualslib.com manuals search engine

Simulation of Sampling without Replacement

This activity simulates drawing different colored balls from an urn without replacing them. Detailed information about the steps used in this example can be found in the electronic chapter *Programming*.

Sampling-without- Replacement Function

In the **Program Editor**, define **drawball( )** as a function that can be called with two parameters. The first parameter is a list where each element is the number of balls of a certain color. The second parameter is the number of balls to select. This function returns a list where each element is the number of balls of each color that were selected.

```
:drawball(urnlist,drawnum)
:Func
:Local templist,drawlist,colordim,
    numballs,i,pick,urncum,j
:If drawnum>sum(urnlist)
:Return "too few balls"
:dim(urnlist)→colordim
:urnlist→templist
:newlist(colordim)→drawlist
:For i,1,drawnum,1
:sum(templist)→numballs
:rand(numballs)→pick
```

(*continued in next column*)


```
:For j,1,colordim,1
:cumSum(templist)→urncum
:If pick ≤ urncum[j] Then
:drawlist[j]+1→drawlist[j]
:templist[j]−1→templist[j]
:Exit
:EndIf
:EndFor
:EndFor
:Return drawlist
:EndFunc
```


Downloaded from www.Manualslib.com manuals search engine

Sampling without Replacement


Suppose an urn contains **n1** balls of a color, **n2** balls of a second color, **n3** balls of a third color, etc. Simulate drawing balls without replacing them.

1. Enter a random seed using the **RandSeed** command.

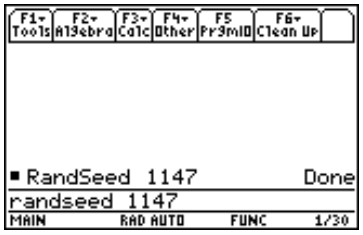

2. Assuming the urn contains 10 red balls and 25 white balls, simulate picking 5 balls at random from the urn without replacement. Enter **drawball({10,25},5)**.

   Result: 2 red balls and 3 white balls.

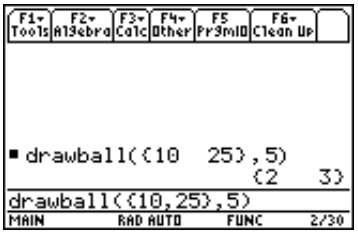


Using Vectors to Determine Velocity

A small fishing boat leaves from the south bank of the Allegheny River and heads at an 80° angle with an engine speed of 20 knots. However, the eastward force of the current carries the boat along so it actually travels at a 60° angle with the shore.


How fast is the current, and how fast does the boat actually travel?

Downloaded from www.Manualslib.com manuals search engine

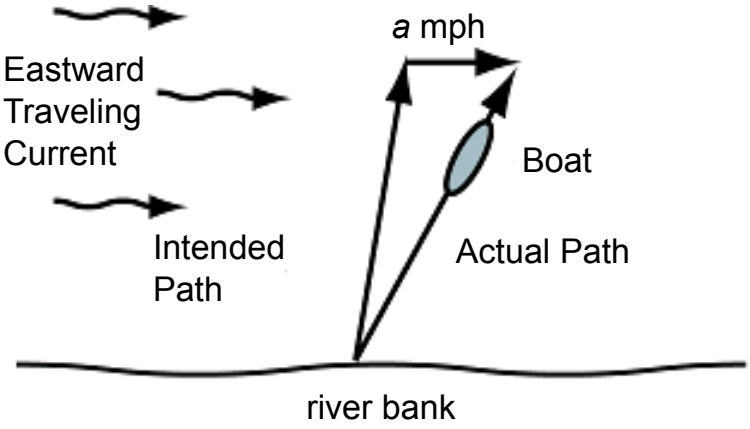


1. Set the modes for **Page 1** as shown in this screen. (Show angles in degrees and display all digits with a floating decimal point.)

   Press: MODE ▼ ▼ ▼. On the Angle option, select **2:DEGREE**. On the Display Digits option, select **E:FLOAT**.

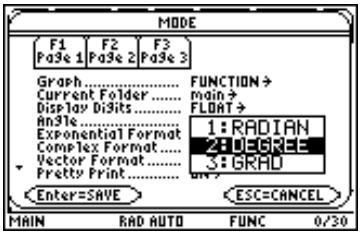

2. Set the modes for **Page 2** as shown in this screen. (Display answers in decimal form.)

   Press: MODE F2 ▼ ▼. On the Exact/Approx option, select **3:APPROXIMATE**.

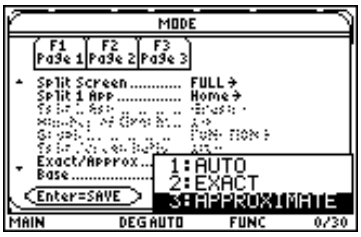

Downloaded from www.Manualslib.com manuals search engine

3. Enter vectors describing the initial path of the boat, water current, and resultant path of the boat.


   Store these vectors as **i**, **c**, and **r**. Use the value **a** for the unknown speed of the current. Use the value **b** for the speed of the boat.

   Enter:


   [20,80°]→i

   [a,0°]→c

   [b,60°]→r

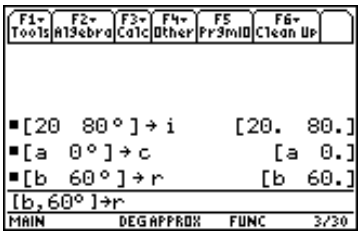

Vectors are commonly written in either polar or rectangular form, so it is useful to convert polar vectors into rectangular form.

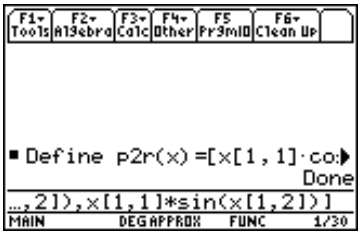


4. Define function **p2r**.

   Enter: **Define p2r(x)=[x[1,1]*cos(x[1,2]), x[1,1]*sin(x[1,2])]**

Downloaded from www.Manualslib.com manuals search engine

When converted to rectangular form, the sum of vectors **i** and **c** equals the resultant vector **r**.

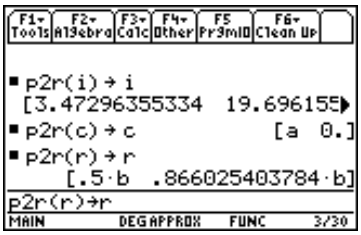

5. Using function **p2r**, convert vectors **i**, **c**, and **r** to rectangular form.


   Enter:

   p2r(i)→i

   p2r(c)→c

   p2r(r)→r

Because the vectors are equal, the x-coordinate of **i**+**c** must equal the x-coordinate of the resultant vector **r**. Likewise, the y-coordinate of **i**+**c** must equal the y-coordinate of resultant vector **r**.

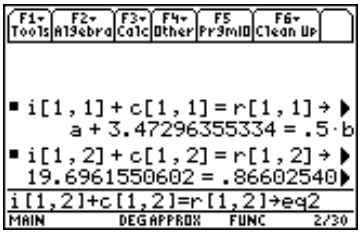

6. Set up two equations involving vectors **i**+**c** and **r**.

   - Equation 1 sets the x-coordinates equal to each other.
   - Equation 2 sets the y-coordinates equal.

   Store these equations into **eq1** and **eq2**, respectively. Enter:

   i[1,1]+c[1,1]=r[1,1]→eq1

   i[1,2]+c[1,2]=r[1,2]→eq2


Downloaded from www.Manualslib.com manuals search engine

7. Solve **eq2** for **b** to calculate the actual speed of the boat.

   solve(eq2,b)

8. Substitute the known value of **b** into **eq1**, and solve **eq1** for **a** to determine **a**, the speed of the eastward traveling current.

   solve(eq1,a) | b

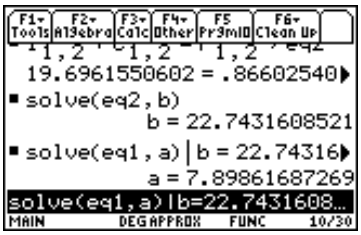

The boat travels at a speed of 22.7 knots, and the water current is approximately 7.9 knots.

Downloaded from www.Manualslib.com manuals search engine

Appendix A: Functions and Instructions

Categorical Listing of Operations 782
Alphabetical Listing of Operations..... 786

This section describes the syntax and action of each TI-89 Titanium function and instruction that is included in the operating system (OS). See modules relating to calculator software applications (Apps) for functions and instructions specific to those Apps.

Name of the function or instruction.

Key or menu for entering the name. You can also type the name.

Example

Circle **CATALOG**

Circle *x*, *y*, *r* [, *drawMode*]

Draws a circle with its center at window coordinates (*x*, *y*) and with a radius of *r*.


x, *y*, and *r* must be real values.

If *drawMode* = 1, draws the circle (default).
If *drawMode* = 0, turns off the circle.
If *drawMode* = -1, inverts pixels along the circle.

Note: Regraphing erases all drawn items.

In a ZoomSqr viewing window:

ZoomSqr:Circle 1,2,3 ENTER

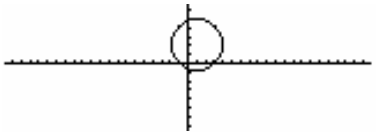

Explanation of the function or instruction.

Arguments are shown in *italics*. Arguments in [ ] brackets are optional. Do not type the brackets.

Syntax line shows the order and the type of arguments that you supply. Be sure to separate multiple arguments with a comma (,).

Downloaded from www.Manualslib.com manuals search engine

Categorical Listing of Operations

This section lists the TI-89 Titanium functions and instructions in functional groups along with the page numbers where they are described.

Algebra

| ("**with**")	912	**cFactor()**	791	**comDenom()**	794
cSolve()	799	**cZeros**	803	**expand()**	817
factor()	819	**getDenom()**	825	**getNum()**	826
nSolve()	849	**propFrac()**	856	**randPoly()**	862
solve()	878	**tCollect()**	888	**tExpand()**	889
zeros()	895				

Calculus

∫() (integrate)	907	**Π()** (product)	908	**Σ()** (sum)	908
arcLen()	788	**avgRC()**	789	***d()***	805
deSolve()	808	**fMax()**	821	**fMin()**	821
ImpDif()	831	**limit()**	834	**nDeriv()**	845
nInt()	847	**'** (prime)	910	**seq()**	869
taylor()	888				

Graphics

AndPic	787	**BldData**	790	**Circle**	792
ClrDraw	792	**ClrGraph**	793	**CyclePic**	803
DrawFunc	812	**DrawInv**	812	**DrawParm**	813
DrawPol	813	**DrawSlp**	813	**DrwCtour**	814
FnOff	821	**FnOn**	822	**Graph**	829
Line	835	**LineHorz**	835	**LineTan**	836
LineVert	836	**NewPic**	846	**PtChg**	856
PtOff	856	**PtOn**	856	**ptTest()**	856
PtText	857	**PxlChg**	857	**PxlCrcl**	857
PxlHorz	857	**PxlLine**	857	**PxlOff**	858
PxlOn	858	**pxlTest()**	858	**PxlText**	858
PxlVert	858	**RclGDB**	862	**RclPic**	862
RplcPic	867	**Shade**	874	**StoGDB**	883
StoPic	883	**Style**	884	**Trace**	891
XorPic	895	**ZoomBox**	896	**ZoomData**	897
ZoomDec	897	**ZoomFit**	898	**ZoomIn**	898
ZoomInt	898	**ZoomOut**	899	**ZoomPrev**	899
ZoomRcl	899	**ZoomSqr**	899	**ZoomStd**	900
ZoomSto	900	**ZoomTrig**	900		

Lists

+ (add)	900	**–** (subtract)	901	**∗** (multiply)	902
/ (divide)	902	**⁻** (negate)	904	**^** (power)	903
augment()	789	**crossP()**	798	**cumSum()**	802
dim()	810	**dotP()**	812	**exp▸list()**	817
left()	834	**Δlist()**	837	**list▸mat()**	837
mat▸list()	842	**max()**	842	**mid()**	843
min()	844	**newList()**	846	**polyEval()**	854
product()	855	**right()**	865	**rotate()**	865
shift()	874	**SortA**	881	**SortD**	881
sum()	884				

Downloaded from www.Manualslib.com manuals search engine

Math

+ (add)	900	− (subtract)	901	∗ (multiply)	902
/ (divide)	902	⁻ (negate)	904	**%** (percent)	904
! (factorial)	906	**√()** (sqr. root)	908	**^** (power)	903
ᴳ **(gradian)**	909	**°** (degree)	909	∠ (angle)	909
°, ', "	910	_ (underscore)	910	▸ (convert)	911
10^()	911	**0b, 0h**	913	**▸Bin**	789
▸Cylind	803	**▸DD**	806	**▸Dec**	806
▸DMS	812	**▸Grad**	786	**▸Hex**	829
▸Polar	853	**▸Rect**	863	**▸Sphere**	881
abs()	786	**and**	786	**angle()**	787
approx()	788	**ceiling()**	790	**conj()**	794
cos	795	**cos⁻¹()**	796	**cosh()**	797
cosh⁻¹()	797	**cot()**	797	**cot⁻¹()**	798
coth()	798	**coth⁻¹()**	798	**csc()**	798
csc⁻¹()	799	**csch()**	799	**cosh⁻¹()**	799
E	814	***e^()***	814	**exact()**	816
▸ln	837	**▸logbase**	839	**floor()**	820
fPart()	823	**gcd()**	823	**imag()**	830
impDif()	831	**int()**	832	**intDiv()**	832
iPart()	832	**isPrime()**	833	**lcm()**	834
ln()	837	**log()**	839	**max()**	842
min()	844	**mod()**	844	**nCr()**	845
nPr()	848	**P▸Rx()**	851	**P▸Ry()**	851
r (radian)	909	**R▸Pθ()**	861	**R▸Pr()**	861
real()	862	**remain()**	864	**rotate()**	865
round()	866	**sec()**	867	**root()**	865
sec⁻¹()	868	**sech()**	868	**sech⁻¹()**	868
shift()	874	**sign()**	875	**sin()**	876
sin⁻¹()	877	**sinh()**	877	**sinh⁻¹()**	877
tan()	886	**tan⁻¹()**	887	**tanh()**	887
tanh⁻¹()	888	**tmpCnv()**	890	**ΔtmpCnv()**	890
x⁻¹	911				

Matrices

+ (add)	900	− (subtract)	901	∗ (multiply)	902
/ (divide)	902	⁻ (negate)	904	**.+** (dot add)	903
.- (dot subt.)	903	**.** (dot mult.)	904	**./** (dot divide)	904
.^ (dot power)	904	**^** (power)	903	**augment()**	789
colDim()	793	**colNorm()**	793	**crossP()**	798
cumSum()	802	**data▸mat**	805	**det()**	809
diag()	810	**dim()**	810	**dotP()**	812
eigVc()	815	**eigVl()**	815	**Fill**	820
identity()	830	**list▸mat()**	837	**LU**	841
mat▸data	841	**mat▸list()**	842	**max()**	842
mean()	842	**median()**	842	**min()**	844
mRow()	844	**mRowAdd()**	844	**newMat()**	846
norm()	848	**product()**	855	**QR**	859
randMat()	862	**ref()**	863	**rowAdd()**	866
rowDim()	866	**rowNorm()**	866	**rowSwap()**	867
rref()	867	**simult()**	876	**stdDev()**	882
stdDevPop()	882	**subMat()**	884	**sum()**	884
T	885	**unitV()**	892	**variance()**	893
x⁻¹	911				

Downloaded from www.Manualslib.com manuals search engine

Programming

=	905	**≠**	905	**<**	905
≤	906	**>**	906	**≥**	906
# (indirection)	908	→ (store)	912	◔ (comment)	912
and	786	**ans()**	788	**Archive**	788
checkTmr()	791	**ClockOff**	792	**ClockOn**	792
ClrErr	792	**ClrGraph**	793	**ClrHome**	793
ClrIO	793	**ClrTable**	793	**CopyVar**	795
CustmOff	802	**CustmOn**	802	**Custom**	802
Cycle	803	**dayOfWk()**	806	**Define**	807
DelFold	807	**DelType**	808	**DelVar**	808
Dialog	810	**Disp**	811	**DispG**	811
DispHome	811	**DispTbl**	811	**DropDown**	813
Else	815	**ElseIf**	815	**EndCustm**	815
EndDlog	815	**EndFor**	815	**EndFunc**	815
EndIf	815	**EndLoop**	816	**EndPrgm**	816
EndTBar	816	**EndTry**	816	**EndWhile**	816
entry()	816	**Exec**	817	**Exit**	817
For	822	**format()**	822	**Func**	823
Get	824	**GetCalc**	824	**getConfg()**	824
getDate()	824	**getDtFmt()**	825	**getDtStr()**	825
getFold()	825	**getKey()**	825	**getMode()**	826
getTime()	826	**getTmFmt()**	826	**getTmStr()**	826
getTmZn()	827	**getType()**	827	**getUnits()**	828
Goto	828	**If**	830	**Input**	831
InputStr	831	**isClkOn()**	832	**Item**	833
Lbl	833	**isArchiv()**	832	**isLocked ()**	833
isVar()	833	**left()**	834	**Local**	838
Lock	838	**Loop**	840	**MoveVar**	844
NewFold	846	**NewProb**	847	**not**	848
or	850	**Output**	850	**part()**	851
PassErr	853	**Pause**	853	**PopUp**	854
Prgm	855	**Prompt**	855	**Rename**	864
Request	864	**Return**	864	**right()**	865
Send	868	**SendCalc**	868	**SendChat**	869
setDate()	869	**setDtFmt()**	869	**setFold()**	870
setGraph()	870	**setMode()**	871	**setTable()**	872
setTime()	872	**setTmFmt()**	872	**setTmZn()**	873
startTmr()	881	**setUnits()**	873	**Stop**	883
Style	884	**switch()**	885	**Table**	886
Text	889	**Then**	889	**timeCnv()**	889
Title	889	**Toolbar**	891	**Try**	891
Unarchiv	892	**Unlock**	892	**when()**	893
While	894	**xor**	894		

Downloaded from www.Manualslib.com manuals search engine

Statistics

! (factorial)	906	**BldData**	790	**CubicReg**	801
cumSum()	802	**ExpReg**	819	**LinReg**	836
LnReg	838	**Logistic**	840	**mean()**	842
median()	842	**MedMed**	843	**nCr()**	845
NewData	845	**NewPlot**	847	**nPr()**	848
OneVar	849	**PlotsOff**	853	**PlotsOn**	853
PowerReg	855	**QuadReg**	859	**QuartReg**	860
rand()	861	**randNorm()**	862	**RandSeed**	862
ShowStat	875	**SinReg**	878	**SortA**	881
SortD	881	**stdDev()**	882	**stdDevPop()**	882
TwoVar	892	**variance()**	893		

Strings

& (append)	907	# (indirection)	908	**char()**	791
dim()	810	**expr()**	818	**format()**	822
inString()	832	**left()**	834	**mid()**	843
ord()	850	**right()**	865	**rotate()**	865
shift()	874	**string()**	883		

Downloaded from www.Manualslib.com manuals search engine

Alphabetical Listing of Operations

Operations whose names are not alphabetic (such as +, !, and >) are listed at the end of this appendix, starting on page 900. Unless otherwise specified, all examples in this section were performed in the default reset mode, and all variables are assumed to be undefined. Additionally, due to formatting restraints, approximate results are truncated at three decimal places (3.14159265359 is shown as 3.141...).

abs() MATH/Number menu

abs(*expression1***)** ⇒ *expression*
abs(*list1***)** ⇒ *list*
abs(*matrix1***)** ⇒ *matrix*

Returns the absolute value of the argument.

If the argument is a complex number, returns the number's modulus.

Note: All undefined variables are treated as real variables.

abs({π/2, -π/3}) ENTER → $\{\frac{\pi}{2} \quad \frac{\pi}{3}\}$

abs(2-3*i*) ENTER → $\sqrt{13}$

abs(z) ENTER → $|z|$

abs(x+y*i*) ENTER → $\sqrt{x^2+y^2}$

and MATH/Test and MATH/Base menus

Boolean expression1 **and** *expression2* ⇒ *Boolean expression*
Boolean list1 **and** *list2* ⇒ *Boolean list*
Boolean matrix1 **and** *matrix2* ⇒ *Boolean matrix*

Returns true or false or a simplified form of the original entry.

x≥3 and x≥4 ENTER → x≥4

{x≥3, x≤0} and {x≥4, x≤-2} ENTER → {x ≥ 4 x ≤ -2}

---

integer1 **and** *integer2* ⇒ *integer*

Compares two real integers bit-by-bit using an **and** operation. Internally, both integers are converted to signed, 32-bit binary numbers. When corresponding bits are compared, the result is 1 if both bits are 1; otherwise, the result is 0. The returned value represents the bit results, and is displayed according to the Base mode.

You can enter the integers in any number base. For a binary or hexadecimal entry, you must use the 0b or 0h prefix, respectively. Without a prefix, integers are treated as decimal (base 10).

If you enter a decimal integer that is too large for a signed, 32-bit binary form, a symmetric modulo operation is used to bring the value into the appropriate range.

In Hex base mode:

0h7AC36 and 0h3D5F ENTER → 0h2C16

Important: Zero, not the letter O.

In Bin base mode:

0b100101 and 0b100 ENTER → 0b100

In Dec base mode:

37 and 0b100 ENTER → 4

Note: A binary entry can have up to 32 digits (not counting the 0b prefix). A hexadecimal entry can have up to 8 digits.

Downloaded from www.Manualslib.com manuals search engine

AndPic CATALOG

AndPic *picVar*[, *row, column*]

Displays the Graph screen and logically "ANDS" the picture stored in *picVar* and the current graph screen at pixel coordinates *(row, column)*.


picVar must be a picture type.

Default coordinates are (0,0), which is the upper left corner of the screen.

In function graphing mode and Y= Editor:


```
y1(x) = cos(x) ⊙
[2nd][F6] Style = 3:Square

[F2] Zoom = 7:ZoomTrig
[F1] = 2:Save Copy As...
Type = Picture, Variable = PIC1
```

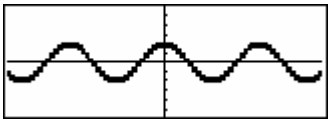


```
y2(x) = sin(x)
[2nd][F6] Style = 3:Square

y1 = no checkmark (F4 to deselect)
[F2] Zoom = 7:ZoomTrig
```

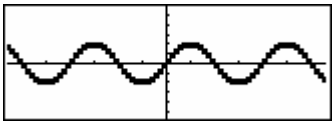

```
[HOME]
AndPic PIC1 [ENTER]                    Done
```

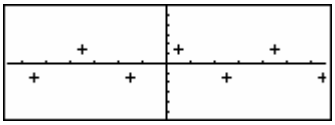

angle() MATH/Complex menu

angle(*expression1***)** ⇒ *expression*

Returns the angle of *expression1*, interpreting *expression1* as a complex number.

Note: All undefined variables are treated as real variables.

In Degree angle mode:

```
angle(0+2i) [ENTER]                    90
```


In Gradian angle mode:

```
angle(0+3i) [ENTER]                    100
```

In Radian angle mode:

```
angle(1+i) [ENTER]                     π/4

angle(z) [ENTER]
angle(x+iy) [ENTER]
```

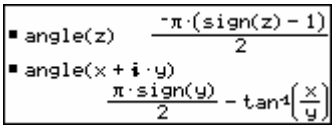


---

angle(*list1***)** ⇒ *list*
angle(*matrix1***)** ⇒ *matrix*

Returns a list or matrix of angles of the elements in *list1* or *matrix1*, interpreting each element as a complex number that represents a two-dimensional rectangular coordinate point.

In Radian angle mode:

```
angle({1+2i,3+0i,0-4i}) [ENTER]
```



Downloaded from www.Manualslib.com manuals search engine

ans() 2nd [ANS] key

ans() ⇒ *value*
ans(*integer***)** ⇒ *value*

Returns a previous answer from the Home screen history area.

integer, if included, specifies which previous answer to recall. Valid range for *integer* is from 1 to 99 and cannot be an expression. Default is 1, the most recent answer.

To use **ans()** to generate the Fibonacci sequence on the Home screen, press:

1 ENTER	1
1 ENTER	1
2nd [ANS] + 2nd [ANS] ◀ ← 2 ENTER	2
ENTER	3
ENTER	5

approx() MATH/Algebra menu

approx(*expression***)** ⇒ *value*

Returns the evaluation of *expression* as a decimal value, when possible, regardless of the current Exact/Approx mode.

This is equivalent to entering *expression* and pressing ◆ ENTER on the Home screen.

```
approx(π) ENTER                          3.141...
```

---

approx(*list1***)** ⇒ *list*
approx(*matrix1***)** ⇒ *matrix*

Returns a list or matrix where each element has been evaluated to a decimal value, when possible.

```
approx({sin(π),cos(π)}) ENTER
                                  {0.  -1.}
approx([√(2),√(3)]) ENTER
                          [1.414...  1.732...]
```

Archive CATALOG

Archive *var1* [, *var2*] [, *var3*] …

Moves the specified variables from RAM to the user data archive memory.

You can access an archived variable the same as you would a variable in RAM. However, you cannot delete, rename, or store to an archived variable because it is locked automatically.

To unarchive variables, use **Unarchiv**.

```
10→arctest ENTER                          10
Archive arctest ENTER                   Done
5*arctest ENTER                           50
15→arctest ENTER
```




```
ESC
Unarchiv arctest ENTER                  Done
15→arctest ENTER                          15
```

arcLen() MATH/Calculus menu

arcLen(*expression1***,** *var***,** *start***,** *end***)** ⇒ *expression*

Returns the arc length of *expression1* from *start* to *end* with respect to variable *var*.

Regardless of the graphing mode, arc length is calculated as an integral assuming a function mode definition.

```
arcLen(cos(x),x,0,π) ENTER               3.820...
arcLen(f(x),x,a,b) ENTER
```

$$\int_a^b \sqrt{\left(\frac{d}{dx}(f(x))\right)^2+1}\ dx$$

---

arcLen(*list1***,** *var***,** *start***,** *end***)** ⇒ *list*

Returns a list of the arc lengths of each element of *list1* from *start* to *end* with respect to *var*.

```
arcLen({sin(x),cos(x)},x,0,π)
                                {3.820...  3.820...}
```


Downloaded from www.Manualslib.com manuals search engine

augment() MATH/Matrix menu

augment(*list1, list2***)** ⇒ *list*

Returns a new list that is *list2* appended to the end of *list1*.

```
augment({1,-3,2},{5,4}) ENTER
                          {1 -3 2 5 4}
```

---

augment(*matrix1***,** *matrix2***)** ⇒ *matrix*
augment(*matrix1***;** *matrix2***)** ⇒ *matrix*

Returns a new matrix that is *matrix2* appended to *matrix1*. When the "," character is used, the matrices must have equal row dimensions, and *matrix2* is appended to *matrix1* as new columns. When the ";" character is used, the matrices must have equal column dimensions, and *matrix2* is appended to *matrix1* as new rows. Does not alter *matrix1* or *matrix2*.

```
[1,2;3,4]→M1 ENTER
```

$$\begin{bmatrix}1 & 2\\3 & 4\end{bmatrix}$$

```
[5;6]→M2 ENTER
```

$$\begin{bmatrix}5\\6\end{bmatrix}$$

```
augment(M1,M2) ENTER
```

$$\begin{bmatrix}1 & 2 & 5\\3 & 4 & 6\end{bmatrix}$$

```
[5,6]→M2 ENTER
```

$$\begin{bmatrix}5 & 6\end{bmatrix}$$

```
augment(M1;M2) ENTER
```

$$\begin{bmatrix}1 & 2\\3 & 4\\5 & 6\end{bmatrix}$$

avgRC() CATALOG

avgRC(*expression1***,** *var* **[,** *h***])** ⇒ *expression*

Returns the forward-difference quotient (average rate of change).

expression1 can be a user-defined function name (see **Func**).

h is the step value. If *h* is omitted, it defaults to 0.001.

Note that the similar function **nDeriv()** uses the central-difference quotient.

```
avgRC(f(x),x,h) ENTER
```

$$\frac{f(x+h)-f(x)}{h}$$

```
avgRC(sin(x),x,h)|x=2 ENTER
```

$$\frac{\sin(h+2)-\sin(2)}{h}$$

```
avgRC(x^2-x+2,x) ENTER
                          2.•(x-.4995)
avgRC(x^2-x+2,x,.1) ENTER
                          2.•(x-.45)
avgRC(x^2-x+2,x,3) ENTER      2•(x+1)
```

▸Bin MATH/Base menu

integer1 **▸Bin** ⇒ *integer*

Converts *integer1* to a binary number. Binary or hexadecimal numbers always have a 0b or 0h prefix, respectively.

Zero, not the letter O, followed by b or h.
0b *binaryNumber*
0h *hexadecimalNumber*
A binary number can have up to 32 digits. A hexadecimal number can have up to 8.

Without a prefix, *integer1* is treated as decimal (base 10). The result is displayed in binary, regardless of the Base mode.

If you enter a decimal integer that is too large for a signed, 32-bit binary form, a symmetric modulo operation is used to bring the value into the appropriate range.

```
256▸Bin ENTER          0b100000000
0h1F▸Bin ENTER             0b11111
```


Downloaded from www.Manualslib.com manuals search engine

BldData CATALOG

BldData [*dataVar*]

Creates data variable *dataVar* based on the information used to plot the current graph. **BldData** is valid in all graphing modes.

If *dataVar* is omitted, the data is stored in the system variable sysData.


Note: The first time you start the Data/Matrix Editor after using **BldData**, *dataVar* or sysData (depending on the argument you used with **BldData**) is set as the current data variable.

The incremental values used for any independent variables (x in the example to the right) are calculated according to the Window variable values.

For information about the increments used to evaluate a graph, refer to the module that describes that graphing mode.

In function graphing mode and Radian angle mode:

8*sin(x)→y1(x) ENTER Done
2*sin(x)→y2(x) ENTER Done
ZoomStd ENTER

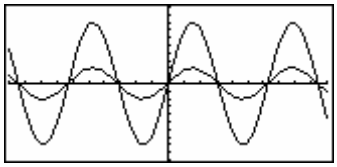

HOME
BldData ENTER Done
APPS 6 ENTER

DATA	x	y1	y2
	c1	c2	c3
1	-10.	4.3522	1.088
2	-9.832	3.168	.792
3	-9.664	1.8945	.47363
4	-9.496	.56769	.14192

3D graphing mode has two independent variables. In the sample data to the right, notice that x remains constant as y increments through its range of values.

Then, x increments to its next value and y again increments through its range. This pattern continues until x has incremented through its range.

Note: The following sample data is from a 3D graph.

DATA	x	y	z1
	c1	c2	c3
1	-10.	-10.	0.
2	-10.	-8.571	5.8309
3	-10.	-7.143	8.9706
4	-10.	-5.714	9.8677

ceiling() MATH/Number menu

ceiling(*expression1***)** ⇒ *integer*

Returns the nearest integer that is ≥ the argument.

The argument can be a real or a complex number.

Note: See also **floor()**.

ceiling(0.456) ENTER 1.

---

ceiling(*list1***)** ⇒ *list*
ceiling(*matrix1***)** ⇒ *matrix*

Returns a list or matrix of the ceiling of each element.

ceiling({-3.1,1,2.5}) ENTER
{-3. 1 3.}

ceiling([0,-3.2i;1.3,4]) ENTER
$\begin{bmatrix} 0 & -3.\cdot i \\ 2. & 4 \end{bmatrix}$

Downloaded from www.Manualslib.com manuals search engine

cFactor() MATH/Algebra/Complex menu

cFactor(*expression1***[, *var*])** ⇒ *expression*
cFactor(*list1***[, *var*])** ⇒ *list*
cFactor(*matrix1***[, *var*])** ⇒ *matrix*

cFactor(*expression1***)** returns *expression1* factored with respect to all of its variables over a common denominator.

expression1 is factored as much as possible toward linear rational factors even if this introduces new non-real numbers. This alternative is appropriate if you want factorization with respect to more than one variable.

```
cFactor(a^3*x^2+a*x^2+a^3+a) ENTER
        a·(a + ⁻i)·(a + i)·(x + ⁻i)·(x + i)

cFactor(x^2+4/9) ENTER
                  (3·x + ⁻2·i)·(3·x + 2·i)
                  ─────────────────────────
                              9

cFactor(x^2+3) ENTER                  x² + 3

cFactor(x^2+a) ENTER                  x² + a
```

---

cFactor(*expression1***, *var*)** returns *expression1* factored with respect to variable *var*.

expression1 is factored as much as possible toward factors that are linear in *var*, with perhaps non-real constants, even if it introduces irrational constants or subexpressions that are irrational in other variables.

The factors and their terms are sorted with *var* as the main variable. Similar powers of *var* are collected in each factor. Include *var* if factorization is needed with respect to only that variable and you are willing to accept irrational expressions in any other variables to increase factorization with respect to *var*. There might be some incidental factoring with respect to other variables.

For the AUTO setting of the Exact/Approx mode, including *var* also permits approximation with floating-point coefficients where irrational coefficients cannot be explicitly expressed concisely in terms of the built-in functions. Even when there is only one variable, including *var* might yield more complete factorization.

Note: See also **factor()**.

```
cFactor(a^3*x^2+a*x^2+a^3+a,x) ENTER
                a·(a² + 1)·(x + ⁻i)·(x + i)

cFactor(x^2+3,x) ENTER
                  (x + √3·i)·(x + ⁻√3·i)

cFactor(x^2+a,x) ENTER
                  (x + √a·⁻i)·(x + √a·i)

cFactor(x^5+4x^4+5x^3−6x−3) ENTER
                  x⁵ + 4·x⁴ + 5·x³ − 6·x − 3

cFactor(ans(1),x) ENTER

      (x − .965)·(x + .612)·(x + 2.13)·
                  (x + 1.11 − 1.07·i)·
                  (x + 1.11 + 1.07·i)
```

char() MATH/String menu

char(*integer***)** ⇒ *character*

Returns a character string containing the character numbered *integer* from the TI-89 Titanium/Voyage™ 200 character set. See Appendix B for a complete listing of character codes. The valid range for *integer* is 0–255.

```
char(38) ENTER                        "&"

char(65) ENTER                        "A"
```

checkTmr() CATALOG

checkTmr(*starttime***)** ⇒ *integer*

Returns an integer representing the number of seconds that have elapsed since a timer was started. *starttime* is an integer returned from the **startTmr()** function.

You can also use a list or matrix of *starttime* integers. Valid *starttime* integers must fall between 0 and the current time of the clock. You can run multiple timers simultaneously.

Note: See also **startTmr()** and **timeCnv()**.

```
startTmr() ENTER                      148083315

checkTmr(148083315)                   34

startTmr()→Timer1
⋮
startTmr()→Timer2
⋮
checkTmr(Timer1)→Timer1Value
⋮
checkTmr(Timer2)→Timer2Value
```


Downloaded from www.Manualslib.com manuals search engine

Circle CATALOG

Circle *x*, *y*, *r* [, *drawMode*]

Draws a circle with its center at window coordinates (*x*, *y*) and with a radius of *r*.


x, *y*, and *r* must be real values.

If *drawMode* = 1, draws the circle (default).
If *drawMode* = 0, turns off the circle.
If *drawMode* = -1, inverts pixels along the circle.

Note: Regraphing erases all drawn items. See also **PxlCrcl**.

In a **ZoomSqr** viewing window:

```
ZoomSqr:Circle 1,2,3 ENTER
```

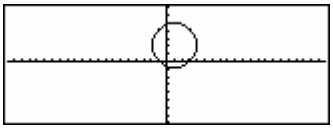

ClockOff CATALOG

ClockOff

Turns the clock OFF.

ClockOn CATALOG

ClockOn

Turns the clock ON.

ClrDraw CATALOG

ClrDraw

Clears the Graph screen and resets the Smart Graph feature so that the next time the Graph screen is displayed, the graph will be redrawn.

While viewing the Graph screen, you can clear all drawn items (such as lines and points) by pressing F4 (ReGraph) or pressing 2nd [F6] and selecting 1:ClrDraw.

ClrErr CATALOG

ClrErr

Clears the error status. It sets errornum to zero and clears the internal error context variables.

The **Else** clause of the **Try...EndTry** in the program should use **ClrErr** or **PassErr**. If the error is to be processed or ignored, use **ClrErr**. If what to do with the error is not known, use **PassErr** to send it to the next error handler. If there are no more pending **Try...EndTry** error handlers, the error dialog box will be displayed as normal.

Note: See also **PassErr** and **Try**.

Program listing:

```
:clearerr()
:Prgm
:PlotsOff:FnOff:ZoomStd
:For i,0,238
:Δx*i+xmin→xcord
: Try
:  PtOn xcord,ln(xcord)
: Else
:  If errornum=800 or
                    errornum=260 Then
:   ClrErr ◉ clear the error
:  Else
:   PassErr ◉ pass on any other
                                  error
:  EndIf
: EndTry
:EndFor
:EndPrgm
```


Downloaded from www.Manualslib.com manuals search engine

ClrGraph CATALOG

ClrGraph

Clears any functions or expressions that were graphed with the **Graph** command or were created with the **Table** command. (See **Graph** or **Table**.)

Any previously selected Y= functions will be graphed the next time that the graph is displayed.

ClrHome CATALOG

ClrHome

Clears all items stored in the **entry()** and **ans()** Home screen history area. Does not clear the current entry line.

While viewing the Home screen, you can clear the history area by pressing F1 and selecting 8:Clear Home.

For functions such as **solve()** that return arbitrary constants or integers (@1, @2, etc.), **ClrHome** resets the suffix to 1.

ClrIO CATALOG

ClrIO

Clears the Program I/O screen.

ClrTable CATALOG

ClrTable

Clears all table values. Applies only to the ASK setting on the Table Setup dialog box.

While viewing the Table screen in Ask mode, you can clear the values by pressing F1 and selecting 8:Clear Table.

colDim() MATH/Matrix/Dimensions menu

colDim(*matrix***)** ⇒ *expression*

Returns the number of columns contained in *matrix*.

Note: See also **rowDim()**.

```
colDim([0,1,2;3,4,5]) ENTER          3
```

colNorm() MATH/Matrix/Norms menu

colNorm(*matrix***)** ⇒ *expression*

Returns the maximum of the sums of the absolute values of the elements in the columns in *matrix*.

Note: Undefined matrix elements are not allowed. See also **rowNorm()**.


```
[1,-2,3;4,5,-6]→mat ENTER
                    [1  -2  3 ]
                    [4   5  -6]
colNorm(mat) ENTER                   9
```

comDenom() MATH/Algebra menu

comDenom(*expression1*[**,***var*]**)** ⇒ *expression*
comDenom(*list1*[**,***var*]**)** ⇒ *list*
comDenom(*matrix1*[**,***var*]**)** ⇒ *matrix*

comDenom(*expression1***)** returns a reduced ratio of a fully expanded numerator over a fully expanded denominator.


```
comDenom((y^2+y)/(x+1)^2+y^2+y) ENTER
```

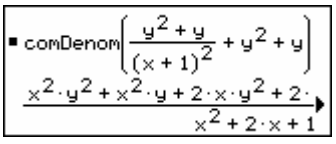


Downloaded from www.Manualslib.com manuals search engine

comDenom(*expression1,var***)** returns a reduced ratio of numerator and denominator expanded with respect to *var*. The terms and their factors are sorted with *var* as the main variable. Similar powers of *var* are collected. There might be some incidental factoring of the collected coefficients. Compared to omitting *var*, this often saves time, memory, and screen space, while making the expression more comprehensible. It also makes subsequent operations on the result faster and less likely to exhaust memory.

```
comDenom((y^2+y)/(x+1)
^2+y^2+y,x) ENTER
```

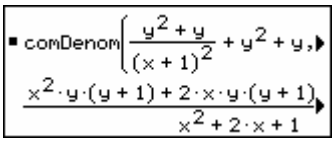



```
comDenom((y^2+y)/(x+1)
^2+y^2+y,y) ENTER
```

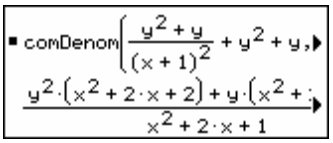

If *var* does not occur in *expression1*, **comDenom(***expression1,var***)** returns a reduced ratio of an unexpanded numerator over an unexpanded denominator. Such results usually save even more time, memory, and screen space. Such partially factored results also make subsequent operations on the result much faster and much less likely to exhaust memory.

```
comDenom(exprn,abc)→comden
(exprn) ENTER                    Done

comden((y^2+y)/(x+1)^2+y^2+y)
ENTER
```

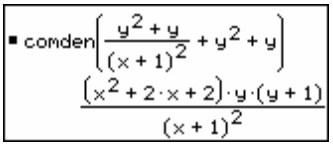

Even when there is no denominator, the **comden** function is often a fast way to achieve partial factorization if **factor()** is too slow or if it exhausts memory.

Hint: Enter this **comden()** function definition and routinely try it as an alternative to **comDenom()** and **factor()**.

```
comden(1234x^2*(y^3-y)+2468x
*(y^2-1)) ENTER
          1234•x•(x•y+2)•(y²-1)
```

conj() MATH/Complex menu

conj(*expression1***)** ⇒ *expression*
conj(*list1***)** ⇒ *list*
conj(*matrix1***)** ⇒ *matrix*

Returns the complex conjugate of the argument.

Note: All undefined variables +are treated as real variables.

```
conj(1+2i) ENTER                 1-2•i

conj([2,1-3i;-i,-7]) ENTER
```

$$\begin{bmatrix} 2 & 1+3\cdot i \\ i & -7 \end{bmatrix}$$

```
conj(z)                            z

conj(x+iy)                   x+-i•y
```

CopyVar CATALOG

CopyVar *var1***,** *var2*

Copies the contents of variable *var1* to *var2*. If *var2* does not exist, **CopyVar** creates it.

Note: CopyVar is similar to the store instruction (→) when you are copying an expression, list, matrix, or character string except that no simplification takes place when using **CopyVar**. You must use **CopyVar** with non-algebraic variable types such as Pic and GDB variables.

```
x+y→a ENTER                      x+y
10→x ENTER                        10
CopyVar a,b ENTER                Done
a→c ENTER                       y+10
DelVar x ENTER                   Done
b ENTER                          x+y
c ENTER                         y+10
```


Downloaded from www.Manualslib.com manuals search engine

cos() 2nd [cos] key

cos(*expression1***)** ⇒ *expression*
cos(*list1***)** ⇒ *list*

cos(*expression1***)** returns the cosine of the argument as an expression.

cos(*list1***)** returns a list of the cosines of all elements in *list1*.

Note: The argument is interpreted as a degree, gradian or radian angle, according to the current angle mode setting. You can use °, ᴳ or ʳ to override the angle mode temporarily.

In Degree angle mode:

cos((π/4)ʳ) ENTER $\frac{\sqrt{2}}{2}$

cos(45) ENTER $\frac{\sqrt{2}}{2}$

cos({0,60,90}) ENTER {1 1/2 0}

In Gradian angle mode:

cos({0,50,100}) ENTER $\{1 \quad \frac{\sqrt{2}}{2} \quad 0\}$

In Radian angle mode:

cos(π/4) ENTER $\frac{\sqrt{2}}{2}$

cos(45°) ENTER $\frac{\sqrt{2}}{2}$

---

cos(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix cosine of *squareMatrix1*. This is *not* the same as calculating the cosine of each element.

When a scalar function f(A) operates on *squareMatrix1* (A), the result is calculated by the algorithm:

1. Compute the eigenvalues (λ_i) and eigenvectors (V_i) of A.

   squareMatrix1 must be diagonalizable. Also, it cannot have symbolic variables that have not been assigned a value.

2. Form the matrices:

$$B = \begin{bmatrix} \lambda_1 & 0 & \dots & 0 \\ 0 & \lambda_2 & \dots & 0 \\ 0 & 0 & \dots & 0 \\ 0 & 0 & \dots & \lambda_n \end{bmatrix} \text{ and } X = [V_1, V_2, \dots, V_n]$$

3. Then $A = X\,B\,X^{-1}$ and $f(A) = X\,f(B)\,X^{-1}$. For example, $\cos(A) = X\,\cos(B)\,X^{-1}$ where:

$$\cos(B) = \begin{bmatrix} \cos(\lambda_1) & 0 & \dots & 0 \\ 0 & \cos(\lambda_2) & \dots & 0 \\ 0 & 0 & \dots & 0 \\ 0 & 0 & \dots & \cos(\lambda_n) \end{bmatrix}$$

All computations are performed using floating-point arithmetic.

In Radian angle mode:

cos([1,5,3;4,2,1;6,-2,1]) ENTER

$$\begin{bmatrix} .212\dots & .205\dots & .121\dots \\ .160\dots & .259\dots & .037\dots \\ .248\dots & -.090\dots & .218\dots \end{bmatrix}$$

Downloaded from www.Manualslib.com manuals search engine

cos^{-1}() ⊡ [cos^{-1}] key

cos^{-1}(*expression1***)** ⇒ *expression*
cos^{-1}(*list1***)** ⇒ *list*

cos^{-1}(*expression1***)** returns the angle whose cosine is *expression1* as an expression.

cos^{-1}(*list1***)** returns a list of the inverse cosines of each element of *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

```
cos⁻¹(1) ENTER                    0
```

In Gradian angle mode:

```
cos⁻¹(0) ENTER                    100
```

In Radian angle mode:

```
cos⁻¹({0,.2,.5}) ENTER
                    {π/2   1.369...   1.047...}
```

---

cos^{-1}(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix inverse cosine of *squareMatrix1*. This is *not* the same as calculating the inverse cosine of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode and Rectangular complex format mode:

```
cos⁻¹([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} 1.734...+.064...\cdot i & -1.490...+2.105...\cdot i & ... \\ -.725...+1.515...\cdot i & .623...+.778...\cdot i & ... \\ -2.083...+2.632...\cdot i & 1.790...-1.271...\cdot i & ... \end{bmatrix}$$

cosh() MATH/Hyperbolic menu

cosh(*expression1***)** ⇒ *expression*
cosh(*list1***)** ⇒ *list*

cosh (*expression1***)** returns the hyperbolic cosine of the argument as an expression.

cosh (*list1***)** returns a list of the hyperbolic cosines of each element of *list1*.

```
cosh(1.2) ENTER                   1.810...
cosh({0,1.2}) ENTER               {1   1.810...}
```

---

cosh(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix hyperbolic cosine of *squareMatrix1*. This is *not* the same as calculating the hyperbolic cosine of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode:

```
cosh([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} 421.255 & 253.909 & 216.905 \\ 327.635 & 255.301 & 202.958 \\ 226.297 & 216.623 & 167.628 \end{bmatrix}$$

cosh^{-1}() MATH/Hyperbolic menu

cosh^{-1}(*expression1***)** ⇒ *expression*
cosh^{-1}(*list1***)** ⇒ *list*

cosh^{-1}(*expression1***)** returns the inverse hyperbolic cosine of the argument as an expression.

cosh^{-1}(*list1***)** returns a list of the inverse hyperbolic cosines of each element of *list1*.

```
cosh⁻¹(1) ENTER                   0
cosh⁻¹({1,2.1,3}) ENTER
                    {0   1.372...   cosh⁻¹(3)}
```

---

cosh^{-1}(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix inverse hyperbolic cosine of *squareMatrix1*. This is *not* the same as calculating the inverse hyperbolic cosine of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode and Rectangular complex format mode:

```
cosh⁻¹([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} 2.525...+1.734...\cdot i & -.009...-1.490...\cdot i & ... \\ .486...-.725...\cdot i & 1.662...+.623...\cdot i & ... \\ -.322...-2.083...\cdot i & 1.267...+1.790...\cdot i & ... \end{bmatrix}$$

Downloaded from www.Manualslib.com manuals search engine

cot() MATH/Trig menu

cot(*expression1***)** ⇒ *expression*
cot(*list1***)** ⇒ *list*

Returns the cotangent of *expression1* or returns a list of the cotangents of all elements in *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

`cot(45)` ENTER → 1

In Gradian angle mode:

`cot(50)` ENTER → 1

In Radian angle mode:

`cot({1,2.1,3})` ENTER → $\left\{\frac{1}{\tan(1)}\ -.584\ldots\ \frac{1}{\tan(3)}\right\}$

cot^{-1}() MATH/Trig menu

cot^{-1}(*expression1***)** ⇒ *expression*
cot^{-1}(*list1***)** ⇒ *list*

Returns the angle whose cotangent is *expression1* or returns a list containing the inverse cotangents of each element of *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

`cot^-1(1)` ENTER → 45

In Gradian angle mode:

`cot^-1(1)` ENTER → 50

In Radian angle mode:

`cot^-1(1)` ENTER → $\frac{\pi}{4}$

coth() MATH/Hyperbolic menu

coth(*expression1***)** ⇒ *expression*
cot(*list1***)** ⇒ *list*

Returns the hyperbolic cotangent of *expression1* or returns a list of the hyperbolic cotangents of all elements of *list1*.

`coth(1.2)` ENTER → 1.199…

`coth({1,3.2})` ENTER → $\left\{\frac{1}{\tanh(1)}\ 1.003\ldots\right\}$

coth^{-1}() MATH/Hyperbolic menu

coth^{-1}(*expression1***)** ⇒ *expression*
coth^{-1}(*list1***)** ⇒ *list*

Returns the inverse hyperbolic cotangent of *expression1* or returns a list containing the inverse hyperbolic cotangents of each element of *list1*.

`coth^-1(3.5)` ENTER → .293…

`coth^-1({-2,2.1,6})` ENTER → $\left\{\frac{-\ln(3)}{2}\ .518\ldots\ \frac{\ln(7/5)}{2}\right\}$

crossP() MATH/Matrix/Vector ops menu

crossP(*list1***, *list2***)** ⇒ *list*

Returns the cross product of *list1* and *list2* as a list.

list1 and *list2* must have equal dimension, and the dimension must be either 2 or 3.

`crossP({a1,b1},{a2,b2})` ENTER → {0 0 a1•b2−a2•b1}

`crossP({0.1,2.2,-5},{1,-.5,0})` ENTER → {-2.5 -5. -2.25}

---

crossP(*vector1***, *vector2***)** ⇒ *vector*

Returns a row or column vector (depending on the arguments) that is the cross product of *vector1* and *vector2*.

Both *vector1* and *vector2* must be row vectors, or both must be column vectors. Both vectors must have equal dimension, and the dimension must be either 2 or 3.

`crossP([1,2,3],[4,5,6])` ENTER → [-3 6 -3]

`crossP([1,2],[3,4])` ENTER → [0 0 -2]

Downloaded from www.Manualslib.com manuals search engine

csc() MATH/Trig menu

csc(*expression1***)** ⇒ *expression*
csc(*list1***)** ⇒ *list*

Returns the cosecant of *expression1* or returns a list containing the cosecants of all elements in *list1*.

In Degree angle mode:

csc(45) ENTER $\sqrt{2}$

In Gradian angle mode:

csc(50) ENTER $\sqrt{2}$

In Radian angle mode:

csc({1,π/2,π/3}) ENTER

$\{\frac{1}{\sin(1)}\ 1\ \frac{2\cdot\sqrt{3}}{3}\}$

csc⁻¹() MATH/Trig menu

csc⁻¹(*expression1***)** ⇒ *expression*
csc⁻¹(*list1***)** ⇒ *list*

Returns the angle whose cosecant is *expression1* or returns a list containing the inverse cosecants of each element of *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

csc⁻¹(1) ENTER 90

In Gradian angle mode:

csc⁻¹(1) ENTER 100

In Radian angle mode:

csc⁻¹({1,4,6}) ENTER

$\{\frac{\pi}{2}\ \sin^{-1}(1/4)\ \sin^{-1}(1/6)\}$

csch() MATH/Hyperbolic menu

csch(*expression1***)** ⇒ *expression*
csch(*list1***)** ⇒ *list*

Returns the hyperbolic cosecant of *expression1* or returns a list of the hyperbolic cosecants of all elements of *list1*.

csch(3) ENTER $\frac{1}{\sinh(3)}$

csch({1,2.1,4}) ENTER

$\{\frac{1}{\sinh(1)}\ .248\ldots\ \frac{1}{\sinh(4)}\}$

csch⁻¹() MATH/Hyperbolic menu

csch⁻¹(*expression1***)** ⇒ *expression*
csch⁻¹(*list1***)** ⇒ *list*

Returns the inverse hyperbolic cosecant of *expression1* or returns a list containing the inverse hyperbolic cosecants of each element of *list1*.

csch⁻¹(1) ENTER $\sinh^{-1}(1)$

csch⁻¹({1,2.1,3}) ENTER

{sinh⁻¹(1) .459… sinh⁻¹(1/3)}


cSolve() MATH/Algebra/Complex menu

cSolve(*equation***,** *var***)** ⇒ *Boolean expression*

Returns candidate complex solutions of an equation for *var*. The goal is to produce candidates for all real and non-real solutions. Even if *equation* is real, **cSolve()** allows non-real results in real mode.

Although the TI-89 Titanium/Voyage™ 200 processes all undefined variables that do not end with an underscore (_) as if they were real, **cSolve()** can solve polynomial equations for complex solutions.

cSolve(x^3=-1,x) ENTER
solve(x^3=-1,x) ENTER

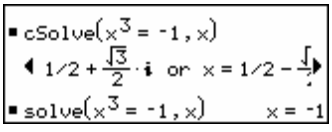

Downloaded from www.Manualslib.com manuals search engine

cSolve() temporarily sets the domain to complex during the solution even if the current domain is real. In the complex domain, fractional powers having odd denominators use the principal rather than the real branch. Consequently, solutions from **solve()** to equations involving such fractional powers are not necessarily a subset of those from **cSolve()**.

```
cSolve(x^(1/3)=-1,x) ENTER        false
solve(x^(1/3)=-1,x) ENTER         x=-1
```

cSolve() starts with exact symbolic methods. Except in EXACT mode, **cSolve()** also uses iterative approximate complex polynomial factoring, if necessary.


```
Display Digits mode in Fix 2:
exact(cSolve(x^5+4x^4+5x
^3-6x-3=0,x)) ENTER
```

Note: See also **cZeros()**, **solve()**, and **zeros()**.

```
cSolve(ans(1),x) ENTER
```

Note: If *equation* is non-polynomial with functions such as **abs()**, **angle()**, **conj()**, **real()**, or **imag()**, you should place an underscore (◆ [_]) at the end of *var*. By default, a variable is treated as a real value.
If you use *var_*, the variable is treated as complex.

You should also use *var_* for any other variables in *equation* that might have unreal values. Otherwise, you may receive unexpected results.

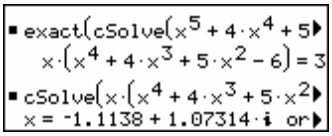


```
z is treated as real:
cSolve(conj(z)=1+i,z) ENTER
                                  z=1+i
z_ is treated as complex:
cSolve(conj(z_)=1+i,z_) ENTER
                                  z_=1-i
```

---

cSolve(*equation1* **and** *equation2* [**and** *…*]**,**
{*varOrGuess1***,** *varOrGuess2* [**,** *…*]**})**
⇒ *Boolean expression*

Returns candidate complex solutions to the simultaneous algebraic equations, where each *varOrGuess* specifies a variable that you want to solve for.

Optionally, you can specify an initial guess for a variable. Each *varOrGuess* must have the form:

variable
– or –
variable = *real or non-real number*

For example, x is valid and so is x=3+*i*.

If all of the equations are polynomials and if you do NOT specify any initial guesses, **cSolve()** uses the lexical Gröbner/Buchberger elimination method to attempt to determine **all** complex solutions.

Note: The following examples use an underscore (◆ [_]) so that the variables will be treated as complex.

Complex solutions can include both real and non-real solutions, as in the example to the right.

```
cSolve(u_*v_-u_=v_ and
v_^2=-u_,{u_,v_}) ENTER
```

$$u\_=1/2+\frac{\sqrt{3}}{2}\cdot i \text{ and } v\_=1/2-\frac{\sqrt{3}}{2}\cdot i$$
$$\text{or } u\_=1/2-\frac{\sqrt{3}}{2}\cdot i \text{ and } v\_=1/2+\frac{\sqrt{3}}{2}\cdot i$$
$$\text{or } u\_=0 \text{ and } v\_=0$$

Downloaded from www.Manualslib.com manuals search engine

Simultaneous *polynomial* equations can have extra variables that have no values, but represent given numeric values that could be substituted later.

```
cSolve(u_*v_-u_=c_*v_ and
v_^2=-u_,{u_,v_}) ENTER
```

$$u\_=\frac{-(\sqrt{1-4\cdot c\_}+1)^2}{4} \text{ and } v\_=\frac{\sqrt{1-4\cdot c\_}+1}{2}$$

or

$$u\_= \text{ and } v\_=\frac{-(\sqrt{1-4\cdot c\_}-1)}{2}$$

or u_=0 and v_=0

You can also include solution variables that do not appear in the equations. These solutions show how families of solutions might contain arbitrary constants of the form @*k*, where *k* is an integer suffix from 1 through 255. The suffix resets to 1 when you use **ClrHome** or F1 8:Clear Home.

```
cSolve(u_*v_-u_=v_ and
v_^2=-u_,{u_,v_,w_}) ENTER
```

$$u\_=1/2+\frac{\sqrt{3}}{2}\cdot i \text{ and } v\_=1/2-\frac{\sqrt{3}}{2}\cdot i$$

and w_=@1

or

$$u\_=1/2-\frac{\sqrt{3}}{2}\cdot i \text{ and } v\_=1/2+\frac{\sqrt{3}}{2}\cdot i$$

and w_=@1

or u_=0 and v_=0 and w_=@1

For polynomial systems, computation time or memory exhaustion may depend strongly on the order in which you list solution variables. If your initial choice exhausts memory or your patience, try rearranging the variables in the equations and/or *varOrGuess* list.

If you do not include any guesses and if any equation is non-polynomial in any variable but all equations are linear in all solution variables, **cSolve()** uses Gaussian elimination to attempt to determine all solutions.

```
cSolve(u_+v_=e^(w_) and u_-v_=i,
{u_,v_}) ENTER
```

$$u\_=\frac{e^{w\_}}{2}+1/2\cdot i \text{ and } v\_=\frac{e^{w\_}-i}{2}$$

If a system is neither polynomial in all of its variables nor linear in its solution variables, **cSolve()** determines at most one solution using an approximate iterative method. To do so, the number of solution variables must equal the number of equations, and all other variables in the equations must simplify to numbers.

```
cSolve(e^(z_)=w_ and w_=z_^2,
{w_,z_}) ENTER
```

w_=.494… and z_=-.703…

A non-real guess is often necessary to determine a non-real solution. For convergence, a guess might have to be rather close to a solution.

```
cSolve(e^(z_)=w_ and w_=z_^2,
{w_,z_=1+i}) ENTER
```

w_=.149… + 4.891…·*i* and
z_=1.588… + 1.540…·*i*

Downloaded from www.Manualslib.com manuals search engine

CubicReg MATH/Statistics/Regressions menu

CubicReg *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]

Calculates the cubic polynomial regression and updates all the statistics variables.


All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.


Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99 .

In function graphing mode.

```
{0,1,2,3}→L1 ENTER                {0 1 2 3}
{0,2,3,4}→L2 ENTER                {0 2 3 4}
CubicReg L1,L2 ENTER                   Done
ShowStat ENTER
```

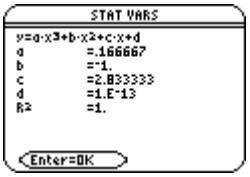


```
ENTER
regeq(x)→y1(x) ENTER                   Done
NewPlot 1,1,L1,L2 ENTER                Done
◆[GRAPH]
```

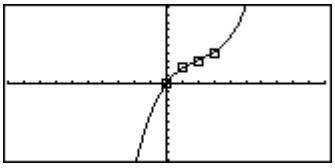

Downloaded from www.Manualslib.com manuals search engine

cumSum() MATH/List menu

cumSum(*list1***)** ⇒ *list*

Returns a list of the cumulative sums of the elements in *list1*, starting at element 1.

```
cumSum({1,2,3,4}) ENTER
                {1 3 6 10}
```

---

cumSum(*matrix1***)** ⇒ *matrix*

Returns a matrix of the cumulative sums of the elements in *matrix1*. Each element is the cumulative sum of the column from top to bottom.

```
[1,2;3,4;5,6]→m1 ENTER
```

$$\begin{bmatrix} 1 & 2 \\ 3 & 4 \\ 5 & 6 \end{bmatrix}$$

```
cumSum(m1) ENTER
```

$$\begin{bmatrix} 1 & 2 \\ 4 & 6 \\ 9 & 12 \end{bmatrix}$$

CustmOff CATALOG

CustmOff

Removes a custom toolbar.

CustmOn and **CustmOff** enable a program to control a custom toolbar. Manually, you can press 2nd [CUSTOM] to toggle a custom toolbar on and off. Also, a custom toolbar is removed automatically when you change applications.

See **Custom** program listing example.

CustmOn CATALOG

CustmOn

Activates a custom toolbar that has already been set up in a **Custom...EndCustm** block.

CustmOn and **CustmOff** enable a program to control a custom toolbar. Manually, you can press 2nd [CUSTOM] to toggle a custom toolbar on and off.

See **Custom** program listing example.

Custom 2nd [CUSTOM] key

Custom
block
EndCustm

Sets up a toolbar that is activated when you press 2nd [CUSTOM]. It is very similar to the **ToolBar** instruction except that Title and Item statements cannot have labels.

block can be either a single statement or a series of statements separated with the ":" character.

Note: 2nd [CUSTOM] acts as a toggle. The first instance invokes the menu, and the second instance removes the menu. The menu is removed also when you change applications.

Program listing:

```
:Test()
:Prgm
:Custom
:Title                    "Lists"
:Item                     "List1"
:Item                   "Scores"
:Item                       "L3"
:Title                "Fractions"
:Item                     "f(x)"
:Item                     "h(x)"
:Title                    "Graph"
:EndCustm
:EndPrgm
```


Downloaded from www.Manualslib.com manuals search engine

Cycle CATALOG

Cycle

Transfers program control immediately to the next iteration of the current loop (**For**, **While**, or **Loop**).

Cycle is not allowed outside the three looping structures (**For**, **While**, or **Loop**).

Program listing:

```
:© Sum the integers from 1 to
                    100 skipping 50.
:0→temp
:For i,1,100,1
:If i=50
:Cycle
:temp+i→temp
:EndFor
:Disp temp
```

Contents of **temp** after execution: **5000**

CyclePic CATALOG

CyclePic *picNameString*, *n* [, [*wait*] , [*cycles*], [*direction*]]

Displays all the PIC variables specified and at the specified interval. The user has optional control over the time between pictures, the number of times to cycle through the pictures, and the direction to go, circular or forward and backwards.

direction is 1 for circular or −1 for forward and backwards. Default = 1.

1. Save three pics named **pic1**, **pic2**, and **pic3**.
2. Enter: **CyclePic** "**pic**",3,.5,4,−1
3. The three pictures (3) will be displayed automatically—one-half second (.5) between pictures, for four cycles (4), and forward and backwards (−1).

▶Cylind MATH/Matrix/Vector ops menu

vector▶**Cylind**

Displays the row or column vector in cylindrical form [r∠θ, z].

vector must have exactly three elements. It can be either a row or a column.

```
[2,2,3] ▶Cylind ENTER
                    [2•√2 ∠π/4  3]
```

cZeros( ) MATH/Algebra/Complex menu

cZeros(*expression***,** *var***)** ⇒ *list*

Returns a list of candidate real and non-real values of *var* that make *expression*=0. **cZeros( )** does this by computing **exp▶list(cSolve(***expression***=0,***var***),***var***)**. Otherwise, **cZeros( )** is similar to **zeros( )**.

Note: See also **cSolve( )**, **solve( )**, and **zeros( )**.

Note: If *expression* is non-polynomial with functions such as **abs( )**, **angle( )**, **conj( )**, **real( )**, or **imag( )**, you should place an underscore (▪ [_]) at the end of *var*. By default, a variable is treated as a real value. If you use *var_*, the variable is treated as complex.

You should also use *var_* for any other variables in *expression* that might have unreal values. Otherwise, you may receive unexpected results.

Display Digits mode in **Fix 3**:

```
cZeros(x^5+4x^4+5x^3−6x−3,x) ENTER
                {−2.125  −.612  .965
                  −1.114−1.073•i
                  −1.114+1.073•i}
```

z is treated as real:

```
cZeros(conj(z)−1−i,z) ENTER
                              {1+i}
```

z_ is treated as complex:

```
cZeros(conj(z_)−1−i,z_) ENTER
                              {1−i}
```

---

cZeros({*expression1***,** *expression2* [**,** …]**},**
{*varOrGuess1***,***varOrGuess2* [**,** …]**})** ⇒ *matrix*

Returns candidate positions where the expressions are zero simultaneously. Each *varOrGuess* specifies an unknown whose value you seek.

Downloaded from www.Manualslib.com manuals search engine

Optionally, you can specify an initial guess for a variable. Each *varOrGuess* must have the form:

variable
– or –
variable = real or non-real number

For example, x is valid and so is x=3+*i*.

If all of the expressions are polynomials and you do NOT specify any initial guesses, **cZeros()** uses the lexical Gröbner/Buchberger elimination method to attempt to determine **all** complex zeros.

Complex zeros can include both real and non-real zeros, as in the example to the right.

Each row of the resulting matrix represents an alternate zero, with the components ordered the same as the *varOrGuess* list. To extract a row, index the matrix by [*row*].

Note: The following examples use an underscore _ ([◆] [_]) so that the variables will be treated as complex.

```
cZeros({u_*v_-u_-v_,v_^2+u_},
{u_,v_}) ENTER
```

$$\begin{bmatrix} 1/2-\frac{\sqrt{3}}{2}\cdot i & 1/2+\frac{\sqrt{3}}{2}\cdot i \\ 1/2+\frac{\sqrt{3}}{2}\cdot i & 1/2-\frac{\sqrt{3}}{2}\cdot i \\ 0 & 0 \end{bmatrix}$$

Extract row 2:

```
ans(1)[2] ENTER
```

$$\begin{bmatrix} 1/2+\frac{\sqrt{3}}{2}\cdot i & 1/2-\frac{\sqrt{3}}{2}\cdot i \end{bmatrix}$$

Simultaneous *polynomials* can have extra variables that have no values, but represent given numeric values that could be substituted later.

```
cZeros({u_*v_-u_-(c_*v_),
v_^2+u_},{u_,v_}) ENTER
```

$$\begin{bmatrix} \frac{-(\sqrt{1-4\cdot c_}+1)^2}{4} & \frac{\sqrt{1-4\cdot c_}+1}{2} \\ \frac{-(\sqrt{1-4\cdot c_}-1)^2}{4} & \frac{-(\sqrt{1-4\cdot c_}-1)}{2} \\ 0 & 0 \end{bmatrix}$$

You can also include unknown variables that do not appear in the expressions. These zeros show how families of zeros might contain arbitrary constants of the form @*k*, where *k* is an integer suffix from 1 through 255. The suffix resets to 1 when you use **ClrHome** or [F1] 8:Clear Home.

For polynomial systems, computation time or memory exhaustion may depend strongly on the order in which you list unknowns. If your initial choice exhausts memory or your patience, try rearranging the variables in the expressions and/or *varOrGuess* list.

```
cZeros({u_*v_-u_-v_,v_^2+u_},
{u_,v_,w_}) ENTER
```

$$\begin{bmatrix} 1/2-\frac{\sqrt{3}}{2}\cdot i & 1/2+\frac{\sqrt{3}}{2}\cdot i & @1 \\ 1/2+\frac{\sqrt{3}}{2}\cdot i & 1/2-\frac{\sqrt{3}}{2}\cdot i & @1 \\ 0 & 0 & @1 \end{bmatrix}$$

If you do not include any guesses and if any expression is non-polynomial in any variable but all expressions are linear in all unknowns, **cZeros()** uses Gaussian elimination to attempt to determine all zeros.

```
cZeros({u_+v_-e^(w_),u_-v_-i},
{u_,v_}) ENTER
```

$$\begin{bmatrix} \frac{e^{w_}}{2}+1/2\cdot i & \frac{e^{w_}-i}{2} \end{bmatrix}$$

If a system is neither polynomial in all of its variables nor linear in its unknowns, **cZeros()** determines at most one zero using an approximate iterative method. To do so, the number of unknowns must equal the number of expressions, and all other variables in the expressions must simplify to numbers.

```
cZeros({e^(z_)-w_,w_-z_^2}, {w_,z_})
ENTER
```

$$\begin{bmatrix} .494\ldots & -.703\ldots \end{bmatrix}$$

Downloaded from www.Manualslib.com manuals search engine

A non-real guess is often necessary to determine a non-real zero. For convergence, a guess might have to be rather close to a zero.

```
cZeros({e^(z_)-w_,w_-z_^2},
{w_,z_=1+i}) ENTER
```

$$[.149\ldots+4.89\ldots\cdot i \quad 1.588\ldots+1.540\ldots\cdot i]$$

d() 2nd [*d*] key or MATH/Calculus menu

d*(expression1*, *var* [, *order*]) ⇒ *expression***
d*(list1*, *var* [, *order*]) ⇒ *list***
d*(matrix1*, *var* [, *order*]) ⇒ *matrix***

Returns the first derivative of *expression1* with respect to variable *var*. *expression1* can be a list or a matrix.

order, if included, must be an integer. If the order is less than zero, the result will be an anti-derivative.

***d*()** does not follow the normal evaluation mechanism of fully simplifying its arguments and then applying the function definition to these fully simplified arguments. Instead, ***d*()** performs the following steps:

1. Simplify the second argument only to the extent that it does not lead to a non-variable.
2. Simplify the first argument only to the extent that it does recall any stored value for the variable determined by step 1.
3. Determine the symbolic derivative of the result of step 2 with respect to the variable from step 1.
4. If the variable from step 1 has a stored value or a value specified by a "with" (|) operator, substitute that value into the result from step 3.

```
d(f(x)*g(x),x) ENTER
```

$$\frac{d}{dx}(f(x))\cdot g(x) + \frac{d}{dx}(g(x))\cdot f(x)$$

```
d(d(x^2*y^3,x),y) ENTER
```

$$6\cdot y^2\cdot x$$

```
d(x^2,x,-1) ENTER
```

$$\frac{x^3}{3}$$

```
d({x^2,x^3,x^4},x) ENTER
```

$$\{2\cdot x \quad 3\cdot x^2 \quad 4\cdot x^3\}$$

data▸mat CATALOG/MATH/List menu

data▸mat *data,mat*[,*row1*] [,*col1*] [,*row2*] [,*col2*]

Converts data to a matrix.

Each argument *[,row1][,col1][,row2] [,col2]* can be individually omitted. If *row1* is omitted the default is 1. If *col1* is omitted the default is 1. If *row2* is omitted, the default is "max row." If *col2* is omitted, the default is "max column."

The DATA structure allows empty cells. Rows do not have to be equal size. When data is saved as a matrix, empty cells will be populated with "undef."

```
data▸mat d1,m1,1, , ,1 ENTER
Done
```

dayOfWk() CATALOG

dayOfWk(*year,month,day***) ⇒ *integer***

Returns an integer from 1 to 7, with each integer representing a day of the week. Use **dayOfWk()** to determine on which day of the week a particular date would occur.
Note: May not give accurate results for years

```
dayOfWk(1948,9,6)
2
Integer values:
1 = Sunday
2 = Monday
```


Downloaded from www.Manualslib.com manuals search engine

prior to 1583 (pre-Gregorian calendar).

Enter the year as a four-digit integer. The month and day can be either one- or two-digit integers.

```
3 = Tuesday
4 = Wednesday
5 = Thursday
6 = Friday
7 = Saturday
```

▸DD MATH/Angle menu

number▸**DD** ⇒ *value*
list1▸**DD** ⇒ *list*
matrix1▸**DD** ⇒ *matrix*

Returns the decimal equivalent of the argument expressed in degrees. The argument is a number, list, or matrix that is interpreted by the Mode setting in gradians, radians or degrees.

In Degree angle mode:

```
1.5°▸DD ENTER                                  1.5°
45° 22'14.3"▸DD ENTER                    45.370...°
{45° 22'14.3" .60° 0'0"}▸DD ENTER
                                    {45.370...  60}°
```

In Gradian angle mode:

```
1▸DD ENTER                                  (9/10)°
```

In Radian angle mode:

```
1.5▸DD ENTER                                  85.9°
```

▸Dec MATH/Base menu

integer1▸**Dec** ⇒ *integer*

Converts *integer1* to a decimal (base 10) number. A binary or hexadecimal entry must always have a 0b or 0h prefix, respectively.

Zero, not the letter O, followed by b or h.
0b *binaryNumber*
0h *hexadecimalNumber*
A binary number can have up to 32 digits. A hexadecimal number can have up to 8.

Without a prefix, *integer1* is treated as decimal. The result is displayed in decimal, regardless of the Base mode.

```
0b10011▸Dec ENTER                              19
0h1F▸Dec ENTER                                 31
```


Downloaded from www.Manualslib.com manuals search engine

Define CATALOG

Define *funcName*(*arg1Name, arg2Name, ...*) =
expression

Creates *funcName* as a user-defined function. You then can use *funcName*(), just as you use built-in functions. The function evaluates *expression* using the supplied arguments and returns the result.

funcName cannot be the name of a system variable or built-in function.

The argument names are placeholders; you should not use those same names as arguments when you use the function.

Note: This form of **Define** is equivalent to executing the expression:
expression→*funcName*(*arg1Name,arg2Name*).
This command also can be used to define simple variables; for example, Define a=3.

```
Define g(x,y)=2x-3y ENTER                    Done
g(1,2) ENTER                                  -4
1→a:2→b:g(a,b) ENTER                          -4

Define h(x)=when(x<2,2x-3, -2x+3)
ENTER                                        Done

h(-3) ENTER                                   -9
h(4) ENTER                                    -5

Define eigenvl(a)=
cZeros(det(identity(dim(a)
[1])-x*a),x) ENTER                           Done

eigenvl([-1,2;4,3]) ENTER
```

$$\left\{\frac{2\cdot\sqrt{3}-1}{11}\quad\frac{-(2\cdot\sqrt{3}+1)}{11}\right\}$$

Define *funcName*(*arg1Name, arg2Name, ...*) = **Func**
block
EndFunc

Is identical to the previous form of **Define**, except that in this form, the user-defined function *funcName*() can execute a block of multiple statements.

block can be either a single statement or a series of statements separated with the ":" character. *block* also can include expressions and instructions (such as **If**, **Then**, **Else**, and **For**). This allows the function *funcName*() to use the **Return** instruction to return a specific result.

Note: It is usually easier to author and edit this form of Function in the program editor rather than on the entry line.

```
Define g(x,y)=Func:If x>y Then
:Return x:Else:Return y:EndIf
:EndFunc ENTER                               Done

g(3,-7) ENTER                                 3
```

Define *progName*(*arg1Name, arg2Name, ...*) = **Prgm**
block
EndPrgm

Creates *progName* as a program or subprogram, but cannot return a result using **Return**. Can execute a block of multiple statements.

block can be either a single statement or a series of statements separated with the ":" character. *block* also can include expressions and instructions (such as **If**, **Then**, **Else**, and **For**) without restrictions.

Note: It is usually easier to author and edit a program block in the Program Editor rather than on the entry line.

```
Define listinpt()=prgm:Local
n,i,str1,num:InputStr "Enter name of
list",str1:Input "No. of
elements",n:For i,1,n,1:Input
"element "&string(i),num:
num→#str1[i]:EndFor:EndPrgm ENTER
                                             Done

listinpt() ENTER     Enter name of list
```

DelFold CATALOG

DelFold *folderName1*[, *folderName2*] [, *folderName3*] ...

Deletes user-defined folders with the names *folderName1, folderName2,* etc. An error message is displayed if the folders contain any variables.

Note: You cannot delete the main folder.

```
NewFold games ENTER                          Done
(creates the folder games)

DelFold games ENTER                          Done
(deletes the folder games)
```


Downloaded from www.Manualslib.com manuals search engine

DelType

DelType *var_type*

Deletes all unlocked variables of the type specified by *var_type*.

Note: Possible values for *var_type* are:

ASM, DATA, EXPR, FUNC, GDB, LIST, MAT, PIC, PRGM, STR, TEXT, AppVar_type_name, All.

```
Deltype "LIST" ENTER                    Done
```

DelVar CATALOG

DelVar *var1*[**,** *var2*] [**,** *var3*] **...**

Deletes the specified variables from memory.

```
2→a ENTER                               2
(a+2)^2 ENTER                           16
DelVar a ENTER                          Done
(a+2)^2 ENTER                           (a + 2)²
```

deSolve() MATH/Calculus menu

deSolve(*1stOr2ndOrderOde***,** *independentVar***,** *dependentVar***)** ⇒ *a general solution*

Returns an equation that explicitly or implicitly specifies a general solution to the 1st- or 2nd-order ordinary differential equation (ODE). In the ODE:

- Use a prime symbol (' , press 2nd [′]) to denote the 1st derivative of the dependent variable with respect to the independent variable.
- Use two prime symbols to denote the corresponding second derivative.

The ' symbol is used for derivatives within **deSolve()** only. In other cases, use ***d*()**.

The general solution of a 1st-order equation contains an arbitrary constant of the form *@k*, where *k* is an integer suffix from 1 through 255. The suffix resets to 1 when you use **ClrHome** or F1 8: Clear Home. The solution of a 2nd-order equation contains two such constants.

Apply **solve()** to an implicit solution if you want to try to convert it to one or more equivalent explicit solutions.

When comparing your results with textbook or manual solutions, be aware that different methods introduce arbitrary constants at different points in the calculation, which may produce different general solutions.

Note: To type a prime symbol ('), press 2nd [′].

```
deSolve(y''+2y'+y=x^2,x,y) ENTER
                    y=(@1•x+@2)•e^(-x)+x²-4•x+6

right(ans(1))→temp ENTER
                    (@1•x+@2)•e^(-x)+x²-4•x+6

d(temp,x,2)+2*d(temp,x)+temp-x^2
ENTER                                   0

DelVar temp ENTER                       Done
```

```
deSolve(y'=(cos(y))^2*x,x,y) ENTER
                                  tan(y)=x²/2+@3

solve(ans(1),y) ENTER
                          y=tan⁻¹((x²+2•@3)/2)+@n1•π

ans(1)|@3=c-1 and @n1=0 ENTER
                          y=tan⁻¹((x²+2•(c-1))/2)
```

---

deSolve(*1stOrderOde* **and** *initialCondition***,**
*independentVar***,** *dependentVar***)**
⇒ *a particular solution*

Returns a particular solution that satisfies *1stOrderOde* and *initialCondition*. This is usually easier than determining a general solution, substituting initial values, solving for the arbitrary constant, and then substituting that value into

```
sin(y)=(y*e^(x)+cos(y))y'→ode ENTER
                    sin(y)=(e^x•y+cos(y))•y'

deSolve(ode and y(0)=0,x,y)→soln
ENTER
                    -(2•sin(y)+y²)/2=-(e^x-1)•e^(-x)•sin(y)
```


Downloaded from www.Manualslib.com manuals search engine

the general solution.

initialCondition is an equation of the form:

dependentVar (*initialIndependentValue*) = *initialDependentValue*

The *initialIndependentValue* and *initialDependentValue* can be variables such as x0 and y0 that have no stored values. Implicit differentiation can help verify implicit solutions.

```
soln|x=0 and y=0 ENTER                    true
d(right(eq)-left(eq),x)/
(d(left(eq)-right(eq),y))
→impdif(eq,x,y) ENTER                     Done
ode|y'=impdif(soln,x,y) ENTER             true
DelVar ode,soln ENTER                     Done
```

deSolve(*2ndOrderOde* **and** *initialCondition1* **and** *initialCondition2*, *independentVar*, *dependentVar***)** ⇒ *a particular solution*

Returns a particular solution that satisfies *2ndOrderOde* and has a specified value of the dependent variable and its first derivative at one point.

For *initialCondition1*, use the form:

dependentVar (*initialIndependentValue*) = *initialDependentValue*

For *initialCondition2*, use the form:

dependentVar′ (*initialIndependentValue*) = *initial1stDerivativeValue*

```
deSolve(y''=y^(-1/2) and y(0)=0 and
y'(0)=0,t,y) ENTER
                                  2·y^(3/4)/3 = t
solve(ans(1),y) ENTER
                  y = 2^(2/3)·(3·t)^(4/3)/4 and t≥0
```

deSolve(*2ndOrderOde* **and** *boundaryCondition1* **and** *boundaryCondition2*, *independentVar*, *dependentVar***)** ⇒ *a particular solution*

Returns a particular solution that satisfies *2ndOrderOde* and has specified values at two different points.

```
deSolve(w''-2w'/x+(9+2/x^2)w=
x*e^(x) and w(π/6)=0 and
w(π/3)=0,x,w) ENTER
                        w = e^(π/3)·x·cos(3·x)/10
                  -e^(π/6)·x·sin(3·x)/10 + x·e^x/10
```

det() MATH/Matrix menu

det(*squareMatrix*[**,** *tol*]**)** ⇒ *expression*

Returns the determinant of *squareMatrix*.

Optionally, any matrix element is treated as zero if its absolute value is less than *tol*. This tolerance is used only if the matrix has floating-point entries and does not contain any symbolic variables that have not been assigned a value. Otherwise, *tol* is ignored.

- If you use ◆ ENTER or set the mode to Exact/Approx=APPROXIMATE, computations are done using floating-point arithmetic.
- If *tol* is omitted or not used, the default tolerance is calculated as:

  5E-14 * **max(dim(***squareMatrix***))** * **rowNorm(***squareMatrix***)**

```
det([a,b;c,d]) ENTER                      a·d-b·c
det([1,2;3,4]) ENTER                      -2
det(identity(3)-x*[1,-2,3;
-2,4,1;-6,-2,7]) ENTER
                        -(98·x^3-55·x^2+12·x-1)
[1E20,1;0,1]→mat1                  [1.E20  1]
                                   [0      1]
det(mat1) ENTER                           0
det(mat1,.1) ENTER                    1.E20
```


Downloaded from www.Manualslib.com manuals search engine

diag() MATH/Matrix menu

diag(*list***)** ⇒ *matrix*
diag(*rowMatrix***)** ⇒ *matrix*
diag(*columnMatrix***)** ⇒ *matrix*

Returns a matrix with the values in the argument list or matrix in its main diagonal.

```
diag({2,4,6}) ENTER
```

$$\begin{bmatrix} 2 & 0 & 0 \\ 0 & 4 & 0 \\ 0 & 0 & 6 \end{bmatrix}$$

---

diag(*squareMatrix***)** ⇒ *rowMatrix*

Returns a row matrix containing the elements from the main diagonal of *squareMatrix*.

squareMatrix must be square.

```
[4,6,8;1,2,3;5,7,9] ENTER
```

$$\begin{bmatrix} 4 & 6 & 8 \\ 1 & 2 & 3 \\ 5 & 7 & 9 \end{bmatrix}$$

```
diag(ans(1)) ENTER
```

```
[4 2 9]
```

Dialog CATALOG

Dialog
block
EndDlog

Generates a dialog box when the program is executed.

block can be either a single statement or a series of statements separated with the ":" character. Valid *block* options in the F3 I/O, 1:Dialog menu item in the Program Editor are 1:Text, 2:Request, 4:DropDown, and 7:Title.

The variables in a dialog box can be given values that will be displayed as the default (or initial) value. If ENTER is pressed, the variables are updated from the dialog box and variable ok is set to 1. If ESC is pressed, its variables are not updated, and system variable ok is set to zero.

Program listing:

```
:Dlogtest()
:Prgm
:Dialog
:Title          "This is a dialog box"
:Request              "Your name",Str1
:Dropdown       "Month you were born",
                seq(string(i),i,1,12),Var1
:EndDlog
:EndPrgm
```



dim() MATH/Matrix/Dimensions menu

dim(*list***)** ⇒ *integer*

Returns the dimension of *list*.

```
dim({0,1,2}) ENTER
```

```
3
```

---

dim(*matrix***)** ⇒ *list*

Returns the dimensions of *matrix* as a two-element list {rows, columns}.

```
dim([1,-1,2;-2,3,5]) ENTER
```

```
{2 3}
```

---

dim(*string***)** ⇒ *integer*

Returns the number of characters contained in character string *string*.

```
dim("Hello") ENTER
```

```
5
```

```
dim("Hello"&" there") ENTER
```

```
11
```


Downloaded from www.Manualslib.com manuals search engine

Disp CATALOG

Disp [*exprOrString1*] [**,** *exprOrString2*] **...**

Displays the current contents of the Program I/O screen. If one or more *exprOrString* is specified, each expression or character string is displayed on a separate line of the Program I/O screen.

An expression can include conversion operations such as ▶**DD** and ▶**Rect**. You can also use the ▶ operator to perform unit and number base conversions.

If Pretty Print = ON, expressions are displayed in pretty print.

From the Program I/O screen, you can press F5 to display the Home screen, or a program can use **DispHome**.

```
Disp "Hello" ENTER                    Hello
Disp cos(2.3) ENTER                   -.666…
{1,2,3,4}→L1 ENTER
Disp L1 ENTER                    {1  2  3  4}
Disp 180_min▶_hr ENTER              3.•_hr
```

Note: To type an underscore (_), press ◆ [_]

To type ▶, press 2nd [▶].

DispG CATALOG


DispG

Displays the current contents of the Graph screen.

In function graphing mode:

Program segment:

```
  ⋮
:5*cos(x)→y1(x)
:-10→xmin
:10→xmax
:-5→ymin
:5→ymax
:DispG
  ⋮
```

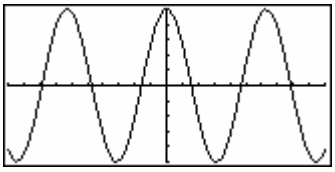

DispHome CATALOG

DispHome

Displays the current contents of the Home screen.

Program segment:

```
   ⋮
:Disp "The result is: ",xx
:Pause "Press Enter to quit"
:DispHome
:EndPrgm
```


DispTbl CATALOG

DispTbl

Displays the current contents of the Table screen.

Note: The cursor pad is active for scrolling. Press ESC or ENTER to resume execution if in a program.

```
5*cos(x)→y1(x) ENTER
DispTbl ENTER
```

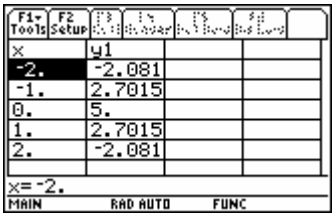

Downloaded from www.Manualslib.com manuals search engine

▸DMS MATH/Angle menu

expression **▸DMS**
list **▸DMS**
matrix **▸DMS**

Interprets the argument as an angle and displays the equivalent DMS (*DDDDDD°MM′SS.ss″*) number. See °, ', " on page 910 for DMS (degree, minutes, seconds) format.

Note: **▸DMS** will convert from radians to degrees when used in radian mode. If the input is followed by a degree symbol (°), no conversion will occur. You can use **▸DMS** only at the end of an entry line.

In Degree angle mode:

45.371 ▸DMS ENTER → 45° 22'15.6"

{45.371,60} ▸DMS ENTER → {45° 22'15.6" 60° }

dotP() MATH/Matrix/Vector ops menu

dotP(*list1***,** *list2***)** ⇒ *expression*

Returns the "dot" product of two lists.

dotP({a,b,c},{d,e,f}) ENTER → a•d+b•e+c•f

dotP({1,2},{5,6}) ENTER → 17

---

dotP(*vector1***,** *vector2***)** ⇒ *expression*

Returns the "dot" product of two vectors.

Both must be row vectors, or both must be column vectors.

dotP([a,b,c],[d,e,f]) ENTER → a•d+b•e+c•f

dotP([1,2,3],[4,5,6]) ENTER → 32

DrawFunc CATALOG


DrawFunc *expression*

Draws *expression* as a function, using x as the independent variable.

Note: Regraphing erases all drawn items.

In function graphing mode and **ZoomStd** window:

DrawFunc 1.25x∗cos(x) ENTER

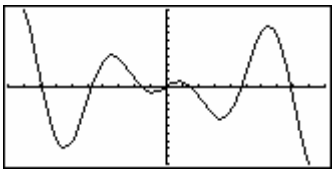

DrawInv CATALOG

DrawInv *expression*


Draws the inverse of *expression* by plotting x values on the y axis and y values on the x axis.

x is the independent variable.

Note: Regraphing erases all drawn items.

In function graphing mode and **ZoomStd** window:

DrawInv 1.25x∗cos(x) ENTER

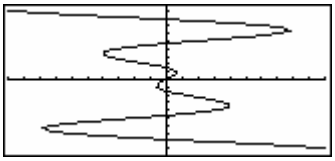

Downloaded from www.Manualslib.com manuals search engine

DrawParm CATALOG

DrawParm *expression1*, *expression2* [, *tmin*] [, *tmax*] [, *tstep*]


Draws the parametric equations *expression1* and *expression2*, using t as the independent variable.

Defaults for *tmin*, *tmax*, and *tstep* are the current settings for the Window variables tmin, tmax, and tstep. Specifying values does not alter the window settings. If the current graphing mode is not parametric, these three arguments are required.

Note: Regraphing erases all drawn items.

In function graphing mode and ZoomStd window:

```
DrawParm t*cos(t),t*sin(t),0,10,.1
```
ENTER

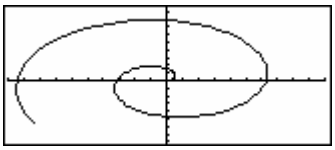

DrawPol CATALOG

DrawPol *expression*[, θ*min*] [, θ*max*] [, θ*step*]


Draws the polar graph of *expression*, using θ as the independent variable.

Defaults for θ*min*, θ*max*, and θ*step* are the current settings for the Window variables θmin, θmax, and θstep. Specifying values does not alter the window settings. If the current graphing mode is not polar, these three arguments are required.

Note: Regraphing erases all drawn items.

In function graphing mode and ZoomStd window:

```
DrawPol 5*cos(3*θ),0,3.5,.1
```
ENTER

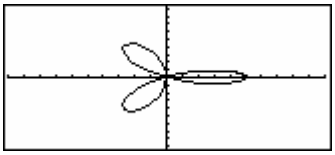

DrawSlp CATALOG


DrawSlp *x1*, *y1*, *slope*

Displays the graph and draws a line using the formula y−y1=slope·(x−x1).

Note: Regraphing erases all drawn items.

In function graphing mode and ZoomStd window:

```
DrawSlp 2,3,-2
```
ENTER

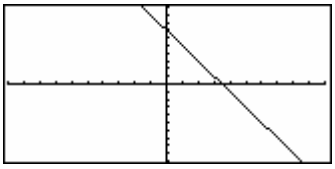

DropDown CATALOG

DropDown *titleString*, **{***item1String*, *item2String*, **...},** *varName*

Displays a drop-down menu with the name *titleString* and containing the items **1:** *item1String*, **2:** *item2String*, and so forth. **DropDown** must be within a **Dialog...EndDlog** block.

If *varName* already exists and has a value within the range of items, the referenced item is displayed as the default selection. Otherwise, the menu's first item is the default selection.

When you select an item from the menu, the corresponding number of the item is stored in the variable *varName*. (If necessary, **DropDown** creates *varName*.)

See **Dialog** program listing example.

Downloaded from www.Manualslib.com manuals search engine

DrwCtour CATALOG

DrwCtour *expression*
DrwCtour *list*


Draws contours on the current 3D graph at the z values specified by *expression* or *list*. The 3D graphing mode must already be set. **DrwCtour** automatically sets the graph format style to CONTOUR LEVELS.

By default, the graph automatically contains the number of equally spaced contours specified by the ncontour Window variable. **DrwCtour** draws contours in addition to the defaults.

To turn off the default contours, set ncontour to zero, either by using the Window screen or by storing 0 to the ncontour system variable.

In 3D graphing mode:

```
(1/5)x^2+(1/5)y^2–10→z1(x,y) ENTER
                                Done
-10→xmin:10→xmax ENTER          10
-10→ymin:10→ymax ENTER          10
-10→zmin:10→zmax ENTER          10
0→ncontour ENTER                 0
DrwCtour {-9,-4.5,-3,0,4.5,9} ENTER
```

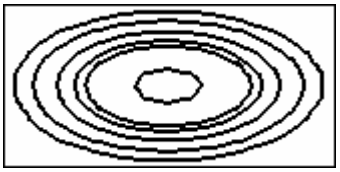

Use the cursor to change the viewing angle. Press 0 (zero) to return to the original view.

To toggle between different graph format styles, press ◆ |

Press X, Y, or Z to look down the corresponding axis.

E — EE key

*mantissa***E***exponent*

Enters a number in scientific notation. The number is interpreted as *mantissa* × 10*exponent*.

Hint: If you want to enter a power of 10 without causing a decimal value result, use 10^*integer*.

```
2.3E 4 ENTER                    23000.
2.3E 9+4.1E 15 ENTER            4.1E 15
3* 10^4 ENTER                   30000
```

e^() — ◆ [e^x] key

e*^(expression1***)** ⇒ *expression*

Returns *e* raised to the *expression1* power.

Note: On the TI-89 Titanium, pressing ◆ [e^x] to display e^(is different from pressing alpha [E]. On the Voyage 200, pressing 2nd[e^x] to display e^ is different from accessing the character e from the QWERTY keyboard.

You can enter a complex number in $re^{i\theta}$ polar form. However, use this form in Radian angle mode only; it causes a Domain error in Degree or Gradian angle mode.

```
e^(1) ENTER                     e
e^(1.) ENTER                    2.718...
e^(3)^2 ENTER                   e^9
```

---

e*^(list1***)** ⇒ *list*

Returns *e* raised to the power of each element in *list1*.

```
e^({1,1.,0,.5}) ENTER
          {e  2.718...  1  1.648...}
```

---

e*^(squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix exponential of *squareMatrix1*. This is *not* the same as calculating *e* raised to the power of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

```
e^([1,5,3;4,2,1;6,-2,1]) ENTER
[782.209  559.617  456.509]
[680.546  488.795  396.521]
[524.929  371.222  307.879]
```


Downloaded from www.Manualslib.com manuals search engine

eigVc() MATH/Matrix menu

eigVc(*squareMatrix***)** ⇒ *matrix*

Returns a matrix containing the eigenvectors for a real or complex *squareMatrix*, where each column in the result corresponds to an eigenvalue. Note that an eigenvector is not unique; it may be scaled by any constant factor. The eigenvectors are normalized, meaning that if $V = [x_1, x_2, \ldots, x_n]$, then:

$$\sqrt{x_1^2 + x_2^2 + \ldots + x_n^2} = 1$$

squareMatrix is first balanced with similarity transformations until the row and column norms are as close to the same value as possible. The *squareMatrix* is then reduced to upper Hessenberg form and the eigenvectors are computed via a Schur factorization.

In Rectangular complex format mode:

```
[-1,2,5;3,-6,9;2,-5,7]→m1 ENTER
```

$$\begin{bmatrix} -1 & 2 & 5 \\ 3 & -6 & 9 \\ 2 & -5 & 7 \end{bmatrix}$$

```
eigVc(m1) ENTER
```

$$\begin{bmatrix} -.800\ldots & .767\ldots & .767\ldots \\ .484\ldots & .573\ldots+.052\ldots\cdot i & .573\ldots-.052\ldots\cdot i \\ .352\ldots & .262\ldots+.096\ldots\cdot i & .262\ldots-.096\ldots\cdot i \end{bmatrix}$$

eigVl() MATH/Matrix menu

eigVl(*squareMatrix***)** ⇒ *list*

Returns a list of the eigenvalues of a real or complex *squareMatrix*.

squareMatrix is first balanced with similarity transformations until the row and column norms are as close to the same value as possible. The *squareMatrix* is then reduced to upper Hessenberg form and the eigenvalues are computed from the upper Hessenberg matrix.

In Rectangular complex format mode:

```
[-1,2,5;3,-6,9;2,-5,7]→m1 ENTER
```

$$\begin{bmatrix} -1 & 2 & 5 \\ 3 & -6 & 9 \\ 2 & -5 & 7 \end{bmatrix}$$

```
eigVl(m1) ENTER
```

{-4.409… 2.204…+.763…·***i*** 2.204…−.763…·***i***}

Else

See **If**, page 830.

ElseIf

CATALOG See also **If**, page 830.

If *Boolean expression1* **Then**
  block1
ElseIf *Boolean expression2* **Then**
  block2
  ⋮
ElseIf *Boolean expressionN* **Then**
  blockN
EndIf
  ⋮

ElseIf can be used as a program instruction for program branching.

Program segment:

```
   ⋮
:If choice=1 Then
:  Goto option1
:  ElseIf choice=2 Then
:  Goto option2
:  ElseIf choice=3 Then
:  Goto option3
:  ElseIf choice=4 Then
:  Disp "Exiting Program"
:  Return
:EndIf
   ⋮
```

EndCustm

See **Custom**, page 802.

EndDlog

See **Dialog**, page 810.

EndFor

See **For**, page 822.

EndFunc

See **Func**, page 823.

EndIf

See **If**, page 830.

Downloaded from www.Manualslib.com manuals search engine

EndLoop

See **Loop**, page 840.

EndPrgm

See **Prgm**, page 855.

EndTBar

See **ToolBar**, page 891.

EndTry

See **Try**, page 891.

EndWhile

See **While**, page 894.

entry()

CATALOG

entry() ⇒ *expression*
entry(*integer***)** ⇒ *expression*

Returns a previous entry-line entry from the Home screen history area.

integer, if included, specifies which entry expression in the history area. The default is 1, the most recently evaluated entry. Valid range is from 1 to 99 and cannot be an expression.

Note: If the last entry is still highlighted on the Home screen, pressing ENTER is equivalent to executing **entry(1)**.

On the Home screen:

1+1/x ENTER → $\frac{1}{x} + 1$

1+1/entry(1) ENTER → $2 - \frac{1}{x+1}$

ENTER → $\frac{1}{2 \cdot (2 \cdot x+1)} + 3/2$

ENTER → $5/3 - \frac{1}{3 \cdot (3 \cdot x+2)}$

entry(4) ENTER → $\frac{1}{x} + 1$

exact()

MATH/Number menu

exact(*expression1* **[,** *tol***])** ⇒ *expression*
exact(*list1* **[,** *tol***])** ⇒ *list*
exact(*matrix1* **[,** *tol***])** ⇒ *matrix*

Uses Exact mode arithmetic regardless of the Exact/Approx mode setting to return, when possible, the rational-number equivalent of the argument.

tol specifies the tolerance for the conversion; the default is 0 (zero).

exact(.25) ENTER → 1/4

exact(.333333) ENTER → $\frac{333333}{1000000}$

exact(.33333,.001) → 1/3

exact(3.5x+y) ENTER → $\frac{7 \cdot x}{2} + y$

exact({.2,.33,4.125}) ENTER →

{1/5 $\frac{33}{100}$ 33/8}

Downloaded from www.Manualslib.com manuals search engine

Exec CATALOG

Exec *string* [**,** *expression1*] [**,** *expression2*] **...**

Executes a *string* consisting of a series of Motorola 68000 op-codes. These codes act as a form of an assembly-language program. If needed, the optional *expressions* let you pass one or more arguments to the program.

For more information, check the TI Web site: **http://www.ti.com/calc**

Warning: Exec gives you access to the full power of the microprocessor. Please be aware that you can easily make a mistake that locks up the calculator and causes you to lose your data. We suggest you make a backup of the calculator contents before attempting to use the **Exec** command.

Exit CATALOG

Exit

Exits the current **For**, **While**, or **Loop** block.

Exit is not allowed outside the three looping structures (**For**, **While**, or **Loop**).

Program listing:

```
:0→temp
:For i,1,100,1
:  temp+i→temp
:  If temp>20
:  Exit
:EndFor
:Disp temp
```

Contents of **temp** after execution: **21**

exp▸list() CATALOG

exp▸list(*expression***,** *var***)** ⇒ *list*

Examines *expression* for equations that are separated by the word "or," and returns a list containing the right-hand sides of the equations of the form *var=expression*. This gives you an easy way to extract some solution values embedded in the results of the **solve()**, **cSolve()**, **fMin()**, and **fMax()** functions.

Note: exp▸list() is not necessary with the **zeros** and **cZeros()** functions because they return a list of solution values directly.

```
solve(x^2-x-2=0,x) ENTER        x=2 or x=-1

exp▸list(solve(x^2-x-2=0,x),x) ENTER
                                {-1  2}
```

expand() MATH/Algebra menu


expand(*expression1* [**,** *var*]**)** ⇒ *expression*
expand(*list1* [**,** *var*]**)** ⇒ *list*
expand(*matrix1* [**,** *var*]**)** ⇒ *matrix*

expand(*expression1***)** returns *expression1* expanded with respect to all its variables. The expansion is polynomial expansion for polynomials and partial fraction expansion for rational expressions.

The goal of **expand()** is to transform *expression1* into a sum and/or difference of simple terms. In contrast, the goal of **factor()** is to transform *expression1* into a product and/or quotient of simple factors.

```
expand((x+y+1)^2) ENTER
                  x² + 2·x·y + 2·x + y² + 2·y + 1

expand((x^2-x+y^2-y)/(x^2*y^2-x^2*
y-x*y^2+x*y)) ENTER
```

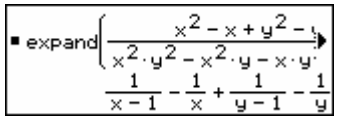


Downloaded from www.Manualslib.com manuals search engine

expand(*expression1,var***)** returns *expression* expanded with respect to *var*. Similar powers of *var* are collected. The terms and their factors are sorted with *var* as the main variable. There might be some incidental factoring or expansion of the collected coefficients. Compared to omitting *var*, this often saves time, memory, and screen space, while making the expression more comprehensible.


```
expand((x+y+1)^2,y) ENTER
                    y² + 2• y• (x + 1) + (x + 1)²

expand((x+y+1)^2,x) ENTER
                    x² + 2• x• (y + 1) + (y + 1)²

expand((x^2- x+y^2- y)/(x^2* y^2- x^2*
y- x* y^2+x* y),y) ENTER
```

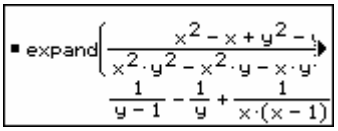


```
expand(ans(1),x) ENTER
```



Even when there is only one variable, using *var* might make the denominator factorization used for partial fraction expansion more complete.

Hint: For rational expressions, **propFrac()** is a faster but less extreme alternative to **expand()**.

Note: See also **comDenom()** for an expanded numerator over an expanded denominator.

```
expand((x^3+x^2- 2)/(x^2- 2)) ENTER

                                  2• x
                                 ------ + x+1
                                 x² - 2

expand(ans(1),x) ENTER
                                  1          1
                              ---------- + ---------- +  x+1
                              x- √(2)      x+√(2)
```

expand(*expression1*,[*var*]**)** also distributes logarithms and fractional powers regardless of *var*. For increased distribution of logarithms and fractional powers, inequality constraints might be necessary to guarantee that some factors are nonnegative.

expand(*expression1,* [*var*]**)** also distributes absolute values, **sign()**, and exponentials, regardless of *var*.

Note: See also **tExpand()** for trigonometric angle-sum and multiple-angle expansion.

```
ln(2x* y)+√(2x* y) ENTER
                    ln(2• x• y) + √(2• x• y)

expand(ans(1)) ENTER
                    ln(x• y) + √2• √(x• y) + ln(2)

expand(ans(1))|y>=0 ENTER
                ln(x) + √2• √x• √y + ln(y) + ln(2)

sign(x* y)+abs(x* y)+ e^(2x+y) ENTER
                    e^(2• x+y) + sign(x• y) + |x• y|

expand(ans(1)) ENTER
sign(x)•sign(y) + |x|•|y|+ (e^x)²• e^y
```

expr() MATH/String menu

expr(*string***)** ⇒ *expression*

Returns the character string contained in *string* as an expression and immediately executes it.

```
expr("1+2+x^2+x") ENTER          x² + x + 3

expr("expand((1+x)^2)") ENTER
                                 x² + 2• x + 1

"Define cube(x)=x^3"→ funcstr ENTER
                    "Define cube(x)=x^3"

expr(funcstr) ENTER                  Done

cube(2) ENTER                          8
```


Downloaded from www.Manualslib.com manuals search engine

ExpReg MATH/Statistics/Regressions menu

ExpReg *list1, list2* [, [*list3*] [, *list4, list5*]]

Calculates the exponential regression and updates all the system statistics variables.


All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.


Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99 .

In function graphing mode:

```
{1,2,3,4,5,6,7,8}→L1 ENTER
                              {1 2 ...}
{1,2,2,2,3,4,5,7}→L2 ENTER
                              {1 2 ...}
ExpReg L1,L2 ENTER                Done
ShowStat ENTER
```

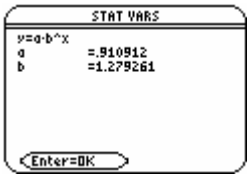


```
ENTER
Regeq(x)→y1(x) ENTER              Done
NewPlot 1,1,L1,L2 ENTER           Done
◆[GRAPH]
```

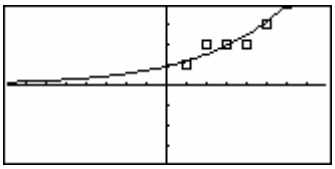

factor() MATH/Algebra menu

factor(*expression1***[, *var*])** ⇒ *expression*
factor(*list1***[, *var*])** ⇒ *list*
factor(*matrix1***[, *var*])** ⇒ *matrix*

factor(*expression1***)** returns *expression1* factored with respect to all of its variables over a common denominator.

expression1 is factored as much as possible toward linear rational factors without introducing new non-real subexpressions. This alternative is appropriate if you want factorization with respect to more than one variable.

```
factor(a^3*x^2-a*x^2-a^3+a) ENTER
                    a•(a−1)•(a+1)•(x−1)•(x+1)
factor(x^2+1) ENTER                    x²+1
factor(x^2-4) ENTER                (x−2)•(x+2)
factor(x^2-3) ENTER                    x²−3
factor(x^2-a) ENTER                    x²−a
```

---

factor(*expression1***,***var***)** returns *expression1* factored with respect to variable *var*.

expression1 is factored as much as possible toward real factors that are linear in *var*, even if it introduces irrational constants or subexpressions that are irrational in other variables.

The factors and their terms are sorted with *var* as the main variable. Similar powers of *var* are collected in each factor. Include *var* if factorization is needed with respect to only that variable and you are willing to accept irrational expressions in any other variables to increase factorization with respect to *var*. There might be some incidental factoring with respect to other variables.

```
factor(a^3*x^2-a*x^2-a^3+a,x) ENTER
                    a•(a²−1)•(x−1)•(x+1)
factor(x^2-3,x) ENTER
                          (x+√(3))•(x−√(3))
factor(x^2-a,x) ENTER
                          (x+√(a))•(x−√(a))
```


Downloaded from www.Manualslib.com manuals search engine

For the AUTO setting of the Exact/Approx mode, including *var* permits approximation with floating-point coefficients where irrational coefficients cannot be explicitly expressed concisely in terms of the built-in functions. Even when there is only one variable, including *var* might yield more complete factorization.

Note: See also **comDenom()** for a fast way to achieve partial factoring when **factor()** is not fast enough or if it exhausts memory.

Note: See also **cFactor()** for factoring all the way to complex coefficients in pursuit of linear factors.

```
factor(x^5+4x^4+5x^3-6x-3) ENTER
                    x^5 + 4•x^4 + 5•x^3 - 6•x - 3
factor(ans(1),x) ENTER
                    (x-.964...)•(x+.611...)•
                    (x+2.125...)•(x^2+2.227...•
                    x+2.392...)
```

---

factor(*rationalNumber***)** returns the rational number factored into primes. For composite numbers, the computing time grows exponentially with the number of digits in the second-largest factor. For example, factoring a 30-digit integer could take more than a day, and factoring a 100-digit number could take more than a century.

Note: To stop (break) a computation, press ON.

If you merely want to determine if a number is prime, use **isPrime()** instead. It is much faster, particularly if *rationalNumber* is not prime and if the second-largest factor has more than five digits.

```
factor(152417172689) ENTER
                    123457•1234577
isPrime(152417172689) ENTER    false
```

Fill — MATH/Matrix menu

Fill *expression, matrixVar* ⇒ *matrix*

Replaces each element in variable *matrixVar* with *expression*.

matrixVar must already exist.

```
[1,2;3,4]→amatrx ENTER      [1 2]
                            [3 4]
Fill 1.01,amatrx ENTER          Done
amatrx ENTER                [1.01 1.01]
                            [1.01 1.01]
```

Fill *expression, listVar* ⇒ *list*

Replaces each element in variable *listVar* with *expression*.

listVar must already exist.

```
{1,2,3,4,5}→alist ENTER
                    {1 2 3 4 5}
Fill 1.01,alist ENTER           Done
alist ENTER
            {1.01 1.01 1.01 1.01 1.01}
```

floor() — MATH/Number menu

floor(*expression***)** ⇒ *integer*

Returns the greatest integer that is ≤ the argument. This function is identical to **int()**.

The argument can be a real or a complex number.

```
floor(-2.14) ENTER              -3.
```

---

floor(*list1***)** ⇒ *list*
floor(*matrix1***)** ⇒ *matrix*

Returns a list or matrix of the floor of each element.

Note: See also **ceiling()** and **int()**.

```
floor({3/2,0,-5.3}) ENTER
                    {1 0 -6.}
floor([1.2,3.4;2.5,4.8]) ENTER
                    [1. 3.]
                    [2. 4.]
```


Downloaded from www.Manualslib.com manuals search engine

fMax() MATH/Calculus menu

fMax(*expression, var***)** ⇒ *Boolean expression*

Returns a Boolean expression specifying candidate values of *var* that maximize *expression* or locate its least upper bound.

Use the "|" operator to restrict the solution interval and/or specify the sign of other undefined variables.

For the APPROX setting of the Exact/Approx mode, **fMax()** iteratively searches for one approximate local maximum. This is often faster, particularly if you use the "|" operator to constrain the search to a relatively small interval that contains exactly one local maximum.

Note: See also **fMin()** and **max()**.

```
fMax(1-(x-a)^2-(x-b)^2,x) ENTER
                                   x = (a+b)/2
fMax(.5x^3-x-2,x) ENTER                x = ∞
fMax(.5x^3-x-2,x)|x≤1 ENTER
                                   x = -.816...
fMax(a*x^2,x) ENTER
        x = ∞ or x = -∞ or x = 0 or a = 0
fMax(a*x^2,x)|a<0 ENTER                x = 0
```

fMin() MATH/Calculus menu

fMin(*expression, var***)** ⇒ *Boolean expression*

Returns a Boolean expression specifying candidate values of *var* that minimize *expression* or locate its greatest lower bound.

Use the "|" operator to restrict the solution interval and/or specify the sign of other undefined variables.

For the APPROX setting of the Exact/Approx mode, **fMin()** iteratively searches for one approximate local minimum. This is often faster, particularly if you use the "|" operator to constrain the search to a relatively small interval that contains exactly one local minimum.

Note: See also **fMax()** and **min()**.

```
fMin(1-(x-a)^2-(x-b)^2,x) ENTER
                          x = ∞ or x = -∞
fMin(.5x^3-x-2,x)|x≥1 ENTER            x = 1
fMin(a*x^2,x) ENTER
        x = ∞ or x = -∞ or x = 0 or a = 0
fMin(a*x^2,x)|a>0 and x>1 ENTER
                                       x = 1.
fMin(a*x^2,x)|a>0 ENTER                x = 0
```

FnOff CATALOG

FnOff

Deselects all Y= functions for the current graphing mode.

In split-screen, two-graph mode, **FnOff** only applies to the active graph.

FnOff [1] [, 2] ... [,99]

Deselects the specified Y= functions for the current graphing mode.

In function graphing mode:

FnOff 1,3 ENTER deselects **y1(x)** and **y3(x)**.

In parametric graphing mode:

FnOff 1,3 ENTER deselects **xt1(t)**, **yt1(t)**, **xt3(t)**, and **yt3(t)**.

Downloaded from www.Manualslib.com manuals search engine

FnOn CATALOG

FnOn

Selects all Y= functions that are defined for the current graphing mode.

In split-screen, two-graph mode, **FnOn** only applies to the active graph.

FnOn [1] [, 2] ... [,99]

Selects the specified Y= functions for the current graphing mode.

Note: In 3D graphing mode, only one function at a time can be selected. FnOn 2 selects z2(x,y) and deselects any previously selected function. In the other graph modes, previously selected functions are not affected.

For CATALOG

For *var*, *low*, *high* [, *step*]
block
EndFor

Executes the statements in *block* iteratively for each value of *var*, from *low* to *high*, in increments of *step*.

var must not be a system variable.

step can be positive or negative. The default value is 1.

block can be either a single statement or a series of statements separated with the ":" character.

Program segment:

```
   ⋮
:0→tempsum : 1→step
:For i,1,100,step
:  tempsum+i→tempsum
:EndFor
:Disp tempsum
   ⋮
```

```
Contents of tempsum after
execution:                          5050

Contents of tempsum when step
is changed to 2:                    2500
```

format() MATH/String menu

format(*expression*[, *formatString*]**)** ⇒ *string*

Returns *expression* as a character string based on the format template.

expression must simplify to a number. *formatString* is a string and must be in the form: "F[*n*]", "S[*n*]", "E[*n*]", "G[*n*][*c*]", where [ ] indicate optional portions.

F[*n*]: Fixed format. *n* is the number of digits to display after the decimal point.

S[*n*]: Scientific format. *n* is the number of digits to display after the decimal point.

E[*n*]: Engineering format. *n* is the number of digits after the first significant digit. The exponent is adjusted to a multiple of three, and the decimal point is moved to the right by zero, one, or two digits.

```
format(1.234567,"f3") ENTER
                              "1.235"

format(1.234567,"s2") ENTER
                           "1.23E0"

format(1.234567,"e3") ENTER
                         "1.235E0"

format(1.234567,"g3") ENTER
                              "1.235"

format(1234.567,"g3") ENTER
                          "1,234.567"

format(1.234567,"g3,r:") ENTER
                              "1:235"
```


Downloaded from www.Manualslib.com manuals search engine

G[*n*][*c*]: Same as fixed format but also separates digits to the left of the radix into groups of three. *c* specifies the group separator character and defaults to a comma. If *c* is a period, the radix will be shown as a comma.

[R*c*]: Any of the above specifiers may be suffixed with the R*c* radix flag, where *c* is a single character that specifies what to substitute for the radix point.

fPart() MATH/Number menu

fPart(*expression1***)** ⇒ *expression*
fPart(*list1***)** ⇒ *list*
fPart(*matrix1***)** ⇒ *matrix*

Returns the fractional part of the argument.

For a list or matrix, returns the fractional parts of the elements.

The argument can be a real or a complex number.

```
fPart(-1.234) ENTER                    -.234
fPart({1, -2.3, 7.003}) ENTER
                              {0  -.3  .003}
```

Func CATALOG

Func
block
EndFunc


Required as the first statement in a multi-statement function definition.

block can be either a single statement or a series of statements separated with the ":" character.

Note: when() also can be used to define and graph piecewise-defined functions.

In function graphing mode, define a piecewise function:

```
Define g(x)=Func:If x<0 Then
:Return 3*cos(x):Else:Return
3-x:EndIf:EndFunc ENTER                Done
Graph g(x) ENTER
```

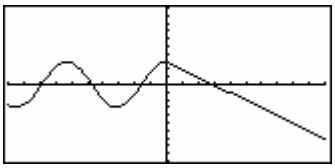

gcd() MATH/Number menu

gcd(*number1, number2***)** ⇒ *expression*

Returns the greatest common divisor of the two arguments. The **gcd** of two fractions is the **gcd** of their numerators divided by the **lcm** of their denominators.

In Auto or Approximate mode, the **gcd** of fractional floating-point numbers is 1.0.

```
gcd(18,33) ENTER                           3
```

---

gcd(*list1, list2***)** ⇒ *list*

Returns the greatest common divisors of the corresponding elements in *list1* and *list2*.

```
gcd({12,14,16},{9,7,5}) ENTER
                                   {3 7 1}
```

---

gcd(*matrix1, matrix2***)** ⇒ *matrix*

Returns the greatest common divisors of the corresponding elements in *matrix1* and *matrix2*.

```
gcd([2,4;6,8],[4,8;12,16]) ENTER
                                  [2  4]
                                  [6  8]
```


Downloaded from www.Manualslib.com manuals search engine

Get CATALOG

Get *var*

Retrieves a CBL 2™ (Calculator-Based Laboratory™) or CBR™ (Calculator-Based Ranger™) value from the link port and stores it in variable *var*.

Program segment:

```
   ⋮
:Send {3,1,-1,0}
:For i,1,99
:  Get data[i]
:  PtOn i,data[i]
:EndFor
   ⋮
```

GetCalc CATALOG

GetCalc *var*

Retrieves a value from the link port and stores it in variable *var*. This is for unit-to-unit linking.

Note: To get a variable to the link port from another unit, use 2nd [VAR-LINK] on the other unit to select and send a variable, or do a **SendCalc** on the other unit.

Program segment:

```
   ⋮
:Disp "Press Enter when ready"
:Pause
:GetCalc L1
:Disp "List L1 received"
   ⋮
```

GetCalc *var[,port]*

Retrieves a value from the link port and stores it in variable *var* on the receiving TI-89 Titanium.

If the port is not specified, or *port = 0* is specified, the TI-89 Titanium waits for data from either port.

If *port = 1*, the TI-89 Titanium waits for data from the USB port.

If *port = 2*, the TI-89 Titanium waits for data from the I/O port.

getConfg() CATALOG

getConfg() ⇒ *ListPairs*

Returns a list of calculator attributes. The attribute name is listed first, followed by its value.

```
getConfg() ENTER
              {"Product Name" "Advanced
                  Mathematics Software"
            "Version" "2.00, 09/25/1999"
                "Product ID" "03-1-4-68"
              "ID #" "01012 34567 ABCD"
                       "Cert. Rev. #" 0
                    "Screen Width" 160
                   "Screen Height" 100
                    "Window Width" 160
                   "Window Height" 67
                     "RAM Size" 262132
                     "Free RAM" 197178
                 "Archive Size" 655360
               "Free Archive" 655340}
```

Note: Your screen may display different attribute values. The **Cert. Rev. #** attribute appears only if you have purchased and installed additional software into the calculator.

getDate() CATALOG

getDate() ⇒ *list*

Returns a list giving the date according to the current value of the clock. The list is in {*year,month,day*} format.

```
getDate() ENTER          {2002  2  22}
```


Downloaded from www.Manualslib.com manuals search engine

getDenom() MATH/Algebra/Extract menu

getDenom(*expression1***)** ⇒ *expression*

Transforms *expression1* into one having a reduced common denominator, and then returns its denominator.

```
getDenom((x+2)/(y-3)) ENTER        y - 3
getDenom(2/7) ENTER                    7
getDenom(1/x+(y^2+y)/y^2) ENTER
                                     x • y
```

getDtFmt() CATALOG

getDtFmt() ⇒ *integer*

Returns an integer representing the date format that is currently set on the device.

Integer values:

```
1 = MM/DD/YY
2 = DD/MM/YY
3 = MM.DD.YY
4 = DD.MM.YY
5 = YY.MM.DD
6 = MM-DD-YY
7 = DD-MM-YY
8 = YY-MM-DD
```

getDtStr() CATALOG

getDtStr([*integer*]**)** ⇒ *string*

Returns a string of the current date in the current date format. For example, a returned string of *28/09/02* represents the 28th day of September, 2002 (when the date format is set to DD/MM/YY).

If you enter the optional integer that corresponds to a date format, the string returns the current date in the specified format.

Optional integer values:

```
1 = MM/DD/YY
2 = DD/MM/YY
3 = MM.DD.YY
4 = DD.MM.YY
5 = YY.MM.DD
6 = MM-DD-YY
7 = DD-MM-YY
8 = YY-MM-DD
```

getFold() CATALOG

getFold() ⇒ *nameString*

Returns the name of the current folder as a string.

```
getFold() ENTER                    "main"
getFold()→oldfoldr ENTER           "main"
oldfoldr ENTER                     "main"
```

getKey() CATALOG

getKey() ⇒ *integer*

Returns the key code of the key pressed. Returns 0 if no key is pressed.

The prefix keys (shift ⇧, second function 2nd, option ◆, alpha alpha, and drag ☜) are not recognized by themselves; however, they modify the keycodes of the key that follows them. For example: ◆ X ≠ X ≠ 2nd X.

For a listing of key codes, see Appendix B.

Program listing:

```
:Disp
:Loop
:  getKey()→key
:  while key=0
:    getKey()→key
:  EndWhile
:  Disp key
:  If key = ord("a")
:  Stop
:EndLoop
```


Downloaded from www.Manualslib.com manuals search engine

getMode() CATALOG

getMode(*modeNameString***)** ⇒ *string*
getMode("ALL") ⇒ *ListStringPairs*

If the argument is a specific mode name, returns a string containing the current setting for that mode.

If the argument is **"ALL"**, returns a list of string pairs containing the settings of all the modes. If you want to restore the mode settings later, you must store the **getMode("ALL")** result in a variable, and then use **setMode()** to restore the modes.

For a listing of mode names and possible settings, see **setMode()**.

Note: To set or return information about the Unit System mode, use **setUnits()** or **getUnits()** instead of **setMode()** or **getMode()**.

```
getMode("angle") ENTER          "RADIAN"

getMode("graph") ENTER        "FUNCTION"

getMode("all") ENTER
                    {"Graph" "FUNCTION"
              "Display Digits" "FLOAT 6"
                     "Angle" "RADIAN"
          "Exponential Format" "NORMAL"
                "Complex Format" "REAL"
          "Vector Format" "RECTANGULAR"
                  "Pretty Print" "ON"
                "Split Screen" "FULL"
                 "Split 1 App" "Home"
                "Split 2 App" "Graph"
              "Number of Graphs" "1"
                 "Graph 2" "FUNCTION"
       "Split Screen Ratio"  "1.1"
              "Exact/Approx" "AUTO"
                      "Base" "DEC"}
```

Note: Your screen may display different mode settings.

getNum() MATH/Algebra/Extract menu

getNum(*expression1***)** ⇒ *expression*

Transforms *expression1* into one having a reduced common denominator, and then returns its numerator.

```
getNum((x+2)/(y-3)) ENTER          x + 2

getNum(2/7) ENTER                      2

getNum(1/x+1/y) ENTER              x + y
```

getTime() CATALOG

getTime() ⇒ *list*

Returns a list giving the time according to the current value of the clock. The list is in {*hour,minute,second*} format. The time is returned in the 24 hour format.

getTmFmt() CATALOG

getTmFmt() ⇒ *integer*

Returns an integer representing the clock time format that is currently set on the device.

Integer values:

```
12 = 12 hour clock

24 = 24 hour clock
```

getTmStr() CATALOG

getTmStr([*integer*]**)** ⇒ *string*

Returns a string of the current clock time in the current time format.

If you enter the optional integer that corresponds to a clock time format, the string returns the current time in the specified format.

Optional integer values:

```
12 = 12 hour clock

24 = 24 hour clock
```


Downloaded from www.Manualslib.com manuals search engine

getTmZn() CATALOG

getTmZn() ⇒ *integer*

Returns an integer representing the time zone that is currently set on the device.

The returned integer represents the number of minutes the time zone is offset from Greenwich Mean Time (GMT), as established in Greenwich, England. For example, if the time zone is offset from GMT by two hours, the device would return 120 (minutes).

Integers for time zones west of GMT are negative.

Integers for time zones east of GMT are positive.

If Greenwich Mean Time is 14:07:07, it is:

8:07:07 a.m. in Denver, Colorado (Mountain Daylight Time)
(–360 minutes from GMT)

16:07:07 p.m. in Brussels, Belgium (Central European Standard Time)
(+120 minutes from GMT)

getType() CATALOG

getType(*var***)** ⇒ *string*

Returns a string indicating the data type of variable *var*.

If *var* has not been defined, returns the string "NONE".

```
{1,2,3}→temp ENTER                {1 2 3}
getType(temp) ENTER               "LIST"

2+3i→temp ENTER                   2+3i
getType(temp) ENTER               "EXPR"

DelVar temp ENTER                 Done
getType(temp) ENTER               "NONE"
```

Data Type	Variable Contents
"ASM"	Assembly-language program
"DATA"	Data type
"EXPR"	Expression (includes complex/arbitrary/undefined, ∞, ⁻∞, TRUE, FALSE, pi, *e*)
"FUNC"	Function
"GDB"	Graph data base
"LIST"	List
"MAT"	Matrix
"NONE"	Variable does not exist
"NUM"	Real number
"OTHER"	Miscellaneous data type for future use by software applications
"PIC"	Picture
"PRGM"	Program
"STR"	String
"TEXT"	Text type
"VAR"	Name of another variable

Downloaded from www.Manualslib.com manuals search engine

getUnits() CATALOG

getUnits() ⇒ *list*

Returns a list of strings that contain the current default units for all categories except constants, temperature, amount of substance, luminous intensity, and acceleration. *list* has the form:

{"*system*" "*cat1*" "*unit1*" "*cat2*" "*unit2*" …}

The first string gives the system (SI, ENG/US, or CUSTOM). Subsequent pairs of strings give a category (such as Length) and its default unit (such as _m for meters).

To set the default units, use **setUnits()**.

```
getUnits() ENTER
                {"SI"  "Area"  "NONE"
                  "Capacitance"  "_F"
                    "Charge"  "_coul"
                                … }
```

Note: Your screen may display different default units.

Goto CATALOG

Goto *labelName*

Transfers program control to the label *labelName*.

labelName must be defined in the same program using a **Lbl** instruction.

Program segment:

```
   ⋮
:0→temp
:1→i
:Lbl TOP
:  temp+i→temp
:  If i<10 Then
:   i+1→i
:   Goto TOP
:  EndIf
:Disp temp
   ⋮
```

▸Grad CATALOG/MATH/Angle menu

▸Grad *expression*

Converts an expression to gradian angle measure.

In Degree angle mode:

```
1.5 ▸Grad ENTER                  1.66667ᴳ
```

In Radian angle mode:

```
1.5 ▸Grad ENTER                  95.493ᴳ
```


Downloaded from www.Manualslib.com manuals search engine

Graph CATALOG

Graph *expression1*[, *expression2*] [, *var1*] [, *var2*]

The Smart Graph feature graphs the requested expressions/ functions using the current graphing mode.

Expressions entered using the **Graph** or **Table** commands are assigned increasing function numbers starting with 1. They can be modified or individually deleted using the edit functions available when the table is displayed by pressing F4 Header. The currently selected Y= functions are ignored.

If you omit an optional *var* argument, **Graph** uses the independent variable of the current graphing mode.

Note: Not all optional arguments are valid in all modes because you can never have all four arguments at the same time.


Some valid variations of this instruction are:

Function graphing	**Graph** *expr*, *x*
Parametric graphing	**Graph** *xExpr*, *yExpr*, *t*
Polar graphing	**Graph** *expr*, θ
Sequence graphing	Not allowed.
3D graphing	**Graph** *expr*, *x*, *y*
Diff Equations graphing	Not allowed.

Note: Use **ClrGraph** to clear these functions, or go to the Y= Editor to re-enable the system Y= functions.


In function graphing mode and ZoomStd window:

```
Graph 1.25a*cos(a),a ENTER
```

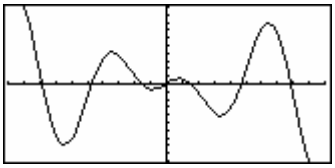


In parametric graphing mode and ZoomStd window:

```
Graph time,2cos(time)/time,time ENTER
```

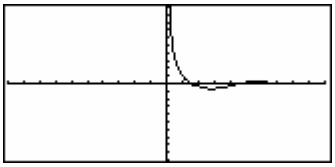

In 3D graphing mode:

```
Graph (v^2 – w^2)/4,v,w ENTER
```

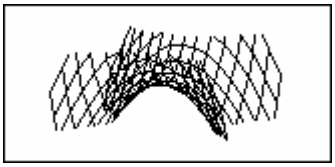

▶Hex MATH/Base menu

integer1 **▶Hex** ⇒ *integer*

Converts *integer1* to a hexadecimal number. Binary or hexadecimal numbers always have a 0b or 0h prefix, respectively.

Zero, not the letter O, followed by b or h.

0b *binaryNumber*
0h *hexadecimalNumber*

A binary number can have up to 32 digits. A hexadecimal number can have up to 8.

Without a prefix, *integer1* is treated as decimal (base 10). The result is displayed in hexadecimal, regardless of the Base mode.

If you enter a decimal integer that is too large for a signed, 32-bit binary form, a symmetric modulo operation is used to bring the value into the appropriate range.

```
256 ▶Hex ENTER                    0h100
0b111100001111 ▶Hex ENTER         0hF0F
```


Downloaded from www.Manualslib.com manuals search engine

identity() MATH/Matrix menu

identity(*expression***)** ⇒ *matrix*

Returns the identity matrix with a dimension of *expression*.

expression must evaluate to a positive integer.

```
identity(4) ENTER
```

$$\begin{bmatrix} 1 & 0 & 0 & 0 \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$

If CATALOG

If *Boolean expression*
statement

If *Boolean expression* **Then**
block
EndIf

If *Boolean expression* evaluates to true, executes the single statement *statement* or the block of statements *block* before continuing execution.

If *Boolean expression* evaluates to false, continues execution without executing the statement or block of statements.

block can be either a single statement or a sequence of statements separated with the ":" character.

Program segment:

```
   ⋮
:If x<0
:Disp "x is negative"
   ⋮
```
–or–
```
   ⋮
:If x<0 Then
:  Disp "x is negative"
:  abs(x)→x
:EndIf
   ⋮
```

If *Boolean expression* **Then**
block1
Else
block2
EndIf

If *Boolean expression* evaluates to true, executes *block1* and then skips *block2*.

If *Boolean expression* evaluates to false, skips *block1* but executes *block2*.

block1 and *block2* can be a single statement.

Program segment:

```
   ⋮
:If x<0 Then
:  Disp "x is negative"
:    Else
:  Disp "x is positive or zero"
:EndIf
   ⋮
```

If *Boolean expression1* **Then**
block1
ElseIf *Boolean expression2* **Then**
block2
⋮
ElseIf *Boolean expressionN* **Then**
blockN
EndIf

Allows for program branching. If *Boolean expression1* evaluates to true, executes *block1*. If *Boolean expression1* evaluates to false, evaluates *Boolean expression2*, etc.

Program segment:

```
   ⋮
:If choice=1 Then
:  Goto option1
:  ElseIf choice=2 Then
:    Goto option2
:  ElseIf choice=3 Then
:    Goto option3
:  ElseIf choice=4 Then
:    Disp "Exiting Program"
:    Return
:EndIf
   ⋮
```

imag() MATH/Complex menu

imag(*expression1***)** ⇒ *expression*

imag(*expression1***)** returns the imaginary part of the argument.

Note: All undefined variables are treated as real variables. See also **real()**.

```
imag(1+2i) ENTER                2
imag(z) ENTER                   0
imag(x+iy) ENTER                y
```

---

imag(*list1***)** ⇒ *list*

Returns a list of the imaginary parts of the elements.

```
imag({-3,4-i,i}) ENTER          {0 -1 1}
```


Downloaded from www.Manualslib.com manuals search engine

imag(*matrix1***)** ⇒ *matrix*

Returns a matrix of the imaginary parts of the elements.

```
imag([a,b;ic,id]) ENTER
```

$$\begin{bmatrix} 0 & 0 \\ c & d \end{bmatrix}$$

ImpDif() MATH/Calculus Menu, CATALOG

ImpDif(*equation, independentVar, dependentVar[,order]***)** ⇒ *expression*

where the order defaults to 1.

Computes the implicit derivative for equations in which one variable is defined implicitly in terms of another.

```
impDif(x^2+y^2=100,x,y)ENTER
                                -x/y
```

Indirection See **#()**, page 908.

Input CATALOG

Input

Pauses the program, displays the current Graph screen, and lets you update variables *xc* and *yc* (also *rc* and θ*c* for polar coordinate mode) by positioning the graph cursor.

When you press ENTER, the program resumes.

Program segment:

```
   ⋮
:◉Get 10 points from the Graph
                                Screen
:For i,1,10
:  Input
:  xc→XLIST[i]
:  yc→YLIST[i]
:EndFor
   ⋮
```

Input [*promptString*,] *var*

Input [*promptString*], *var* pauses the program, displays *promptString* on the Program I/O screen, waits for you to enter an expression, and stores the expression in variable *var*.

If you omit *promptString*, "?" is displayed as a prompt.

Program segment:

```
   ⋮
:For i,1,9,1
:  "Enter x" & string(i)→str1
:  Input str1,#(right(str1,2))
:EndFor
   ⋮
```

InputStr CATALOG

InputStr [*promptString*,] *var*

Pauses the program, displays *promptString* on the Program I/O screen, waits for you to enter a response, and stores your response as a string in variable *var*.

If you omit *promptString*, "?" is displayed as a prompt.

Note: The difference between **Input** and **InputStr** is that **InputStr** always stores the result as a string so that " " are not required.

Program segment:

```
   ⋮
:InputStr "Enter Your Name",str1
   ⋮
```


Downloaded from www.Manualslib.com manuals search engine

inString() MATH/String menu

inString(*srcString***, *subString*[, *start*]) ⇒ *integer***

Returns the character position in string *srcString* at which the first occurrence of string *subString* begins.

start, if included, specifies the character position within *srcString* where the search begins. Default = 1 (the first character of *srcString*).

If *srcString* does not contain *subString* or *start* is > the length of *srcString*, returns zero.

```
inString("Hello there","the")
ENTER                                   7

"ABCEFG"→s1:If inString(s1,
"D")=0:Disp "D not found." ENTER
                              D not found.
```

int() CATALOG

int(*expression***) ⇒ *integer***
int(*list1***) ⇒ *list***
int(*matrix1***) ⇒ *matrix***

Returns the greatest integer that is less than or equal to the argument. This function is identical to **floor()**.

The argument can be a real or a complex number.

For a list or matrix, returns the greatest integer of each of the elements.

```
int(-2.5) ENTER                         -3.

int([-1.234,0,0.37]) ENTER
                                  [-2. 0 0.]
```

intDiv() CATALOG

intDiv(*number1***, *number2***) ⇒ *integer***
intDiv(*list1***, *list2***) ⇒ *list***
intDiv(*matrix1***, *matrix2***) ⇒ *matrix***

Returns the signed integer part of argument 1 divided by argument 2.

For lists and matrices returns the signed integer part of argument 1 divided by argument 2 for each element pair.

```
intDiv(-7,2) ENTER                      -3

intDiv(4,5) ENTER                        0

intDiv({12,-14,-16},{5,4,-3}) ENTER
                                 {2 -3 5}
```

integrate See ∫(), page 907.

iPart() MATH/Number menu

iPart(*number***) ⇒ *integer***
iPart(*list1***) ⇒ *list***
iPart(*matrix1***) ⇒ *matrix***

Returns the integer part of the argument.

For lists and matrices, returns the integer part of each element.

The argument can be a real or a complex number.

```
iPart(-1.234) ENTER                     -1.

iPart({3/2,-2.3,7.003}) ENTER
                                 {1 -2. 7.}
```

isArchiv() CATALOG

isArchiv(*var_name***) ⇒ *true,false***

Determines if *var_name* is archived or not. Returns true if *var_name* is archived. Returns false if *var_name* is not archived.

```
isArchiv(PROG1) ENTER                   True
```

isClkOn() CATALOG

isClkOn() ⇒ *true,false*

Determines if the clock is ON or OFF. Returns true if the clock is ON. Returns false if the clock is OFF.

Downloaded from www.Manualslib.com manuals search engine

isLocked() CATALOG

isLocked(*var_name***)** ⇒ *true,false*

Determines if *var_name* is locked or not. Returns true if *var_name* is locked or archived. Returns false if *var_name* is not locked or archived.

```
isLocked(PROG1) ENTER          False
```

isPrime() MATH/Test menu

isPrime(*number***)** ⇒ *Boolean constant expression*

Returns true or false to indicate if *number* is a whole number ≥ 2 that is evenly divisible only by itself and 1.

If *number* exceeds about 306 digits and has no factors ≤ 1021, **isPrime(***number***)** displays an error message.

If you merely want to determine if *number* is prime, use **isPrime()** instead of **factor()**. It is much faster, particularly if *number* is not prime and has a second-largest factor that exceeds about five digits.

```
IsPrime(5) ENTER                true
IsPrime(6) ENTER                false
```

Function to find the next prime after a specified number:

```
Define nextPrim(n)=Func:Loop:
n+1→n:if isPrime(n):return n:
EndLoop:EndFunc ENTER           Done

nextPrim(7) ENTER                11
```

isVar() CATALOG

isVar(*var_name***)** ⇒ *true,false*

Determines if *var_name* is in use. Returns true if *var_name* exists. Returns false if *var_name* does not exist.

```
isArchiv(PROG1) ENTER          True
```

Item CATALOG

Item *itemNameString*
Item *itemNameString*, *label*

Valid only within a **Custom...EndCustm** or **ToolBar...EndTBar** block. Sets up a drop-down menu element to let you paste text to the cursor position (**Custom**) or branch to a label (**ToolBar**).

Note: Branching to a label is not allowed within a **Custom** block.

See **Custom** example.

Lbl CATALOG

Lbl *labelName*

Defines a label with the name *labelName* in the program.

You can use a **Goto** *labelName* instruction to transfer program control to the instruction immediately following the label.

labelName must meet the same naming requirements as a variable name.

Program segment:

```
   ⋮
:Lbl lbl1
:InputStr "Enter password", str1
:If str1≠password
:  Goto lbl1
:Disp "Welcome to ..."
   ⋮
```


Downloaded from www.Manualslib.com manuals search engine

lcm() MATH/Number menu

lcm(*number1***, *number2***)** ⇒ *expression*
lcm(*list1***, *list2***)** ⇒ *list*
lcm(*matrix1***, *matrix2***)** ⇒ *matrix*

Returns the least common multiple of the two arguments. The **lcm** of two fractions is the **lcm** of their numerators divided by the **gcd** of their denominators. The **lcm** of fractional floating-point numbers is their product.

For two lists or matrices, returns the least common multiples of the corresponding elements.

```
lcm(6,9) ENTER                                  18
lcm({1/3,-14,16},{2/15,7,5}) ENTER
                                        {2/3 14 80}
```

left() MATH/String menu

left(*sourceString***[, *num*])** ⇒ *string*

Returns the leftmost *num* characters contained in character string *sourceString*.

If you omit *num*, returns all of *sourceString*.

```
left("Hello",2) ENTER                          "He"
```

---

left(*list1***[, *num*])** ⇒ *list*

Returns the leftmost *num* elements contained in *list1*.

If you omit *num*, returns all of *list1*.

```
left({1,3,-2,4},3) ENTER
                                        {1 3 -2}
```

---

left(*comparison***)** ⇒ *expression*

Returns the left-hand side of an equation or inequality.

```
left(x<3) ENTER                                 x
```

limit() MATH/Calculus menu

limit(*expression1***, *var*, *point*[, *direction*])** ⇒ *expression*
limit(*list1***, *var*, *point*[, *direction*])** ⇒ *list*
limit(*matrix1***, *var*, *point*[, *direction*])** ⇒ *matrix*

Returns the limit requested.

direction: negative=from left, positive=from right, otherwise=both. (If omitted, *direction* defaults to both.)

Limits at positive ∞ and at negative ∞ are always converted to one-sided limits from the finite side.

Depending on the circumstances, **limit()** returns itself or undef when it cannot determine a unique limit. This does not necessarily mean that a unique limit does not exist. undef means that the result is either an unknown number with finite or infinite magnitude, or it is the entire set of such numbers.

```
limit(2x+3,x,5) ENTER                           13
limit(1/x,x,0,1) ENTER                          ∞
limit(sin(x)/x,x,0) ENTER                       1
limit((sin(x+h)-sin(x))/h,h,0) ENTER
                                          cos(x)
limit((1+1/n)^n,n,∞) ENTER                      e
```


Downloaded from www.Manualslib.com manuals search engine

limit() uses methods such as L'Hopital's rule, so there are unique limits that it cannot determine. If *expression1* contains undefined variables other than *var*, you might have to constrain them to obtain a more concise result.

Limits can be very sensitive to rounding error. When possible, avoid the APPROX setting of the Exact/Approx mode and approximate numbers when computing limits. Otherwise, limits that should be zero or have infinite magnitude probably will not, and limits that should have finite non-zero magnitude might not.

```
limit(a^x,x,∞) ENTER                    undef
limit(a^x,x,∞)|a>1 ENTER                    ∞
limit(a^x,x,∞)|a>0 and a<1
ENTER                                       0
```

Line CATALOG

Line *xStart*, *yStart*, *xEnd*, *yEnd*[, *drawMode*]


Displays the Graph screen and draws, erases, or inverts a line segment between the window coordinates (*xStart*, *yStart*) and (*xEnd*, *yEnd*), including both endpoints.

If *drawMode* = 1, draws the line (default).
If *drawMode* = 0, turns off the line.
If *drawMode* = ⁻1, turns a line that is on to off or off to on (inverts pixels along the line).

Note: Regraphing erases all drawn items. See also **PxlLine**.


In the **ZoomStd** window, draw a line and then erase it.

```
Line 0,0,6,9 ENTER
```

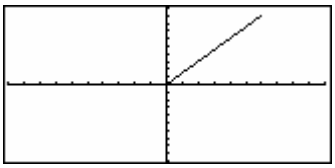

```
HOME
```

```
Line 0,0,6,9,0 ENTER
```

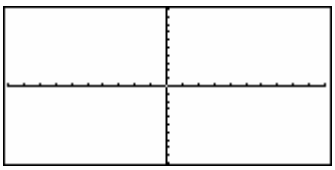

LineHorz CATALOG

LineHorz *y* [, *drawMode*]


Displays the Graph screen and draws, erases, or inverts a horizontal line at window position *y*.

If *drawMode* = 1, draws the line (default).
If *drawMode* = 0, turns off the line.
If *drawMode* = ⁻1, turns a line that is on to off or off to on (inverts pixels along the line).

Note: Regraphing erases all drawn items. See also **PxlHorz**.

In a **ZoomStd** window:

```
LineHorz 2.5 ENTER
```

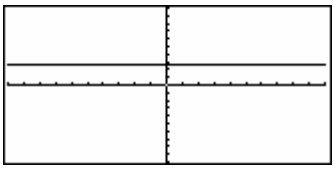

Downloaded from www.Manualslib.com manuals search engine

LineTan CATALOG

LineTan *expression1*, *expression2*

Displays the Graph screen and draws a line tangent to *expression1* at the point specified.

expression1 is an expression or the name of a function, where x is assumed to be the independent variable, and *expression2* is the x value of the point that is tangent.

Note: In the example shown, *expression1* is graphed separately. **LineTan** does not graph *expression1*.


In function graphing mode and a **ZoomTrig** window:

```
Graph cos(x)
```

HOME

[♦] [CALC HOME]

```
LineTan cos(x),π/4 ENTER
```

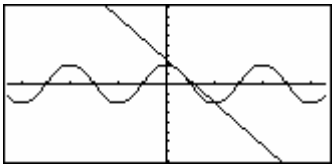

LineVert CATALOG

LineVert *x* [, *drawMode*]


Displays the Graph screen and draws, erases, or inverts a vertical line at window position *x*.

If *drawMode* = 1, draws the line (default).
If *drawMode* = 0, turns off the line.
If *drawMode* = ⁻1, turns a line that is on to off or off to on (inverts pixels along the line).

Note: Regraphing erases all drawn items. See also **PxlVert**.

In a **ZoomStd** window:

```
LineVert ⁻2.5 ENTER
```

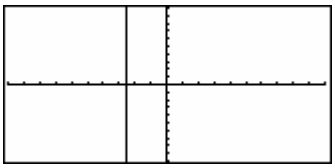

LinReg MATH/Statistics/Regressions menu

LinReg *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]

Calculates the linear regression and updates all the system statistics variables.


All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99.


In function graphing mode:

```
{0,1,2,3,4,5,6}→L1 ENTER
                          {0 1 2 ...}
{0,2,3,4,3,4,6}→L2 ENTER
                          {0 2 3 ...}
LinReg L1,L2 ENTER              Done
ShowStat ENTER
```

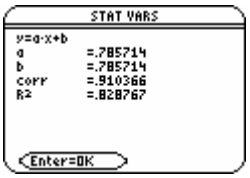


```
ENTER
Regeq(x)→y1(x) ENTER            Done
NewPlot 1,1,L1,L2 ENTER         Done
```

[♦] [GRAPH]

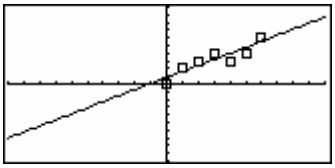

Downloaded from www.Manualslib.com manuals search engine

Δlist() MATH/List menu

list(*list1*) ⇒ *list*

Returns a list containing the differences between consecutive elements in *list1*. Each element of *list1* is subtracted from the next element of *list1*. The resulting list is always one element shorter than the original *list1*.

```
Δlist({20,30,45,70}) ENTER
                      {10,15,25}
```

list▸mat() MATH/List menu

list▸mat(*list* [**,** *elementsPerRow*]**)** ⇒ *matrix*

Returns a matrix filled row-by-row with the elements from *list*.

elementsPerRow, if included, specifies the number of elements per row. Default is the number of elements in *list* (one row).

If *list* does not fill the resulting matrix, zeros are added.

```
list▸mat({1,2,3}) ENTER          [1 2 3]
list▸mat({1,2,3,4,5},2) ENTER
                                 [1 2]
                                 [3 4]
                                 [5 0]
```

▸ln MATH/String menu

▸ln *expression* ⇒ *expression*

Causes the input expression to be converted to an expression containing only natural logs (ln).

```
Log(x)▸ln ENTER
                      ln(x)
                     ------
                     ln(10)
```

ln() 2nd [LN] key

ln(*expression1***)** ⇒ *expression*
ln(*list1***)** ⇒ *list*

Returns the natural logarithm of the argument.

For a list, returns the natural logarithms of the elements.

```
ln(2.0) ENTER                    .693...
```

If complex format mode is REAL:

```
ln({-3,1.2,5}) ENTER
                  Error: Non-real result
```

If complex format mode is RECTANGULAR:

```
ln({-3,1.2,5}) ENTER
          {ln(3) + π• i   .182...   ln(5)}
```

---

ln(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix natural logarithm of *squareMatrix1*. This is *not* the same as calculating the natural logarithm of each element. For information about the calculation method, refer to **cos()** on.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode and Rectangular complex format mode:

```
ln([1,5,3;4,2,1;6,-2,1]) ENTER
```

```
[1.831...+1.734...• i   .009...– 1.490...• i   ...]
[.448...– .725...• i    1.064...+.623• i       ...]
[-.266...– 2.083...• i  1.124...+1.790...• i   ...]
```


Downloaded from www.Manualslib.com manuals search engine

LnReg MATH/Statistics/Regressions menu

LnReg *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]

Calculates the logarithmic regression and updates all the system statistics variables.

All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99.


In function graphing mode:

```
{1,2,3,4,5,6,7,8}→L1 ENTER
                              {1 2 3 ...}
{1,2,2,3,3,3,4,4}→L2 ENTER
                              {1 2 2 ...}
LnReg L1,L2 ENTER                  Done
ShowStat ENTER
```




```
ENTER
Regeq(x)→y1(x) ENTER               Done
NewPlot 1,1,L1,L2 ENTER            Done
```

◆[GRAPH]

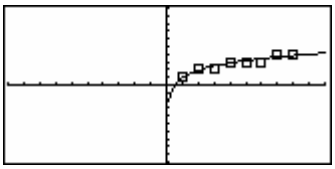

Local CATALOG

Local *var1*[, *var2*] [, *var3*] ...

Declares the specified *vars* as local variables. Those variables exist only during evaluation of a program or function and are deleted when the program or function finishes execution.

Note: Local variables save memory because they only exist temporarily. Also, they do not disturb any existing global variable values. Local variables must be used for **For** loops and for temporarily saving values in a multi-line function since modifications on global variables are not allowed in a function.

Program listing:

```
:prgmname()
:Prgm
:Local x,y
:Input "Enter x",x
:Input "Enter y",y
:Disp x*y
:EndPrgm
```

Note: *x* and *y* do not exist after the program executes.

Lock CATALOG

Lock *var1*[, *var2*] ...

Locks the specified variables. This prevents you from accidentally deleting or changing the variable without first using the unlock instruction on that variable.

In the example to the right, the variable L1 is locked and cannot be deleted or modified.

Note: The variables can be unlocked using the **Unlock** command.

```
{1,2,3,4}→L1 ENTER                 {1,2,3,4}
Lock L1 ENTER                      Done
DelVar L1 ENTER
  Error: Variable is locked or protected
```


Downloaded from www.Manualslib.com manuals search engine

log() CATALOG/ ◆ 7 key

log(*expression1[,expression2]***)** ⇒ *expression*
log(*list1[,expression2]***)** ⇒ *list*

Returns the base-*expression2* logarithm of the argument.

For a list, returns the base-*expression2* logarithm of the elements.

If expression 2 is omitted, 10 is used as base.

```
log(2.0) ENTER                                  .301...
```

If complex format mode is REAL:

```
log({-3,1.2,5}) ENTER
                          Error: Non-real result
```

If complex format mode is RECTANGULAR:

```
log({-3,1.2,5}) ENTER
      {log(3)+ 1.364...• i  .079... log(5)}
```

---

log(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix base-*expression2* logarithm of *squareMatrix1*. This is *not* the same as calculating the base-*expression2* logarithm of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode and Rectangular complex format mode:

```
log([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} .795\ldots+.753\ldots\cdot i & .003\ldots-.647\ldots\cdot i & \ldots \\ .194\ldots-.315\ldots\cdot i & .462\ldots+.270\cdot i & \ldots \\ -.115\ldots-.904\ldots\cdot i & .488\ldots+.777\ldots\cdot i & \ldots \end{bmatrix}$$

---

log(*x,b***)** ⇒ *expression*
log(*squareMatrix1***)** ⇒ *squareMatrix*

In a list, returns the base expression 2 logarithm of the elements.

```
Log(10,3) - log(5,3) ENTER      Log3(2)
Log(2.0,4)ENTER                      .5
```

▸logbase MATH/String menu

expression **▸logbase(***expression1***)** ⇒ *expression*

Causes the input expression to be simplified to an expression using base *expression1*.

```
Log(10,3) - log(5,5)▸logbase(5)
ENTER
```

$$\frac{\log_5(30)}{\log_5(3)}$$

Downloaded from www.Manualslib.com manuals search engine

Logistic MATH/Statistics/Regressions menu

Logistic *list1*, *list2* [, [*iterations*], [*list3*] [, *list4*, *list5*]]

Calculates the logistic regression and updates all the system statistics variables.

All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

iterations specifies the maximum number of times a solution will be attempted. If omitted, 64 is used. Typically, larger values result in better accuracy but longer execution times, and vice versa.


Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99 .

In function graphing mode:

```
{1,2,3,4,5,6}→L1 ENTER          {1 2 3 …}
{1,1.3,2.5,3.5,4.5,4.8}→L2
ENTER
                                {1 1.3 2.5 …}
Logistic L1,L2 ENTER                 Done
ShowStat ENTER
```




```
ENTER
regeq(x)→y1(x) ENTER                 Done
NewPlot 1,1,L1,L2 ENTER              Done
◆[GRAPH]
F2 9
```

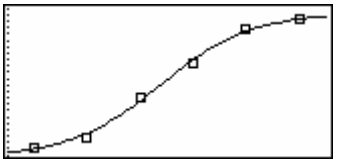

Loop CATALOG

Loop
block
EndLoop

Repeatedly executes the statements in *block*. Note that the loop will be executed endlessly, unless a **Goto** or **Exit** instruction is executed within *block*.

block is a sequence of statements separated with the ":" character.

Program segment:

```
   ⋮
:1→i
:Loop
:  Rand(6)→die1
:  Rand(6)→die2
:  If die1=6 and die2=6
:    Goto End
:  i+1→i
:EndLoop
:Lbl End
:Disp "The number of rolls is", i
   ⋮
```


Downloaded from www.Manualslib.com manuals search engine

LU MATH/Matrix menu

LU *matrix*, *lMatName*, *uMatName*, *pMatName*[, *tol*]

Calculates the Doolittle LU (lower-upper) decomposition of a real or complex *matrix*. The lower triangular matrix is stored in *lMatName*, the upper triangular matrix in *uMatName*, and the permutation matrix (which describes the row swaps done during the calculation) in *pMatName*.

lMatName * *uMatName* = *pMatName* * *matrix*

Optionally, any matrix element is treated as zero if its absolute value is less than *tol*. This tolerance is used only if the matrix has floating-point entries and does not contain any symbolic variables that have not been assigned a value. Otherwise, *tol* is ignored.

- If you use ◆ ENTER or set the mode to Exact/Approx=APPROXIMATE, computations are done using floating-point arithmetic.
- If *tol* is omitted or not used, the default tolerance is calculated as:

  5E-14 * **max(dim(***matrix***))** * **rowNorm(***matrix***)**

The **LU** factorization algorithm uses partial pivoting with row interchanges.

```
[6,12,18;5,14,31;3,8,18]→m1 ENTER
```

$$\begin{bmatrix} 6 & 12 & 18 \\ 5 & 14 & 31 \\ 3 & 8 & 18 \end{bmatrix}$$

```
LU m1,lower,upper,perm ENTER        Done
```

```
lower ENTER
```

$$\begin{bmatrix} 1 & 0 & 0 \\ 5/6 & 1 & 0 \\ 1/2 & 1/2 & 1 \end{bmatrix}$$

```
upper ENTER
```

$$\begin{bmatrix} 6 & 12 & 18 \\ 0 & 4 & 16 \\ 0 & 0 & 1 \end{bmatrix}$$

```
perm ENTER
```

$$\begin{bmatrix} 1 & 0 & 0 \\ 0 & 1 & 0 \\ 0 & 0 & 1 \end{bmatrix}$$

```
[m,n;o,p]→m1 ENTER
```

$$\begin{bmatrix} m & n \\ o & p \end{bmatrix}$$

```
LU m1,lower,upper,perm ENTER        Done
```

```
lower ENTER
```

$$\begin{bmatrix} 1 & 0 \\ \frac{m}{o} & 1 \end{bmatrix}$$

```
upper ENTER
```

$$\begin{bmatrix} o & p \\ 0 & n-\frac{m \cdot p}{o} \end{bmatrix}$$

```
perm ENTER
```

$$\begin{bmatrix} 0 & 1 \\ 1 & 0 \end{bmatrix}$$

mat▸data MATH/List menu

mat▸data *mat*,*data*[,*row1*][,*col1*][,*row2*][,*col2*]

Converts a matrix to data.

Each argument *[,row1][,col1][,row2][,col2]* can be individually omitted. If *row1* is omitted the default is 1. If *col1* is omitted the default is 1. If *row2* is omitted, the default is "max row." If *col2* is omitted, the default is "max column."

```
mat▸data,m1,d1,1,,,1 ENTER
Done
```


Downloaded from www.Manualslib.com manuals search engine

mat▸list() MATH/List menu

mat▸list(*matrix***)** ⇒ *list*

Returns a list filled with the elements in *matrix*. The elements are copied from *matrix* row by row.

```
mat▸list([1,2,3]) ENTER          {1 2 3}
[1,2,3;4,5,6]→M1 ENTER
                                  [1 2 3]
                                  [4 5 6]
mat▸list(M1) ENTER        {1 2 3 4 5 6}
```

max() MATH/List menu

max(*expression1***, *expression2***)** ⇒ *expression*
max(*list1***, *list2***)** ⇒ *list*
max(*matrix1***, *matrix2***)** ⇒ *matrix*

Returns the maximum of the two arguments. If the arguments are two lists or matrices, returns a list or matrix containing the maximum value of each pair of corresponding elements.

```
max(2.3,1.4) ENTER                2.3
max({1,2},{-4,3}) ENTER          {1 3}
```

---

max(*list***)** ⇒ *expression*

Returns the maximum element in *list*.

```
max({0,1,-7,1.3,.5}) ENTER        1.3
```

---

max(*matrix1***)** ⇒ *matrix*

Returns a row vector containing the maximum element of each column in *matrix1*.

Note: See also **fMax()** and **min()**.

```
max([1,-3,7;-4,0,.3]) ENTER
                                  [1 0 7]
```

mean() MATH/Statistics menu

mean(*list***[, *freqlist*])** ⇒ *expression*

Returns the mean of the elements in *list*.

Each *freqlist* element counts the number of consecutive occurrences of the corresponding element in *list*.

```
mean({.2,0,1,-.3,.4}) ENTER       .26
mean({1,2,3},{3,2,1}) ENTER       5/3
```

---

mean(*matrix1***[, *freqmatrix*])** ⇒ *matrix*

Returns a row vector of the means of all the columns in *matrix1*.

Each *freqmatrix* element counts the number of consecutive occurrences of the corresponding element in *matrix1*.

```
In vector format rectangular mode:
mean([.2,0;-1,3;.4,-.5]) ENTER
                          [-.133... .833...]
mean([1/5,0;-1,3;2/5,-1/2]) ENTER
                            [-2/15  5/6]
mean([1,2;3,4;5,6],[5,3;4,1;
6,2]) ENTER                [47/15, 11/3]
```

median() MATH/Statistics menu

median(*list***)** ⇒ *expression*

Returns the median of the elements in *list1*.

```
median({.2,0,1,-.3,.4}) ENTER     .2
```

---

median(*matrix1***)** ⇒ *matrix*

Returns a row vector containing the medians of the columns in *matrix1*.

Note: All entries in the list or matrix must simplify to numbers.

```
median([.2,0;1,-.3;.4,-.5]) ENTER
                                  [.4 -.3]
```


Downloaded from www.Manualslib.com manuals search engine

MedMed MATH/Statistics/Regressions menu

MedMed *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]

Calculates the median-median line and updates all the system statistics variables.


All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99.


In function graphing mode:

{0,1,2,3,4,5,6}→L1 ENTER {0 1 2 …}
{0,2,3,4,3,4,6}→L2 ENTER {0 2 3 …}
MedMed L1,L2 ENTER Done
ShowStat ENTER

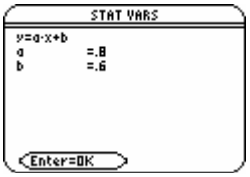

ENTER
Regeq(x)→y1(x) ENTER Done
NewPlot 1,1,L1,L2 ENTER Done

◆[GRAPH]

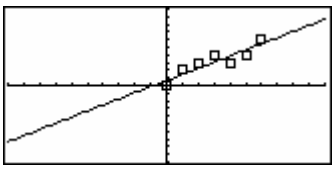

mid() MATH/String menu

mid(*sourceString*, *start*[, *count*]**)** ⇒ *string*

Returns *count* characters from character string *sourceString*, beginning with character number *start*.

If *count* is omitted or is greater than the dimension of *sourceString*, returns all characters from *sourceString*, beginning with character number *start*.

count must be ≥ 0. If *count* = 0, returns an empty string.

mid("Hello there",2) ENTER
"ello there"
mid("Hello there",7,3) ENTER
"the"
mid("Hello there",1,5) ENTER
"Hello"
mid("Hello there",1,0) ENTER
""

---

mid(*sourceList*, *start* [, *count*]**)** ⇒ *list*

Returns *count* elements from *sourceList*, beginning with element number *start*.

If *count* is omitted or is greater than the dimension of *sourceList*, returns all elements from *sourceList*, beginning with element number *start*.

count must be ≥ 0. If count = 0, returns an empty list.

mid({9,8,7,6},3) ENTER {7 6}
mid({9,8,7,6},2,2) ENTER {8 7}
mid({9,8,7,6},1,2) ENTER {9 8}
mid({9,8,7,6},1,0) ENTER {}

---

mid(*sourceStringList*, *start*[, *count*]**)** ⇒ *list*

Returns *count* strings from the list of strings *sourceStringList*, beginning with element number *start*.

mid({"A","B","C","D"},2,2) ENTER
{"B" "C"}

Downloaded from www.Manualslib.com manuals search engine

min() MATH/List menu

min(*expression1***, *expression2***)** ⇒ *expression*
min(*list1, list2***)** ⇒ *list*
min(*matrix1, matrix2***)** ⇒ *matrix*

Returns the minimum of the two arguments. If the arguments are two lists or matrices, returns a list or matrix containing the minimum value of each pair of corresponding elements.

```
min(2.3,1.4) ENTER                    1.4
min({1,2},{-4,3}) ENTER               {-4 2}
```

---

min(*list***)** ⇒ *expression*

Returns the minimum element of *list*.

```
min({0,1,-7,1.3,.5}) ENTER            -7
```

---

min(*matrix1***)** ⇒ *matrix*

Returns a row vector containing the minimum element of each column in *matrix1*.

Note: See also **fMin()** and **max()**.

```
min([1,-3,7;-4,0,.3]) ENTER
                              [-4 -3 .3]
```

mod() MATH/Number menu

mod(*expression1***, *expression2***)** ⇒ *expression*
mod(*list1***, *list2***)** ⇒ *list*
mod(*matrix1***, *matrix2***)** ⇒ *matrix*

Returns the first argument modulo the second argument as defined by the identities:

mod(x,0) ≡ x
mod(x,y) ≡ x– y floor(x/y)

When the second argument is non-zero, the result is periodic in that argument. The result is either zero or has the same sign as the second argument.

If the arguments are two lists or two matrices, returns a list or matrix containing the modulo of each pair of corresponding elements.

Note: See also **remain()**.

```
mod(7,0) ENTER                        7
mod(7,3) ENTER                        1
mod(-7,3) ENTER                       2
mod(7,-3) ENTER                       -2
mod(-7,-3) ENTER                      -1
mod({12,-14,16},{9,7,-5}) ENTER
                              {3 0 -4}
```

MoveVar CATALOG

MoveVar *var*, *oldFolder*, *newFolder*

Moves variable *var* from *oldFolder* to *newFolder*. If *newFolder* does not exist, **MoveVar** creates it.

```
{1,2,3,4}→L1 ENTER                    {1 2 3 4}
MoveVar L1,Main,Games ENTER           Done
```

mRow() MATH/Matrix/Row ops menu

mRow(*expression***, *matrix1***, *index***)** ⇒ *matrix*

Returns a copy of *matrix1* with each element in row *index* of *matrix1* multiplied by *expression*.

```
mRow(-1/3,[1,2;3,4],2) ENTER
                          [ 1    2   ]
                          [-1   -4/3 ]
```

mRowAdd() MATH/Matrix/Row ops menu

mRowAdd(*expression***, *matrix1***, *index1***, *index2***)** ⇒ *matrix*

Returns a copy of *matrix1* with each element in row *index2* of *matrix1* replaced with:

expression × row *index1* + row *index2*

```
mRowAdd(-3,[1,2;3,4],1,2) ENTER
                          [1   2 ]
                          [0   -2]

mRowAdd(n,[a,b;c,d],1,2) ENTER
                          [a          b       ]
                          [a•n+c      b•n+d   ]
```


Downloaded from www.Manualslib.com manuals search engine

nCr() MATH/Probability menu

nCr(*expression1***,** *expression2***)** ⇒ *expression*

For integer *expression1* and *expression2* with *expression1* ≥ *expression2* ≥ 0, **nCr()** is the number of combinations of *expression1* things taken *expression2* at a time. (This is also known as a binomial coefficient.) Both arguments can be integers or symbolic expressions.

```
nCr(z,3)                    z·(z-2)·(z-1)
                                  6
ans(1)|z=5                          10
nCr(z,c)                        z!
                              c!(z-c)!
ans(1)/nPr(z,c)                 1
                                c!
```

nCr(*expression,* 0**)** ⇒ 1

nCr(*expression, negInteger***)** ⇒ 0

nCr(*expression, posInteger***)** ⇒
expression · (*expression*– 1)... (*expression* – *posInteger*+1)/ *posInteger*!

nCr(*expression, nonInteger***)** ⇒ *expression*!/ ((*expression* – *nonInteger*)! · *nonInteger*!)

---

nCr(*list1***,** *list2***)** ⇒ *list*

Returns a list of combinations based on the corresponding element pairs in the two lists. The arguments must be the same size list.

```
nCr({5,4,3},{2,4,2}) ENTER
{10  1  3}
```

---

nCr(*matrix1***,** *matrix2***)** ⇒ *matrix*

Returns a matrix of combinations based on the corresponding element pairs in the two matrices. The arguments must be the same size matrix.

```
nCr([6,5;4,3],[2,2;2,2]) ENTER
                          [15  10]
                          [6   3 ]
```

nDeriv() MATH/Calculus menu

nDeriv(*expression1***,** *var***[,** *h***])** ⇒ *expression*
nDeriv(*expression1***,** *var, list***)** ⇒ *list*
nDeriv(*list***,** *var***[,** *h***])** ⇒ *list*
nDeriv(*matrix***,** *var***[,** *h***])** ⇒ *matrix*

Returns the numerical derivative as an expression. Uses the central difference quotient formula.

h is the step value. If *h* is omitted, it defaults to 0.001.

When using *list* or *matrix*, the operation gets mapped across the values in the list or across the matrix elements.

Note: See also **avgRC()** and ***d*()**.

```
nDeriv(cos(x),x,h) ENTER
┌──────────────┐
│              │
└──────────────┘
limit(nDeriv(cos(x),x,h),h,0) ENTER
                              -sin(x)
nDeriv(x^3,x,0.01) ENTER
                      3.·(x² +.000033)
nDeriv(cos(x),x)|x=π/2 ENTER
                               -1.
nDeriv(x^2,x,{.01,.1}) ENTER
                      {2.·x  2.·x}
```

NewData CATALOG

NewData *dataVar***,** *list1***[,** *list2***]** [**,** *list3***]...**


Creates data variable *dataVar,* where the columns are the lists in order.

Must have at least one list.

list1, *list2*, ..., *listn* can be lists as shown, expressions that resolve to lists, or list variable names.

NewData makes the new variable current in the Data/Matrix Editor.

```
NewData mydata,{1,2,3},{4,5,6} ENTER
                               Done
(Go to the Data/Matrix Editor and
open the var mydata to display the
data variable below.)
```

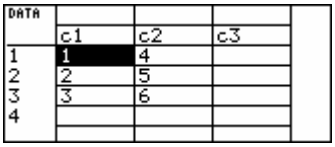

NewData *dataVar***,** *matrix*

Creates data variable *dataVar* based on *matrix*.

Downloaded from www.Manualslib.com manuals search engine

NewData sysData, *matrix*

Loads the contents of *matrix* into the system data variable sysData.

NewFold CATALOG

NewFold *folderName*

Creates a user-defined folder with the name *folderName*, and then sets the current folder to that folder. After you execute this instruction, you are in the new folder.

```
NewFold games ENTER
                    Done
```

newList() CATALOG

newList(*numElements***)** ⇒ *list*

Returns a list with a dimension of *numElements*. Each element is zero.

```
newList(4) ENTER
                {0 0 0 0}
```

newMat() CATALOG also Math/Matrix menu

newMat(*numRows***,** *numColumns***)** ⇒ *matrix*

Returns a matrix of zeros with the dimension *numRows* by *numColumns*.

```
newMat(2,3) ENTER
                [0 0 0]
                [0 0 0]
```

NewPic CATALOG


NewPic *matrix*, *picVar* [, *maxRow*][, *maxCol*]

Creates a pic variable *picVar* based on *matrix*. *matrix* must be an *n*×2 matrix in which each row represents a pixel. Pixel coordinates start at 0,0. If *picVar* already exists, **NewPic** replaces it.

The default for *picVar* is the minimum area required for the matrix values. The optional arguments, *maxRow* and *maxCol*, determine the maximum boundary limits for *picVar*.

```
NewPic [1,1;2,2;3,3;4,4;5,5;
5,1;4,2;2,4;1,5],xpic ENTER
                    Done

RclPic xpic ENTER
```

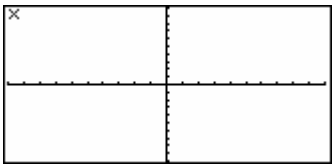

Downloaded from www.Manualslib.com manuals search engine

NewPlot CATALOG

NewPlot *n*, *type*, *xList* [,[*yList*], [*frqList*], [*catList*], [*includeCatList*], [*mark*] [, *bucketSize*]]

Creates a new plot definition for plot number *n*.

type specifies the type of the graph plot.
1 = scatter plot
2 = xyline plot
3 = box plot
4 = histogram
5 = modified box plot


mark specifies the display type of the mark.
1 = ▫ (box)
2 = × (cross)
3 = + (plus)
4 = ▪ (square)
5 = • (dot)

bucketSize is the width of each histogram "bucket" (*type* = 4), and will vary based on the window variables xmin and xmax. *bucketSize* must be >0. Default = 1.

Note: *n* can be 1–9. Lists must be variable names or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor), except for *includeCatList*, which does not have to be a variable name and cannot be c1–c99.

```
FnOff ENTER                          Done
PlotsOff ENTER                       Done
{1,2,3,4}→L1 ENTER                   {1 2 3 4}
{2,3,4,5}→L2 ENTER                   {2 3 4 5}
NewPlot 1,1,L1,L2,,,,4 ENTER         Done

Press ◆[GRAPH] to display:
```

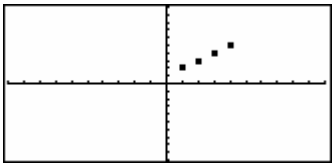

NewProb CATALOG

NewProb

```
NewProb ENTER                        Done
```

Performs a variety of operations that let you begin a new problem from a cleared state without resetting the memory.

- Clears all single-character variable names (Clear a–z) in the current folder, unless the variables are locked or archived.
- Turns off all functions and stat plots (**FnOff** and **PlotsOff**) in the current graphing mode.
- Perfoms **ClrDraw**, **ClrErr**, **ClrGraph**, **ClrHome**, **ClrIO**, and **ClrTable**.

nInt() MATH/Calculus menu

nInt(*expression1, var, lower, upper***)** ⇒ *expression*

```
nInt(e^(-x^2),x,-1,1) ENTER
                                     1.493...
```

If the integrand *expression1* contains no variable other than *var*, and if *lower* and *upper* are constants, positive ∞, or negative ∞, then **nInt()** returns an approximation of ∫**(***expression1*, *var*, *lower*, *upper***)**. This approximation is a weighted average of some sample values of the integrand in the interval *lower*<*var*<*upper*.

```
nInt(cos(x),x,-π,π+1E-12) ENTER
                                     -1.041...E-12
```

The goal is six significant digits. The adaptive algorithm terminates when it seems likely that the goal has been achieved, or when it seems unlikely that additional samples will yield a worthwhile improvement.

```
∫(cos(x),x,-π,π+10^(-12)) ENTER
                                     -sin(1/1000000000000)
```

A warning is displayed ("Questionable accuracy") when it seems that the goal has not been achieved.

```
ans(1)◆ ENTER                        -1.E-12
```


Downloaded from www.Manualslib.com manuals search engine

Nest **nInt()** to do multiple numeric integration. Integration limits can depend on integration variables outside them.

Note: See also ∫**()**.

```
nInt(nInt(e^(-x*y)/√(x^2-y^2),
y,-x,x),x,0,1) ENTER                3.304...
```

norm() MATH/Matrix/Norms menu

norm(*matrix***)** ⇒ *expression*

Returns the Frobenius norm.

```
norm([a,b;c,d]) ENTER
```

$$\sqrt{a^2+b^2+c^2+d^2}$$

```
norm([1,2;3,4]) ENTER                √30
```

not MATH/Test menu

not *Boolean expression1* ⇒ *Boolean expression*

Returns true, false, or a simplified *Boolean expression1*.

```
not 2>=3 ENTER                       true
not x<2 ENTER                        x≥2
not not innocent ENTER               innocent
```

---

not *integer1* ⇒ *integer*

Returns the one's complement of a real integer. Internally, *integer1* is converted to a signed, 32-bit binary number. The value of each bit is flipped (0 becomes 1, and vice versa) for the one's complement. Results are displayed according to the Base mode.

You can enter the integer in any number base. For a binary or hexadecimal entry, you must use the 0b or 0h prefix, respectively. Without a prefix, the integer is treated as decimal (base 10).

If you enter a decimal integer that is too large for a signed, 32-bit binary form, a symmetric modulo operation is used to bring the value into the appropriate range.

In Hex base mode:

```
not 0h7AC36 ENTER                    0hFFF853C9
```

Important: Zero, not the letter O.

In Bin base mode:

```
0b100101▶dec ENTER                   37
not 0b100101 ENTER
0b11111111111111111111111111011010
ans(1)▶dec ENTER                     -38
```

Note: A binary entry can have up to 32 digits (not counting the 0b prefix). A hexadecimal entry can have up to 8 digits.

Note: To type the ▶ conversion operator, press 2nd [▶]. You can also select base conversions from the MATH/Base menu.

nPr() MATH/Probability menu

nPr(*expression1***,** *expression2***)** ⇒ *expression*

For integer *expression1* and *expression2* with *expression1* ≥ *expression2* ≥ 0, **nPr()** is the number of permutations of *expression1* things taken *expression2* at a time. Both arguments can be integers or symbolic expressions.

```
nPr(z,3) ENTER                       z•(z-2)•(z-1)
ans(1)|z=5 ENTER                     60
nPr(z,-3) ENTER                      1/((z+1)•(z+2)•(z+3))
nPr(z,c) ENTER                       z!/(z-c)!
ans(1)*nPr(z-c,-c) ENTER             1
```

nPr(*expression,* 0**)** ⇒ 1

nPr(*expression, negInteger***)** ⇒
1/((*expression*+1) • *(expression*+2)...
(*expression* – *negInteger*))

nPr(*expression, posInteger***)** ⇒
expression • (*expression* – 1)... (*expression* – *posInteger*+1)

nPr(*expression, nonInteger***)** ⇒ *expression*!/
(*expression* – *nonInteger*)!

---

nPr(*list1***,** *list2***)** ⇒ *list*

Returns a list of permutations based on the corresponding element pairs in the two lists. The arguments must be the same size list.

```
nPr({5,4,3},{2,4,2}) ENTER
                                     {20 24 6}
```


Downloaded from www.Manualslib.com manuals search engine

nPr(*matrix1***,** *matrix2***)** ⇒ *matrix*

Returns a matrix of permutations based on the corresponding element pairs in the two matrices. The arguments must be the same size matrix.

```
nPr([6,5;4,3],[2,2;2,2]) ENTER
                    [30  20]
                    [12   6]
```

nSolve() MATH/Algebra menu

nSolve(*equation***,** *varOrGuess***)** ⇒ *number or error_string*

Iteratively searches for one approximate real numeric solution to *equation* for its one variable. Specify *varOrGuess* as:

variable
– or –
variable = *real number*

For example, x is valid and so is x=3.

nSolve() is often much faster than **solve()** or **zeros()**, particularly if the "|" operator is used to constrain the search to a small interval containing exactly one simple solution.

nSolve() attempts to determine either one point where the residual is zero or two relatively close points where the residual has opposite signs and the magnitude of the residual is not excessive. If it cannot achieve this using a modest number of sample points, it returns the string "no solution found."

If you use **nSolve()** in a program, you can use **getType()** to check for a numeric result before using it in an algebraic expression.

Note: See also **cSolve()**, **cZeros()**, **solve()**, and **zeros()**.

```
nSolve(x^2+5x-25=9,x) ENTER
                              3.844...
nSolve(x^2=4,x=-1) ENTER          -2.
nSolve(x^2=4,x=1) ENTER            2.
```

Note: If there are multiple solutions, you can use a guess to help find a particular solution.

```
nSolve(x^2+5x-25=9,x)|x<0 ENTER
                             -8.844...
nSolve(((1+r)^24-1)/r=26,r)|r>0 and
r<.25 ENTER                    .0068...
nSolve(x^2=-1,x) ENTER
                  "no solution found"
```

OneVar MATH/Statistics menu

OneVar *list1* [, *list2*] [, *list3*] [, *list4*]

Calculates 1-variable statistics and updates all the system statistics variables.

All the lists must have equal dimensions except for *list4*.

list1 represents xlist.
list2 represents frequency.
list3 represents category codes.
list4 represents category include list.

Note: *list1* through *list3* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list4* does not have to be a variable name and cannot be c1–c99.

```
{0,2,3,4,3,4,6}→L1 ENTER
OneVar L1 ENTER                   Done
ShowStat ENTER
```



Downloaded from www.Manualslib.com manuals search engine

or MATH/Test menu

Boolean expression1 **or** *Boolean expression2* ⇒ *Boolean expression*

Returns true or false or a simplified form of the original entry.

Returns true if either or both expressions simplify to true. Returns false only if both expressions evaluate to false.

Note: See **xor**.

```
x≥3 or x≥4 ENTER                    x ≥ 3
```

Program segment:

```
   ⋮
If x<0 or x≥5
  Goto END
   ⋮
If choice=1 or choice=2
  Disp "Wrong choice"
   ⋮
```

---

integer1 **or** *integer2* ⇒ *integer*

Compares two real integers bit-by-bit using an **or** operation. Internally, both integers are converted to signed, 32-bit binary numbers. When corresponding bits are compared, the result is 1 if either bit is 1; the result is 0 only if both bits are 0. The returned value represents the bit results, and is displayed according to the Base mode.

You can enter the integers in any number base. For a binary or hexadecimal entry, you must use the 0b or 0h prefix, respectively. Without a prefix, integers are treated as decimal (base 10).

If you enter a decimal integer that is too large for a signed, 32-bit binary form, a symmetric modulo operation is used to bring the value into the appropriate range.

Note: See **xor**.

In Hex base mode:

```
0h7AC36 or 0h3D5F ENTER             0h7BD7F
```

Important: Zero, not the letter O.

In Bin base mode:

```
0b100101 or 0b100 ENTER             0b100101
```

Note: A binary entry can have up to 32 digits (not counting the 0b prefix). A hexadecimal entry can have up to 8 digits.

ord() MATH/String menu

ord(*string***)** ⇒ *integer*
ord(*list1***)** ⇒ *list*

Returns the numeric code of the first character in character string *string*, or a list of the first characters of each list element.

See Appendix B for a complete listing of character codes.

```
ord("hello") ENTER                  104
char(104) ENTER                     "h"
ord(char(24)) ENTER                  24
ord({"alpha","beta"}) ENTER
                                    {97  98}
```

Output CATALOG

Output *row*, *column*, *exprOrString*

Displays *exprOrString* (an expression or character string) on the Program I/O screen at the text coordinates (*row*, *column*).

An expression can include conversion operations such as ▸**DD** and ▸**Rect**. You can also use the ▸ operator to perform unit and number base conversions.


If Pretty Print = ON, *exprOrString* is "pretty printed."

From the Program I/O screen, you can press F5 to display the Home screen, or a program can use **DispHome**.

Program segment:

```
   ⋮
:RandSeed 1147
:ClrIO
:For i,1,90,10
:  Output i, rand(100),"Hello"
:EndFor
   ⋮
```

Result after execution:

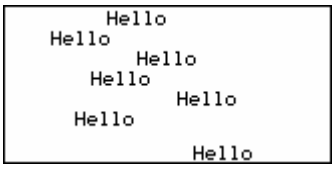

Downloaded from www.Manualslib.com manuals search engine

P▶Rx() MATH/Angle menu

P▶Rx(*rExpression*, θ*Expression*) ⇒ *expression*
P▶Rx(*rList*, θ*List*) ⇒ *list*
P▶Rx(*rMatrix*, θ*Matrix*) ⇒ *matrix*

Returns the equivalent x-coordinate of the (r, θ) pair.

Note: The θ argument is interpreted as either a degree, gradian or radian angle, according to the current angle mode. If the argument is an expression, you can use ° , ᵍ or ʳ to override the angle mode setting temporarily.

In Radian angle mode:

P▶Rx(r,θ) ENTER → cos(θ)•r

P▶Rx(4,60°) ENTER → 2

P▶Rx({-3,10,1.3},{π/3,-π/4,0}) ENTER

$$\left\{-3/2 \quad 5\cdot\sqrt{2} \quad 1.3\right\}$$

P▶Ry() MATH/Angle menu

P▶Ry(*rExpression*, θ*Expression*) ⇒ *expression*
P▶Ry(*rList*, θ*List*) ⇒ *list*
P▶Ry(*rMatrix*, θ*Matrix*) ⇒ *matrix*

Returns the equivalent y-coordinate of the (r, θ) pair.

Note: The θ argument is interpreted as either a degree, radian or gradian angle, according to the current angle mode. If the argument is an expression, you can use ° , ᵍ or ʳ to override the angle mode setting temporarily.

In Radian angle mode:

P▶Ry(r,θ) ENTER → sin(θ)•r

P▶Ry(4,60°) ENTER → $2\cdot\sqrt{3}$

P▶Ry({-3,10,1.3},{π/3,-π/4,0}) ENTER

$$\left\{\frac{-3\cdot\sqrt{3}}{2} \quad -5\cdot\sqrt{2} \quad 0.\right\}$$

part() CATALOG

part(*expression1*[**,***nonNegativeInteger*]**)**

This advanced programming function lets you identify and extract all of the sub-expressions in the simplified result of *expression1*.

For example, if *expression1* simplifies to cos(π∗ x+3):

- The **cos()** function has one argument: (π∗ x+3).
- The sum of (π∗ x+3) has two operands: π∗ x and 3.
- The number 3 has no arguments or operands.
- The product π∗ x has two operands: π and x.
- The variable x and the symbolic constant π have no arguments or operands.

If x has a numeric value and you press ◆ ENTER, the numeric value of π∗ x is calculated, the result is added to 3, and then the cosine is calculated. **cos()** is the **top-level** operator because it is applied **last**.

---

part(*expression1***)** ⇒ *number*

Simplifies *expression1* and returns the number of top-level arguments or operands. This returns 0 if *expression1* is a number, variable, or symbolic constant such as π, *e*, ***i***, or ∞.

part(cos(π∗x+3)) ENTER → 1

Note: cos(π∗ x+3) has one argument.

part(*expression1***, 0)** ⇒ *string*

Simplifies *expression1* and returns a string that contains the top-level function name or operator. This returns **string(***expression1***)** if *expression1* is a number, variable, or symbolic constant such as π, *e*, ***i***, or ∞.

part(cos(π∗x+3),0) ENTER → "cos"

Downloaded from www.Manualslib.com manuals search engine

part(*expression1***, *n*)** ⇒ *expression*

Simplifies *expression1* and returns the nth argument or operand, where *n* is > 0 and ≤ the number of top-level arguments or operands returned by **part(***expression1***)**. Otherwise, an error is returned.

```
part(cos(π*x+3),1) ENTER          3+π•x
```

Note: Simplification changed the order of the argument.

By combining the variations of **part()**, you can extract all of the sub-expressions in the simplified result of *expression1*. As shown in the example to the right, you can store an argument or operand and then use **part()** to extract further sub-expressions.

Note: When using **part()**, do not rely on any particular order in sums and products.

```
part(cos(π*x+3)) ENTER                1
part(cos(π*x+3),0) ENTER           "cos"
part(cos(π*x+3),1)→temp ENTER
                                  3+π•x
temp ENTER                        π•x+3
part(temp,0) ENTER                  "+"
part(temp) ENTER                      2
part(temp,2) ENTER                    3
part(temp,1)→temp ENTER             π•x
part(temp,0) ENTER                  "*"
part(temp) ENTER                      2
part(temp,1) ENTER                    π
part(temp,2) ENTER                    x
```

Expressions such as (x+y+z) and (x− y− z) are represented internally as (x+y)+z and (x− y)− z. This affects the values returned for the first and second argument. There are technical reasons why **part(**x+y+z,1**)** returns y+x instead of x+y.

```
part(x+y+z) ENTER                     2
part(x+y+z,2) ENTER                   z
part(x+y+z,1) ENTER                 y+x
```

Similarly, x* y* z is represented internally as (x* y)* z. Again, there are technical reasons why the first argument is returned as y • x instead of x • y.

```
part(x*y*z) ENTER                     2
part(x*y*z,2) ENTER                   z
part(x*y*z,1) ENTER                 y•x
```

When you extract sub-expressions from a matrix, remember that matrices are stored as lists of lists, as illustrated in the example to the right.

```
part([a,b,c;x,y,z],0) ENTER         "{"
part([a,b,c;x,y,z]) ENTER             2
part([a,b,c;x,y,z],2)→temp ENTER
                                {x  y  z}
part(temp,0) ENTER                  "{"
part(temp) ENTER                      3
part(temp,3) ENTER                    z
delVar temp ENTER                  Done
```

The example Program Editor function to the right uses **getType()** and **part()** to partially implement symbolic differentiation. Studying and completing this function can help teach you how to differentiate manually. You could even include functions that the cannot differentiate, such as Bessel functions.

```
:d(y,x)
:Func
:Local f
:If getType(y)="VAR"
:  Return when(y=x,1,0,0)
:If part(y)=0
:  Return 0 ◉ y=π,∞,i,numbers
:part(y,0)→f
:If f="-" ◉ if negate
:  Return -d(part(y,1),x)
:If f="−" ◉ if minus
:  Return d(part(y,1),x)
     -d(part(y,2),x)
:If f="+"
:  Return d(part(y,1),x)
     +d(part(y,2),x)
:If f="*"
:  Return part(y,1)*d(part(y,2),x)
     +part(y,2)*d(part(y,1),x)
:If f="{"
:  Return seq(d(part(y,k),x),
     k,1,part(y))
:Return undef
:EndFunc
```


Downloaded from www.Manualslib.com manuals search engine

PassErr CATALOG

PassErr

Passes an error to the next level.

If "errornum" is zero, **PassErr** does not do anything.

The **Else** clause in the program should use **ClrErr** or **PassErr**. If the error is to be processed or ignored, use **ClrErr**. If what to do with the error is not known, use **PassErr** to send it to the next error handler. (See also **ClrErr**.)

See **ClrErr** program listing example.

Pause CATALOG

Pause [*expression*]

Suspends program execution. If you include *expression*, displays *expression* on the Program I/O screen.

expression can include conversion operations such as ▸**DD** and ▸**Rect**. You can also use the ▸ operator to perform unit and number base conversions.

If the result of *expression* is too big to fit on a single screen, you can use the cursor pad to scroll the display.

Program execution resumes when you press ENTER.

Program segment:

```
  ⋮
:ClrIO
:DelVar temp
:1→temp[1]
:1→temp[2]
:Disp temp[2]
:◉ Guess the Pattern
:For i,3,20
:  temp[i-2]+temp[i-1]→temp[i]
:  Disp temp[i]
:  Disp temp,"Can you guess the
     next","number?"
:  Pause
:EndFor
  ⋮
```

PlotsOff CATALOG

PlotsOff [**1**] [**, 2**] [**, 3**] **...** [**, 9**]

Turns off the specified plots for graphing. When in 2-graph mode, only affects the active graph.

If no parameters, then turns off all plots.

```
PlotsOff 1,2,5 ENTER          Done
PlotsOff ENTER                Done
```

PlotsOn CATALOG

PlotsOn [**1**] [**, 2**] [**, 3**] **...** [**, 9**]

Turns on the specified plots for graphing. When in 2-graph mode, only affects the active graph.

If you do not include any arguments, turns on all plots.

```
PlotsOn 2,4,5 ENTER           Done
PlotsOn ENTER                 Done
```

▸Polar MATH/Matrix/Vector ops menu


vector ▸**Polar**

Displays *vector* in polar form [r ∠θ]. The vector must be of dimension 2 and can be a row or a column.

Note: ▸**Polar** is a display-format instruction, not a conversion function. You can use it only at the end of an entry line, and it does not update ans.

Note: See also ▸**Rect**.

```
[1,3.]▸Polar ENTER
[x,y]▸Polar ENTER
```

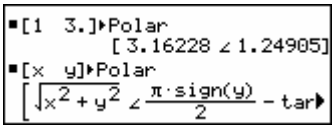

Downloaded from www.Manualslib.com manuals search engine

complexValue ▸**Polar**

Displays *complexVector* in polar form.

- Degree angle mode returns (r∠θ).
- Radian angle mode returns $re^{i\theta}$.

complexValue can have any complex form. However, an $re^{i\theta}$ entry causes an error in Degree angle mode.

Note: You must use the parentheses for an (r∠θ) polar entry.

In Radian angle mode:

3+4*i*▸Polar ENTER → $e^{i\cdot\left(\frac{\pi}{2}-\tan^{-1}(3/4)\right)}\cdot 5$

(4∠π/3)▸Polar ENTER → $e^{\frac{i\cdot\pi}{3}}\cdot 4$

In Gradian angle mode:

4*i*▸Polar ENTER → (4∠100)

In Degree angle mode:

3+4*i*▸Polar ENTER → (5∠90−tan⁻¹(3/4))

polyEval() MATH/List menu

polyEval(*list1***,** *expression1***)** ⇒ *expression*
polyEval(*list1***,** *list2***)** ⇒ *expression*

Interprets the first argument as the coefficient of a descending-degree polynomial, and returns the polynomial evaluated for the value of the second argument.

polyEval({a,b,c},x) ENTER → $a\cdot x^2+b\cdot x+c$

polyEval({1,2,3,4},2) ENTER → 26

polyEval({1,2,3,4},{2,⁻7}) ENTER → {26 ⁻262}

PopUp CATALOG

PopUp *itemList*, *var*


Displays a pop-up menu containing the character strings from *itemList*, waits for you to select an item, and stores the number of your selection in *var*.

The elements of *itemList* must be character strings: {*item1String*, *item2String*, *item3String*, ...}

If *var* already exists and has a valid item number, that item is displayed as the default choice.

itemList must contain at least one choice.

PopUp
{"1990","1991","1992"},var1 ENTER



Downloaded from www.Manualslib.com manuals search engine

PowerReg MATH/Statistics/Regressions menu

PowerReg *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]

Calculates the power regression and updates all the system statistics variables.

All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99.


In function graphing mode:

```
{1,2,3,4,5,6,7}→L1 ENTER
                          {1 2 3 ...}
{1,2,3,4,3,4,6}→L2 ENTER
                          {1 2 3 ...}
PowerReg L1,L2 ENTER          Done
ShowStat ENTER
```




```
ENTER
Regeq(x)→y1(x) ENTER          Done
NewPlot 1,1,L1,L2 ENTER       Done
```

◆[GRAPH]

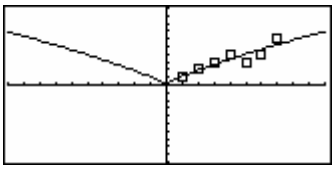

Prgm CATALOG

Prgm
⋮
EndPrgm

Required instruction that identifies the beginning of a program. Last line of program must be **EndPrgm**.

Program segment:

```
:prgmname()
:Prgm
:
:EndPrgm
```

Product (Pl) See Π(), page 908.

product() MATH/List menu

product(*list***[**, *start***[**, *end***]])** ⇒ *expression*

Returns the product of the elements contained in *list*. *Start* and *end* are optional. They specify a range of elements.

```
product({1,2,3,4}) ENTER          24
product({2,x,y}) ENTER          2•x•y
product({4,5,8,9},2,3) ENTER      40
```

---

product(*matrix1***[**, *start***[**, *end***]])** ⇒ *matrix*

Returns a row vector containing the products of the elements in the columns of *matrix1*. *Start* and *end* are optional. They specify a range of rows.

```
product([1,2,3;4,5,6;7,8,9]) ENTER
                          [28 80 162]
product([1,2,3;4,5,6;7,8,9],
1,2) ENTER                [4,10,18]
```

Prompt CATALOG

Prompt *var1*[, *var2*] [, *var3*] **...**

Displays a prompt on the Program I/O screen for each variable in the argument list, using the prompt var1?. Stores the entered expression in the corresponding variable.

Prompt must have at least one argument.

Program segment:

```
  ⋮
Prompt A,B,C
  ⋮
EndPrgm
```


Downloaded from www.Manualslib.com manuals search engine

propFrac() MATH/Algebra menu


propFrac(*expression1*[**,** *var*]**)** ⇒ *expression*

propFrac(*rational_number***)** returns *rational_number* as the sum of an integer and a fraction having the same sign and a greater denominator magnitude than numerator magnitude.

```
propFrac(4/3) ENTER                    1 + 1/3
propFrac(-4/3) ENTER                   -1-1/3
```


propFrac(*rational_expression,var***)** returns the sum of proper ratios and a polynomial with respect to *var*. The degree of *var* in the denominator exceeds the degree of *var* in the numerator in each proper ratio. Similar powers of *var* are collected. The terms and their factors are sorted with *var* as the main variable.

```
propFrac((x^2+x+1)/(x+1)+
(y^2+y+1)/(y+1),x) ENTER
```

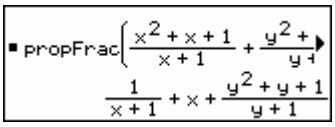

If *var* is omitted, a proper fraction expansion is done with respect to the most main variable. The coefficients of the polynomial part are then made proper with respect to their most main variable first and so on.

```
propFrac(ans(1))
```



For rational expressions, **propFrac()** is a faster but less extreme alternative to **expand()**.


PtChg CATALOG

PtChg *x*, *y*
PtChg *xList*, *yList*

Displays the Graph screen and reverses the screen pixel nearest to window coordinates (*x*, *y*).

Note: **PtChg** through **PtText** show continuing similar examples.

```
PtChg 2,4 ENTER
```

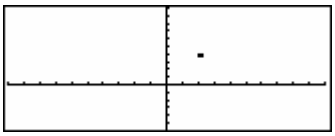


PtOff CATALOG

PtOff *x*, *y*
PtOff *xList*, *yList*

Displays the Graph screen and turns off the screen pixel nearest to window coordinates (*x*, *y*).

```
PtOff 2,4 ENTER
```

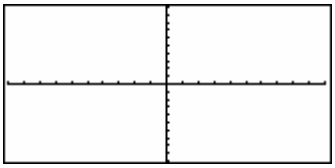


PtOn CATALOG

PtOn *x*, *y*
PtOn *xList*, *yList*

Displays the Graph screen and turns on the screen pixel nearest to window coordinates (*x*, *y*).

```
PtOn 3,5 ENTER
```

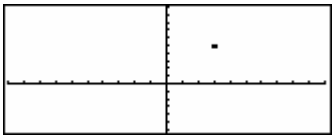

ptTest() CATALOG

ptTest (*x*, *y***)** ⇒ *Boolean constant expression*
ptTest (*xList*, *yList***)** ⇒ *Boolean constant expression*

Returns true or false. Returns true only if the screen pixel nearest to window coordinates (*x*, *y*) is on.

```
ptTest(3,5) ENTER                      true
```


Downloaded from www.Manualslib.com manuals search engine


PtText CATALOG

PtText *string*, *x*, *y*

Displays the Graph screen and places the character string *string* on the screen at the pixel nearest the specified (*x*, *y*) window coordinates.

string is positioned with the upper-left corner of its first character at the coordinates.

```
PtText "sample",3,5 ENTER
```

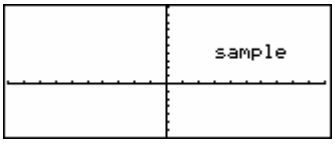


PxlChg CATALOG

PxlChg *row*, *col*
PxlChg *rowList*, *colList*

Displays the Graph screen and reverses the pixel at pixel coordinates (*row*, *col*).

Note: Regraphing erases all drawn items.

```
PxlChg 2,4 ENTER
```

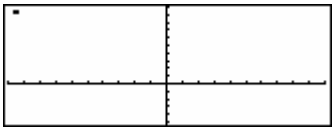

PxlCrcl CATALOG


PxlCrcl *row*, *col*, *r* [, *drawMode*]

Displays the Graph screen and draws a circle centered at pixel coordinates (*row*, *col*) with a radius of *r* pixels.

If *drawMode* = 1, draws the circle (default).
If *drawMode* = 0, turns off the circle.
If *drawMode* = -1, inverts pixels along the circle.

Note: Regraphing erases all drawn items. See also **Circle**.

```
PxlCrcl 40,80,30,1 ENTER
```

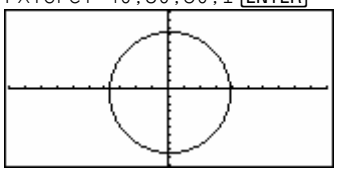

PxlHorz CATALOG


PxlHorz *row* [, *drawMode*]

Displays the Graph screen and draws a horizontal line at pixel position *row*.

If *drawMode* = 1, draws the line (default).
If *drawMode* = 0, turns off the line.
If *drawMode* = -1, turns a line that is on to off or off to on (inverts pixels along the line).

Note: Regraphing erases all drawn items. See also **LineHorz**.

```
PxlHorz 25,1 ENTER
```

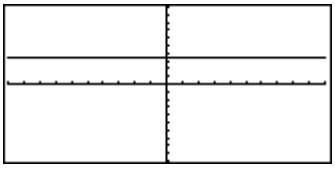

PxlLine CATALOG


PxlLine *rowStart*, *colStart*, *rowEnd*, *colEnd* [, *drawMode*]

Displays the Graph screen and draws a line between pixel coordinates (*rowStart*, *colStart*) and (*rowEnd*, *colEnd*), including both endpoints.

If *drawMode* = 1, draws the line (default).
If *drawMode* = 0, turns off the line.
If *drawMode* = -1, turns a line that is on to off or off to on (inverts pixels along the line).

Note: Regraphing erases all drawn items. See also **Line.**

```
PxlLine 50,15,20,90,1 ENTER
```

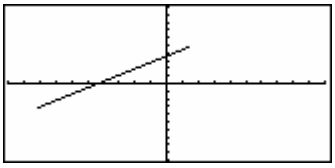

Downloaded from www.Manualslib.com manuals search engine


PxlOff CATALOG

PxlOff *row*, *col*
PxlOff *rowList*, *colList*

Displays the Graph screen and turns off the pixel at pixel coordinates (*row*, *col*).

Note: Regraphing erases all drawn items.

```
PxlHorz 25,1 ENTER
PxlOff 25,50 ENTER
```

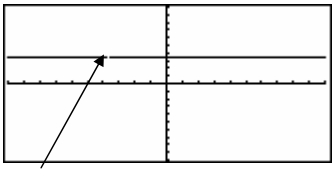

```
25,50
```


PxlOn CATALOG

PxlOn *row*, *col*
PxlOn *rowList*, *colList*

Displays the Graph screen and turns on the pixel at pixel coordinates (*row*, *col*).

Note: Regraphing erases all drawn items.

```
PxlOn 25,50 ENTER
```

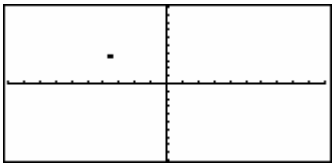

pxlTest() CATALOG

pxlTest (*row*, *col*) ⇒ *Boolean expression*
pxlTest (*rowList*, *colList*) ⇒ *Boolean expression*

Returns true if the pixel at pixel coordinates (*row*, *col*) is on. Returns false if the pixel is off.

Note: Regraphing erases all drawn items.

```
PxlOn 25,50 ENTER
HOME
PxlTest(25,50) ENTER                    true
PxlOff 25,50 ENTER
HOME
PxlTest(25,50) ENTER                    false
```

PxlText CATALOG


PxlText *string*, *row*, *col*

Displays the Graph screen and places character string *string* on the screen, starting at pixel coordinates (*row, col*).

string is positioned with the upper-left corner of its first character at the coordinates.

Note: Regraphing erases all drawn items.

```
PxlText "sample text",20,10 ENTER
```

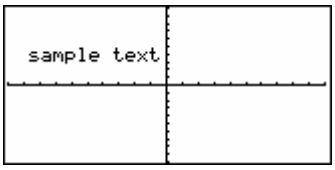

PxlVert CATALOG


PxlVert *col* [, *drawMode*]

Draws a vertical line down the screen at pixel position *col*.

If *drawMode* = 1, draws the line (default).
If *drawMode* = 0, turns off the line.
If *drawMode* = -1, turns a line that is on to off or off to on (inverts pixels along the line).

Note: Regraphing erases all drawn items. See also **LineVert**.

```
PxlVert 50,1 ENTER
```

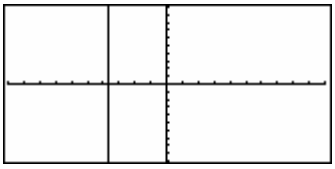

Downloaded from www.Manualslib.com manuals search engine

QR MATH/Matrix menu

QR *matrix*, *qMatName*, *rMatName*[, *tol*]

Calculates the Householder QR factorization of a real or complex *matrix*. The resulting Q and R matrices are stored to the specified *MatNames*. The Q matrix is unitary. The R matrix is upper triangular.

Optionally, any matrix element is treated as zero if its absolute value is less than *tol*. This tolerance is used only if the matrix has floating-point entries and does not contain any symbolic variables that have not been assigned a value. Otherwise, *tol* is ignored.

- If you use ◆ ENTER or set the mode to Exact/Approx=APPROXIMATE, computations are done using floating-point arithmetic.
- If *tol* is omitted or not used, the default tolerance is calculated as:

  5E−14 * **max(dim(***matrix***))** * **rowNorm(***matrix***)**

The QR factorization is computed numerically using Householder transformations. The symbolic solution is computed using Gram-Schmidt. The columns in *qMatName* are the orthonormal basis vectors that span the space defined by *matrix*.

The floating-point number (9.) in **m1** causes results to be calculated in floating-point form.

```
[1,2,3;4,5,6;7,8,9.]→m1 ENTER
```

$$\begin{bmatrix}1 & 2 & 3\\ 4 & 5 & 6\\ 7 & 8 & 9.\end{bmatrix}$$

```
QR m1,qm,rm ENTER                    Done
```

```
qm ENTER
```

$$\begin{bmatrix}.123\ldots & .904\ldots & .408\ldots\\ .492\ldots & .301\ldots & -.816\ldots\\ .861\ldots & -.301\ldots & .408\ldots\end{bmatrix}$$

```
rm ENTER
```

$$\begin{bmatrix}8.124\ldots & 9.601\ldots & 11.078\ldots\\ 0. & .904\ldots & 1.809\ldots\\ 0. & 0. & 0.\end{bmatrix}$$

```
[m,n;o,p]→m1 ENTER
```

$$\begin{bmatrix}m & n\\ o & p\end{bmatrix}$$

```
QR m1,qm,rm ENTER                    Done
```

```
qm ENTER
```

$$\begin{bmatrix}\frac{m}{\sqrt{m^2+o^2}} & \frac{-\text{sign}(m\cdot p-n\cdot o)\cdot o}{\sqrt{m^2+o^2}}\\ \frac{o}{\sqrt{m^2+o^2}} & \frac{m\cdot\text{sign}(m\cdot p-n\cdot o)}{\sqrt{m^2+o^2}}\end{bmatrix}$$

```
rm ENTER
```

$$\begin{bmatrix}\sqrt{m^2+o^2} & \frac{m\cdot n+o\cdot p}{\sqrt{m^2+o^2}}\\ 0 & \frac{|m\cdot p-n\cdot o|}{\sqrt{m^2+o^2}}\end{bmatrix}$$

QuadReg MATH/Statistics/Regressions menu

QuadReg *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]


Calculates the quadratic polynomial regression and updates the system statistics variables.

All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

In function graphing mode:

```
{0,1,2,3,4,5,6,7}→L1 ENTER
                              {1 2 3 ...}
{4,3,1,1,2,2,3,3}→L2 ENTER
                              {4 3 1 ...}
QuadReg L1,L2 ENTER                  Done
ShowStat ENTER
```

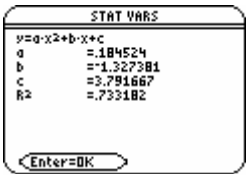

Downloaded from www.Manualslib.com manuals search engine


Note: *list1* through *list4* must be a variable name or c1–c99. (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99 .

ENTER

Regeq(x)→y1(x) ENTER Done

NewPlot 1,1,L1,L2 ENTER Done

◆[GRAPH]

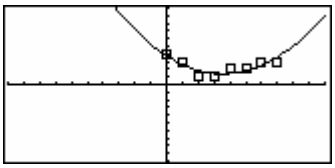

QuartReg MATH/Statistics/Regressions menu

QuartReg *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]

Calculates the quartic polynomial regression and updates the system statistics variables.

All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99.

In function graphing mode:

{-2,-1,0,1,2,3,4,5,6}→L1 ENTER

{-2 -1 0 ...}

{4,3,1,2,4,2,1,4,6}→L2 ENTER

{4 3 1 ...}

QuartReg L1,L2 ENTER Done

ShowStat ENTER




ENTER

Regeq(x)→y1(x) ENTER Done

NewPlot 1,1,L1,L2 ENTER Done

◆[GRAPH]

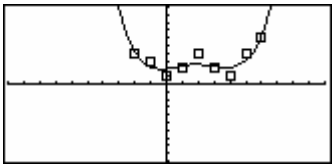

Downloaded from www.Manualslib.com manuals search engine

R▸Pθ() MATH/Angle menu


R▸Pθ (*xExpression***, *yExpression*)** ⇒ *expression*
R▸Pθ (*xList***, *yList*)** ⇒ *list*
R▸Pθ (*xMatrix***, *yMatrix*)** ⇒ *matrix*

Returns the equivalent θ-coordinate of the (*x*,*y*) pair arguments.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.


In Degree angle mode:

R▸Pθ(x,y) ENTER




In Gradian angle mode:

R▸Pθ(x,y) ENTER



In Radian angle mode:

R▸Pθ(3,2) ENTER
R▸Pθ([3,-4,2],[0,π/4,1.5]) ENTER

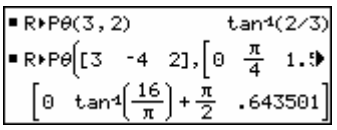


R▸Pr() MATH/Angle menu

R▸Pr (*xExpression***, *yExpression*)** ⇒ *expression*
R▸Pr (*xList***, *yList*)** ⇒ *list*
R▸Pr (*xMatrix***, *yMatrix*)** ⇒ *matrix*

Returns the equivalent r-coordinate of the (*x*,*y*) pair arguments.

In Radian angle mode:

R▸Pr(3,2) ENTER
R▸Pr(x,y) ENTER
R▸Pr([3,-4,2],[0,π/4,1.5]) ENTER

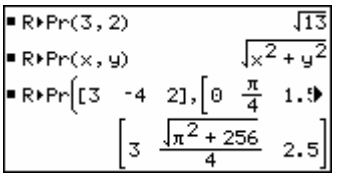

▸Rad CATALOG/MATH/Angle menu

▸Rad *expression*

Converts an expression to radian angle measure.

In Degree angle mode:

1.5 ▸Rad ENTER .02618^R

In Gradian angle mode:

1.5 ▸Rad ENTER .023562^R

rand() MATH/Probability menu

rand([*n*]) ⇒ *expression*

n is an integer ≠ zero.

With no parameter, returns the next random number between 0 and 1 in the sequence. When an argument is positive, returns a random integer in the interval [1, *n*].
When an argument is negative, returns a random integer in the interval [− *n*, − 1].

RandSeed 1147 ENTER Done

(Sets the random-number)

rand() ENTER .158...
rand(6) ENTER 5
rand(−100) ENTER −49

Downloaded from www.Manualslib.com manuals search engine

randMat() MATH/Probability menu

randMat(*numRows***, *numColumns*)** ⇒ *matrix*

Returns a matrix of integers between -9 and 9 of the specified dimension.

Both arguments must simplify to integers.

```
RandSeed 1147 ENTER                    Done
randMat(3,3) ENTER
```

$$\begin{bmatrix} 8 & -3 & 6 \\ -2 & 3 & -6 \\ 0 & 4 & -6 \end{bmatrix}$$

Note: The values in this matrix will change each time you press ENTER.

randNorm() MATH/Probability menu

randNorm(*mean***, *sd*)** ⇒ *expression*

Returns a decimal number from the specific normal distribution. It could be any real number but will be heavily concentrated in the interval [*mean*-3∗ *sd*, *mean*+3∗ *sd*].

```
RandSeed 1147 ENTER                    Done
randNorm(0,1) ENTER                    .492...
randNorm(3,4.5) ENTER                  -3.543...
```

randPoly() MATH/Probability menu

randPoly(*var***, *order*)** ⇒ *expression*

Returns a polynomial in *var* of the specified order. The coefficients are random integers in the range −9 through 9. The leading coefficient will not be zero.

order must be 0–99.

```
RandSeed 1147 ENTER                    Done
randPoly(x,5) ENTER
                        -2•x^5+3•x^4-6•x^3+4•x-6
```

RandSeed MATH/Probability menu

RandSeed *number*

If *number* = 0, sets the seeds to the factory defaults for the random-number generator. If *number* ≠ 0, it is used to generate two seeds, which are stored in system variables seed1 and seed2.

```
RandSeed 1147 ENTER                    Done
rand() ENTER                           .158...
```

RclGDB CATALOG

RclGDB *GDBvar*

Restores all the settings stored in the Graph database variable GDBvar.

For a listing of the settings, see **StoGDB**.

Note: It is necessary to have something saved in GDBvar before you can restore it.

```
RclGDB GDBvar ENTER                    Done
```

RclPic CATALOG

RclPic *picVar* [, *row*, *column*]

Displays the Graph screen and adds the picture stored in *picVar* at the upper left-hand corner pixel coordinates (*row*, *column*) using OR logic.

picVar must be a picture data type.

Default coordinates are (0, 0).

real() MATH/Complex menu

real(*expression1***)** ⇒ *expression*

Returns the real part of the argument.

Note: All undefined variables are treated as real variables. See also **imag()**.

```
real(2+3i) ENTER                       2
real(z) ENTER                          z
real(x+iy) ENTER                       x
```


Downloaded from www.Manualslib.com manuals search engine

real(*list1***)** ⇒ *list*

Returns the real parts of all elements.

```
real({a+i*b,3,i}) ENTER      {a  3  0}
```

real(*matrix1***)** ⇒ *matrix*

Returns the real parts of all elements.

```
real([a+i*b,3;c,i]) ENTER      [a  3]
                               [c  0]
```

▶Rect MATH/Matrix/Vector ops menu

vector **▶Rect**

Displays *vector* in rectangular form [x, y, z]. The vector must be of dimension 2 or 3 and can be a row or a column.

Note: **▶Rect** is a display-format instruction, not a conversion function. You can use it only at the end of an entry line, and it does not update ans.

Note: See also **▶Polar**.

```
[3,∠π/4,∠π/6]▶Rect ENTER
                [3·√2/4  3·√2/4  3·√3/2]

[a,∠b,∠c] ENTER     [a·cos(b)·sin(c)
                    a·sin(b)·sin(c)  a·cos(c)]
```

complexValue **▶Rect**

Displays *complexValue* in rectangular form a+b***i***. The *complexValue* can have any complex form. However, an re^{θ} entry causes an error in Degree angle mode.

Note: You must use parentheses for an (r∠θ) polar entry.

In Radian angle mode:

```
4e^(π/3)▶Rect ENTER          4·e^(π/3)

(4∠π/3)▶Rect ENTER           2+2·√3·i
```

In Gradian angle mode:

```
(1∠100)▶Rect ENTER           i
```

In Degree angle mode:

```
(4∠60)▶Rect ENTER            2+2·√3·i
```

Note: To type **▶Rect** from the keyboard, press 2nd [▶] for the ▶ operator. To type ∠, press 2nd [∠].

ref() MATH/Matrix menu

ref(*matrix1***[, *tol*])** ⇒ *matrix*

Returns the row echelon form of *matrix1*.

Optionally, any matrix element is treated as zero if its absolute value is less than *tol*. This tolerance is used only if the matrix has floating-point entries and does not contain any symbolic variables that have not been assigned a value. Otherwise, *tol* is ignored.

- If you use ◆ ENTER or set the mode to Exact/Approx=APPROXIMATE, computations are done using floating-point arithmetic.
- If *tol* is omitted or not used, the default tolerance is calculated as:

  5E⁻14 * **max(dim(***matrix1***))** * **rowNorm(***matrix1***)**

Note: See also **rref()**.

```
ref([-2,-2,0,-6;1,-1,9,-9;-5,
2,4,-4]) ENTER
                [1  -2/5  -4/5   4/5 ]
                [0   1    4/7   11/7 ]
                [0   0    1    -62/71]

[a,b,c;e,f,g]→m1 ENTER      [a  b  c]
                            [e  f  g]

ref(m1) ENTER               [1  f/e  g/e          ]
                            [0  1    (a·g-c·e)/(a·f-b·e)]
```


Downloaded from www.Manualslib.com manuals search engine

remain() MATH/Number menu

remain(*expression1***,** *expression2***)** ⇒ *expression*
remain(*list1***,** *list2***)** ⇒ *list*
remain(*matrix1***,** *matrix2***)** ⇒ *matrix*

Returns the remainder of the first argument with respect to the second argument as defined by the identities:

remain(x,0) ≡ x
remain(x,y) ≡ x− y∗iPart(x/y)

As a consequence, note that **remain(**− x,y**)** ≡ − **remain(**x,y**)**. The result is either zero or it has the same sign as the first argument.

Note: See also **mod()**.

```
remain(7,0) ENTER                                   7
remain(7,3) ENTER                                   1
remain(-7,3) ENTER                                  -1
remain(7,-3) ENTER                                  1
remain(-7,-3) ENTER                                 -1
remain({12,-14,16},{9,7,-5}) ENTER
                                                    {3  0  1}
remain([9,-7;6,4],[4,3;4,-3]) ENTER
                                                    [1  -1]
                                                    [2  1 ]
```

Rename CATALOG

Rename *oldVarName***,** *newVarName*

Renames the variable *oldVarName* as *newVarName*.

```
{1,2,3,4}→L1 ENTER                                  {1,2,3,4}
Rename L1, list1 ENTER                              Done
list1 ENTER                                         {1,2,3,4}
```

Request CATALOG

Request *promptString*, *var* [*,alphaOn/Off*]


If Request is inside a Dialog...EndDlog construct, it creates an input box for the user to type in data. If it is a stand-alone instruction, it creates a dialog box for this input. In either case, if var contains a string, it is displayed and highlighted in the input box as a default choice. promptString must be ≤ 20 characters.

This instruction can be stand-alone or part of a dialog construct.

The optional alphaOn/Off argument can be any expression. If it evaluates to zero, alpha-lock is set to OFF. If it evaluates to anything other than zero, alpha-lock is set to ON. If the optional argument is not used, alpha-lock defaults to ON.


If more than one Request command appears within a Dialog...EndDlog construct, the first alpha setting is used and subsequent ones are ignored.

```
Request "Enter text",t,1 ENTER
```

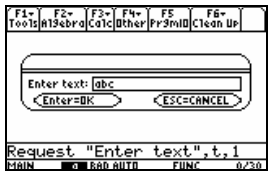

The argument turned on alpha-lock in the above example.

```
Request "Enter number",n,0
```

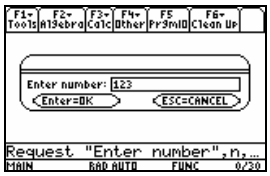

The argument turned off alpha-lock in the above example.

Return CATALOG

Return [*expression***]**

Returns *expression* as the result of the function. Use within a **Func**...**EndFunc** block, or **Prgm**...**EndPrgm** block.

Note: Use **Return** without an argument to exit a program.

Note: Enter the text as one long line on the Home screen (without line breaks).

```
Define factoral(nn)=Func
:local answer,count:1→answer
:For count,1,nn
:answer∗count→answer:EndFor
:Return answer:EndFunc ENTER                        Done

factoral(3) ENTER                                   6
```


Downloaded from www.Manualslib.com manuals search engine

right() MATH/List menu

right(*list1***[, *num*])** ⇒ *list*

Returns the rightmost *num* elements contained in *list1*.

If you omit *num*, returns all of *list1*.

```
right({1,-2,4},3) ENTER
                  {3 -2 4}
```

---

right(*sourceString***[, *num*])** ⇒ *string*

Returns the rightmost *num* characters contained in character string *sourceString*.

If you omit *num*, returns all of *sourceString*.

```
right("Hello",2) ENTER   "lo"
```

---

right(*comparison***)** ⇒ *expression*

Returns the right side of an equation or inequality.

```
right(x<3) ENTER   3
```

root() CATALOG/MATH/Number menu

root(*expression***)** ⇒ *root*

Computes an nth root of x where x can be a real or complex floating point constant, an integer or complex rational constant, or a general symbolic expression.

```
root(8,3) ENTER   2
root(3,3) ENTER   3^1/3
root(3,0.3) ENTER   1.442249570
```


rotate() MATH/Base menu

rotate(*integer1***[,*#ofRotations*])** ⇒ *integer*

Rotates the bits in a binary integer. You can enter *integer1* in any number base; it is converted automatically to a signed, 32-bit binary form. If the magnitude of *integer1* is too large for this form, a symmetric modulo operation brings it within the range.

If *#of Rotations* is positive, the rotation is to the left. If *#of Rotations* is negative, the rotation is to the right. The default is −1 (rotate right one bit).

For example, in a right rotation:

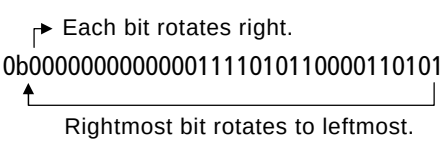

produces:

0b10000000000000011110101100001101O

The result is displayed according to the Base mode.

In Bin base mode:

```
rotate(0b1111010110000110101) ENTER
    0b10000000000000011110101100001101O
rotate(256,1) ENTER   0b1000000000
```

In Hex base mode:

```
rotate(0h78E) ENTER   0h3C7
rotate(0h78E,-2) ENTER   0h800001E3
rotate(0h78E,2) ENTER   0h1E38
```

Important: To enter a binary or hexadecimal number, always use the 0b or 0h prefix (zero, not the letter O).

---

rotate(*list1***[,*#ofRotations*])** ⇒ *list*

Returns a copy of *list1* rotated right or left by *#of Rotations* elements. Does not alter *list1*.

If *#of Rotations* is positive, the rotation is to the left. If *#of Rotations* is negative, the rotation is to the right. The default is −1 (rotate right one element).

In Dec base mode:

```
rotate({1,2,3,4}) ENTER
                  {4 1 2 3}
rotate({1,2,3,4},-2) ENTER
                  {3 4 1 2}
rotate({1,2,3,4},1) ENTER
                  {2 3 4 1}
```


Downloaded from www.Manualslib.com manuals search engine

rotate(*string1***[,***#ofRotations***])** ⇒ *string*

Returns a copy of *string1* rotated right or left by *#of Rotations* characters. Does not alter *string1*.

If *#of Rotations* is positive, the rotation is to the left. If *#of Rotations* is negative, the rotation is to the right. The default is −1 (rotate right one character).

```
rotate("abcd") ENTER                    "dabc"
rotate("abcd",-2) ENTER                 "cdab"
rotate("abcd",1) ENTER                  "bcda"
```

round() MATH/Number menu

round(*expression1***[, *digits*])** ⇒ *expression*

Returns the argument rounded to the specified number of digits after the decimal point.

digits must be an integer in the range 0–12. If *digits* is not included, returns the argument rounded to 12 significant digits.

Note: Display digits mode may affect how this is displayed.

```
round(1.234567,3) ENTER                 1.235
```

round(*list1***[, *digits*])** ⇒ *list*

Returns a list of the elements rounded to the specified number of digits.

```
round({π,√(2),ln(2)},4) ENTER
                        {3.1416 1.4142 .6931}
```

round(*matrix1***[, *digits*])** ⇒ *matrix*

Returns a matrix of the elements rounded to the specified number of digits.

```
round([ln(5),ln(3);π,e^(1)],1) ENTER
                                [1.6  1.1]
                                [3.1  2.7]
```

rowAdd() MATH/Matrix/Row ops menu

rowAdd(*matrix1***, *rIndex1*, *rIndex2*)** ⇒ *matrix*

Returns a copy of *matrix1* with row *rIndex2* replaced by the sum of rows *rIndex1* and *rIndex2*.

```
rowAdd([3,4;-3,-2],1,2) ENTER
                                [3  4]
                                [0  2]

rowAdd([a,b;c,d],1,2) ENTER
                                [a    b  ]
                                [a+c  b+d]
```

rowDim() MATH/Matrix/Dimensions menu

rowDim(*matrix***)** ⇒ *expression*

Returns the number of rows in *matrix*.

Note: See also **colDim()**.

```
[1,2;3,4;5,6]→M1 ENTER                  [1  2]
                                        [3  4]
                                        [5  6]
rowdim(M1) ENTER                        3
```

rowNorm() MATH/Matrix/Norms menu

rowNorm(*matrix***)** ⇒ *expression*

Returns the maximum of the sums of the absolute values of the elements in the rows in *matrix*.

Note: All matrix elements must simplify to numbers. See also **colNorm()**.

```
rowNorm([-5,6,-7;3,4,9;9,-9,-7])
ENTER                                   25
```


Downloaded from www.Manualslib.com manuals search engine

rowSwap() MATH/Matrix/Row ops menu

rowSwap(*matrix1***, *rIndex1*, *rIndex2*)** ⇒ *matrix*

Returns *matrix1* with rows *rIndex1* and *rIndex2* exchanged.

```
[1,2;3,4;5,6]→Mat ENTER
```

$$\begin{bmatrix} 1 & 2 \\ 3 & 4 \\ 5 & 6 \end{bmatrix}$$

```
rowSwap(Mat,1,3) ENTER
```

$$\begin{bmatrix} 5 & 6 \\ 3 & 4 \\ 1 & 2 \end{bmatrix}$$

RplcPic CATALOG

RplcPic *picVar*[**,** *row*][**,** *column*]

Clears the Graph screen and places picture *picVar* at pixel coordinates (*row*, *column*). If you do not want to clear the screen, use **RclPic**.

picVar must be a picture data type variable. *row* and *column*, if included, specify the pixel coordinates of the upper left corner of the picture. Default coordinates are (0, 0).

Note: For less than full-screen pictures, only the area affected by the new picture is cleared.

rref() MATH/Matrix menu

rref(*matrix1*[**,** *tol*]**)** ⇒ *matrix*

Returns the reduced row echelon form of *matrix1*.

```
rref([-2,-2,0,-6;1,-1,9,-9;
-5,2,4,-4]) ENTER
```

$$\begin{bmatrix} 1 & 0 & 0 & 66/71 \\ 0 & 1 & 0 & \frac{147}{71} \\ 0 & 0 & 1 & -62/71 \end{bmatrix}$$

Optionally, any matrix element is treated as zero if its absolute value is less than *tol*. This tolerance is used only if the matrix has floating-point entries and does not contain any symbolic variables that have not been assigned a value. Otherwise, *tol* is ignored.

```
rref([a,b,x;c,d,y]) ENTER
```

$$\begin{bmatrix} 1 & 0 & \frac{d \cdot x - b \cdot y}{a \cdot d - b \cdot c} \\ 0 & 1 & \frac{-(c \cdot x - a \cdot y)}{a \cdot d - b \cdot c} \end{bmatrix}$$

- If you use ◆ ENTER or set the mode to Exact/Approx=APPROXIMATE, computations are done using floating-point arithmetic.
- If *tol* is omitted or not used, the default tolerance is calculated as:

  5E-14 * **max(dim(***matrix1***))** * **rowNorm(***matrix1***)**

Note: See also **ref()**.

sec() MATH/Trig menu

sec(*expression1***)** ⇒ *expression*
sec(*list1***)** ⇒ *list*

Returns the secant of *expression1* or returns a list containing the secants of all elements in *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

```
sec(45) ENTER
```

$$\sqrt{(2)}$$

```
sec({1,2.3,4}) ENTER
```

$$\left\{ \frac{1}{\cos(1)} \quad 1.000\ldots \quad \frac{1}{\cos(4)} \right\}$$

Downloaded from www.Manualslib.com manuals search engine

sec⁻¹() MATH/Trig menu

sec⁻¹(*expression1***)** ⇒ *expression*
sec⁻¹(*list1***)** ⇒ *list*

Returns the angle whose secant is *expression1* or returns a list containing the inverse secants of each element of *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

sec⁻¹(1) ENTER 0

In Gradian angle mode:

sec⁻¹(√2) ENTER 50

In Radian angle mode:

sec⁻¹({1,2,5}) ENTER

$\{0 \ \frac{\pi}{3} \ \cos^{-1}(1/5)\}$

sech() MATH/Hyperbolic menu

sech(*expression1***)** ⇒ *expression*
sech(*list1***)** ⇒ *list*

Returns the hyperbolic secant of *expression1* or returns a list containing the hyperbolic secants of the *list1* elements.

sech(3) ENTER $\frac{1}{\cosh(3)}$

sech({1,2.3,4}) ENTER

$\{\frac{1}{\cosh(1)} \ .198... \ \frac{1}{\cosh(4)}\}$

sech⁻¹() MATH/Hyperbolic menu

sech⁻¹(*expression1***)** ⇒ *expression*
sech⁻¹ (*list1***)** ⇒ *list*

Returns the inverse hyperbolic secant of *expression1* or returns a list containing the inverse hyperbolic secants of each element of *list1*.

In Radian angle and Rectangular complex mode:

sech⁻¹(1) ENTER 0

sech⁻¹({1,-2,2.1}) ENTER

$\{0 \ (\frac{2 \cdot \pi}{3}) \cdot i \ 1.074... \cdot i\}$

Send CATALOG

Send *list*

CBL 2™ (Calculator-Based Laboratory™) or CBR™ (Calculator-Based Ranger™) instruction. Sends *list* to the link port.

Program segment:

```
   ⋮
:Send {1,0}
:Send {1,2,1}
   ⋮
```

SendCalc CATALOG

SendCalc *var*

Sends variable *var* to the link port, where another unit linked to that port can receive the variable value. The receiving unit must be on the Home screen or must execute **GetCalc** from a program.

If you send from a TI-89, TI-92 Plus, or Voyage™ 200 to a TI-92, an error occurs if the TI-92 executes **GetCalc** from a program. In this case, the sending unit must use **SendChat** instead.

Program segment:

```
   ⋮
:a+b→x
:SendCalc x
   ⋮
```


Downloaded from www.Manualslib.com manuals search engine

SendCalc *var[,port]*

Sends contents of *var* from a TI-89 Titanium to another TI-89 Titanium.

If the port is not specified, or *port = 0* is specified, the TI-89 Titanium sends data using the USB port if connected, if not, it will send using the I/O port.

If *port = 1*, the TI-89 Titanium sends data using the USB port only.

If *port = 2*, the TI-89 Titanium sends data using the I/O port only.

SendChat CATALOG

SendChat *var*

A general alternative to **SendCalc**, this is useful if the receiving unit is a TI–92 (or for a generic "chat" program that allows either a TI–92, Voyage™ 200, or TI–92 Plus to be used). Refer to **SendCalc** for more information.

SendChat sends a variable only if that variable is compatible with the TI–92, which is typically true in "chat" programs. However, **SendChat** will not send an archived variable, a TI–89 graph data base, etc.

Program segment:

```
   ⋮
:a+b→x
:SendChat x
   ⋮
```

seq() MATH/List menu

seq(*expression***,** *var***,** *low***,** *high***[,** *step***])** ⇒ *list*

Increments *var* from *low* through *high* by an increment of *step*, evaluates *expression*, and returns the results as a list. The original contents of *var* are still there after **seq()** is completed.

var cannot be a system variable.

The default value for *step* = 1.

```
seq(n^2,n,1,6) ENTER
                        {1 4 9 16 25 36}
seq(1/n,n,1,10,2) ENTER
                      {1 1/3 1/5 1/7 1/9}
sum(seq(1/n^2,n,1,10,1)) ENTER
                                   196...
                                   127...
or press ◆ ENTER to get:      1.549...
```

setDate() CATALOG

setDate(*year,month,day***)** ⇒ *listold*

Sets the clock to the date given in the argument and returns a list. (**Note:** The *year* must fall in the range 1997 - 2132.) The returned list is in {*yearold,monthold,dayold*} format. The returned date is the previous clock value.

Enter the year as a four-digit integer. The month and day can be either one- or two-digit integers.

```
setDate(2001,10,31) ENTER
                          {2001  11  1}
```

setDtFmt() CATALOG

setDtFmt(*integer***)** ⇒ *integerold*

Sets the date format for the desktop according to the argument and returns the previous date format value.

Integer values:

```
1 = MM/DD/YY   5 = YY.MM.DD
2 = DD/MM/YY   6 = MM-DD-YY
3 = MM.DD.YY   7 = DD-MM-YY
4 = DD.MM.YY   8 = YY-MM-DD
```


Downloaded from www.Manualslib.com manuals search engine

setFold() CATALOG

setFold(*newfolderName***)** ⇒ *oldfolderString*

Returns the name of the current folder as a string and sets *newfolderName* as the current folder.

The folder *newfolderName* must exist.

```
newFold chris ENTER                    Done
setFold(main) ENTER                    "chris"
setFold(chris)→oldfoldr ENTER          "main"
1→a ENTER                              1
setFold(#oldfoldr) ENTER               "chris"
a ENTER                                a
chris\a ENTER                          1
```

setGraph() CATALOG

setGraph(*modeNameString***, *settingString*)** ⇒ *string*

Sets the Graph mode *modeNameString* to *settingString*, and returns the previous setting of the mode. Storing the previous setting lets you restore it later.

modeNameString is a character string that specifies which mode you want to set. It must be one of the mode names from the table below.

settingString is a character string that specifies the new setting for the mode. It must be one of the settings listed below for the specific mode you are setting.

```
setGraph("Graph Order","Seq")
ENTER                                  "SEQ"
setGraph("Coordinates","Off")
ENTER                                  "RECT"
```

Note: Capitalization and blank spaces are optional when entering mode names.

Mode Name	Settings
"Coordinates"	"Rect", "Polar", "Off"
"Graph Order"	"Seq", "Simul" [1]
"Grid"	"Off", "On" [2]
"Axes"	"Off", "On" (not 3D graph mode) "Off", "Axes", "Box" (3D graph mode)
"Leading Cursor"	"Off", "On" [2]
"Labels"	"Off", "On"
"Style"	"Wire Frame", "Hidden Surface", "Contour Levels", "Wire and Contour", "Implicit Plot" [3]
"Seq Axes"	"Time", "Web", "U1-vs-U2" [4]
"DE Axes"	"Time", "t-vs-y' ", "y-vs-y' ", "y1-vs-y2", "y1-vs-y2' ", "y1'-vs-y2' " [5] **Tip:** To type a prime symbol ('), press 2nd [′].
"Solution Method"	"RK", "Euler" [5]
"Fields"	"SlpFld", "DirFld", "FldOff" [5]
"Discontinuity Detection"	"Off', "On" [6]

[1]Not available in Sequence, 3D, or Diff Equations graph mode. Also not available in Function graph mode with "Discontinuity Detection" set to "On."
[2]Not available in 3D graph mode.

Downloaded from www.Manualslib.com manuals search engine

[3]Applies only to 3D graph mode.
[4]Applies only to Sequence graph mode.
[5]Applies only to Diff Equations graph mode.
[6]Applies only to Function graphing mode, when "Graph Order" is set to "Seq."

setMode() CATALOG

setMode(*modeNameString***, *settingString*)** ⇒ *string*
setMode(*list***)** ⇒ *stringList*

Sets mode *modeNameString* to the new setting *settingString*, and returns the current setting of that mode.

modeNameString is a character string that specifies which mode you want to set. It must be one of the mode names from the table below.

settingString is a character string that specifies the new setting for the mode. It must be one of the settings listed below for the specific mode you are setting.

list contains pairs of keyword strings and will set them all at once. This is recommended for multiple-mode changes. The example shown may not work if each of the pairs is entered with a separate **setMode()** in the order shown.

Use **setMode(***var***)** to restore settings saved with **getMode("ALL")→** *var*.

Note: To set or return information about the Unit System mode, use **setUnits()** or **getUnits()** instead of **setMode()** or **getMode()**.

```
setMode("Angle","Degree")
ENTER                          "RADIAN"
sin(45) ENTER                  √2/2
setMode("Angle","Radian")
ENTER                          "DEGREE"
sin(π/4) ENTER                 √2/2
setMode("Angle","Gradian")
ENTER                          "RADIAN"
sin(50) ENTER                  √2/2
setMode("Display Digits",
"Fix 2") ENTER                 "FLOAT"
π ◆ ENTER                      3.14
setMode ("Display Digits",
"Float") ENTER                 "FIX 2"
π ◆ ENTER                      3.141...
setMode ({"Split Screen",
"Left-Right","Split 1 App",
"Graph","Split 2 App","Table"})
ENTER
                {"Split 2 App" "Graph"
                  "Split 1 App" "Home"
                "Split Screen" "FULL"}
```

Note: Capitalization and blank spaces are optional when entering mode names. Also, the results in these examples may be different on your unit.

Mode Name	Settings
"Graph"	"Function", "Parametric", "Polar", "Sequence", "3D", "Diff Equations"
"Display Digits"	"Fix 0", "Fix 1", ..., "Fix 12", "Float", "Float 1", ..., "Float 12"
"Angle"	"Radian", "Degree", "Gradian"
"Exponential Format"	"Normal", "Scientific", "Engineering"
"Complex Format"	"Real", "Rectangular", "Polar"
"Vector Format"	"Rectangular", "Cylindrical", "Spherical"
"Pretty Print"	"Off", "On"

Downloaded from www.Manualslib.com manuals search engine

"Split Screen"	"Full", "Top-Bottom", "Left-Right"
"Split 1 App"	"Home", "Y= Editor", "Window Editor", "Graph", "Table", "Data/Matrix Editor", "Program Editor", "Text Editor", "Numeric Solver", "*Flash App*"
"Split 2 App"	"Home", "Y= Editor", "Window Editor", "Graph", "Table", "Data/Matrix Editor", "Program Editor", "Text Editor", "Numeric Solver", "*Flash App*"
"Number of Graphs"	"1", "2"
"Graph2"	"Function", "Parametric", "Polar", "Sequence", "3D", "Diff Equations"
"Split Screen Ratio"	"1:1", "1:2", "2:1" (Voyage™ 200 only)
"Exact/Approx"	"Auto", "Exact", "Approximate"
"Base"	"Dec", "Hex", "Bin"
"Language"	"English", "*Alternate Language*"
"Apps Desktop"	"Off", "On"

setTable() CATALOG

setTable(*modeNameString*, *settingString***)** ⇒ *string*

Sets the table parameter *modeNameString* to *settingString*, and returns the previous setting of the parameter. Storing the previous setting lets you restore it later.


modeNameString is a character string that specifies which parameter you want to set. It must be one of the parameters from the table below.

settingString is a character string that specifies the new setting for the parameter. It must be one of the settings listed below for the specific parameter you are setting.

```
setTable("Graph <-> Table","ON")
ENTER                                "OFF"

setTable("Independent","AUTO")
ENTER                                "ASK"
```

◆[TblSet]

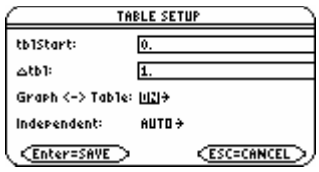

Note: Capitalization and blank spaces are optional when entering parameters.

Parameter Name	Settings
"Graph <-> Table"	"Off", "On"
"Independent"	"Auto", "Ask"

setTime() CATALOG

setTime(*hour*,*minute*,*second***)** ⇒ *listold*

Sets the clock to the time given in the argument and returns a list. The list is in {*hourold*,*minuteold*,*secondold*} format. The returned time is the previous clock value.

Enter the hour in the 24 hour format, in which 13 = 1 p.m.

```
setTime(11,32,50)
                          {10  44  49}
```

setTmFmt() CATALOG

setTmFmt(*integer***)** ⇒ *integerold*

Sets the time format for the desktop according to the argument and returns the previous time format value.

Integer values:

12 = 12 hour clock

24 = 24 hour clock

Downloaded from www.Manualslib.com manuals search engine

setTmZn() CATALOG

setTmZn(*integer***)** ⇒ *integerold*

Sets the time zone according to the argument and returns the previous time zone value.

The time zone is defined by an integer that gives the minutes offset from Greenwich Mean Time (GMT), as established in Greenwich, England. For example, if the time zone is offset from GMT by two hours, the device would return 120 (minutes).

Integers for time zones west of GMT are negative.

Integers for time zones east of GMT are positive.

If Greenwich Mean Time is 14:07:07, it is:

7:07:07 a.m. in Denver, Colorado (Mountain Standard Time)
(–420 minutes from GMT)

15:07:07 p.m. in Brussels, Belgium (Central European Standard Time)
(+60 minutes from GMT)

setUnits() CATALOG

setUnits(*list1***)** ⇒ *list*

Sets the default units to the values specified in *list1*, and returns a list of the previous defaults.

- To specify the built-in SI (metric) or ENG/US system, *list1* uses the form:

  {"SI"} or {"ENG/US"}

- To specify a custom set of default units, *list1* uses the form:

  {"CUSTOM", "*cat1*", "*unit1*" [, "*cat2*", "*unit2*", …]}

  where each *cat* and *unit* pair specifies a category and its default unit. (You can specify built-in units only, not user-defined units.) Any category not specified will use its previous custom unit.

- To return to the previous custom default units, *list1* uses the form:

  {"CUSTOM"}

If you want different defaults depending on the situation, create separate lists and save them to unique list names. To use a set of defaults, specify that list name in **setUnits()**.

You can use **setUnits()** to restore settings previously saved with **setUnits()** → *var* or with **getUnits()** → *var*.

All unit names must begin with an underscore _.

◆ [_]

You can also select units from a menu by pressing:

2nd [UNITS]

```
setUnits({"SI"}) ENTER
                 {"SI"  "Area"  "NONE"
            "Capacitance"  "_F"  ...}
```

```
setUnits({"CUSTOM","Length",
"_cm","Mass","_gm"}) ENTER
                 {"SI"  "Length"  "_m"
                   "Mass"  "_kg"  ...}
```

Note: Your screen may display different units.

Downloaded from www.Manualslib.com manuals search engine

Shade CATALOG

Shade *expr1*, *expr2*, [*xlow*], [*xhigh*], [*pattern*], [*patRes*]

Displays the Graph screen, graphs *expr1* and *expr2*, and shades areas in which *expr1* is less than *expr2*. (*expr1* and *expr2* must be expressions that use x as the independent variable.)

xlow and *xhigh*, if included, specify left and right boundaries for the shading. Valid inputs are between xmin and xmax. Defaults are xmin and xmax.


pattern specifies one of four shading patterns:
1 = vertical (default)
2 = horizontal
3 = negative-slope 45°
4 = positive-slope 45°

patRes specifies the resolution of the shading patterns:
1= solid shading
2= 1 pixel spacing (default)
3= 2 pixels spacing
⋮
10= 9 pixels spacing


Note: Interactive shading is available on the Graph screen through the **Shade** instruction. Automatic shading of a specific function is available through the **Style** instruction. **Shade** is not valid in 3D graphing mode.

In the **ZoomTrig** viewing window:


```
Shade cos(x),sin(x) ENTER
```

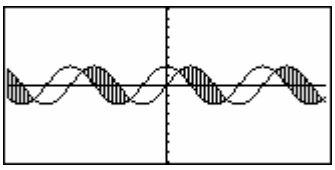


```
HOME
ClrDraw ENTER                                Done
Shade cos(x),sin(x),0,5 ENTER
```

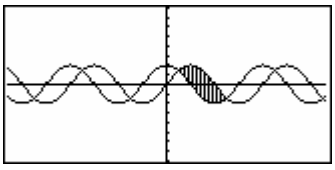

```
HOME
ClrDraw ENTER                                Done
Shade cos(x),sin(x),0,5,2 ENTER
```

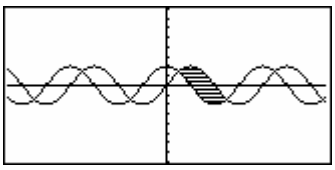

```
HOME
ClrDraw ENTER                                Done
Shade cos(x),sin(x),0,5,2,1 ENTER
```

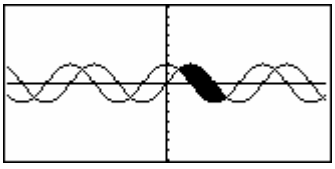

shift() CATALOG

shift(*integer1*[**,***#ofShifts*]**)** ⇒ *integer*

Shifts the bits in a binary integer. You can enter *integer1* in any number base; it is converted automatically to a signed, 32-bit binary form. If the magnitude of *integer1* is too large for this form, a symmetric modulo operation brings it within the range.

If *#ofShifts* is positive, the shift is to the left. If *#ofShifts* is negative, the shift is to the right. The default is −1 (shift right one bit).

In a right shift, the rightmost bit is dropped and 0 or 1 is inserted to match the leftmost bit. In a left shift, the leftmost bit is dropped and 0 is inserted as the rightmost bit.

For example, in a right shift:

In Bin base mode:

```
shift(0b1111010110000110101) ENTER
                  0b111101011000011010

shift(256,1) ENTER
                              0b1000000000
```

In Hex base mode:


```
shift(0h78E) ENTER                    0h3C7

shift(0h78E,-2) ENTER                 0h1E3

shift(0h78E,2) ENTER                  0h1E38
```

Important: To enter a binary or hexadecimal number, always use the 0b or 0h prefix (zero, not the letter O).

Downloaded from www.Manualslib.com manuals search engine

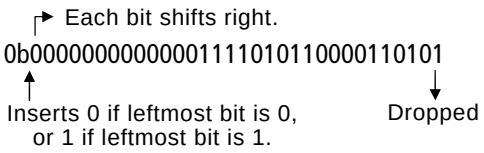
Each bit shifts right.
0b00000000000000011110101100000110101
Inserts 0 if leftmost bit is 0, or 1 if leftmost bit is 1.
Dropped

produces:

0b00000000000000011110101100000110 10

The result is displayed according to the Base mode. Leading zeros are not shown.

---

shift(*list1* [**,***#ofShifts*]**)** ⇒ *list*

Returns a copy of *list1* shifted right or left by *#ofShifts* elements. Does not alter *list1*.

If *#ofShifts* is positive, the shift is to the left. If *#ofShifts* is negative, the shift is to the right. The default is −1 (shift right one element).

Elements introduced at the beginning or end of *list* by the shift are set to the symbol "undef".

In Dec base mode:

```
shift({1,2,3,4}) ENTER
                          {undef 1 2 3}
shift({1,2,3,4},-2) ENTER
                      {undef undef 1 2}
shift({1,2,3,4},1) ENTER
                          {2 3 4 undef}
```

---

shift(*string1* [**,***#ofShifts*]**)** ⇒ *string*

Returns a copy of *string1* shifted right or left by *#ofShifts* characters. Does not alter *string1*.

If *#ofShifts* is positive, the shift is to the left. If *#ofShifts* is negative, the shift is to the right. The default is −1 (shift right one character).

Characters introduced at the beginning or end of *string* by the shift are set to a space.

```
shift("abcd") ENTER          " abc"
shift("abcd",-2) ENTER       "  ab"
shift("abcd",1) ENTER        "bcd "
```


ShowStat CATALOG

ShowStat

Displays a dialog box containing the last computed statistics results if they are still valid. Statistics results are cleared automatically if the data to compute them has changed.

Use this instruction after a statistics calculation, such as **LinReg**.

```
{1,2,3,4,5}→L1 ENTER          {1 2 3 4 5}
{0,2,6,10,25}→L2 ENTER
                          {0 2 6 10 25}
TwoVar L1,L2 ENTER
ShowStat ENTER
```

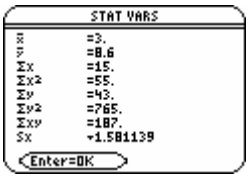

sign() MATH/Number menu

sign(*expression1***)** ⇒ *expression*
sign(*list1***)** ⇒ *list*
sign(*matrix1***)** ⇒ *matrix*

For real and complex *expression1*, returns *expression1*/**abs(***expression1***)** when *expression1*≠ 0.

Returns 1 if *expression1* is positive.
Returns −1 if *expression1* is negative.
sign(0) returns ±1 if the complex format mode is REAL; otherwise, it returns itself.
sign(0) represents the unit circle in the complex domain.

For a list or matrix, returns the signs of all the elements.

```
sign(-3.2) ENTER                  -1.
sign({2,3,4,-5}) ENTER
                          {1  1  1 -1}
sign(1+abs(x)) ENTER                1
```

If complex format mode is REAL:

```
sign([-3,0,3]) ENTER          [-1 ±1 1]
```


Downloaded from www.Manualslib.com manuals search engine

simult() MATH/Matrix menu

simult(*coeffMatrix***,** *constVector***[,** *tol***])** ⇒ *matrix*

Returns a column vector that contains the solutions to a system of linear equations.

coeffMatrix must be a square matrix that contains the coefficients of the equations.

constVector must have the same number of rows (same dimension) as *coeffMatrix* and contain the constants.

Optionally, any matrix element is treated as zero if its absolute value is less than *tol*. This tolerance is used only if the matrix has floating-point entries and does not contain any symbolic variables that have not been assigned a value. Otherwise, *tol* is ignored.

- If you use ◆ ENTER or set the mode to Exact/Approx=APPROXIMATE, computations are done using floating-point arithmetic.
- If *tol* is omitted or not used, the default tolerance is calculated as:

  5E⁻14 * **max(dim(***coeffMatrix***))** * **rowNorm(***coeffMatrix***)**

Solve for x and y: $x + 2y = 1$, $3x + 4y = -1$

simult([1,2;3,4],[1;-1]) ENTER

$$\begin{bmatrix} -3 \\ 2 \end{bmatrix}$$

The solution is x=-3 and y=2.

Solve: $ax + by = 1$, $cx + dy = 2$

[a,b;c,d]→matx1 ENTER

$$\begin{bmatrix} a & b \\ c & d \end{bmatrix}$$

simult(matx1,[1;2]) ENTER

$$\begin{bmatrix} \frac{-(2\cdot b-d)}{a\cdot d-b\cdot c} \\ \frac{2\cdot a-c}{a\cdot d-b\cdot c} \end{bmatrix}$$

---

simult(*coeffMatrix***,** *constMatrix***[,** *tol***])** ⇒ *matrix*

Solves multiple systems of linear equations, where each system has the same equation coefficients but different constants.

Each column in *constMatrix* must contain the constants for a system of equations. Each column in the resulting matrix contains the solution for the corresponding system.

Solve: $x + 2y = 1$, $3x + 4y = -1$

simult([1,2;3,4],[1,2;-1,-3]) ENTER

$$\begin{bmatrix} -3 & -7 \\ 2 & 9/2 \end{bmatrix}$$

For the first system, x=-3 and y=2. For the second system, x=-7 and y=9/2.

sin() 2nd [SIN] key

sin(*expression1***)** ⇒ *expression*
sin(*list1***)** ⇒ *list*

sin(*expression1***)** returns the sine of the argument as an expression.

sin(*list1***)** returns a list of the sines of all elements in *list1*.

Note: The argument is interpreted as a degree, gradian or radian angle, according to the current angle mode. You can use °, G or r to override the angle mode setting temporarily.

In Degree angle mode:

sin((π/4)r) ENTER → $\frac{\sqrt{2}}{2}$

sin(45) ENTER → $\frac{\sqrt{2}}{2}$

sin({0,60,90}) ENTER → $\{0 \quad \frac{\sqrt{3}}{2} \quad 1\}$

In Gradian angle mode:

sin(50) ENTER → $\frac{\sqrt{2}}{2}$

In Radian angle mode:

sin(π/4) ENTER → $\frac{\sqrt{2}}{2}$

sin(45°) ENTER → $\frac{\sqrt{2}}{2}$

Downloaded from www.Manualslib.com manuals search engine

sin(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix sine of *squareMatrix1*. This is *not* the same as calculating the sine of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode:

```
sin([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} .942... & -.045... & -.031... \\ -.045... & .949... & -.020... \\ -.048... & -.005... & .961... \end{bmatrix}$$

sin⁻¹() [◆] [SIN⁻¹] key

sin⁻¹(*expression1***)** ⇒ *expression*
sin⁻¹(*list1***)** ⇒ *list*

sin⁻¹(*expression1***)** returns the angle whose sine is *expression1* as an expression.

sin⁻¹(*list1***)** returns a list of the inverse sines of each element of *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

```
sin⁻¹(1) ENTER                                  90
```

In Gradian angle mode:

```
sin⁻¹(1) ENTER                                  100
```

In Radian angle mode:

```
sin⁻¹({0,.2,.5}) ENTER
                          {0   .201...   .523...}
```

sin⁻¹(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix inverse sine of *squareMatrix1*. This is *not* the same as calculating the inverse sine of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode and Rectangular complex format mode:

```
sin⁻¹([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} -.164...-.064...\cdot i & 1.490...-2.105...\cdot i & ... \\ .725...-1.515...\cdot i & .947...-.778...\cdot i & ... \\ 2.083...-2.632...\cdot i & -1.790...+1.271...\cdot i & ... \end{bmatrix}$$

sinh() MATH/Hyperbolic menu

sinh(*expression1***)** ⇒ *expression*
sinh(*list1***)** ⇒ *list*

sinh (*expression1***)** returns the hyperbolic sine of the argument as an expression.

sinh (*list1***)** returns a list of the hyperbolic sines of each element of *list1*.

```
sinh(1.2) ENTER                                 1.509...
sinh({0,1.2,3.}) ENTER
                          {0   1.509...   10.017...}
```

sinh(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix hyperbolic sine of *squareMatrix1*. This is *not* the same as calculating the hyperbolic sine of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode:

```
sinh([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} 360.954 & 305.708 & 239.604 \\ 352.912 & 233.495 & 193.564 \\ 298.632 & 154.599 & 140.251 \end{bmatrix}$$

sinh⁻¹() MATH/Hyperbolic menu

sinh⁻¹(*expression1***)** ⇒ *expression*
sinh⁻¹(*list1***)** ⇒ *list*

sinh⁻¹(*expression1***)** returns the inverse hyperbolic sine of the argument as an expression.

sinh⁻¹(*list1***)** returns a list of the inverse hyperbolic sines of each element of *list1*.

```
sinh⁻¹(0) ENTER                                 0
sinh⁻¹({0,2.1,3}) ENTER
                          {0   1.487...   sinh⁻¹(3)}
```


Downloaded from www.Manualslib.com manuals search engine

sinh⁻¹(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix inverse hyperbolic sine of *squareMatrix1*. This is *not* the same as calculating the inverse hyperbolic sine of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode:

sinh⁻¹([1,5,3;4,2,1;6,-2,1]) ENTER

$$\begin{bmatrix} .041\ldots & 2.155\ldots & 1.158\ldots \\ 1.463\ldots & .926\ldots & .112\ldots \\ 2.750\ldots & -1.528\ldots & .572\ldots \end{bmatrix}$$

SinReg MATH/Statistics/Regressions menu

SinReg *list1*, *list2* [, [*iterations*], [*period*] [, *list3*, *list4*]]

Calculates the sinusoidal regression and updates all the system statistics variables.

All the lists must have equal dimensions except for *list4*.

list1 represents xlist.
list2 represents ylist.
list3 represents category codes.
list4 represents category include list.

iterations specifies the maximum number of times (1 through 16) a solution will be attempted. If omitted, 8 is used. Typically, larger values result in better accuracy but longer execution times, and vice versa.

period specifies an estimated period. If omitted, the difference between values in *list1* should be equal and in sequential order. If you specify *period*, the differences between x values can be unequal.

Note: *list1* through *list3* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list4* does not have to be a variable name and cannot be c1–c99.


The output of **SinReg** is always in radians, regardless of the angle mode setting.

In function graphing mode:

seq(x,x,1,361,30)→L1 ENTER
{1 31 61 …}
{5.5,8,11,13.5,16.5,19,19.5,17,
14.5,12.5,8.5,6.5,5.5}→L2 ENTER
{5.5 8 11 …}
SinReg L1,L2 ENTER Done
ShowStat ENTER



ENTER
regeq(x)→y1(x) ENTER Done
NewPlot 1,1,L1,L2 ENTER Done
◆[GRAPH]
F2 9

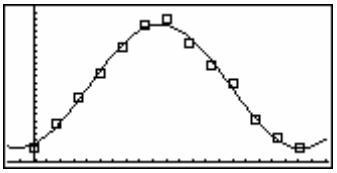

solve() MATH/Algebra menu

solve(*equation*, *var***)** ⇒ *Boolean expression*
solve(*inequality*, *var***)** ⇒ *Boolean expression*

Returns candidate real solutions of an equation or an inequality for *var*. The goal is to return candidates for all solutions. However, there might be equations or inequalities for which the number of solutions is infinite.

Solution candidates might not be real finite solutions for some combinations of values for undefined variables.

For the AUTO setting of the Exact/Approx mode, the goal is to produce exact solutions when they are concise, and supplemented by iterative searches with approximate arithmetic when exact solutions are impractical.

solve(a*x^2+b*x+c=0,x) ENTER

$$x = \frac{\sqrt{b^2-4\cdot a\cdot c}-b}{2\cdot a}$$

$$\text{or } x = \frac{-(\sqrt{b^2-4\cdot a\cdot c}+b)}{2\cdot a}$$

ans(1)| a=1 and b=1 and c=1
ENTER
Error: Non-real result

solve((x−a)e^(x)=−x*(x−a),x) ENTER
x=a or x=−.567…

Downloaded from www.Manualslib.com manuals search engine

Due to default cancellation of the greatest common divisor from the numerator and denominator of ratios, solutions might be solutions only in the limit from one or both sides.

```
(x+1)(x-1)/(x-1)+x-3 ENTER
                                  2•x-2
solve(entry(1)=0,x) ENTER          x=1
entry(2)|ans(1) ENTER             undef
limit(entry(3),x,1) ENTER           0
```

For inequalities of types ≥, ≤, <, or >, explicit solutions are unlikely unless the inequality is linear and contains only *var*.

```
solve(5x-2≥2x,x) ENTER          x≥2/3
```

For the EXACT setting of the Exact/Approx mode, portions that cannot be solved are returned as an implicit equation or inequality.

```
exact(solve((x-a)e^(x)=-x*
(x-a),x)) ENTER
                          e^x+x=0 or x=a
```

Use the "|" operator to restrict the solution interval and/or other variables that occur in the equation or inequality. When you find a solution in one interval, you can use the inequality operators to exclude that interval from subsequent searches.

In Radian angle mode:

```
solve(tan(x)=1/x,x)|x>0 and x<1 ENTER
                                x=.860...
```

false is returned when no real solutions are found. true is returned if **solve()** can determine that any finite real value of *var* satisfies the equation or inequality.

```
solve(x=x+1,x) ENTER             false
solve(x=x,x) ENTER                true
```

Since **solve()** always returns a Boolean result, you can use "and," "or," and "not" to combine results from **solve()** with each other or with other Boolean expressions.

```
2x-1≤1 and solve(x^2≠9,x) ENTER
                          x≤1 and x≠-3
```

Solutions might contain a unique new undefined variable of the form @n*j* with *j* being an integer in the interval 1–255. Such variables designate an arbitrary integer.

In Radian angle mode:

```
solve(sin(x)=0,x) ENTER       x=@n 1•π
```

In real mode, fractional powers having odd denominators denote only the real branch. Otherwise, multiple branched expressions such as fractional powers, logarithms, and inverse trigonometric functions denote only the principal branch. Consequently, **solve()** produces only solutions corresponding to that one real or principal branch.

```
solve(x^(1/3)=-1,x) ENTER         x=-1
solve(√(x)=-2,x) ENTER            false
solve(-√(x)=-2,x) ENTER            x=4
```

Note: See also **cSolve()**, **cZeros()**, **nSolve()**, and **zeros()**.

---

solve(*equation1* **and** *equation2* [**and** *…*]**, {***varOrGuess1***,** *varOrGuess2* [**,** *…*]**})** ⇒ *Boolean expression*

Returns candidate real solutions to the simultaneous algebraic equations, where each *varOrGuess* specifies a variable that you want to solve for.

Optionally, you can specify an initial guess for a variable. Each *varOrGuess* must have the form:

variable
– or –
variable = *real or non-real number*


For example, x is valid and so is x=3.

```
solve(y=x^2-2 and
x+2y=-1,{x,y}) ENTER
                          x=1 and y=-1
                       or x=-3/2 and y=1/4
```


Downloaded from www.Manualslib.com manuals search engine

If all of the equations are polynomials and if you do NOT specify any initial guesses, **solve()** uses the lexical Gröbner/Buchberger elimination method to attempt to determine **all** real solutions.

For example, suppose you have a circle of radius r at the origin and another circle of radius r centered where the first circle crosses the positive x-axis. Use **solve()** to find the intersections.

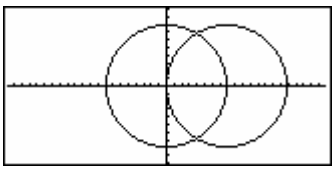

As illustrated by r in the example to the right, simultaneous *polynomial* equations can have extra variables that have no values, but represent given numeric values that could be substituted later.

```
solve(x^2+y^2=r^2 and
(x-r)^2+y^2=r^2,{x,y}) ENTER
```

$$x=\frac{r}{2} \text{ and } y=\frac{\sqrt{3}\cdot r}{2}$$

$$\text{or } x=\frac{r}{2} \text{ and } y=\frac{-\sqrt{3}\cdot r}{2}$$

You can also (or instead) include solution variables that do not appear in the equations. For example, you can include z as a solution variable to extend the previous example to two parallel intersecting cylinders of radius r.

```
solve(x^2+y^2=r^2 and
(x-r)^2+y^2=r^2,{x,y,z}) ENTER
```

$$x=\frac{r}{2} \text{ and } y=\frac{\sqrt{3}\cdot r}{2} \text{ and } z=@1$$

$$\text{or } x=\frac{r}{2} \text{ and } y=\frac{-\sqrt{3}\cdot r}{2} \text{ and } z=@1$$

The cylinder solutions illustrate how families of solutions might contain arbitrary constants of the form *@k*, where *k* is an integer suffix from 1 through 255. The suffix resets to 1 when you use **ClrHome** or F1 8:Clear Home.

For polynomial systems, computation time or memory exhaustion may depend strongly on the order in which you list solution variables. If your initial choice exhausts memory or your patience, try rearranging the variables in the equations and/or *varOrGuess* list.

If you do not include any guesses and if any equation is non-polynomial in any variable but all equations are linear in the solution variables, **solve()** uses Gaussian elimination to attempt to determine all real solutions.

```
solve(x+e^(z)*y=1 and
x-y=sin(z),{x,y}) ENTER
```

$$x=\frac{e^{z}\cdot\sin(z)+1}{e^{z}+1} \text{ and } y=\frac{-(\sin(z)-1)}{e^{z}+1}$$

If a system is neither polynomial in all of its variables nor linear in its solution variables, **solve()** determines at most one solution using an approximate iterative method. To do so, the number of solution variables must equal the number of equations, and all other variables in the equations must simplify to numbers.

```
solve(e^(z)*y=1 and -y=sin(z),{y,z})
ENTER
```

y=.041… and z=3.183…

Downloaded from www.Manualslib.com manuals search engine

Each solution variable starts at its guessed value if there is one; otherwise, it starts at 0.0.

Use guesses to seek additional solutions one by one. For convergence, a guess may have to be rather close to a solution.

```
solve(e^(z)*y=1 and
-y=sin(z),{y,z=2π}) ENTER
                    y=.001… and z=6.281…
```

SortA MATH/List menu

SortA *listName1*[**,** *listName2*] [**,** *listName3*] **…**
SortA *vectorName1*[**,** *vectorName2*] [**,** *vectorName3*] **…**

Sorts the elements of the first argument in ascending order.

If you include additional arguments, sorts the elements of each so that their new positions match the new positions of the elements in the first argument.

All arguments must be names of lists or vectors. All arguments must have equal dimensions.

```
{2,1,4,3}→list1 ENTER          {2,1,4,3}
SortA list1 ENTER                   Done

list1 ENTER                    {1 2 3 4}
{4,3,2,1}→list2 ENTER          {4 3 2 1}
SortA list2,list1 ENTER             Done

list2 ENTER                    {1 2 3 4}
list1 ENTER                    {4 3 2 1}
```

SortD MATH/List menu

SortD *listName1*[**,** *listName2*] [**,** *listName3*] **…**
SortD *vectorName1*[**,***vectorName 2*] [**,***vectorName 3*] **…**

Identical to **SortA**, except **SortD** sorts the elements in descending order.

```
{2,1,4,3}→list1 ENTER          {2 1 4 3}
{1,2,3,4}→list2 ENTER          {1 2 3 4}
SortD list1,list2 ENTER             Done
list1 ENTER                    {4 3 2 1}
list2 ENTER                    {3 4 1 2}
```

▸Sphere MATH/Matrix/Vector ops menu

vector **▸Sphere**

Displays the row or column vector in spherical form [ρ ∠θ ∠ϕ].


vector must be of dimension 3 and can be either a row or a column vector.

Note: **▸Sphere** is a display-format instruction, not a conversion function. You can use it only at the end of an entry line.

```
[1,2,3]▸Sphere
◆ ENTER      [3.741… ∠1.107… ∠.640…]

[2,∠π/4,3]▸Sphere
◆ ENTER      [3.605… ∠.785… ∠.588…]

ENTER        [√13  ∠π/4  ∠cos⁻¹((3•√13)/13)]
```

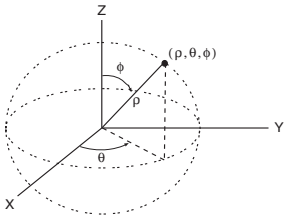

startTmr() CATALOG

startTmr() ⇒ *integer*

Returns the current value of the clock in its integer representation, giving the *starttime* for a timer. You can enter the *starttime* as an argument in **checkTmr()** to determine how many seconds have elapsed.

You can run multiple timers simultaneously.

Note: See also **checkTmr()** and **timeCnv()**.

```
startTmr() ENTER               148083315

checkTmr(148083315)                 34

startTmr()→Timer1
⋮
startTmr()→Timer2
⋮
checkTmr(Timer1)→Timer1Value
⋮
checkTmr(Timer2)→Timer2Value
```


Downloaded from www.Manualslib.com manuals search engine

stdDev() MATH/Statistics menu

stdDev(*list*[**,** *freqlist*]**)** ⇒ *expression*


Returns the standard deviation of the elements in *list*.

Each *freqlist* element counts the number of consecutive occurrences of the corresponding element in *list*.

Note: *list* must have at least two elements.

stdDev({a,b,c}) ENTER

stdDev({1,2,5,-6,3,-2}) ENTER

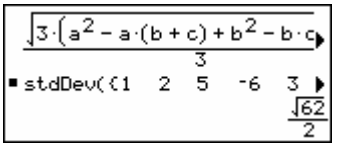

stdDev({1.3,2.5,-6.4},{3,2,5})

ENTER 4.33345

---

stdDev(*matrix1*[**,** *freqmatrix*]**)** ⇒ *matrix*

Returns a row vector of the standard deviations of the columns in *matrix1*.

Each *freqmatrix* element counts the number of consecutive occurrences of the corresponding element in *matrix1*.

Note: *matrix1* must have at least two rows.

stdDev([1,2.5;-3,0,1;.5,.7,3]) ENTER

[2.179... 1.014... 2]

stdDev([-1.2,5.3;2.5,7.3;6,-4],[4,2;3,3;1,7]) ENTER

[2.7005,5.44695]

stdDevPop() MATH/Statistics menu

stdDevPop(*list*[**,** *freqlist*]**)** ⇒ *expression*


Returns the population standard deviation of the elements in *list*.

Each *freqlist* element counts the number of consecutive occurrences of the corresponding element in *list*.


Note: *list* must have at least two elements.

In Radian angle and auto modes:


stdDevPop({a,b,c}) ENTER

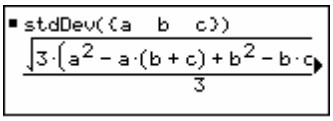

stdDevPop({1,2,5,-6,3,-2}) ENTER



stdDevPop({1.3,2.5,-6.4},{3,2,5}) ENTER




stdDevPop(*matrix1*[**,** *freqmatrix*]**)** ⇒ *matrix*

Returns a row vector of the population standard deviations of the columns in *matrix1*.


Each *freqmatrix* element counts the number of consecutive occurrences of the corresponding element in *matrix1*.

Note: *matrix1* must have at least two rows.

stdDevPop([[1,2,5][-3,0,1][.5,.7,3]]) ENTER

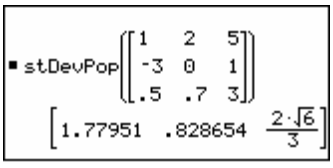

stdDevPop([-1.2,5.3;2.5,7.3;6,-4],[4,2;3,3;1,7]) ENTER

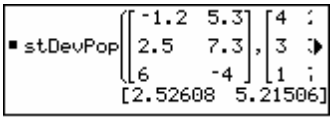

Downloaded from www.Manualslib.com manuals search engine

StoGDB CATALOG

StoGDB *GDBvar*

Creates a Graph database (GDB) variable that contains the current:

* Graphing mode
* Y= functions
* Window variables
* Graph format settings
  1- or 2-Graph setting (split screen and ratio settings if 2-Graph mode)
  Angle mode
  Real/complex mode
* Initial conditions if Sequence or Diff Equations mode
* Table flags
* tblStart, Δtbl, tblInput

You can use **RclGDB** *GDBvar* to restore the graph environment.

***Note:** These items are saved for both graphs in 2-Graph mode.

Stop CATALOG

Stop

Used as a program instruction to stop program execution.

Program segment:

```
   ⋮
For i,1,10,1
  If i=5
  Stop
EndFor
   ⋮
```

StoPic CATALOG

StoPic *picVar* [**,** *pxlRow***,** *pxlCol*] [**,** *width***,** *height*]

Displays the graph screen and copies a rectangular area of the display to the variable *picVar*.

pxlRow and *pxlCol*, if included, specify the upper-left corner of the area to copy (defaults are 0, 0).

width and *height*, if included, specify the dimensions, in pixels, of the area. Defaults are the width and height, in pixels, of the current graph screen.

Store

See → (store), page 912.

string() MATH/String menu

string(*expression***)** ⇒ *string*

Simplifies *expression* and returns the result as a character string.

```
string(1.2345) ENTER                    "1.2345"
string(1+2) ENTER                         "3"
string(cos(x)+√(3)) ENTER
                              "cos(x)+√(3)"
```


Downloaded from www.Manualslib.com manuals search engine

Style CATALOG

Style *equanum, stylePropertyString*

Sets the system graphing function *equanum* in the current graph mode to use the graphing property *stylePropertyString*.

equanum must be an integer from 1–99 and the function must already exist.

stylePropertyString must be one of: "Line", "Dot", "Square", "Thick", "Animate", "Path", "Above", or "Below".

Note that in parametric graphing, only the *xt* half of the pair contains the style information.

Valid style names vs. graphing mode:

Function:	all styles
Parametric/Polar:	line, dot, square, thick, animate, path
Sequence:	line, dot, square, thick
3D:	none
Diff Equations:	line, dot, square, thick, animate, path

Note: Capitalization and blank spaces are optional when entering *stylePropertyString* names.

```
Style 1,"thick" ENTER                    Done
Style 10,"path" ENTER                    Done
```

Note: In function graphing mode, these examples set the style of **y1(x)** to **"Thick"** and **y10(x)** to **"Path"**.

subMat() CATALOG

subMat(*matrix1***[, *startRow*] [, *startCol*] [, *endRow*] [, *endCol*])** ⇒ *matrix*

Returns the specified submatrix of *matrix1*.

Defaults: *startRow*=1, *startCol*=1, *endRow*=last row, *endCol*=last column.

```
[1,2,3;4,5,6;7,8,9]→m1 ENTER
                              [1 2 3]
                              [4 5 6]
                              [7 8 9]
subMat(m1,2,1,3,2) ENTER
                                [4 5]
                                [7 8]
subMat(m1,2,2) ENTER
                                [5 6]
                                [8 9]
```

Sum (Sigma) See Σ(), page 908.

sum() MATH/List menu

sum(*list***[, *start*[, *end*]])** ⇒ *expression*

Returns the sum of the elements in *list*.

Start and *end* are optional. They specify a range of elements.

```
sum({1,2,3,4,5}) ENTER                   15
sum({a,2a,3a}) ENTER                     6•a
sum(seq(n,n,1,10)) ENTER                 55
sum({1,3,5,7,9},3) ENTER                 21
```

---

sum(*matrix1***[, *start*[, *end*]])** ⇒ *matrix*

Returns a row vector containing the sums of the elements in the columns in *matrix1*.

Start and *end* are optional. They specify a range of rows.

```
sum([1,2,3;4,5,6]) ENTER          [5  7  9]
sum([1,2,3;4,5,6;7,8,9]) ENTER
                                  [12 15 18]
sum([1,2,3;4,5,6;7,8,9],2,3)
ENTER
                                  [11,13,15]
```


Downloaded from www.Manualslib.com manuals search engine

switch() CATALOG

switch([*integer1***])** ⇒ *integer*

Returns the number of the active window. Also can set the active window.

Note: Window 1 is left or top; Window 2 is right or bottom.


If *integer1* = 0, returns the active window number.

If *integer1* = 1, activates window 1 and returns the previously active window number.


If *integer1* = 2, activates window 2 and returns the previously active window number.

If *integer1* is omitted, switches windows and returns the previously active window number.

integer1 is ignored if the TI-89 Titanium/Voyage™ 200 is not displaying a split screen.

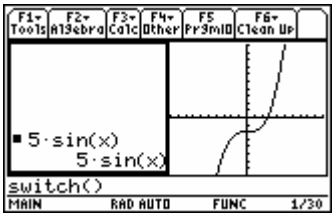

switch() ENTER

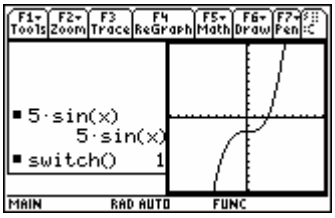

T (transpose) MATH/Matrix menu

matrix1^T ⇒ *matrix*

Returns the complex conjugate transpose of *matrix1*.

[1,2,3;4,5,6;7,8,9]→mat1 ENTER

$$\begin{bmatrix} 1 & 2 & 3 \\ 4 & 5 & 6 \\ 7 & 8 & 9 \end{bmatrix}$$

mat1^T ENTER

$$\begin{bmatrix} 1 & 4 & 7 \\ 2 & 5 & 8 \\ 3 & 6 & 9 \end{bmatrix}$$

[a,b;c,d]→mat2 ENTER

$$\begin{bmatrix} a & b \\ c & d \end{bmatrix}$$

mat2^T ENTER

$$\begin{bmatrix} a & c \\ b & d \end{bmatrix}$$

[1+*i*,2+*i*;3+*i*,4+*i*]→mat3 ENTER

$$\begin{bmatrix} 1+i & 2+i \\ 3+i & 4+i \end{bmatrix}$$

mat3^T ENTER

$$\begin{bmatrix} 1-i & 3-i \\ 2-i & 4-i \end{bmatrix}$$

Downloaded from www.Manualslib.com manuals search engine

Table CATALOG

Table *expression1*[**,** *expression2*] [**,** *var1*]

Builds a table of the specified expressions or functions.

The expressions in the table can also be graphed. Expressions entered using the **Table** or **Graph** commands are assigned increasing function numbers starting with 1. The expressions can be modified or individually deleted using the edit functions available when the table is displayed by pressing F4 Header. The currently selected functions in the Y= Editor are temporarily ignored.

To clear the functions created by **Table** or **Graph**, execute the **ClrGraph** command or display the Y= Editor.

If the *var* parameter is omitted, the current graph-mode independent variable is assumed. Some valid variations of this instruction are:

Function graphing: **Table** *expr***,** *x*

Parametric graphing: **Table** *xExpr***,** *yExpr***,** *t*

Polar graphing: **Table** *expr***,** θ

Note: The **Table** command is not valid for 3D, sequence, or diff equations graphing. As an alternative, you may want to use **BldData**.

In function graphing mode.

`Table 1.25x*cos(x)` ENTER

x	1		
0.	0.		
1.	.67538		
2.	-1.04		
3.	-3.712		
4.	-3.268		

`Table cos(time),time` ENTER

x	1	2	3
0.	0.	1.	
1.	.67538	.5403	
2.	-1.04	-.4161	
3.	-3.712	-.99	
4.	-3.268	-.6536	

tan() 2nd [TAN] key

tan(*expression1***)** ⇒ *expression*
tan(*list1***)** ⇒ *list*

tan(*expression1***)** returns the tangent of the argument as an expression.

tan(*list1***)** returns a list of the tangents of all elements in *list1*.

Note: The argument is interpreted as a degree, gradian or radian angle, according to the current angle mode. You can use ° , ᵍ or ʳ to override the angle mode setting temporarily.

In Degree angle mode:

`tan((π/4)ʳ)` ENTER 1

`tan(45)` ENTER 1

`tan({0,60,90})` ENTER
{0 √3 undef}

In Gradian angle mode:

`tan((π/4)ʳ)` ENTER $\frac{200 \bullet \tan\left(\frac{\pi}{4}\right)}{\pi}$

`tan(50)` ENTER 1

`tan({0,50,100})` ENTER
{0 1 undef}

In Radian angle mode:

`tan(π/4)` ENTER 1

`tan(45°)` ENTER 1

`tan({π,π/3,-π,π/4})` ENTER
{0 √3 0 1}

Downloaded from www.Manualslib.com manuals search engine

tan(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix tangent of *squareMatrix1*. This is *not* the same as calculating the tangent of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode:

```
tan([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} -28.291\ldots & 26.088\ldots & 11.114\ldots \\ 12.117\ldots & -7.835\ldots & -5.481\ldots \\ 36.818\ldots & -32.806\ldots & -10.459\ldots \end{bmatrix}$$

tan^{-1}() ◆ [TAN^{-1}] key

tan^{-1}(*expression1***)** ⇒ *expression*
tan^{-1}(*list1***)** ⇒ *list*

tan^{-1}(*expression1***)** returns the angle whose tangent is *expression1* as an expression.

tan^{-1}(*list1***)** returns a list of the inverse tangents of each element of *list1*.

Note: The result is returned as a degree, gradian or radian angle, according to the current angle mode setting.

In Degree angle mode:

```
tan-1(1) ENTER                                  45
```

In Gradian angle mode:

```
tan-1(1) ENTER                                  50
```

In Radian angle mode:

```
tan-1({0,.2,.5}) ENTER
                          {0   .197...   .463...}
```

tan^{-1}(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix inverse tangent of *squareMatrix1*. This is *not* the same as calculating the inverse tangent of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode:

```
tan-1([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} -.083\ldots & 1.266\ldots & .622\ldots \\ .748\ldots & .630\ldots & -.070\ldots \\ 1.686\ldots & -1.182\ldots & .455\ldots \end{bmatrix}$$

tanh() MATH/Hyperbolic menu

tanh(*expression1***)** ⇒ *expression*
tanh(*list1***)** ⇒ *list*

tanh(*expression1***)** returns the hyperbolic tangent of the argument as an expression.

tanh(*list***)** returns a list of the hyperbolic tangents of each element of *list1*.

```
tanh(1.2) ENTER                                 .833...
tanh({0,1}) ENTER                       {0   tanh(1)}
```

tanh(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix hyperbolic tangent of *squareMatrix1*. This is *not* the same as calculating the hyperbolic tangent of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode:

```
tanh([1,5,3;4,2,1;6,-2,1]) ENTER
```

$$\begin{bmatrix} -.097\ldots & .933\ldots & .425\ldots \\ .488\ldots & .538\ldots & -.129\ldots \\ 1.282\ldots & -1.034\ldots & .428\ldots \end{bmatrix}$$

Downloaded from www.Manualslib.com manuals search engine

tanh^{-1}() MATH/Hyperbolic menu

tanh^{-1}(*expression1***)** ⇒ *expression*
tanh^{-1}(*list1***)** ⇒ *list*

tanh^{-1}(*expression1***)** returns the inverse hyperbolic tangent of the argument as an expression.

tanh^{-1}(*list1***)** returns a list of the inverse hyperbolic tangents of each element of *list1*.

In rectangular complex format mode:

tanh^{-1}(0) ENTER 0

tanh^{-1}({1,2.1,3}) ENTER

$\{\infty \quad .518\ldots - 1.570\ldots \cdot i \quad \frac{\ln(2)}{2} - \frac{\pi}{2} \cdot i\}$

---

tanh^{-1}(*squareMatrix1***)** ⇒ *squareMatrix*

Returns the matrix inverse hyperbolic tangent of *squareMatrix1*. This is *not* the same as calculating the inverse hyperbolic tangent of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

In Radian angle mode and Rectangular complex format mode:

tanh^{-1}([1,5,3;4,2,1;6,-2,1]) ENTER

$$\begin{bmatrix} -.099\ldots+.164\ldots\cdot i & .267\ldots-1.490\ldots\cdot i & \ldots \\ -.087\ldots-.725\ldots\cdot i & .479\ldots-.947\ldots\cdot i & \ldots \\ .511\ldots-2.083\ldots\cdot i & -.878\ldots+1.790\ldots\cdot i & \ldots \end{bmatrix}$$

taylor() MATH/Calculus menu

taylor(*expression1***, *var*, *order*[, *point*])** ⇒ *expression*

Returns the requested Taylor polynomial. The polynomial includes non-zero terms of integer degrees from zero through *order* in (*var* minus *point*). **taylor()** returns itself if there is no truncated power series of this order, or if it would require negative or fractional exponents. Use substitution and/or temporary multiplication by a power of (*var* minus *point*) to determine more general power series.

point defaults to zero and is the expansion point.

taylor(e^(√(x)),x,2) ENTER
taylor(e^(t),t,4)|t=√(x) ENTER

$$\blacksquare\ \text{taylor}\left(e^{\sqrt{x}}, x, 2\right)$$
$$\text{taylor}\left(e^{\sqrt{x}}, x, 2, 0\right)$$
$$\blacksquare\ \text{taylor}\left(e^{t}, t, 4\right) \mid t = \sqrt{x}$$
$$\frac{x^2}{24} + \frac{x^{3/2}}{6} + \frac{x}{2} + \sqrt{x} + 1$$

taylor(1/(x*(x-1)),x,3) ENTER

$$\blacksquare\ \text{taylor}\left(\frac{1}{x\cdot(x-1)}, x, 3\right)$$
$$\text{taylor}\left(\frac{1}{x\cdot(x-1)}, x, 3, 0\right)$$

expand(taylor(x/(x*(x-1)), x,4)/x,x) ENTER

$$\blacksquare\ \text{expand}\left(\frac{\text{taylor}\left(\frac{x}{x\cdot(x-1)}, x, \blacktriangleright\right.}{x}\right.$$
$$-x^3 - x^2 - x - \frac{1}{x} - 1$$

tCollect() MATH\Algebra\Trig menu

tCollect(*expression1***)** ⇒ *expression*

Returns an expression in which products and integer powers of sines and cosines are converted to a linear combination of sines and cosines of multiple angles, angle sums, and angle differences. The transformation converts trigonometric polynomials into a linear combination of their harmonics.

Sometimes **tCollect()** will accomplish your goals when the default trigonometric simplification does not. **tCollect()** tends to reverse transformations done by **tExpand()**. Sometimes applying **tExpand()** to a result from **tCollect()**, or vice versa, in two separate steps simplifies an expression.

tCollect((cos(α))^2) ENTER

$$\frac{\cos(2\cdot\alpha)+1}{2}$$

tCollect(sin(α)cos(β)) ENTER

$$\frac{\sin(\alpha-\beta)+\sin(\alpha+\beta)}{2}$$

Downloaded from www.Manualslib.com manuals search engine

tExpand() MATH\Algebra\Trig menu

tExpand(*expression1***)** ⇒ *expression*

Returns an expression in which sines and cosines of integer-multiple angles, angle sums, and angle differences are expanded. Because of the identity $(\sin(x))^2+(\cos(x))^2=1$, there are many possible equivalent results. Consequently, a result might differ from a result shown in other publications.

Sometimes **tExpand()** will accomplish your goals when the default trigonometric simplification does not. **tExpand()** tends to reverse transformations done by **tCollect()**. Sometimes applying **tCollect()** to a result from **tExpand()**, or vice versa, in two separate steps simplifies an expression.

Note: Degree-mode scaling by $\pi/180$ interferes with the ability of **tExpand()** to recognize expandable forms. For best results, **tExpand()** should be used in Radian mode.

```
tExpand(sin(3ϕ)) ENTER
          4·sin(ϕ)·(cos(ϕ))^2 − sin(ϕ)

tExpand(cos(α−β)) ENTER
        cos(α)·cos(β)+sin(α)·sin(β)
```


Text CATALOG

Text *promptString*

Displays the character string *promptString* dialog box.

If used as part of a **Dialog...EndDlog block**, *promptString* is displayed inside that dialog box. If used as a standalone instruction, **Text** creates a dialog box to display the string.

```
Text "Have a nice day." ENTER
                                Done
```



Then

See **If,** page 830.

timeCnv() CATALOG

timeCnv(*seconds***)** ⇒ *list*

Converts seconds to units of time that can be more easily understood for evaluation. The list is in {*days,hours,minutes,seconds*} format.

Note: See also **checkTmr()** and **startTmr()**.

```
timeCnv(152442117)
                        {1764  9  1  57}
```

Title CATALOG

Title *titleString*, [*Lbl*]

Creates the title of a pull-down menu or dialog box when used inside a **Toolbar** or **Custom** construct, or a **Dialog...EndDlog** block.

Note: *Lbl* is only valid in the **Toolbar** construct. When present, it allows the menu choice to branch to a specified label inside the program.

Program segment:

```
   ⋮
:Dialog
:Title          "This is a dialog box"
:Request              "Your name",Str1
:Dropdown       "Month you were born",
           seq(string(i),i,1,12),Var1
:EndDlog
   ⋮
```



Downloaded from www.Manualslib.com manuals search engine

tmpCnv() CATALOG


tmpCnv(*expression1*_ °*tempUnit1*, _ °*tempUnit2*)
⇒ *expression* _ °*tempUnit2*

Converts a temperature value specified by *expression1* from one unit to another. Valid temperature units are:

_°C	Celsius
_°F	Fahrenheit
_°K	Kelvin
_°R	Rankine

For °, press 2nd [°].
For _, press ◆ [_].

For example, 100_°C converts to 212_°F:

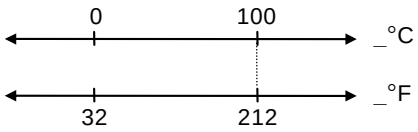

To convert a temperature range, use **ΔtmpCnv()** instead.

```
tmpCnv(100_°c,_°f) ENTER        212.•_°F
tmpCnv(32_°f,_°c) ENTER           0.•_°C
tmpCnv(0_°c,_°k) ENTER        273.15•_°K
tmpCnv(0_°f,_°r) ENTER        459.67•_°R
```

Note: To select temperature units from a menu, press 2nd [UNITS]

ΔtmpCnv() CATALOG

ΔtmpCnv(*expression1*_ °*tempUnit1*, _ °*tempUnit2*)
⇒ *expression* _ °*tempUnit2*


Converts a temperature range (the difference between two temperature values) specified by *expression1* from one unit to another. Valid temperature units are:

_°C	Celsius
_°F	Fahrenheit
_°K	Kelvin
_°R	Rankine

For °, press 2nd [°].
For _, press ◆ [_].

1_°C and 1_°K have the same magnitude, as do 1_°F and 1_°R. However, 1_°C is 9/5 as large as 1_°F.

For example, a 100_°C range (from 0_°C to 100_°C) is equivalent to a 180_°F range:

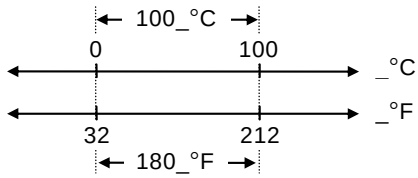

To convert a particular temperature value instead of a range, use **tmpCnv()**.

To get Δ, you can press ◆ (↑ [D] (or 2nd [CHAR] 1 5).

```
ΔtmpCnv(100_°c,_°f) ENTER
                          180.•_°F
ΔtmpCnv(180_°f,_°c) ENTER
                          100.•_°C
ΔtmpCnv(100_°c,_°k) ENTER
                          100.•_°K
ΔtmpCnv(100_°f,_°r) ENTER
                          100.•_°R
ΔtmpCnv(1_°c,_°f) ENTER
                            1.8•_°F
```

Note: To select temperature units from a menu, press 2nd [UNITS]

Downloaded from www.Manualslib.com manuals search engine

Toolbar CATALOG

Toolbar
block
EndTBar

Creates a toolbar menu.

block can be either a single statement or a sequence of statements separated with the ":" character. The statements can be either Title or Item.

Items must have labels. A Title must also have a label if it does not have an item.

Program segment:

```
   ⋮
:Toolbar
:  Title "Examples"
:  Item "Trig", t
:  Item "Calc", c
:  Item "Stop", Pexit
:EndTbar
   ⋮
```

Note: When run in a program, this segment creates a menu with three choices that branch to three places in the program.

Trace CATALOG

Trace

Draws a Smart Graph and places the trace cursor on the first defined Y= function at the previously defined cursor position, or at the reset position if regraphing was necessary.

Allows operation of the cursor and most keys when editing coordinate values. Several keys, such as the function keys, APPS, and MODE, are not activated during trace.

Note: Press ENTER to resume operation.

Try CATALOG

Try
block1
Else
block2
EndTry

Executes *block1* unless an error occurs. Program execution transfers to *block2* if an error occurs in *block1*. Variable errornum contains the error number to allow the program to perform error recovery.

block1 and *block2* can be either a single statement or a series of statements separated with the ":" character.

Program segment:

```
   ⋮
:Try
:  NewFold(temp)
:  Else
:  ◕Already exists
:  ClrErr
:EndTry
   ⋮
```

Note: See **ClrErr** and **PassErr**.

Downloaded from www.Manualslib.com manuals search engine

TwoVar MATH/Statistics menu

TwoVar *list1*, *list2*[, [*list3*] [, *list4*, *list5*]]


Calculates the **TwoVar** statistics and updates all the system statistics variables.

All the lists must have equal dimensions except for *list5*.

list1 represents xlist.
list2 represents ylist.
list3 represents frequency.
list4 represents category codes.
list5 represents category include list.

Note: *list1* through *list4* must be a variable name or c1–c99 (columns in the last data variable shown in the Data/Matrix Editor). *list5* does not have to be a variable name and cannot be c1–c99 .

```
{0,1,2,3,4,5,6}→L1 ENTER
                          {0 1 2 ...}
{0,2,3,4,3,4,6}→L2 ENTER
                          {0 2 3 ...}
TwoVar L1,L2 ENTER              Done
ShowStat ENTER
```

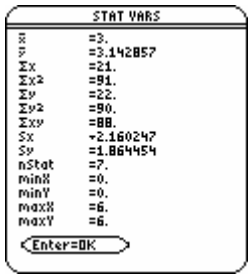

Unarchiv CATALOG

Unarchiv *var1* [, *var2*] [, *var3*] …

Moves the specified variables from the user data archive memory to RAM.

You can access an archived variable the same as you would a variable in RAM. However, you cannot delete, rename, or store to an archived variable because it is locked automatically.

To archive variables, use **Archive**.

```
10→arctest ENTER                 10
Archive arctest ENTER           Done
5*arctest ENTER                  50
15→arctest ENTER
```




```
ESC
Unarchiv arctest ENTER          Done
15→arctest ENTER                 15
```

unitV() MATH/Matrix/Vector ops menu

unitV(*vector1***)** ⇒ *vector*

Returns either a row- or column-unit vector, depending on the form of *vector1*.

vector1 must be either a single-row matrix or a single-column matrix.

```
unitV([a,b,c]) ENTER
```

$$\left[\frac{a}{\sqrt{a^2+b^2+c^2}}\ \frac{b}{\sqrt{a^2+b^2+c^2}}\ \frac{c}{\sqrt{a^2+b^2+c^2}}\right]$$

```
unitV([1,2,1]) ENTER
```

$$\left[\frac{\sqrt{6}}{6}\ \frac{\sqrt{6}}{3}\ \frac{\sqrt{6}}{6}\right]$$

```
unitV([1;2;3]) ENTER
```

$$\begin{bmatrix}\frac{\sqrt{14}}{14}\\ \frac{\sqrt{14}}{7}\\ \frac{3\cdot\sqrt{14}}{14}\end{bmatrix}$$

Unlock CATALOG

Unlock *var1*[, *var2*][, *var3*]...

Unlocks the specified variables.

Note: The variables can be locked using the **Lock** command.

Downloaded from www.Manualslib.com manuals search engine

variance() MATH/Statistics menu

variance(*list*[**,** *freqlist*]**)** ⇒ *expression*

Returns the variance of *list*.

Each *freqlist* element counts the number of consecutive occurrences of the corresponding element in *list*.

Note: *list* must contain at least two elements.

```
variance({a,b,c}) ENTER
                    a²-a•(b+c)+b²-b•c+c²
                    ---------------------
                              3
variance({1,2,5,-6,3,-2}) ENTER
                              31/2
variance({1,3,5},{4,6,2}) ENTER
                              68/33
```

---

variance(*matrix1*[**,** *freqmatrix*]**)** ⇒ *matrix*

Returns a row vector containing the variance of each column in *matrix1*.

Each *freqmatrix* element counts the number of consecutive occurrences of the corresponding element in *matrix1*.

Note: *matrix1* must contain at least two rows.

```
variance([1,2,5;-3,0,1;
.5,.7,3]) ENTER      [4.75  1.03  4]
variance([-1.1,2.2;3.4,5.1;
-2.3,4.3],[6,3;2,4;5,1]) ENTER
                     [3.91731,2.08411]
```

when() CATALOG

when(*condition***,** *trueResult* [**,** *falseResult*]
[**,** *unknownResult*]**)** ⇒ *expression*


Returns *trueResult*, *falseResult*, or *unknownResult*, depending on whether *condition* is true, false, or unknown. Returns the input if there are too few arguments to specify the appropriate result.

Omit both *falseResult* and *unknownResult* to make an expression defined only in the region where *condition* is true.

```
when(x<0,x+3)|x=5 ENTER
                    when(x<0,3+x)
```


Use an undef *falseResult* to define an expression that graphs only on an interval.

```
ClrGraph ENTER
Graph when(x≥-π and x<0,x+3,undef)
ENTER
```

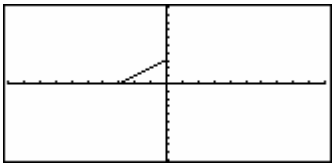


Omit only the *unknownResult* to define a two-piece expression.

```
Graph when(x<0,x+3,5-x^2) ENTER
```

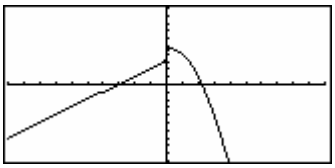

Nest **when()** to define expressions that have more than two pieces.

```
HOME
ClrGraph ENTER                    Done
Graph when(x<0,when(x<-π,
4*sin(x),2x+3),5-x^2) ENTER
```

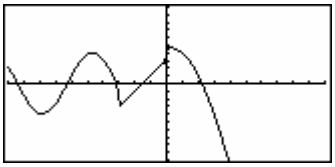

Downloaded from www.Manualslib.com manuals search engine

when() is helpful for defining recursive functions.

```
when(n>0,n*factoral(n-1),1)
→factoral(n) ENTER                    Done
factoral(3) ENTER                       6
3! ENTER                                6
```

While — CATALOG

While *condition*
block
EndWhile

Executes the statements in *block* as long as *condition* is true.

block can be either a single statement or a sequence of statements separated with the ":" character.

Program segment:

```
   ⋮
:1→i
:0→temp
:While i<=20
:  temp+1/i→temp
:  i+1→i
:EndWhile
:Disp "sum of reciprocals up to 20",te
   ⋮
```

"With"

See |, page 912.

xor — MATH/Test menu

Boolean expression1 **xor** *Boolean expression2* ⇒ *Boolean expression*

Returns true if *Boolean expression1* is **true** and *Boolean expression2* is false, or vice versa. Returns false if *Boolean expression1* and *Boolean expression2* are both true or both false. Returns a simplified Boolean expression if either of the original Boolean expressions cannot be resolved to true or false.

Note: See **or**.

```
true xor true ENTER                   false
(5>3) xor (3>5) ENTER                  true
```

---

integer1 **xor** *integer2* ⇒ *integer*

Compares two real integers bit-by-bit using an **xor** operation. Internally, both integers are converted to signed, 32-bit binary numbers. When corresponding bits are compared, the result is 1 if either bit (but not both) is 1; the result is 0 if both bits are 0 or both bits are 1. The returned value represents the bit results, and is displayed according to the Base mode.

You can enter the integers in any number base. For a binary or hexadecimal entry, you must use the 0b or 0h prefix, respectively. Without a prefix, integers are treated as decimal (base 10).

If you enter a decimal integer that is too large for a signed, 32-bit binary form, a symmetric modulo operation is used to bring the value into the appropriate range.

Note: See **or**.

In Hex base mode:

```
0h7AC36 xor 0h3D5F ENTER          0h79169
```

Important: Zero, not the letter O.

In Bin base mode:

```
0b100101 xor 0b100 ENTER          0b100001
```

Note: A binary entry can have up to 32 digits (not counting the 0b prefix). A hexadecimal entry can have up to 8 digits.

Downloaded from www.Manualslib.com manuals search engine

XorPic CATALOG

XorPic *picVar*[, *row*] [, *column*]

Displays the picture stored in *picVar* on the current Graph screen.

Uses **xor** logic for each pixel. Only those pixel positions that are exclusive to either the screen or the picture are turned on. This instruction turns off pixels that are turned on in both images.

picVar must contain a pic data type.

row and *column*, if included, specify the pixel coordinates for the upper left corner of the picture. Defaults are (0, 0).

zeros() MATH/Algebra menu

zeros(*expression***,** *var***)** ⇒ *list*

Returns a list of candidate real values of *var* that make *expression*=0. **zeros()** does this by computing **exp▸list(solve(***expression*=0,*var***),***var***)**.

For some purposes, the result form for **zeros()** is more convenient than that of **solve()**. However, the result form of **zeros()** cannot express implicit solutions, solutions that require inequalities, or solutions that do not involve *var*.

Note: See also **cSolve()**, **cZeros()**, and **solve()**.

```
zeros(a*x^2+b*x+c,x) ENTER
```

$$\left\{\frac{-\left(\sqrt{b^2-4\cdot a\cdot c}+b\right)}{2\cdot a}\ \frac{\sqrt{b^2-4\cdot a\cdot c}-b}{2\cdot a}\right\}$$

```
a*x^2+b*x+c|x=ans(1)[2] ENTER        0

exact(zeros(a*(e^(x)+x)
(sign (x)-1),x)) ENTER               {}

exact(solve(a*(e^(x)+x)
(sign (x)-1)=0,x)) ENTER
                        e^x + x = 0 or x>0 or a = 0
```

---

zeros({*expression1***,** *expression2***}, {***varOrGuess1***,** *varOrGuess2* [**,** …]**})** ⇒ *matrix*

Returns candidate real zeros of the simultaneous algebraic *expressions*, where each *varOrGuess* specifies an unknown whose value you seek.

Optionally, you can specify an initial guess for a variable. Each *varOrGuess* must have the form:

variable
– or –
variable = *real or non-real number*


For example, x is valid and so is x=3.

If all of the expressions are polynomials and if you do NOT specify any initial guesses, **zeros()** uses the lexical Gröbner/Buchberger elimination method to attempt to determine **all** real zeros.

For example, suppose you have a circle of radius r at the origin and another circle of radius r centered where the first circle crosses the positive x-axis. Use **zeros()** to find the intersections.

As illustrated by r in the example to the right, simultaneous *polynomial* expressions can have extra variables that have no values, but represent given numeric values that could be substituted later.

Each row of the resulting matrix represents an alternate zero, with the components ordered the same as the *varOrGuess* list. To extract a row, index the matrix by [*row*].

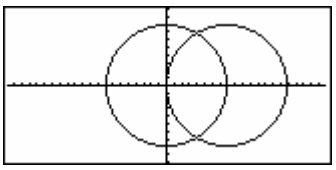

```
zeros({x^2+y^2-r^2,
(x-r)^2+y^2-r^2},{x,y}) ENTER
```

$$\begin{bmatrix} \frac{r}{2} & \frac{\sqrt{3}\cdot r}{2} \\ \frac{r}{2} & \frac{-\sqrt{3}\cdot r}{2} \end{bmatrix}$$

Extract row 2:

Downloaded from www.Manualslib.com manuals search engine

ans(1)[2] ENTER

$$\begin{bmatrix} \frac{r}{2} & \frac{-\sqrt{3}\cdot r}{2} \end{bmatrix}$$

You can also (or instead) include unknowns that do not appear in the expressions. For example, you can include z as an unknown to extend the previous example to two parallel intersecting cylinders of radius r. The cylinder zeros illustrate how families of zeros might contain arbitrary constants in the form *ck*, where *k* is an integer suffix from 1 through 255. The suffix resets to 1 when you use **ClrHome** or F1 8:Clear Home.

zeros({x^2+y^2−r^2, (x−r)^2+y^2−r^2},{x,y,z}) ENTER

$$\begin{bmatrix} \frac{r}{2} & \frac{\sqrt{3}\cdot r}{2} & @1 \\ \frac{r}{2} & \frac{-\sqrt{3}\cdot r}{2} & @1 \end{bmatrix}$$

For polynomial systems, computation time or memory exhaustion may depend strongly on the order in which you list unknowns. If your initial choice exhausts memory or your patience, try rearranging the variables in the expressions and/or *varOrGuess* list.

If you do not include any guesses and if any expression is non-polynomial in any variable but all expressions are linear in the unknowns, **zeros()** uses Gaussian elimination to attempt to determine all real zeros.

zeros({x+e^(z)*y−1,x−y−sin(z)},{x,y}) ENTER

$$\begin{bmatrix} \frac{e^z\cdot\sin(z)+1}{e^z+1} & \frac{-(\sin(z)-1)}{e^z+1} \end{bmatrix}$$

If a system is neither polynomial in all of its variables nor linear in its unknowns, **zeros()** determines at most one zero using an approximate iterative method. To do so, the number of unknowns must equal the number of expressions, and all other variables in the expressions must simplify to numbers.

zeros({e^(z)*y−1,−y−sin(z)},{y,z}) ENTER

[.041… 3.183…]

Each unknown starts at its guessed value if there is one; otherwise, it starts at 0.0.

Use guesses to seek additional zeros one by one. For convergence, a guess may have to be rather close to a zero.

zeros({e^(z)*y−1,−y−sin(z)},{y,z=2π}) ENTER

[.001… 6.281…]

ZoomBox CATALOG


ZoomBox


Displays the Graph screen, lets you draw a box that defines a new viewing window, and updates the window.

In function graphing mode:

1.25x*cos(x)→y1(x) ENTER Done

ZoomStd:ZoomBox ENTER

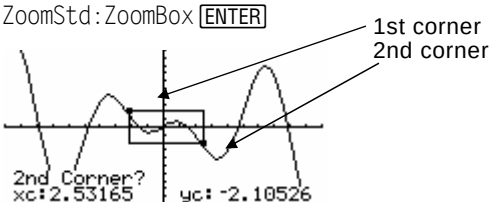

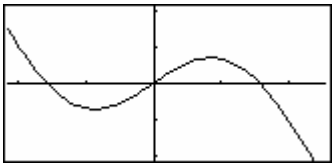

The display after defining **ZoomBox** by pressing ENTER the second time.

Downloaded from www.Manualslib.com manuals search engine

ZoomData CATALOG


ZoomData

Adjusts the window settings based on the currently defined plots (and data) so that all statistical data points will be sampled, and displays the Graph screen.


Note: Does not adjust ymin and ymax for histograms.

In function graphing mode:

```
{1,2,3,4}→L1 ENTER          {1 2 3 4}
{2,3,4,5}→L2 ENTER          {2 3 4 5}
newPlot 1,1,L1,L2 ENTER          Done
ZoomStd ENTER
```

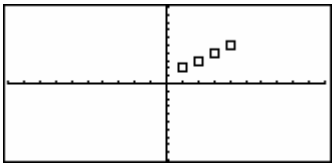

```
HOME
ZoomData ENTER
```

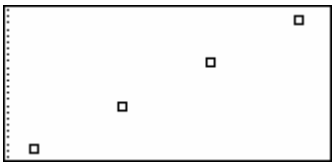


ZoomDec CATALOG

ZoomDec


Adjusts the viewing window so that Δx and $\Delta y = 0.1$ and displays the Graph screen with the origin centered on the screen.

In function graphing mode:

```
1.25x*cos(x)→y1(x) ENTER         Done
ZoomStd ENTER
```

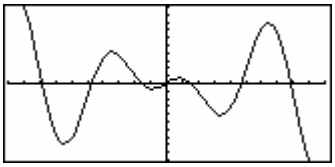

```
HOME
ZoomDec ENTER
```

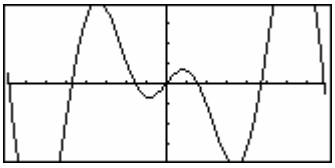

Downloaded from www.Manualslib.com manuals search engine


ZoomFit CATALOG

ZoomFit


Displays the Graph screen, and calculates the necessary window dimensions for the dependent variables to view all the picture for the current independent variable settings.

In function graphing mode:

`1.25x*cos(x)→y1(x)` ENTER Done
`ZoomStd` ENTER

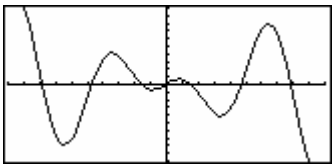

HOME
`ZoomFit` ENTER

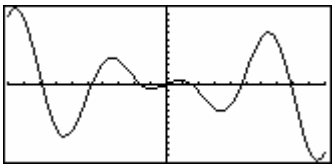

ZoomIn CATALOG


ZoomIn

Displays the Graph screen, lets you set a center point for a zoom in, and updates the viewing window.


The magnitude of the zoom is dependent on the Zoom factors xFact and yFact. In 3D Graph mode, the magnitude is dependent on xFact, yFact, and zFact.

In function graphing mode:

`1.25x*cos(x)→y1(x)` ENTER Done
`ZoomStd:ZoomIn` ENTER

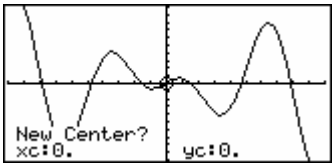

ENTER

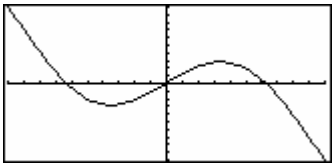


ZoomInt CATALOG

ZoomInt


Displays the Graph screen, lets you set a center point for the zoom, and adjusts the window settings so that each pixel is an integer in all directions.

In function graphing mode:

`1.25x*cos(x)→y1(x)` ENTER Done
`ZoomStd:ZoomInt` ENTER

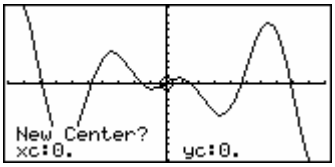

ENTER

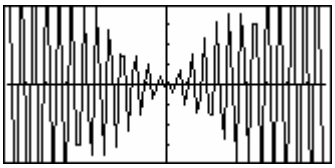

Downloaded from www.Manualslib.com manuals search engine

ZoomOut CATALOG


ZoomOut

Displays the Graph screen, lets you set a center point for a zoom out, and updates the viewing window.


The magnitude of the zoom is dependent on the Zoom factors xFact and yFact. In 3D Graph mode, the magnitude is dependent on xFact, yFact, and zFact.

In function graphing mode:

`1.25x∗cos(x)→y1(x)` ENTER Done
`ZoomStd:ZoomOut` ENTER

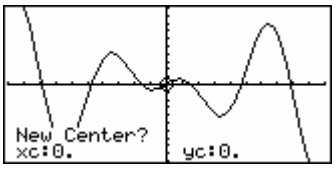

ENTER

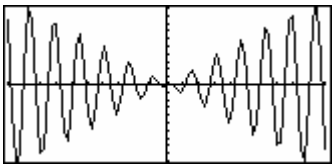

ZoomPrev CATALOG

ZoomPrev

Displays the Graph screen, and updates the viewing window with the settings in use before the last zoom.

ZoomRcl CATALOG

ZoomRcl

Displays the Graph screen, and updates the viewing window using the settings stored with the **ZoomSto** instruction.

ZoomSqr CATALOG


ZoomSqr

Displays the Graph screen, adjusts the x or y window settings so that each pixel represents an equal width and height in the coordinate system, and updates the viewing window.


In 3D Graph mode, **ZoomSqr** lengthens the shortest two axes to be the same as the longest axis.

In function graphing mode:

`1.25x∗cos(x)→y1(x)` ENTER Done
`ZoomStd` ENTER

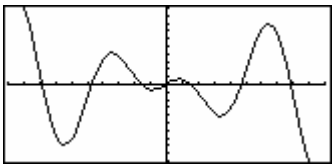

HOME
`ZoomSqr` ENTER

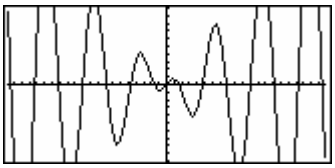

Downloaded from www.Manualslib.com manuals search engine

ZoomStd CATALOG

ZoomStd

Sets the window variables to the following standard values, and then updates the viewing window.

Function graphing:
x: [- 10, 10, 1], y: [- 10, 10, 1] and xres=2

Parametric graphing:
t: [0, 2π, π/24], x: [- 10, 10, 1], y:[- 10, 10, 1]

Polar graphing:
θ: [0, 2π, π/24], x: [- 10, 10, 1], y: [- 10, 10, 1]


Sequence graphing:
nmin=1, nmax=10, plotStrt=1, plotStep=1,
x: [- 10, 10, 1], y: [- 10, 10, 1]

3D graphing:
eyeθ°=20, eyeϕ°=70, eyeψ°=0
x: [- 10, 10, 14], y: [- 10, 10, 14],
z: [- 10, 10], ncontour=5

Differential equations graphing:
t: [0, 10, .1, 0], x: [- 1, 10, 1], y: [- 10, 10, 1],
ncurves=0, Estep=1, diftol=.001, fldres=14,
dtime=0

In function graphing mode:

```
1.25x* cos(x)→y1(x) ENTER                Done
ZoomStd ENTER
```

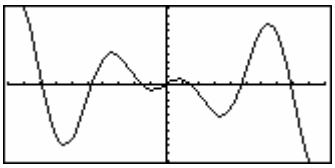

ZoomSto CATALOG

ZoomSto

Stores the current Window settings in the Zoom memory. You can use **ZoomRcl** to restore the settings.


ZoomTrig CATALOG

ZoomTrig


Displays the Graph screen, sets Δx to π/24, and xscl to π/2, centers the origin, sets the y settings to [- 4, 4, .5], and updates the viewing window.

In function graphing mode:

```
1.25x* cos(x)→y1(x) ENTER                Done
ZoomStd ENTER
```

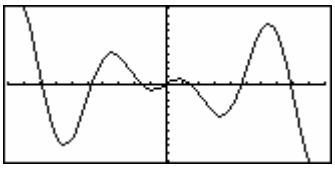

```
HOME
ZoomTrig ENTER
```

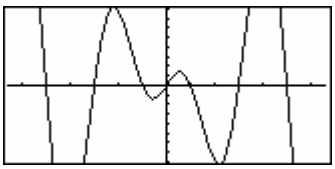

+ (add) + key

expression1 + *expression2* ⇒ *expression*

Returns the sum of *expression1* and *expression2*.

```
56 ENTER                                 56
ans(1)+4 ENTER                           60
ans(1)+4 ENTER                           64
ans(1)+4 ENTER                           68
ans(1)+4 ENTER                           72
```


Downloaded from www.Manualslib.com manuals search engine

list1 + *list2* ⇒ *list*
matrix1 + *matrix2* ⇒ *matrix*

Returns a list (or matrix) containing the sums of corresponding elements in *list1* and *list2* (or *matrix1* and *matrix2*).

Dimensions of the arguments must be equal.

{22,π,π/2}→L1 ENTER → {22 π π/2}
{10,5,π/2}→L2 ENTER → {10 5 π/2}
L1+L2 ENTER → {32 π+5 π}

ans(1)+{π,-5,-π} ENTER → {π+32 π 0}

[a,b;c,d]+[1,0;0,1] ENTER →

$$\begin{bmatrix} a+1 & b \\ c & d+1 \end{bmatrix}$$

---

expression + *list1* ⇒ *list*
list1 + *expression* ⇒ *list*

Returns a list containing the sums of *expression* and each element in *list1*.

15+{10,15,20} ENTER → {25 30 35}

{10,15,20}+15 ENTER → {25 30 35}

---

expression + *matrix1* ⇒ *matrix*
matrix1 + *expression* ⇒ *matrix*

Returns a matrix with *expression* added to each element on the diagonal of *matrix1*. *matrix1* must be square.

Note: Use **.+** (dot plus) to add an expression to each element.

20+[1,2;3,4] ENTER →

$$\begin{bmatrix} 21 & 2 \\ 3 & 24 \end{bmatrix}$$

− (subtract) − key

expression1 − *expression2* ⇒ *expression*

Returns *expression1* minus *expression2*.

6−2 ENTER → 4

π−π/6 ENTER → $\frac{5 \cdot \pi}{6}$

---

list1 − *list2* ⇒ *list*
matrix1 − *matrix2* ⇒ *matrix*

Subtracts each element in *list2* (or *matrix2*) from the corresponding element in *list1* (or *matrix1*), and returns the results.

Dimensions of the arguments must be equal.

{22,π,π/2}−{10,5,π/2} ENTER → {12 π−5 0}

[3,4]−[1,2] ENTER → [2 2]

---

expression − *list1* ⇒ *list*
list1 − *expression* ⇒ *list*

Subtracts each *list1* element from *expression* or subtracts *expression* from each *list1* element, and returns a list of the results.

15−{10,15,20} ENTER → {5 0 -5}

{10,15,20}−15 ENTER → {-5 0 5}

---

expression − *matrix1* ⇒ *matrix*
matrix1 − *expression* ⇒ *matrix*

expression − *matrix1* returns a matrix of *expression* times the identity matrix minus *matrix1*. *matrix1* must be square.

matrix1 − *expression* returns a matrix of *expression* times the identity matrix subtracted from *matrix1*. *matrix1* must be square.

Note: Use **.−** (dot minus) to subtract an expression from each element.

20−[1,2;3,4] ENTER →

$$\begin{bmatrix} 19 & -2 \\ -3 & 16 \end{bmatrix}$$

Downloaded from www.Manualslib.com manuals search engine

∗ (multiply) ⊠ key

expression1 ∗ *expression2* ⇒ *expression*

Returns the product of *expression1* and *expression2*.

2∗3.45 ENTER → 6.9

x∗y∗x ENTER → $x^2 \cdot y$

---

list1 ∗ *list2* ⇒ *list*

Returns a list containing the products of the corresponding elements in *list1* and *list2*.

Dimensions of the lists must be equal.

{1.0,2,3}∗{4,5,6} ENTER → {4. 10 18}

{2/a,3/2}∗{a²,b/3} ENTER → $\{2 \cdot a \quad \frac{b}{2}\}$

---

matrix1 ∗ *matrix2* ⇒ *matrix*

Returns the matrix product of *matrix1* and *matrix2*.

The number of rows in *matrix1* must equal the number of columns in *matrix2*.

[1,2,3;4,5,6]∗[a,d;b,e;c,f] ENTER

$$\begin{bmatrix}1 & 2 & 3\\4 & 5 & 6\end{bmatrix}\cdot\begin{bmatrix}a & d\\b & e\\c & f\end{bmatrix}$$
$$\begin{bmatrix}a+2\cdot b+3\cdot c & d+2\cdot e+3\\4\cdot a+5\cdot b+6\cdot c & 4\cdot d+5\cdot e\end{bmatrix}$$

---

expression ∗ *list1* ⇒ *list*
list1 ∗ *expression* ⇒ *list*

Returns a list containing the products of *expression* and each element in *list1*.

π∗{4,5,6} ENTER → {4•π 5•π 6•π}

---

expression ∗ *matrix1* ⇒ *matrix*
matrix1 ∗ *expression* ⇒ *matrix*

Returns a matrix containing the products of *expression* and each element in *matrix1*.

Note: Use **.∗** (dot multiply) to multiply an expression by each element.

[1,2;3,4]∗.01 ENTER → $\begin{bmatrix}.01 & .02\\.03 & .04\end{bmatrix}$

λ∗identity(3) ENTER → $\begin{bmatrix}\lambda & 0 & 0\\0 & \lambda & 0\\0 & 0 & \lambda\end{bmatrix}$

/ (divide) ÷ key

expression1 / *expression2* ⇒ *expression*

Returns the quotient of *expression1* divided by *expression2*.

2/3.45 ENTER → .57971

x^3/x ENTER → x^2

---

list1 / *list2* ⇒ *list*

Returns a list containing the quotients of *list1* divided by *list2*.

Dimensions of the lists must be equal.

{1.0,2,3}/{4,5,6} ENTER → {.25 2/5 1/2}

---

expression / *list1* ⇒ *list*
list1 / *expression* ⇒ *list*

Returns a list containing the quotients of *expression* divided by *list1* or *list1* divided by *expression*.

a/{3,a,√(a)} ENTER → $\left\{\frac{a}{3} \quad 1 \quad \sqrt{a}\right\}$

{a,b,c}/(a∗b∗c) ENTER → $\left\{\frac{1}{b\cdot c} \quad \frac{1}{a\cdot c} \quad \frac{1}{a\cdot b}\right\}$

---

matrix1 / *expression* ⇒ *matrix*

Returns a matrix containing the quotients of *matrix1*/ *expression*.

Note: Use **./** (dot divide) to divide an expression by each element.

[a,b,c]/(a∗b∗c) ENTER → $\left[\frac{1}{b\cdot c} \quad \frac{1}{a\cdot c} \quad \frac{1}{a\cdot b}\right]$

Downloaded from www.Manualslib.com manuals search engine

^ (power) ⌃ key

expression1 **^** *expression2* ⇒ *expression*
list1 **^** *list2* ⇒ *list*

Returns the first argument raised to the power of the second argument.

For a list, returns the elements in *list1* raised to the power of the corresponding elements in *list2*.

In the real domain, fractional powers that have reduced exponents with odd denominators use the real branch versus the principal branch for complex mode.

```
4^2 ENTER                                  16
{a,2,c}^{1,b,3} ENTER                      {a  2^b  c^3}
```

---

expression **^** *list1* ⇒ *list*

Returns *expression* raised to the power of the elements in *list1*.

```
p^{a,2,-3} ENTER                           {p^a  p^2  1/p^3}
```

---

list1 **^** *expression* ⇒ *list*

Returns the elements in *list1* raised to the power of *expression*.

```
{1,2,3,4}^-2 ENTER
                                           {1  1/4  1/9  1/16}
```

---

squareMatrix1 **^** *integer* ⇒ *matrix*

Returns *squareMatrix1* raised to the *integer* power.

squareMatrix1 must be a square matrix.

If *integer* = −1, computes the inverse matrix.
If *integer* < −1, computes the inverse matrix to an appropriate positive power.

```
[1,2;3,4]^2 ENTER
[1,2;3,4]^-1 ENTER
[1,2;3,4]^-2 ENTER
```

$$\begin{bmatrix}1&2\\3&4\end{bmatrix}^2 \qquad \begin{bmatrix}7&10\\15&22\end{bmatrix}$$

$$\begin{bmatrix}1&2\\3&4\end{bmatrix}^{-1} \qquad \begin{bmatrix}-2&1\\3/2&-1/2\end{bmatrix}$$

$$\begin{bmatrix}1&2\\3&4\end{bmatrix}^{-2} \qquad \begin{bmatrix}11/2&-5/2\\-15/4&7/4\end{bmatrix}$$

.+ (dot add) ⌃ . ⌃ + keys

matrix1 **.+** *matrix2* ⇒ *matrix*
expression **.+** *matrix1* ⇒ *matrix*

matrix1 **.+** *matrix2* returns a matrix that is the sum of each pair of corresponding elements in *matrix1* and *matrix2*.

expression **.+** *matrix1* returns a matrix that is the sum of *expression* and each element in *matrix1*.

```
[a,2;b,3].+[c,4;5,d] ENTER
x.+[c,4;5,d] ENTER
```

$$\begin{bmatrix}b&3\end{bmatrix} .+ \begin{bmatrix}5&d\end{bmatrix} \qquad \begin{bmatrix}a+c&6\\b+5&d+3\end{bmatrix}$$

$$x .+ \begin{bmatrix}c&4\\5&d\end{bmatrix} \qquad \begin{bmatrix}x+c&x+4\\x+5&x+d\end{bmatrix}$$

.− (dot subt.) ⌃ . ⌃ − keys

matrix1 **.−** *matrix2* ⇒ *matrix*
expression **.−** *matrix1* ⇒ *matrix*

matrix1 **.−** *matrix2* returns a matrix that is the difference between each pair of corresponding elements in *matrix1* and *matrix2*.

expression **.−** *matrix1* returns a matrix that is the difference of *expression* and each element in *matrix1*.

```
[a,2;b,3].-[c,4;d,5] ENTER
x.-[c,4;d,5] ENTER
```

$$\begin{bmatrix}b&3\end{bmatrix} .- \begin{bmatrix}d&5\end{bmatrix} \qquad \begin{bmatrix}a-c&-2\\b-d&-2\end{bmatrix}$$

$$x .- \begin{bmatrix}c&4\\d&5\end{bmatrix} \qquad \begin{bmatrix}x-c&x-4\\x-d&x-5\end{bmatrix}$$

Downloaded from www.Manualslib.com manuals search engine


.* (dot mult.) [.] [×] keys

matrix1 **.*** *matrix2* ⇒ *matrix*
expression **.*** *matrix1* ⇒ *matrix*

matrix1 **.*** *matrix2* returns a matrix that is the product of each pair of corresponding elements in *matrix1* and *matrix2*.

expression **.*** *matrix1* returns a matrix containing the products of *expression* and each element in *matrix1*.

```
[a,2;b,3].*[c,4;5,d] ENTER
x.*[a,b;c,d] ENTER
```

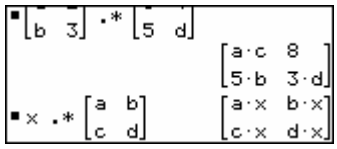


./ (dot divide) [.] [÷] keys

matrix1 **./** *matrix2* ⇒ *matrix*
expression **./** *matrix1* ⇒ *matrix*

matrix1 **./** *matrix2* returns a matrix that is the quotient of each pair of corresponding elements in *matrix1* and *matrix2*.

expression **./** *matrix1* returns a matrix that is the quotient of *expression* and each element in *matrix1*.

```
[a,2;b,3]./[c,4;5,d] ENTER
x./[c,4;5,d] ENTER
```

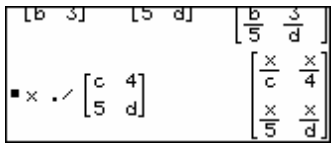


.^ (dot power) [.] [^] keys

matrix1 **.^** *matrix2* ⇒ *matrix*
expression **.^** *matrix1* ⇒ *matrix*

matrix1 **.^** *matrix2* returns a matrix where each element in *matrix2* is the exponent for the corresponding element in *matrix1*.

expression **.^** *matrix1* returns a matrix where each element in *matrix1* is the exponent for *expression*.

```
[a,2;b,3].^[c,4;5,d] ENTER
x.^[c,4;5,d] ENTER
```

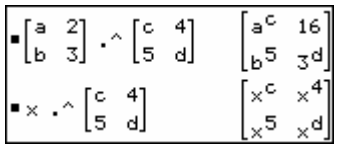

− (negate) [(-)] key and MATH/Base menu

−*expression1* ⇒ *expression*
−*list1* ⇒ *list*
−*matrix1* ⇒ *matrix*

Returns the negation of the argument.

For a list or matrix, returns all the elements negated.

If *expression1* is a binary or hexadecimal integer, the negation gives the two's complement.

```
-2.43 ENTER                                  -2.43
-{-1,0.4,1.2E19} ENTER
                                  {1 -.4 -1.2E19}
-a*-b ENTER                                  a•b
```

In Bin base mode:

```
0b100101▶dec ENTER                           37
```

└ **Important:** Zero, not the letter O.

```
-0b100101 ENTER
0b11111111111111111111111111011011
ans(1)▶dec ENTER                             -37
```

Note: To type ▶, press [2nd] [▶].

% (percent) CHAR/Punctuation menu

expression1 **%** ⇒ *expression*
list1 **%** ⇒ *list*
matrix1 **%** ⇒ *matrix*

Returns $\frac{argument}{100}$.

For a list or matrix, returns a list or matrix with each element divided by 100.

```
13% ◆ ENTER                                  .13
{1, 10, 100}% ◆ ENTER
                                  {.01 .1  1.}
```


Downloaded from www.Manualslib.com manuals search engine

= (equal) [=] key

expression1 = *expression2* ⇒ *Boolean expression*
list1 = *list2* ⇒ *Boolean list*
matrix1 = *matrix2* ⇒ *Boolean matrix*

Returns true if *expression1* is determined to be equal to *expression2*.

Returns false if *expression1* is determined to not be equal to *expression2*.


Anything else returns a simplified form of the equation.

For lists and matrices, returns comparisons element by element.

Example function listing using math test symbols: =, ≠, <, ≤, >, ≥

```
:g(x)
:Func
:If x≤-5 Then
:  Return 5
:  ElseIf x>-5 and x<0 Then
:  Return -x
:  ElseIf x≥0 and x≠10 Then
:  Return x
:  ElseIf x=10 Then
:  Return 3
:EndIf
:EndFunc
```

Graph g(x) [ENTER]

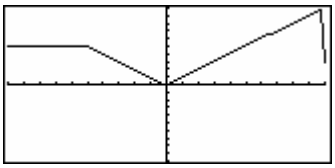

≠ [◆] [=] key

expression1 ≠ *expression2* ⇒ *Boolean expression*
list1 ≠ *list2* ⇒ *Boolean list*
matrix1 ≠ *matrix2* ⇒ *Boolean matrix*

Returns true if *expression1* is determined to be not equal to *expression2*.

Returns false if *expression1* is determined to be equal to *expression2*.

Anything else returns a simplified form of the equation.

For lists and matrices, returns comparisons element by element.

See "=" (equal) example.

< [2nd] [<] key

expression1 < *expression2* ⇒ *Boolean expression*
list1 < *list2* ⇒ *Boolean list*
matrix1 < *matrix2* ⇒ *Boolean matrix*

Returns true if *expression1* is determined to be less than *expression2*.

Returns false if *expression1* is determined to be greater than or equal to *expression2*.

Anything else returns a simplified form of the equation.

For lists and matrices, returns comparisons element by element.

See "=" (equal) example.

Downloaded from www.Manualslib.com manuals search engine

≤ ◆ 0 key

expression1 ≤ *expression2* ⇒ *Boolean expression*
list1 ≤ *list2* ⇒ *Boolean list*
matrix1 ≤ *matrix2* ⇒ *Boolean matrix*

Returns true if *expression1* is determined to be less than or equal to *expression2*.

Returns false if *expression1* is determined to be greater than *expression2*.

Anything else returns a simplified form of the equation.

For lists and matrices, returns comparisons element by element.

See "=" (equal) example.

> 2nd [>] key

expression1 > *expression2* ⇒ *Boolean expression*
list1 > *list2* ⇒ *Boolean list*
matrix1 > *matrix2* ⇒ *Boolean matrix*

Returns true if *expression1* is determined to be greater than *expression2*.

Returns false if *expression1* is determined to be less than or equal to *expression2*.

Anything else returns a simplified form of the equation.

For lists and matrices, returns comparisons element by element.

See "=" (equal) example.

≥ ◆ . key

expression1 ≥ *expression2* ⇒ *Boolean expression*
list1 ≥ *list2* ⇒ *Boolean list*
matrix1 ≥ *matrix2* ⇒ *Boolean matrix*

Returns true if *expression1* is determined to be greater than or equal to *expression2*.

Returns false if *expression1* is determined to be less than *expression2*.

Anything else returns a simplified form of the equation.

For lists and matrices, returns comparisons element by element.

See "=" (equal) example.

! (factorial) ◆ ÷ key

expression1! ⇒ *expression*
list1! ⇒ *list*
matrix1! ⇒ *matrix*

Returns the factorial of the argument.

For a list or matrix, returns a list or matrix of factorials of the elements.

The TI-89 computes a numeric value for only non-negative whole-number values.

5! ENTER → 120

{5,4,3}! ENTER → {120 24 6}

[1,2;3,4]! ENTER → $\begin{bmatrix} 1 & 2 \\ 6 & 24 \end{bmatrix}$

Downloaded from www.Manualslib.com manuals search engine

& (append) ◆ × key

string1 **&** *string2* ⇒ *string*

Returns a text string that is *string2* appended to *string1*.

```
"Hello " & "Nick" ENTER
                    "Hello Nick"
```

∫() (integrate) 2nd [∫] key

∫(*expression1***,** *var***[,** *lower***] [,***upper***])** ⇒ *expression*
∫(*list1***,***var* **[,***order***])** ⇒ *list*
∫(*matrix1***,***var* **[,***order***])** ⇒ *matrix*

Returns the integral of *expression1* with respect to the variable *var* from *lower* to *upper*.

```
∫(x^2,x,a,b) ENTER
```

$$\frac{b^3}{3} - \frac{a^3}{3}$$

Returns an anti-derivative if *lower* and *upper* are omitted. A symbolic constant of integration such as C is omitted.

```
∫(x^2,x) ENTER
```

$$\frac{x^3}{3}$$

However, *lower* is added as a constant of integration if only *upper* is omitted.


```
∫(a*x^2,x,c) ENTER
```

$$\frac{a \cdot x^3}{3} + c$$

Equally valid anti-derivatives might differ by a numeric constant. Such a constant might be disguised—particularly when an anti-derivative contains logarithms or inverse trigonometric functions. Moreover, piecewise constant expressions are sometimes added to make an anti-derivative valid over a larger interval than the usual formula.

```
∫(1/(2-cos(x)),x)→tmp(x) ENTER

ClrGraph:Graph tmp(x):Graph
1/(2-cos(x)):Graph √(3)
(2tan⁻¹(√(3)(tan(x/2)))/3) ENTER
```

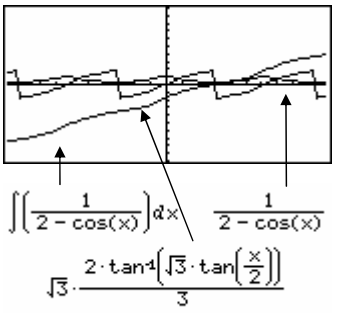

∫() returns itself for pieces of *expression1* that it cannot determine as an explicit finite combination of its built-in functions and operators.

When *lower* and *upper* are both present, an attempt is made to locate any discontinuities or discontinuous derivatives in the interval *lower* < *var* < *upper* and to subdivide the interval at those places.

For the AUTO setting of the Exact/Approx mode, numerical integration is used where applicable when an anti-derivative or a limit cannot be determined.

```
∫(b*e^(-x^2)+a/(x^2+a^2),x) ENTER
```

$$\int\left(b \cdot e^{-x^2} + \frac{a}{x^2 + a^2}\right)dx$$
$$b \cdot \int\left(e^{-x^2}\right)dx + \tan^{-1}\left(\frac{x}{a}\right)$$

For the APPROX setting, numerical integration is tried first, if applicable. Anti-derivatives are sought only where such numerical integration is inapplicable or fails.

```
∫(e^(-x^2),x,-1,1)◆ ENTER        1.493...
```

∫() can be nested to do multiple integrals. Integration limits can depend on integration variables outside them.

Note: See also **nInt()**.

```
∫(∫(ln(x+y),y,0,x),x,0,a) ENTER
```

$$\int_0^a \int_0^x \ln(x+y)\,dy\,dx$$
$$\frac{a^2 \cdot \ln(a)}{2} + a^2 \cdot (\ln(2) - 3/4)$$

Downloaded from www.Manualslib.com manuals search engine

√() (square root) 2nd [√] key

√ (*expression1***)** ⇒ *expression*
√ (*list1***)** ⇒ *list*

Returns the square root of the argument.

For a list, returns the square roots of all the elements in *list1*.

√(4) ENTER → 2

√({9,a,4}) ENTER → {3 √a 2}

Π() (product) MATH/Calculus menu

Π(*expression1***,** *var***,** *low***,** *high***)** ⇒ *expression*

Evaluates *expression1* for each value of *var* from *low* to *high*, and returns the product of the results.

Π(1/n,n,1,5) ENTER → $\frac{1}{120}$

Π(k^2,k,1,n) ENTER → $(n!)^2$

Π({1/n,n,2},n,1,5) ENTER → $\left\{\frac{1}{120}\ 120\ 32\right\}$

Π(*expression1***,** *var***,** *low***,** *low*– 1**)** ⇒ 1

Π(k,k,4,3) ENTER → 1

Π(*expression1***,** *var***,** *low***,** *high***)** ⇒ 1/Π(*expression1*, *var*, *high*+1, *low*– 1) if *high* < *low*– 1

Π(1/k,k,4,1) ENTER → 6

Π(1/k,k,4,1)*Π(1/k,k,2,4) ENTER → 1/4

Σ() (sum) MATH/Calculus menu

Σ(*expression1***,** *var***,** *low***,** *high***)** ⇒ *expression*

Evaluates *expression1* for each value of *var* from *low* to *high*, and returns the sum of the results.

Σ(1/n,n,1,5) ENTER → $\frac{137}{60}$

Σ(k^2,k,1,n) ENTER → $\frac{n\cdot(n+1)\cdot(2\cdot n+1)}{6}$

Σ(1/n^2,n,1,∞) ENTER → $\frac{\pi^2}{6}$

Σ(*expression1***,** *var***,** *low***,** *low*– 1**)** ⇒ 0

Σ(k,k,4,3) ENTER → 0

Σ(*expression1***,** *var***,** *low***,** *high***)** ⇒ –Σ(*expression1*, *var*, *high*+1, *low*– 1) if *high* < *low*– 1

Σ(k,k,4,1) ENTER → –5

Σ(k,k,4,1)+Σ(k,k,2,4) ENTER → 4

(indirection) CATALOG

*varNameString*

Refers to the variable whose name is *varNameString*. This lets you create and modify variables from a program using strings.

Program segment:

```
   ⋮
:Request "Enter Your Name",str1
:NewFold #str1
   ⋮

   ⋮
:For i,1,5,1
:  ClrGraph
:  Graph i*x
:  StoPic #("pic" & string(i))
:EndFor
   ⋮
```


Downloaded from www.Manualslib.com manuals search engine

ᴳ (gradian) **MATH/Angle menu**

*expression1*ᴳ ° ⇒ *expression*
*list1*ᴳ ° ⇒ *list*
*matrix1*ᴳ ° ⇒ *matrix*

This function gives you a way to use a gradian angle while in the Degree or Radian modes.

In Radian angle mode, multiplies *expression* by π/200. In Degree angle mode, multiplies expression 1 by g/100.
In Gradian mode, returns expression1 unchanged.

In Degree, Gradian or Radian mode:

cos(50ᴳ) ENTER $\frac{\sqrt{2}}{2}$

cos({0,100ᴳ,200ᴳ}) ENTER {1,0.-1}

ʳ (radian) **MATH/Angle menu**

*expression1*ʳ ⇒ *expression*
*list1*ʳ ⇒ *list*
*matrix1*ʳ ⇒ *matrix*

In Degree angle mode, multiplies *expression1* by 180/π. In Radian angle mode, returns *expression1* unchanged. In Gradian mode, multiplies *expression1* by 200/π.

This function gives you a way to use a radian angle while in Degree and Gradian mode.

Hint: Use ʳ if you want to force radians in a function or program definition regardless of the mode that prevails when the function or program is used.

In Degree, Gradian or Radian angle mode:

cos((π/4)ʳ) ENTER $\frac{\sqrt{2}}{2}$

cos({0ʳ,(π/12)ʳ,-πʳ}) ENTER

$\{1 \quad \frac{(\sqrt{3}+1)\cdot\sqrt{2}}{4} \quad -1\}$

rectangular

cylindrical

spherical

° (degree) 2nd [°] **key**

expression1 ⇒ *expression*
list1° ⇒ *list*
matrix1° ⇒ *matrix*

In Radian angle mode, multiplies *expression* by π/180. In Degree angle mode, returns *expression* unchanged.In Gradian angle mode, multiplies *expression1* by 10/9.

This function gives you a way to use a degree angle while in Gradian and Radian mode.

In Degree, Gradian or Radian angle mode:

cos(45°) ENTER $\frac{\sqrt{2}}{2}$

cos({0,π/4,90°,30.12°}) ◆ ENTER
{1 .707... 0 .864...}


∠ (angle) 2nd [∠] **key**

[*radius*,∠θ_*angle*] ⇒ *vector* (polar input)
[*radius*,∠θ_*angle*,*Z_coordinate*] ⇒ *vector* (cylindrical input)
[*radius*,∠θ_*angle*,∠φ_*angle*] ⇒ *vector* (spherical input)

Returns coordinates as a vector depending on the Vector Format mode setting: rectangular, cylindrical, or spherical.

[5,∠60°,∠45°] ENTER

In Radian mode and vector format set to:

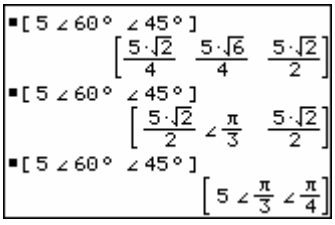

Downloaded from www.Manualslib.com manuals search engine

(*magnitude* ∠ *angle***)** ⇒ *complexValue* (polar input)

Enters a complex value in (r∠θ) polar form. The *angle* is interpreted according to the current Angle mode setting.

In Radian angle mode and Rectangular complex format mode:

5+3*i*– (10∠π/4) ENTER

$5-5\cdot\sqrt{2}+(3-5\cdot\sqrt{2})\cdot i$

◆ ENTER

$-2.071\ldots-4.071\ldots\cdot i$

°, ', " 2nd [°] key (°), 2nd [′] key ('), 2nd ["] key (")

dd°*mm*'*ss.ss*" ⇒ *expression*

dd	A positive or negative number
mm	A non-negative number
ss.ss	A non-negative number

Returns *dd*+(*mm*/60)+(*ss.ss*/3600).

This base-60 entry format lets you:

- Enter an angle in degrees/minutes/seconds without regard to the current angle mode.
- Enter time as hours/minutes/seconds.

In Degree angle mode:

25°13'17.5" ENTER → 25.221...

25°30' ENTER → 51/2

' (prime) 2nd [′] key

variable'
variable''

Enters a prime symbol in a differential equation. A single prime symbol denotes a 1st-order differential equation, two prime symbols denote a 2nd-order, etc.

deSolve(y''=y^(-1/2) and y(0)=0 and y'(0)=0,t,y) ENTER

$\frac{2\cdot y^{3/4}}{3}=t$

_ (underscore) ◆ [_] key

expression_unit

Designates the units for an *expression*. All unit names must begin with an underscore.

You can use pre-defined units or create your own units. For a list of pre-defined units, refer to the module about constants and measurement units. You can press 2nd [UNITS] to select units from a menu, or you can type the unit names directly.

3_m▶_ft ENTER → 9.842...·_ft

Note: To type ▶, press 2nd [▸].

---

*variable_*

When *variable* has no value, it is treated as though it represents a complex number. By default, without the _, the variable is treated as real.

If *variable* has a value, the _ is ignored and *variable* retains its original data type.

Note: You can store a complex number to a variable without using _. However, for best results in calculations such as **cSolve()** and **cZeros()**, the _ is recommended.

Assuming z is undefined:

real(z) ENTER → z

real(z_) ENTER → real(z_)

imag(z) ENTER → 0

imag(z_) ENTER → imag(z_)

Downloaded from www.Manualslib.com manuals search engine

▶ (convert) 2nd [▶] key

expression_unit1 ▶ *_unit2* ⇒ *expression_unit2*

3_m▶_ft ENTER → 9.842…•_ft

Converts an expression from one unit to another. The units must be in the same category.

The _ underscore character designates the units. For a list of valid pre-defined units, refer to the module about constants and measurement units. You can press 2nd [UNITS] to select units from a menu, or you can type the unit names directly.

To get the _ underscore when typing units directly, press ◆ [_]

Note: The ▶ conversion operator does not handle temperature units. Use **tmpCnv()** and **ΔtmpCnv()** instead.

10^() CATALOG

10^ (*expression1***)** ⇒ *expression*
10^ (*list1***)** ⇒ *list*

10^(1.5) ENTER → 31.622…

10^{0,-2,2,a} ENTER → $\{1 \ \frac{1}{100} \ 100 \ 10^a\}$

Returns 10 raised to the power of the argument.

For a list, returns 10 raised to the power of the elements in *list1*.

10^(*squareMatrix1***)** ⇒ *squareMatrix*

10^([1,5,3;4,2,1;6,-2,1]) ENTER

$$\begin{bmatrix} 1.143…E7 & 8.171…E6 & 6.675…E6 \\ 9.956…E6 & 7.115…E6 & 5.813…E6 \\ 7.652…E6 & 5.469…E6 & 4.468…E6 \end{bmatrix}$$

Returns 10 raised to the power of *squareMatrix1*. This is *not* the same as calculating 10 raised to the power of each element. For information about the calculation method, refer to **cos()**.

squareMatrix1 must be diagonalizable. The result always contains floating-point numbers.

x^{-1} CATALOG (^-1)

expression1 x^{-1} ⇒ *expression*
list1 x^{-1} ⇒ *list*

3.1^-1 ENTER → .322581

{a,4,-.1,x-2}^-1 ENTER → $\{\frac{1}{a} \ \frac{1}{4} \ -10. \ \frac{1}{x-2}\}$

Returns the reciprocal of the argument.

For a list, returns the reciprocals of the elements in *list1*.

---

squareMatrix1 x^{-1} ⇒ *squareMatrix*

[1,2;3,4]^-1 ENTER
[1,2;a,4]^-1 ENTER

$$\blacksquare \begin{bmatrix} 1 & 2 \\ 3 & 4 \end{bmatrix}^{-1} \quad \begin{bmatrix} -2 & 1 \\ 3/2 & -1/2 \end{bmatrix}$$

$$\blacksquare \begin{bmatrix} 1 & 2 \\ a & 4 \end{bmatrix}^{-1} \quad \begin{bmatrix} \frac{-2}{a-2} & \frac{1}{a-2} \\ \frac{a}{2\cdot(a-2)} & \frac{-1}{2\cdot(a-2)} \end{bmatrix}$$

Returns the inverse of *squareMatrix1*.

squareMatrix1 must be a non-singular square matrix.

Downloaded from www.Manualslib.com manuals search engine

| ("with") | | key

expression | *Boolean expression1* [*and Boolean expression2*]...[*and Boolean expressionM*]

The "with" (|) symbol serves as a binary operator. The operand to the left of | is an expression. The operand to the right of | specifies one or more relations that are intended to affect the simplification of the expression. Multiple relations after | must be joined by a logical "and".

The "with" operator provides three basic types of functionality: substitutions, interval constraints, and exclusions.

Substitutions are in the form of an equality, such as x=3 or y=sin(x). To be most effective, the left side should be a simple variable. *expression* | *variable* = *value* will substitute *value* for every occurrence of *variable* in *expression*.

Interval constraints take the form of one or more inequalities joined by logical "and" operators. Interval constraints also permit simplification that otherwise might be invalid or not computable.

Exclusions use the "not equals" (/= or ≠) relational operator to exclude a specific value from consideration. They are used primarily to exclude an exact solution when using **cSolve()**, **cZeros()**, **fMax()**, **fMin()**, **solve()**, **zeros()**, etc.

```
x+1| x=3 ENTER                                   4
x+y| x=sin(y) ENTER                             sin(y) + y
x+y| sin(y)=x ENTER                             x + y

x^3-2x+7→f(x) ENTER                             Done
f(x)| x=√(3) ENTER                              √3 + 7
(sin(x))^2+2sin(x)-6| sin(x)=d ENTER            d² +2d- 6

solve(x^2-1=0,x)|x>0 and x<2 ENTER              x = 1
√(x)*√(1/x)|x>0 ENTER                           1
√(x)*√(1/x) ENTER                               √(1/x) · √x

solve(x^2-1=0,x)| x≠1 ENTER                     x = -1
```

→ (store) | STO▸ | key

expression → *var*
list → *var*
matrix → *var*
expression → *fun_name(parameter1,...)*
list → *fun_name(parameter1,...)*
matrix → *fun_name(parameter1,...)*

If variable *var* does not exist, creates *var* and initializes it to *expression*, *list*, or *matrix*.

If *var* already exists and if it is not locked or protected, replaces its contents with *expression*, *list*, or *matrix*.

Hint: If you plan to do symbolic computations using undefined variables, avoid storing anything into commonly used, one-letter variables such as a, b, c, x, y, z, etc.

```
π/4→myvar ENTER                                 π/4
2cos(x)→Y1(x) ENTER                             Done
{1,2,3,4}→Lst5 ENTER                            {1 2 3 4}
[1,2,3;4,5,6]→MatG ENTER                        [1 2 3]
                                                [4 5 6]
"Hello"→str1 ENTER                              "Hello"
```

◉ (comment) | Program Editor/Control menu or ◆) | key

◉ [*text*]

◉ processes *text* as a comment line, which can be used to annotate program instructions.

◉ can be at the beginning or anywhere in the line. Everything to the right of ◉, to the end of the line, is the comment.

Program segment:

```
  ⋮
:◉ Get 10 points from the Graph
screen
:For i,1,10 ◉ This loops 10 times
  ⋮
```


Downloaded from www.Manualslib.com manuals search engine

0b, 0h

0 alpha [B] **keys**

0 alpha [H] **keys**

0b *binaryNumber*
0h *hexadecimalNumber*

Denotes a binary or hexadecimal number, respectively. To enter a binary or hex number, you must enter the 0b or 0h prefix regardless of the Base mode. Without a prefix, a number is treated as decimal (base 10).

Results are displayed according to the Base mode.

In Dec base mode:

```
0b10+0hF+10 ENTER                    27
```

In Bin base mode:

```
0b10+0hF+10 ENTER                0b11011
```

In Hex base mode:

```
0b10+0hF+10 ENTER                  0h1B
```


Downloaded from www.Manualslib.com manuals search engine

Appendix B: Technical Reference

This section contains a comprehensive list of TI-89 Titanium / Voyage™ 200 error messages and character codes. It also includes information about how certain TI-89 Titanium / Voyage™ 200 operations are calculated.

TI-89 Titanium / Voyage™ 200 Error Messages

This section lists error messages that may be displayed when input or internal errors are encountered. The number to the left of each error message represents an internal error number that is not displayed. If the error occurs inside a Try...EndTry block, the error number is stored in system variable *errornum*. Many of the error messages are self-explanatory and do not require descriptive information. However, additional information has been added for some error messages.

Error Number	Description
10	**A function did not return a value**
20	**A test did not resolve to TRUE or FALSE** Generally, undefined variables cannot be compared. For example, the test If a<b will cause this error if either a or b is undefined when the If statement is executed.
30	**Argument cannot be a folder name**
40	**Argument error**
50	**Argument mismatch** Two or more arguments must be of the same type. For example, **PtOn** *expression1,expression2* and **PtOn** *list1,list2* are both valid, but **PtOn** *expression,list* is a mismatch.
60	**Argument must be a Boolean expression or integer**
70	**Argument must be a decimal number**
80	**Argument must be a label name**
90	**Argument must be a list**
100	**Argument must be a matrix**
110	**Argument must be a Pic**
120	**Argument must be a Pic or string**
130	**Argument must be a string**
140	**Argument must be a variable name** For example, DelVar 12 is invalid because a number cannot be a variable name.
150	**Argument must be an empty folder name**
160	**Argument must be an expression** For example, zeros(2x+3=0,x) is invalid because the first argument is an equation.
161	**ASAP or Exec string too long**

Downloaded from www.Manualslib.com manuals search engine

Error Number	Description
163	**Attribute (8-digit number) of object (8-digit number) not found**
165	**Batteries too low for sending or receiving** Install new batteries before sending or receiving.
170	**Bound** For the interactive graph math functions like 2:Zero, the lower bound must be less than the upper bound to define the search interval.
180	**Break** The ON key was pressed during a long calculation or during program execution.
185	**Checksum error**
190	**Circular definition** This message is displayed to avoid running out of memory during infinite replacement of variable values during simplification. For example, a+1→a, where a is an undefined variable, will cause this error.
200	**Constraint expression invalid** For example, solve(3x^2- 4=0, x) | x<0 or x>5 would produce this error message because the constraint is separated by “or” and not “and.”
205	**Data is too big to save to a variable. Please use F6 Util to reduce the size.** The size of the data in the editor exceeds the maximum size that can be saved in a variable. The F6 Util menu provides operations that can be used to reduce the size of the data.
210	**Data type** An argument is of the wrong data type.
220	**Dependent limit** A limit of integration is dependent on the integration variable. For example, ∫(x^2,x,1,x) is not allowed.
225	**Diff Eq setup**
230	**Dimension** A list or matrix index is not valid. For example, if the list {1,2,3,4} is stored in L1, then L1[5] is a dimension error because L1 only contains four elements.
240	**Dimension mismatch** Two or more arguments must be of the same dimension. For example, [1,2]+[1,2,3] is a dimension mismatch because the matrices contain a different number of elements.
250	**Divide by zero**
260	**Domain error** An argument must be in a specified domain. For example, ans(100) is not valid because the argument for **ans()** must be in the range 1–99.
270	**Duplicate variable name**

Downloaded from www.Manualslib.com manuals search engine

Error Number	Description
280	**Else and ElseIf invalid outside of If..EndIf block**
290	**EndTry is missing the matching Else statement**
295	**Excessive iteration**
300	**Expected 2 or 3-element list or matrix**
307	**Flash application extension (function or program) not found**
308	**Flash application not found**
310	**First argument of nSolve must be a univariate equation** The first argument must be an equation, and the equation cannot contain a non-valued variable other than the variable of interest. For example, nSolve(3x^2- 4=0, x) is a valid equation; however, nSolve(3x^2- 4, x) is not an equation, and nSolve(3x^2- y=0,x) is not a univariate equation because y has no value in this example.
320	**First argument of solve or cSolve must be an equation or inequality** For example, solve(3x^2- 4, x) is invalid because the first argument is not an equation.
330	**Folder** An attempt was made in the VAR-LINK menu to store a variable in a folder that does not exist.
335	**Graph functions y1(x)...y99(x) not available in Diff Equations mode**
345	**Inconsistent units**
350	**Index out of range**
360	**Indirection string is not a valid variable name**
380	**Invalid ans()**
390	**Invalid assignment**
400	**Invalid assignment value**
405	**Invalid axes**
410	**Invalid command**
420	**Invalid folder name**
430	**Invalid for the current mode settings**
440	**Invalid implied multiply** For example, x(x+1) is invalid; whereas, x*(x+1) is the correct syntax. This is to avoid confusion between implied multiplication and function calls.
450	**Invalid in a function or current expression** Only certain commands are valid in a user-defined function. Entries that are made in the Window Editor, Table Editor, Data/Matrix Editor, and Solver as well as system prompts such as Lower Bound cannot contain any commands or a colon (:). See also “Creating and Evaluating User-Defined Functions” in the *Calculator Home Screen* module.

Downloaded from www.Manualslib.com manuals search engine

Error Number	Description
460	**Invalid in Custom..EndCustm block**
470	**Invalid in Dialog..EndDlog block**
480	**Invalid in Toolbar..EndTBar block**
490	**Invalid in Try..EndTry block**
500	**Invalid label** Label names must follow the same rules used for naming variables.
510	**Invalid list or matrix** For example, a list inside a list such as {2,{3,4}} is not valid.
520	**Invalid outside Custom..EndCustm or ToolBar..EndTbar blocks** For example, an **Item** command is attempted outside a **Custom** or **ToolBar** structure.
530	**Invalid outside Dialog..EndDlog, Custom..EndCustm, or ToolBar..EndTBar blocks** For example, a Title command is attempted outside a **Dialog**, **Custom**, or **ToolBar** structure.
540	**Invalid outside Dialog..EndDlog block** For example, the **DropDown** command is attempted outside a **Dialog** structure.
550	**Invalid outside function or program** A number of commands are not valid outside a program or a function. For example, Local cannot be used unless it is in a program or function.
560	**Invalid outside Loop..EndLoop, For..EndFor, or While..EndWhile blocks** For example, the **Exit** command is valid only inside these loop blocks.
570	**Invalid pathname** For example, \\var is invalid.
575	**Invalid polar complex**
580	**Invalid program reference** Programs cannot be referenced within functions or expressions such as 1+p(x) where p is a program.
585	**Invalid relocation data in ASM program** The necessary relocation data in the ASM (Assembly) program is missing or corrupted.
590	**Invalid syntax block** A **Dialog..EndDlog** block is empty or has more than one title. A **Custom..EndCustm** block cannot contain PIC variables, and items must be preceded by a title. A **Toolbar..EndTBar** block must have a second argument if no items follow; or items must have a second argument and must be preceded by a title.
600	**Invalid table**
605	**Invalid use of units**

Downloaded from www.Manualslib.com manuals search engine

Error Number	Description
610	**Invalid variable name in a Local statement**
620	**Invalid variable or function name**
630	**Invalid variable reference**
640	**Invalid vector syntax**
650	**Link transmission** A transmission between two units was not completed. Verify that the connecting cable is connected firmly to both units.
665	**Matrix not diagonalizable**
670 **673**	**Memory** The calculation required more memory than was available at that time. If you get this error when you run a large program, you may need to break the program into separate, smaller programs or functions (where one program or function calls another).
680	**Missing (**
690	**Missing)**
700	**Missing "**
710	**Missing]**
720	**Missing }**
730	**Missing start or end of block syntax**
740	**Missing Then in the If..EndIf block**
750	**Name is not a function or program**
765	**No functions selected**
780	**No solution found** Using the interactive math features (F5:Math) in the Graph application can give this error. For example, if you attempt to find an inflection point of the parabola $y1(x)=x^2$, which does not exist, this error will be displayed.
790	**Non-algebraic variable in expression** If a is the name of a PIC, GDB, MAC, FIG, etc., a+1 is invalid. Use a different variable name in the expression or delete the variable.
800	**Non-real result** For example, if the unit is in the REAL setting of the Complex Format mode, ln(-2) is invalid.
810	**Not enough memory to save current variable. Please delete unneeded variables on the Var-Link screen and re-open editor as current OR re-open editor and use F1 8 to clear editor.** This error message is caused by very low memory conditions inside the Data/Matrix Editor.
830	**Overflow**
840	**Plot setup**

Downloaded from www.Manualslib.com manuals search engine

Error Number	Description
850	**Program not found** A program reference inside another program could not be found in the provided path during execution.
855	**Rand type functions not allowed in 3D graphing**
860	**Recursion is limited to 255 calls deep**
870	**Reserved name or system variable**
875	**ROM-resident routine not available**
880	**Sequence setup**
885	**Signature error**
890	**Singular matrix**
895	**Slope fields need one selected function and are used for 1st-order equations only**
900	**Stat**
910	**Syntax** The structure of the entry is incorrect. For example, x+ - y (x plus minus y) is invalid; whereas, x+ ¯y (x plus negative y) is correct.
930	**Too few arguments** The expression or equation is missing one or more arguments. For example, *d*(f(x)) is invalid; whereas, *d*(f(x),x) is the correct syntax.
940	**Too many arguments** The expression or equation contains an excessive number of arguments and cannot be evaluated.
950	**Too many subscripts**
955	**Too many undefined variables**
960	**Undefined variable**
965	**Unlicensed OS or Flash application**
970	**Variable in use so references or changes are not allowed**
980	**Variable is locked, protected, or archived**
990	**Variable name is limited to 8 characters**
1000	**Window variables domain**
1010	**Zoom**
	Warning: ∞^0 or undef^0 replaced by 1
	Warning: 0^0 replaced by 1
	Warning: 1^∞ or 1^undef replaced by 1
	Warning: cSolve may specify more zeros
	Warning: May produce false equation

Downloaded from www.Manualslib.com manuals search engine

Error Number	Description
	Warning: Expected finite real integrand
	Warning: May not be fully simplified
	Warning: More solutions may exist
	Warning: May introduce false solutions
	Warning: Operation may lose solutions
	Warning: Requires & returns 32 bit value
	Warning: Overflow replaced by ∞ or ¯∞
	Warning: Questionable accuracy
	Warning: Questionable solution
	Warning: Solve may specify more zeros
	Warning: Trig argument too big to reduce
	Warning: Non-real intermediate result
	Note: Domain of result may be larger
	Note: Domain of result may be smaller

TI-89 Titanium / Voyage™ 200 Modes

This section describes the modes of the TI-89 Titanium /Voyage™ 200 and lists the possible settings of each mode. These mode settings are displayed when you press MODE.

Graph

Specifies the type of graphs you can plot.

1:FUNCTION	y(x) functions
2:PARAMETRIC	x(t) and y(t) parametric equations
3:POLAR	r(θ) polar equations
4:SEQUENCE	u(n) sequences
5:3D	z(x,y) 3D equations
6:DIFF EQUATIONS	y'(t) differential equations

Note: If you use a split screen with Number of Graphs = 2, Graph is for the top or left part of the screen and Graph 2 is for the bottom or right part.

Current Folder

Specifies the current folder. You can set up multiple folders with unique configurations of variables, graph databases, programs, etc.

Downloaded from www.Manualslib.com manuals search engine

Note: For detailed information about using folders, see *Calculator Home Screen*.

1:main	Default folder included with the TI-89 Titanium / Voyage™ 200.
2: — (custom folders)	Other folders are available only if they have been created by a user.

Display Digits

Selects the number of digits. These decimal settings affect only how results are displayed—you can enter a number in any format.

Internally, the TI-89 Titanium / Voyage™ 200 retains decimal numbers with 14 significant digits. For display purposes, such numbers are rounded to a maximum of 12 significant digits.

1:FIX 0 2:FIX 1 … D:FIX 12	Results are always displayed with the selected number of decimal places.
E:FLOAT	The number of decimal places varies, depending on the result.
F:FLOAT 1 G:FLOAT 2 … Q:FLOAT 12	If the integer part has more than the selected number of digits, the result is rounded and displayed in scientific notation. For example, in FLOAT 4: 12345. is shown as 1.235E4

Angle

Specifies the units in which angle values are interpreted and displayed in trig functions and polar/rectangular conversions.

1:RADIAN
2:DEGREE
3:GRADIAN

Exponential Format

Specifies which notation format should be used. These formats affect only how an answer is displayed; you can enter a number in any format. Numeric answers can be displayed with up to 12 digits and a 3-digit exponent.

1:NORMAL	Expresses numbers in standard format. For example, 12345.67
2:SCIENTIFIC	Expresses numbers in two parts: • The significant digits display with one digit to the left of the decimal. • The power of 10 displays to the right of E. For example, 1.234567E4 means 1.234567×10^4

Downloaded from www.Manualslib.com manuals search engine

3:ENGINEERING	Similar to scientific notation. However: • The number may have one, two, or three digits before the decimal. • The power-of-10 exponent is a multiple of three. For example, 12.34567E3 means 12.34567×10^3

Note: If you select NORMAL, but the answer cannot be displayed in the number of digits selected by Display Digits, the TI-89 Titanium / Voyage™ 200 displays the answer in SCIENTIFIC notation. If Display Digits = FLOAT, scientific notation will be used for exponents of 12 or more and exponents of -4 or less.

Complex Format

Specifies whether complex results are displayed and, if so, their format.

1:REAL	Does not display complex results. (If a result is a complex number and the input does not contain the complex unit ***i***, an error message is displayed.)
2:RECTANGULAR	Displays complex numbers in the form: a+b***i***
3:POLAR	Displays complex numbers in the form: $re^{i\theta}$

Vector Format

Determines how 2-element and 3-element vectors are displayed. You can enter vectors in any of the coordinate systems.

1:RECTANGULAR	Coordinates are in terms of x, y, and z. For example, [3,5,2] represents x = 3, y = 5, and z = 2.
2:CYLINDRICAL	Coordinates are in terms of r, θ, and z. For example, [3,∠45,2] represents r = 3, θ = 45, and z = 2.
3:SPHERICAL	Coordinates are in terms of r, θ, and ϕ. For example, [3, ∠45, ∠90] represents r = 3, θ = 45, and ϕ = 90.

Pretty Print

Determines how results are displayed on the Home screen.

1:OFF	Results are displayed in a linear, one-dimensional form. For example, π^2, π/2, or √((x-3)/x)
2:ON	Results are displayed in conventional mathematical format. For example, π^2, $\frac{\pi}{2}$, or $\sqrt{\frac{x-3}{x}}$

Note: For a complete description of these settings, refer to “Formats of Displayed Results” in the *Operating the Calculator* module.

Downloaded from www.Manualslib.com manuals search engine

Split Screen

Lets you split the screen into two parts. For example, you can display a graph and see the Y= Editor at the same time.

1:FULL	The screen is not split.
2:TOP-BOTTOM	The applications are shown in two screens that are above and below each other.
3:LEFT-RIGHT	The applications are shown in two screens that are to the left and right of each other.

To determine what and how information is displayed on a split screen, use this mode in conjunction with other modes such as Split 1 App, Split 2 App, Number of Graphs, and Split Screen Ratio. (Split Screen Ratio is available on the Voyage™ 200 only.)

Split 1 App and Split 2 App

Specifies which application is displayed on the screen.

- For a full screen, only Split 1 App is active.
- For a split screen, Split 1 App is the top or left part of the screen and Split 2 App is the bottom or right part.

The available application choices are those listed when you press ▶ from the Page 2 mode screen or when you press APPS. You must have different applications in each screen unless you are in 2-graph mode.

Number of Graphs

Specifies whether both parts of a split screen can display graphs at the same time.

1	Only one part can display graphs.
2	Both parts can display an independent graph screen (Graph or Graph 2 setting) with independent settings.

Graph 2

Specifies the type of graphs that you can plot for the second graph on a two-graph split screen. This is active only when Number of Graphs = 2. In this two-graph setting, Graph sets the type of graph for the top or left part of the split screen, and Graph 2 sets the bottom or right part. The available choices are the same as for Graph.

Split Screen Ratio (Voyage 200 only)

Specifies the proportional sizes of the two parts of a split screen.

1:1	The screen is split evenly.
1:2	The bottom or right part is approximately twice the size of the top or left part.
2:1	The top or left part is approximately twice the size of the bottom or right part.

Downloaded from www.Manualslib.com manuals search engine

Exact/Approx

Specifies how fractional and symbolic expressions are calculated and displayed. By retaining rational and symbolic forms in the EXACT setting, the TI-89 Titanium / Voyage™ 200 increases precision by eliminating most numeric rounding errors.

1:AUTO	Uses EXACT setting in most cases. However, uses APPROXIMATE if the entry contains a decimal point.
2:EXACT	Displays non-whole-number results in their rational or symbolic form.
3:APPROXIMATE	Displays numeric results in floating-point form.

Note: For a complete description of these settings, refer to “Formats of Displayed Results” in the *Operating the Calculator* module.

Base

Lets you perform calculations by entering numbers in decimal, binary, or hexadecimal form.

1:DEC	Decimal numbers use 0 - 9 in the base 10 format
2:HEX	Hexadecimal numbers use 0 - 9 and A - F in the base 16 format.
3:BIN	Binary numbers use 0 and 1 in the base 2 format.

Downloaded from www.Manualslib.com manuals search engine

Unit System

Lets you enter a unit for values in an expression, such as 6_m * 4_m or 23_m/_s * 10_s, convert values from one unit to another within the same category, and create your own user-defined units.

1:SI	Select SI for the metric system of measurements
2:ENG/US	Select ENG/US for the non-metric system of measurements
3:CUSTOM	Allows you to select custom defaults.

Custom Units

Lets you select custom defaults. This mode is dimmed until you select Unit System, 3:CUSTOM.

Language

Lets you localize the TI-89 Titanium / Voyage™ 200 into one of several languages, depending on which language Flash applications are installed.

1:English	Default language included with the TI-89 Titanium / Voyage™ 200 operating system (OS).
2: — (language Flash applications)	Alternate languages are available only if the respective language Flash applications have been installed.

Apps Desktop

Lets you turn the display of the Apps desktop on or off.

ON	Displays the navigable Apps desktop. The Apps desktop appears when you: • Press [APPS]. • Turn the unit on after it has been turned off by pressing [2nd] [OFF]. • Press [2nd] [QUIT] from an App that is displayed in full screen mode.
OFF	• Does not display the navigable Apps desktop. • The unit defaults to the calculator Home screen. • The calculator Home screen displays when you press [2nd] [QUIT]. • The APPLICATIONS menu displays when you press [APPS].

Downloaded from www.Manualslib.com manuals search engine

TI-89 Titanium / Voyage™ 200 Character Codes

The **char()** function lets you refer to any character by its numeric character code. For example, to display ◆ on the Program I/O screen, use `Disp char(127)`. You can use **ord()** to find the numeric code of a character. For example, `ord("A")` returns 65.

1.	SOH	38.	&	76.	L	113.	q	148.	ω	186.	º	223.	ß
2.	STX	39.	'	77.	M	114.	r	149.	E	187.	»	224.	à
3.	ETX	40.	(	78.	N	115.	s	150.	*e*	188.	*d*	225.	á
4.	EOT	41.	)	79.	O	116.	t	151.	***i***	189.	∫	226.	â
5.	ENQ	42.	*	80.	P	117.	u	152.	r	190.	∞	227.	ã
6.	ACK	43.	+	81.	Q	118.	v	153.	T	191.	¿	228.	ä
7.	BELL	44.	,	82.	R	119.	w	154.	$\bar{x}$	192.	À	229.	å
8.	BS	45.	-	83.	S	120.	x	155.	$\bar{y}$	193.	Á	230.	æ
9.	TAB	46.	.	84.	T	121.	y	156.	≤	194.	Â	231.	ç
10.	LF	47.	/	85.	U	122.	z	157.	≠	195.	Ã	232.	è
11.		48.	0	86.	V	123.	{	158.	≥	196.	Ä	233.	é
12.	FF	49.	1	87.	W	124.	|	159.	∠	197.	Å	234.	ê
13.	CR	50.	2	88.	X	125.	}	160.	…	198.	Æ	235.	ë
14.		51.	3	89.	Y	126.	~	161.	¡	199.	Ç	236.	ì
15.	✓	52.	4	90.	Z	127.	◆	162.	¢	200.	È	237.	í
16.	▪	53.	5	91.	[	128.	α	163.	£	201.	É	238.	î
17.	◀	54.	6	92.	\	129.	β	164.	¤	202.	Ê	239.	ï
18.	▶	55.	7	93.	]	130.	Γ	165.	¥	203.	Ë	240.	ð
19.	▲	56.	8	94.	^	131.	γ	166.	¦	204.	Ì	241.	ñ
20.	▼	57.	9	95.	_	132.	Δ	167.	§	205.	Í	242.	ò
21.	←	58.	:	96.	`	133.	δ	168.	√	206.	Î	243.	ó
22.	→	59.	;	97.	a	134.	ε	169.	©	207.	Ï	244.	ô
23.	↑	60.	<	98.	b	135.	ζ	170.	ª	208.	Đ	245.	õ
24.	↓	61.	=	99.	c	136.	θ	171.	«	209.	Ñ	246.	ö
25.	◀	62.	>	100.	d	137.	λ	172.	¬	210.	Ò	247.	÷
26.	▶	63.	?	101.	e	138.	ξ	173.	-	211.	Ó	248.	ø
27.	↑	64.	@	102.	f	139.	Π	174.	®	212.	Ô	249.	ù
28.	∪	65.	A	103.	g	140.	π	175.	-	213.	Õ	250.	ú
29.	∩	66.	B	104.	h	141.	ρ	176.	°	214.	Ö	251.	û
30.	⊂	67.	C	105.	i	142.	Σ	177.	±	215.	×	252.	ü
31.	∈	68.	D	106.	j	143.	σ	178.	2	216.	Ø	253.	ý
32.	SPACE	69.	E	107.	k	144.	τ	179.	3	217.	Ù	254.	þ
33.	!	70.	F	108.	l	145.	ϕ	180.	-1	218.	Ú	255.	ÿ
34.	"	71.	G	109.	m	146.	ψ	181.	μ	219.	Û		
35.	#	72.	H	110.	n	147.	Ω	182.	¶	220.	Ü		
36.	$	73.	I	111.	o			183.	·	221.	Ý		
37.	%	74.	J	112.	p			184.	+	222.	Þ		
		75.	K					185.	1				

Downloaded from www.Manualslib.com manuals search engine

TI-89 Titanium Key Codes

The **getKey()** function returns a value that corresponds to the last key pressed, according to the tables shown in this section. For example, if your program contains a **getKey()** function, pressing [2nd] [F6] will return a value of 273.

Table 1: Key Codes for Primary Keys

Key	Modifier									
	None		[↑]		[2nd]		[◆]		[alpha]	
	Assoc.	Value	Assoc.	Value	Assoc.	Value	Assoc.	Value	Assoc	Value
[F1]	F1	268	F1	268	F1	268	Y=	8460	F1	268
[F2]	F2	269	F2	269	F2	269	Window	8461	F2	269
[F3]	F3	270	F3	270	F3	270	Graph	8462	F3	270
[F4]	F4	271	F4	271	F4	271	Tblset	8463	F4	271
[F5]	F5	272	F5	272	F5	272	Table	8464	F5	272
[◆]			Copy	24576	Cut	12288				
[alpha]					a-lock					
[ESC]	ESC	264	ESC	264	QUIT	4360	PASTE	8456	ESC	264
[APPS]	APPS	265	APPS	265	Switch	4361		8457	APPS	265
[HOME]	HOME	277	HOME	277	CUST	4373	HOME	277	Home	277
[MODE]	MODE	266	MODE	266	▶	18	_	95	MODE	266
[CATALOG]	CATLG	278	CATLG	278	*i*	151	∞	190	CATLG	278
[←]	BS	257	BS	257	INS	4353	DEL	8447	BS	257
[CLEAR]	CLEAR	263	CLEAR	263	CLEAR	263		8455		
[X]	x	120	X	88	LN	4184	e^x	8280	x	120
[Y]	y	121	Y	89	SIN	4185	SIN^{-1}	8281	y	121
[Z]	z	122	Z	90	COS	4186	COS^{-1}	8282	z	122
[T]	t	116	T	84	TAN	4180	TAN^{-1}	8276	t	116
[^]	^	94	^	94	π	140	θ	136	^	94
[|]	|	124	F	70	°	176	Format d/b	8316	f	102
[(]	(	40	B	66	{	123			b	98
[)]	)	41	C	67	}	125	◉	169	c	99
[,]	,	44	D	68	[	91		8236	d	100
[÷]	/	47	E	69	]	93	!	33	e	101
[×]	*	42	J	74	√	4138	&	38	j	106
[−]	-	45	O	79	VAR-LNK	4141	Contr. -		o	111
[+]	+	43	U	85	CHAR	4139	Contr. +		u	117

Downloaded from www.Manualslib.com manuals search engine

Table 1: Key Codes for Primary Keys

Key	Modifier									
	None		↑		2nd		◆		alpha	
	Assoc.	Value	Assoc.	Value	Assoc.	Value	Assoc.	Value	Assoc	Value
ENTER	CR	13	CR	13	ENTRY	4109	Approx	8205	CR	13
STO▸	STO▸	258	P	80	RCL	4354	@	64	p	112
=	=	61	A	65	‘	39	≠	157	a	97
EE	EE	149	K	75	∠	159	SYMB	8341	k	107
(-)	-	173	SPACE	32	ANS	4372		8365	SPACE	32
.	.	46	W	87	>	62	≥	158	w	119
0	0	48	V	86	<	60	≤	156	v	118
1	1	49	Q	81	“	34		8241	q	113
2	2	50	R	50	\	92		8242	r	114
3	3	51	S3	83	CUST	4147		8243	s	115
4	4	52	L	76	:	58		8244	l	108
5	5	53	M	77	MATH	4149		8245	m	109
6	6	54	N	78	MEM	4150		8246	n	110
7	7	55	G	71	∫	4151		8247	g	103
8	8	56	H	72	d	4152		8248	h	104
9	9	57	I	73	;	59		8249	i	105

Downloaded from www.Manualslib.com manuals search engine

Table 2: Arrow Keys (including diagonal movement)

Key	Normal	↑	2nd	◆	alpha
↑	338	16722	4434	8530	33106
→	340	16724	4436	8532	33108
↓	344	16728	4440	8536	33112
←	337	16721	4433	8529	33105
↑ and ←	339	16723	4435	8531	33107
↑ and →	342	16726	4438	8534	33110
↓ and ←	345	16729	4441	8537	33113
↓ and →	348	16732	4444	8540	33116

Table 3: Greek Letters (prefixed by ◆ (−))

Keys	Second modifier			
	alpha		↑	
	Assoc.	**Value**	**Assoc.**	**Value**
= [A]	α	128		
([B]	β	129		
, [D]	δ	133	Δ	132
÷ [E]	ε	134		
^ [F]	φ	145		
7 [G]	γ	131	Γ	130
4 [L]	λ	137		
5 [M]	μ	181		
STO▸ [P]	π	140	Π	139
2 [R]	ρ	141		
3 [S]	σ	143	Σ	142
T [T]	τ	144		
. [W]	ω	148	Ω	147
X	ξ	138		
Y	ψ	146		
Z	ζ	135		

Voyage™ 200 Key Codes

The **getKey()** function returns a value that corresponds to the last key pressed, according to the tables shown in this section. For example, if your program contains a **getKey()** function, pressing 2nd F1 will return a value of 268.

Downloaded from www.Manualslib.com manuals search engine

Table 1: Key Codes for Primary Keys

Key	Modifier							
	None		↑		2nd		◆	
	Assoc.	Value	Assoc.	Value	Assoc.	Value	Assoc.	Value
F1	F1	268	F1	268	F1	268		8460
F2	F2	269	F2	269	F2	269		8461
F3	F3	270	F3	270	F3	270		8462
F4	F4	271	F4	271	F4	271		8463
F5	F5	272	F5	272	F5	272		8464
F6	F6	273	F6	273	F6	273		8465
F7	F7	274	F7	274	F7	274		8466
F8	F8	275	F8	275	F8	275		8467
MODE	MODE	266	MODE	266	MODE	266		8458
CLEAR	CLEAR	263	CLEAR	263	CLEAR	263		8455
LN	LN	262	LN	262	e^x	4358		8454
ESC	ESC	264	ESC	264	QUIT	4360		8456
APPS	APPS	265	APPS	265	SWITCH	4361		8457
ENTER	CR	13	CR	13	ENTRY	4109	APPROX	8205
SIN	SIN	259	SIN	259	SIN^{-1}	4355		8451
COS	COS	260	COS	260	COS^{-1}	4356		8452
TAN	TAN	261	TAN	261	TAN^{-1}	4357		8453
^	^	94	^	94	π	140		8286
(	(	40	(	40	{	123		8232
)	)	41	)	41	}	125		8233
,	,	44	,	44	[	91		8236
÷	/	47	/	47	]	93		8239
×	*	42	*	42	√	4138		8234
−	-	45	-	45	VAR-LNK	4141	Contrast	
+	+	43	+	43	CHAR	4139	Contrast +	
STO▸	STO▸	258	STO▸	258	RCL	4354		8450
SPACE		32		32		32		8224
=	=	61	=	61	\	92		8253
←	BS	257	BS	257	INS	4353	DEL	8449

Downloaded from www.Manualslib.com manuals search engine

Key	Modifier							
	None		↑		2nd		♦	
	Assoc.	Value	Assoc.	Value	Assoc.	Value	Assoc.	Value
[θ]	θ	136	θ	136	:	58		8328
(-)	-	173	-	173	ANS	4372		8365
.	.	46	.	46	>	62		8238
0	0	48	0	48	<	60		8240
1	1	49	1	49	E	149		8241
2	2	50	2	50	CATALOG	4146		8242
3	3	51	3	51	CUST	4147		8243
4	4	52	4	52	Σ	4148		8244
5	5	53	5	53	MATH	4149		8245
6	6	54	6	54	MEM	4150		8246
7	7	55	7	55	∫	4151		8247
8	8	56	8	56	d	4152		8248
9	9	57	9	57	x^{-1}	4153		8249
A	a	97	A	65	Table 3			8257
B	b	98	B	66	‘	39		8258
C	c	99	C	67	Table 4		COPY	8259
D	d	100	D	68	°	176		8260
E	e	101	E	69	Table 5		WINDOW	8261
F	f	102	F	70	∠	159	FORMAT	8262
G	g	103	G	71	Table 6			8263
H	h	104	H	72	&	38		8264
I	i	105	I	73	i	151		8265
J	j	106	J	74	∞	190		8266
K	k	107	K	75	|	124	KEY	8267
L	l	108	L	76	“	34		8268
M	m	109	M	77	;	59		8269
N	n	110	N	78	Table 7		NEW	8270
O	o	111	O	79	Table 8		OPEN	8271
P	p	112	P	80	_	95	UNITS	8272
Q	q	113	Q	81	?	63	CALC HOME	8273
R	r	114	R	82	@	64	GRAPH	8274

Downloaded from www.Manualslib.com manuals search engine

Key	Modifier							
	None		↑		2nd		◆	
	Assoc.	Value	Assoc.	Value	Assoc.	Value	Assoc.	Value
S	s	115	S	83	β	223	SAVE	8275
T	t	116	T	84	#	35	TBLSET	8276
U	u	117	U	85	Table 9			8277
V	v	118	V	86	≠	157	PASTE	8278
W	w	119	W	87	!	33	Y=	8279
X	x	120	X	88	◕	169	CUT	8280
Y	y	121	Y	89	▸	18	TABLE	8281
Z	z	122	Z	90	CAPS			8282

Downloaded from www.Manualslib.com manuals search engine

Table 2: Arrow Keys (including diagonal movement)

Key	Normal	⇧	2nd	◆	✋
↑	338	16722	4434	8530	33106
→	340	16724	4436	8532	33108
↓	344	16728	4440	8536	33112
←	337	16721	4433	8529	33105
↑ and ←	339	16723	4435	8531	33107
↑ and →	342	16726	4438	8534	33110
↓ and ←	345	16729	4441	8537	33113
↓ and →	348	16732	4444	8540	33116

Note: The Grab (✋) modifier only affects the arrow keys.

Table 3: Grave Accent Letters (prefixed by 2nd A)

Key	Assoc.	Normal	⇧
A	à	224	192
E	è	232	200
I	ì	236	204
O	ò	242	210
U	ù	249	217

Table 4: Cedilla Letters (prefixed by 2nd C)

Key	Assoc.	Normal	⇧
C	ç	231	199

Downloaded from www.Manualslib.com manuals search engine

Table 5: Acute Accent Letters (prefixed by 2nd E)

Key	Assoc.	Normal	⬆
A	á	225	193
E	é	233	201
I	í	237	205
O	ó	243	211
U	ú	250	218
Y	ý	253	221

Table 6: Greek Letters (prefixed by 2nd G)

Key	Assoc.	Normal	⬆
A	α	128	
B	β	129	
D	δ	133	132
E	ε	134	
F	ϕ	145	
G	γ	131	130
L	λ	137	
M	μ	181	
P	π	140	139
R	ρ	141	
S	σ	143	142
T	τ	144	
W	ω	148	147
X	ξ	138	
Y	ψ	146	
Z	ζ	135	

Downloaded from www.Manualslib.com manuals search engine

Table 7: Tilde Letters (prefixed by 2nd N)

Key	Assoc.	Normal	⇧
N	ñ	241	209
O	õ	245	

Table 8: Caret Letters (prefixed by 2nd O)

Key	Assoc.	Normal	⇧
A	â	226	194
E	ê	234	202
I	î	238	206
O	ô	244	212
U	û	251	219

Table 9: Umlaut Letters (prefixed by 2nd U)

Key	Assoc.	Normal	⇧
A	ä	228	196
E	ë	235	203
I	ï	239	207
O	ö	246	214
U	ü	252	220
Y	ÿ	255	

Downloaded from www.Manualslib.com manuals search engine

Entering Complex Numbers


You can enter complex numbers in the polar form ($r \angle \theta$), where r is the magnitude and θ is the angle, or polar form $re^{i\theta}$. You can also enter complex numbers in rectangular form $a+bi$.

Overview of Complex Numbers

A complex number has real and imaginary components that identify a point in the complex plane. These components are measured along the real and imaginary axes, which are similar to the x and y axes in the real plane.

The point can be expressed in rectangular form or in either of two polar


The ***i*** symbol represents the imaginary number $\sqrt{-1}$.

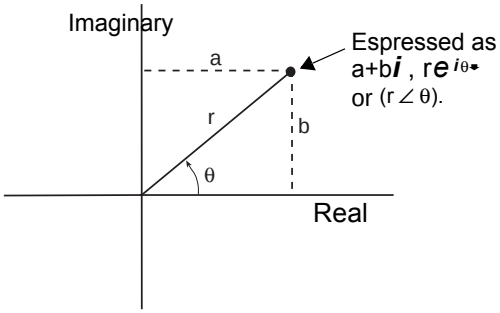

As shown below, the form that you can enter depends on the current Angle mode.

You can use the form:	When the Angle mode setting is:
$a+bi$	Radian, Degree or Gradian
$re^{i\theta}$	Radian only (In Degree or Gradian angle mode, this form causes a Domain error.)
$(r\angle\theta)$	Radian, Degree or Gradian

Use the following methods to enter a complex number.

To enter the:	Do this:
Rectangular form $a+bi$	Substitute the applicable values or variable names for a and b. a [+] b [2nd] [i] **Note:** To get the ***i*** symbol, press [2nd] [i], do not simply type an alphabetic i. For example: 

To enter the:	Do this:

Downloaded from www.Manualslib.com manuals search engine

Polar form
$re^{i\theta}$
or
$(r\angle\theta)$

Parentheses are required for the $(r\angle\theta)$ form.

Substitute the applicable values or variable names for r and θ, where θ is interpreted according to the Angle mode setting.


TI-89 Titanium:
[alpha] [R] [◆] [e^x] [2nd] [i] [◆] [θ] [)]
or –
[(] [alpha] [R] [2nd] [$\angle$] [◆] [θ] [)]

Important: Do not use the $re^{i\theta}$ polar form in Degree angle mode. It will cause a Domain error.
Note: To get the e symbol, press:
TI89 Titanium: [◆] [e^x].
Voyage™ 200**:** [2nd] [e^x]
Do not simply type an alphabetic e.

Tip: To get the $\angle$ symbol, press [2nd] [$\angle$].

Tip: To enter θ in degrees for $(r\angle\theta)$, you can type a ° symbol (such as 45°). To get the ° symbol, press [2nd] [°]. You should not use degrees or Gradian for $re^{i\theta}$.


Voyage™ 200:
R [2nd] [e^x] [2nd] [i] [θ] [)]
or –
[(] R [2nd] [i] [θ] [)]
For example:

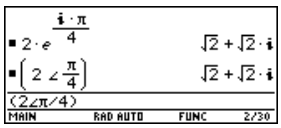

Results are shown in rectangular form, but you can select polar form.

Complex Format Mode for Displaying Results

Use [MODE] to set the Complex Format mode to one of three settings.

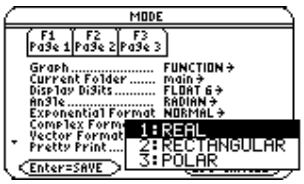

You can enter a complex number at any time, regardless of the Complex Format mode setting. However, the mode setting determines how results are displayed.

If Complex Format is:	The TI-89 Titanium / Voyage™ 200:

Downloaded from www.Manualslib.com manuals search engine


REAL	Will not display complex results unless you: • Enter a complex number. – or – • Use a complex function such as **cFactor()**, **cSolve()**, or **cZeros()**. If complex results are displayed, they will be shown in either a+b***i*** or $re^{i\theta}$ form. **Note:** You can enter complex numbers in any form (or a mixture of all forms) depending on the Angle mode.
RECTANGULAR	Displays complex results as a+b***i***.
POLAR	Displays complex results as: • $re^{i\theta}$ if the Angle mode = Radian – or – • ($r \angle \theta$) if the Angle mode = Degree or Gradian

Using Complex Variables in Symbolic Calculations

Regardless of the Complex Format mode setting, variables that have no stored value and those that do not end with an underscore (_) are treated as real numbers. To perform complex symbolic analysis, you can use either of the following methods to set up a complex variable.


Method 1: Use an underscore _ (**TI-89 Titanium:** ♦ [_], **Voyage™ 200** 2nd [_]) as the last character in the variable name to designate a complex variable. For example:

z_ is treated as a complex variable if it does not have a stored value.



Method 2: Store an unreal value into any variable. For example:

x+y***i***→z
Then z is treated as a complex variable.

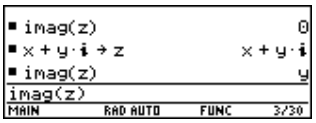

Note: For best results in calculations such as **cSolve()** and **cZeros()**, use Method 1.

Complex Numbers and Degree Mode

Radian angle mode is recommended for complex number calculations. Internally, the TI-89 Titanium / Voyage™ 200 converts all entered trig values to radians, but it does not convert values for exponential, logarithmic, or hyperbolic functions.

In Degree angle mode, complex identities such as e^(***i***θ) = cos(θ) + i sin(θ) are not generally true because the values for cos and sin are converted to radians, while those for e^( ) are not. For example, e^(***i***45) = cos(45) + ***i*** sin(45) is treated internally as e^(***i***45) = cos(π/4) + ***i*** sin(π/4). Complex identities are always true in Radian angle mode.

Note: If you use Degree angle mode, you must make polar entries in the form ($r \angle \theta$). In Degree or Gradian angle mode, an $re^{i\theta}$ entry causes an error.

Downloaded from www.Manualslib.com manuals search engine

Accuracy Information

To maximize accuracy, the TI-89 Titanium / Voyage™ 200 carries more digits internally than it displays.

Computational Accuracy

Floating-point (decimal) values in memory are stored using up to 14 digits with a 3-digit exponent.

- For min and max Window variables (xmin, xmax, ymin, ymax, etc.), you can store values using up to 12 digits. Other Window variables use 14 digits.
- When a floating-point value is displayed, the displayed value is rounded as specified by the applicable mode settings (Display Digits, Exponential Format, etc.), with a maximum of 12 digits and a 3-digit exponent.
- RegEQ displays up to 14-digit coefficients.

Integer values in memory are stored using up to 614 digits.

Graphing Accuracy

The Window variable xmin is the center of the leftmost pixel used, and xmax is the center of the rightmost pixel used. Δx is the distance between the centers of two horizontally adjacent pixels.

- Δx is calculated as (xmax − xmin) / (# of x pixels −1).
- If Δx is entered from the Home screen or a program, xmax is calculated as xmin + $\Delta x * (\#$ of x pixels − 1).

Note: For a table that lists the number of pixels in a full screen or split screen, refer to “Setting and Exiting the Split Screen Mode” in Split Screens.

The Window variable ymin is the center of the bottom pixel used, and ymax is the center of the top pixel used. Δy is the distance between the centers of two vertically adjacent pixels.

- Δy is calculated as (ymax − ymin) / (# of y pixels − 1).
- If Δy is entered from the Home screen or a program, ymax is calculated as ymin + $\Delta y * (\#$ of y pixels − 1).

Cursor coordinates are displayed as eight characters (which may include a negative sign, decimal point, and exponent). The coordinate values (xc, yc, zc, etc.) are updated with a maximum of 12-digit accuracy.

System Variables and Reserved Names

This section lists the names of system variables and reserved function names that are used by the TI-89 Titanium / Voyage™ 200. Only those system variables and reserved function names that are identified by an asterisk (*) can be deleted by using **DelVar** *var* on the entry line.

Downloaded from www.Manualslib.com manuals search engine

Graph

y1(x)–y99(x)*	y1'(t)–y99'(t)*	yi1–yi99*	r1(θ)–r99(θ)*
xt1(t)–xt99(t)*	yt1(t)– yt99(t)*	z1(x,y)–z99(x,y)*	u1(n)–u99(n)*
ui1–ui99*	xc	yc	zc
tc	rc	θc	nc
xfact	yfact	zfact	xmin
xmax	xscl	xgrid	ymin
ymax	yscl	ygrid	xres
Δx	Δy	zmin	zmax
zscl	eyeθ	eyeϕ	eyeψ
ncontour	θmin	θmax	θstep
tmin	tmax	tstep	t0
tplot	ncurves	diftol	dtime
Estep	fldpic	fldres	nmin
nmax	plotStrt	plotStep	sysMath

Graph Zoom

zxmin	zxmax	zxscl	zxgrid
zymin	zymax	zyscl	zygrid
zxres	zθmin	zθmax	zθstep
ztmin	ztmax	ztstep	zt0de
ztmaxde	ztstepde	ztplotde	zzmin
zzmax	zzscl	zeyeθ	zeyeϕ
zeyeψ	znmin	znmax	zpltstrt
zpltstep			

Statistics

$\bar{x}$	$\bar{y}$	Σx	σx
Σx^2	Σxy	Σy	σy
Σy^2	corr	maxX	maxY
medStat	medx1	medx2	medx3
medy1	medy2	medy3	minX
minY	nStat	q1	q3
regCoef*	regEq(x)*	seed1	seed2
Sx	Sy	R^2	

Downloaded from www.Manualslib.com manuals search engine

Table

tblStart	Δtbl	tblInput

Data/Matrix

c1–c99	sysData*

Miscellaneous

main	ok	errornum

Solver

eqn*	exp*

EOS (Equation Operating System) Hierarchy

This section describes the Equation Operating System (EOS™) that is used by the TI-89 Titanium / Voyage™ 200. Numbers, variables, and functions are entered in a simple, straightforward sequence. EOS evaluates expressions and equations using parenthetical grouping and according to the priorities described below.

Order of Evaluation

Level	Operator
1	Parentheses ( ), brackets [ ], braces { }
2	Indirection (#)
3	Function calls
4	Post operators: degrees-minutes-seconds (°,',"), factorial (!), percentage (%), radian (^{r}), subscript ([ ]), transpose (^{T})
5	Exponentiation, power operator (^)
6	Negation ($^-$)
7	String concatenation (&)
8	Multiplication (∗), division (/)
9	Addition (+), subtraction (−)
10	Equality relations: equal (=), not equal (≠ or /=), less than (<), less than or equal (≤ or <=), greater than (>), greater than or equal (≥ or >=)
11	Logical **not**
12	Logical **and**
13	Logical **or**, exclusive logical **xor**

Downloaded from www.Manualslib.com manuals search engine

14	Constraint “with” operator (|)
15	Store (→)

Parentheses, Brackets, and Braces

All calculations inside a pair of parentheses, brackets, or braces are evaluated first. For example, in the expression 4(1+2), EOS first evaluates the portion of the expression inside the parentheses, 1+2, and then multiplies the result, 3, by 4.

The number of opening and closing parentheses, brackets, and braces must be the same within an expression or equation. If not, an error message is displayed that indicates the missing element. For example, (1+2)/(3+4 will display the error message “Missing).”

Note: Because the TI-89 Titanium / Voyage™ 200 allows you to define your own functions, a variable name followed by an expression in parentheses is considered a “function call” instead of implied multiplication. For example a(b+c) is the function a evaluated by b+c. To multiply the expression b+c by the variable a, use explicit multiplication: a∗(b+c).

Indirection

The indirection operator (#) converts a string to a variable or function name. For example, #(“x”&”y”&”z”) creates the variable name xyz. Indirection also allows the creation and modification of variables from inside a program. For example, if 10→r and “r”→s1, then #s1=10.

Post Operators

Post operators are operators that come directly after an argument, such as 5!, 25%, or 60°15' 45". Arguments followed by a post operator are evaluated at the fourth priority level. For example, in the expression 4^3!, 3! is evaluated first. The result, 6, then becomes the exponent of 4 to yield 4096.

Exponentiation

Exponentiation (^) and element-by-element exponentiation (.^) are evaluated from right to left. For example, the expression 2^3^2 is evaluated the same as 2^(3^2) to produce 512. This is different from (2^3)^2, which is 64.

Negation

To enter a negative number, press (-) followed by the number. Post operations and exponentiation are performed before negation. For example, the result of $-x^2$ is a negative number, and $-9^2 = -81$. Use parentheses to square a negative number such as $(-9)^2$ to produce 81. Note also that negative 5 (−5) is different from minus 5 (−5), and −3! evaluates as −(3!).

Constraint (|)

The argument following the “with” (|) operator provides a set of constraints that affect the evaluation of the argument preceding the “with” operator.

Downloaded from www.Manualslib.com manuals search engine

Regression Formulas

This section describes how the statistical regressions are calculated.

Least-Squares Algorithm

Most of the regressions use non-linear recursive least-squares techniques to optimize the following cost function, which is the sum of the squares of the residual errors:

$$J = \sum_{i=1}^{N} \left[residualExpression \right]^2$$

where:residualExpression is in terms of xi and yi

x_i is the independent variable list
y_i is the dependent variable list
N is the dimension of the lists

This technique attempts to recursively estimate the constants in the model expression to make J as small as possible.

For example, $y=a\ sin(bx+c)+d$ is the model equation for **SinReg**. So its residual expression is:

$a\ sin(bx_i+c)+d[\circ]y_i$

For **SinReg**, therefore, the least-squares algorithm finds the constants a, b, c, and d that minimize the function:

$$J = \sum_{i=1}^{N} \left[a\ sin(bx_I + c) + d - y_I \right]^2$$

Regressions

Regression	Description
CubicReg	Uses the least-squares algorithm to fit the third-order polynomial: $y=ax^3+bx^2+cx+d$ For four data points, the equation is a polynomial fit; for five or more, it is a polynomial regression. At least four data points are required.
ExpReg	Uses the least-squares algorithm and transformed values x and ln(y) to fit the model equation: $y=ab^x$
LinReg	Uses the least-squares algorithm to fit the model equation: $y=ax+b$ where a is the slope and b is the y-intercept.

Downloaded from www.Manualslib.com manuals search engine

LnReg	Uses the least-squares algorithm and transformed values ln(*x*) and *y* to fit the model equation: *y=a+b* ln(*x*)
Logistic	Uses the least-squares algorithm to fit the model equation: *y=a/(1+b∗e^(c∗x))+d*
MedMed	Uses the median-median line (resistant line) technique to calculate summary points x1, y1, x2, y2, x3, and y3, and fits the model equation: *y=ax+b* where *a* is the slope and *b* is the y-intercept.
PowerReg	Uses the least-squares algorithm and transformed values ln(*x*) and ln(*y*) to fit the model equation: $y=ax^b$
QuadReg	Uses the least-squares algorithm to fit the second-order polynomial: $y=ax^2+bx+c$ For three data points, the equation is a polynomial fit; for four or more, it is a polynomial regression. At least three data points are required.
QuartReg	Uses the least-squares algorithm to fit the fourth-order polynomial: $y=ax^4+bx^3+cx^2+dx+e$ For five data points, the equation is a polynomial fit; for six or more, it is a polynomial regression. At least five data points are required.
SinReg	Uses the least-squares algorithm to fit the model equation: *y=a sin(bx+c)+d*


Downloaded from www.Manualslib.com manuals search engine

Contour Levels and Implicit Plot Algorithm


Contours are calculated and plotted by the following method. An implicit plot is the same as a contour, except that an implicit plot is for the z=0 contour only.

Algorithm

Based on your x and y Window variables, the distance between xmin and xmax and between ymin and ymax is divided into a number of grid lines specified by xgrid and ygrid. These grid lines intersect to form a series of rectangles.

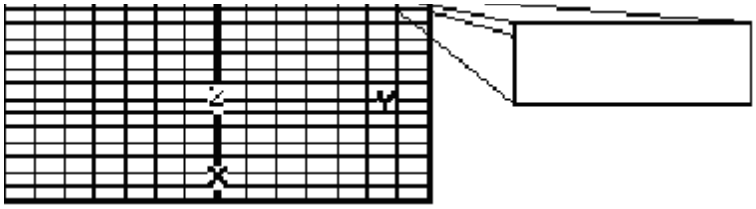

For each rectangle, the equation is evaluated at each of the four corners (also called vertices or grid points) and an average value (E) is calculated:

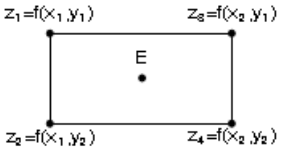


$$E = \frac{z1 + z2 + z3 + z4}{4}$$


The E value is treated as the value of the equation at the center of the rectangle.

For each specified contour value (Ci)

- At each of the five points shown to the right, the difference between the point's z value and the contour value is calculated.

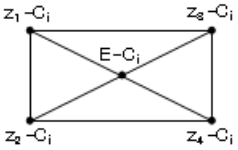

- A sign change between any two adjacent points implies that a contour crosses the line that joins those two points. Linear interpolation is used to approximate where the zero crosses the line.
- Within the rectangle, any zero crossings are connected with straight lines.
- This process is repeated for each contour value.



Each rectangle in the grid is treated similarly.

Runge-Kutta Method

For Runge-Kutta integrations of ordinary differential equations, the TI-89 Titanium / Voyage™ 200 uses the Bogacki-Shampine 3(2) formula as found in the journal *Applied Math Letters*, 2 (1989), pp. 1–9.

Downloaded from www.Manualslib.com manuals search engine

Bogacki-Shampine 3(2) Formula

The Bogacki-Shampine 3(2) formula provides a result of 3rd-order accuracy and an error estimate based on an embedded 2nd-order formula. For a problem of the form:

$y' = f(x, y)$

and a given step size h, the Bogacki-Shampine formula can be written:

$F_1 = f(x_n, y_n)$

$F_2 = f\left(x_n + h\,\frac{1}{2}\,, y_n + h\,\frac{1}{2}\,F_1\right)$

$F_3 = f\left(x_n + h\,\frac{3}{4}\,, y_n + h\,\frac{3}{4}\,F_2\right)$

$y_{n+1} = y_n + h\left(\frac{2}{9}\,F_1 + \frac{1}{3}\,F_2 + \frac{4}{9}\,F_3\right)$

$x_{n+1} = x_n + h$

$F_4 = f(x_{n+1}\,, y_{n+1})$

$errest = h\left(\frac{5}{72}\,F_1 - \frac{1}{12}\,F_2 - \frac{1}{9}\,F_3 + \frac{1}{8}\,F_4\right)$

The error estimate *errest* is used to control the step size automatically. For a thorough discussion of how this can be done, refer to *Numerical Solution of Ordinary Differential Equations* by L. F. Shampine (New York: Chapman & Hall, 1994).

The TI-89 Titanium / Voyage™ 200 software does not adjust the step size to land on particular output points. Rather, it takes the biggest steps that it can (based on the error tolerance diftol) and obtains results for $x_n \le x \le x_{n+1}$ using the cubic interpolating polynomial passing through the point (xn , yn) with slope F1 and through (x_{n+1} , y_{n+1}) with slope F4. The interpolant is efficient and provides results throughout the step that are just as accurate as the results at the ends of the step.


Downloaded from www.Manualslib.com manuals search engine

Battery Information

The TI-89 Titanium / Voyage™ 200 uses two types of batteries: four alkaline batteries, and a lithium battery as a backup for retaining memory while you change the alkaline batteries.

When to Replace the Batteries

As the alkaline batteries run down, the display will begin to dim (especially during calculations). To compensate for this, you will need to adjust the contrast to a higher setting. If you find it necessary to increase the contrast setting frequently, you will need to replace the alkaline batteries. To assist you, a BATT indicator (BATT) will display in the status line area when the batteries have drained down to the point when you should replace them soon. When the BATT indicator is displayed in reverse text (BATT), you must replace the alkaline batteries immediately.

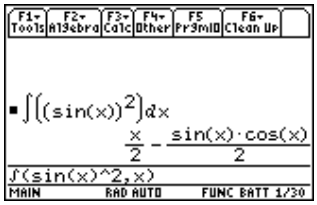

BATT indicator

To avoid loss of data, do not remove the lithium battery unless four fresh alkaline batteries are installed. Replace the lithium backup battery about every three or four years.

Note: To avoid loss of information stored in memory, the TI-89 Titanium / Voyage 200 must be off. Do not remove the alkaline batteries and the lithium battery at the same time.

Effects of Replacing the Batteries

If you do not remove both types of batteries at the same time or allow them to run down completely, you can change either type of battery without losing anything in memory.

Battery Precautions

Take these precautions when replacing batteries:

- Do not leave batteries within the reach of children.
- Do not mix new and used batteries. Do not mix brands (or types within brands) of batteries.
- Do not mix rechargeable and non-rechargeable batteries.
- Install batteries according to polarity (+ and -) diagrams.
- Do not place non-rechargeable batteries in a battery recharger.
- Properly dispose of used batteries immediately.
- Do not incinerate or dismantle batteries.

Downloaded from www.Manualslib.com manuals search engine


1. If the TI-89 Titanium is on, turn it off (press 2nd [OFF]) to avoid loss of information stored in memory.
2. Slide the protective cover over the keyboard and place the device face down.
3. Push down on the battery cover latch, and then pull up to remove the cover.
4. Remove all four discharged AAA batteries.
5. *I*nstall four new AAA alkaline batteries, arranged according to the polarity (+ and -) diagram inside the battery compartment.
6. Replace the battery cover by inserting the two prongs into the two slots at the bottom of the battery compartment, and then push the cover until the latch snaps closed.

Replacing the Lithium Battery in the TI-89 Titanium

To replace the lithium backup battery, remove the battery cover and unscrew the tiny screw holding the BACK UP BATTERY cover in place.

Remove the old battery and install a new WR44SW or 303 battery, positive (+) side up. Replace the cover and the screw.

Lithium battery cover

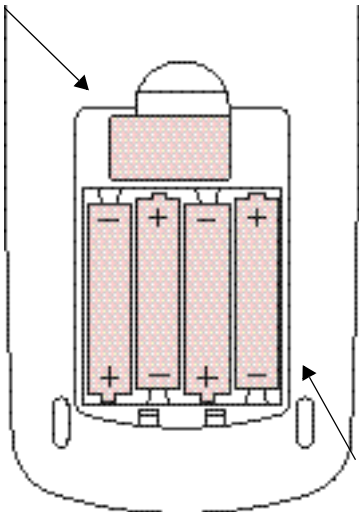

AAA alkaline batteries

Replacing the Alkaline Batteries in the Voyage 200


1. If the Voyage™ 200 is on, turn it off (press 2nd [OFF]) to avoid loss of information stored in memory.
2. Slide the protective cover over the keyboard and place the device face down.
3. Press the notched battery cover and slide it off, away from the device.
4. Remove all four discharged AAA batteries.
5. Install four new AAA alkaline batteries, arranged according to the polarity (+ and -) diagram inside the battery compartment.
6. Slide the battery cover onto the device, prong side first. Gently push the cover until the prongs snap into place.

Downloaded from www.Manualslib.com manuals search engine

Replacing the Lithium Battery in the Voyage 200

To replace the lithium backup battery, remove the battery cover. Insert a blunt object into the circular indentation next to the battery. Gently place a finger on the lithium battery and pry the battery out.

Slide in a new CR1616 or CR1620 battery, positive (+) side up. Press firmly to snap the new lithium battery into place.

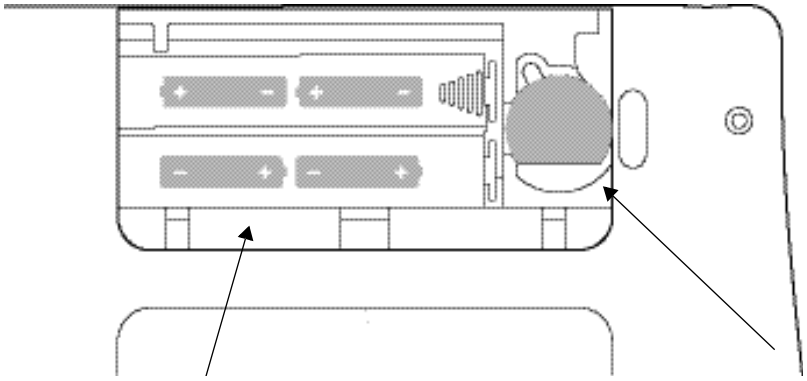

AAA alkaline battery compartment

Lithium battery

Downloaded from www.Manualslib.com manuals search engine

In Case of Difficulty

If you have difficulty operating the TI-89 Titanium / Voyage™ 200, the following suggestions may help you correct the problem.

If:		Suggested action:
You cannot see anything on the display.		Press ◆ + to darken or ◆ − to lighten the display contrast.
The BATT indicator is displayed.		Replace the batteries. If BATT is displayed in reverse text (BATT), replace the batteries as soon as possible.
The BUSY indicator is displayed.		A calculation is in progress. If you want to stop the calculation, press ON.
The PAUSE indicator is displayed.		A graph or program is paused and the TI-89 Titanium / Voyage 200 is waiting for input; press ENTER.
An error message is displayed.		Refer to the list of error messages in this module. Press ESC to clear.
The TI-89 Titanium / Voyage 200 does not appear to be working properly.		Press ESC several times to exit any menu or dialog box and to return the cursor to the entry line. — or — Be sure that the batteries are installed properly and that they are fresh.

Downloaded from www.Manualslib.com manuals search engine

If:		Suggested action:
The TI-89 Titanium appears to be “locked up” and will not respond to keyboard input.		The following action clears RAM. This erases all data, programs, and user-defined variables, functions, or folders. Press and hold ◄, ►, and 2nd. Then press and release ON. The following action clears RAM *and* Flash ROM. This erases all data, programs, user-defined variables, functions, folders, Flash applications, and the user data archive. 1. Remove one of the four AAA batteries. 2. Press and hold (-) and) as you reinstall the battery. 3. Continue holding (-) and) for five seconds before releasing.
The Voyage™ 200 appears to be “locked up” and will not respond to keyboard input.		The following action clears RAM. This erases all data, programs, and user-defined variables, functions, or folders. Press and hold 2nd and ⎋. Then press and release ON. The following action clears RAM *and* Flash ROM. This erases all data, programs, user-defined variables, functions, folders, Flash applications, and the user data archive. 1. Remove one of the four AAA batteries. 2. Press and hold (-) and) as you reinstall the battery. 3. Continue holding (-) and) for five seconds before releasing.

Downloaded from www.Manualslib.com manuals search engine

Appendix C: Programmer's Guide

The parameter/mode strings used in the setMode( ), getMode( ), setGraph( ), and setTable( ) functions do not translate into other languages when used in a program. For example, when you write a program in the French Language mode then switch to the Italian Language mode, the program will produce an error. To avoid this error, you must substitute digits for the alpha characters. These digits operate in all languages. This appendix contains the digit substitutions for these strings.

The following examples show how to substitute digits in the setMode( ) function.

Example 1: A program using alpha parameter/mode strings:

```
setMode("Graph","Sequence")
```

Example 2: The same program, substituting digits for those strings:

```
setMode("1","4")
```


Downloaded from www.Manualslib.com manuals search engine

setMode( ) and getMode( )

Parameter/Mode Setting	Strings
ALL	0
Graph	1
FUNCTION	1
PARAMETRIC	2
POLAR	3
SEQUENCE	4
3D	5
DIFF EQUATIONS	6
DisplayDigits	2
FIX 0	1
FIX 1	2
FIX 2	3
FIX 3	4
FIX 4	5
FIX 5	6
FIX 6	7
FIX 7	8
FIX 8	9

Downloaded from www.Manualslib.com manuals search engine

Parameter/Mode Setting	Strings
FIX 9	10
FIX 10	11
FIX 11	12
FIX 12	13
FLOAT	14
FLOAT 1	15
FLOAT 2	16
FLOAT 3	17
FLOAT 4	18
FLOAT 5	19
FLOAT 6	20
FLOAT 7	21
FLOAT 8	22
FLOAT 9	23
FLOAT 10	24
FLOAT 11	25
FLOAT 12	26
Angle	3
RADIAN	1

Downloaded from www.Manualslib.com manuals search engine

Parameter/Mode Setting	Strings
DEGREE	2
GRADIAN	3
Exponential Format	4
NORMAL	1
SCIENTIFIC	2
ENGINEERING	3
Complex Format	5
REAL	1
RECTANGULAR	2
POLAR	3
Vector Format	6
RECTANGULAR	1
CYLINDRICAL	2
SPHERICAL	3
Pretty Print	7
OFF	1
ON	2
SplitScreen	8
FULL	1

Downloaded from www.Manualslib.com manuals search engine

Parameter/Mode Setting	Strings
TOP-BOTTOM	2
LEFT-RIGHT	3
Split1App	9
(applications are not numbered)	
Split2App	10
(applications are not numbered)	
Number of Graphs	11
1	1
2	2
Parameter/Mode Setting	**Strings**
Graph 2	12
FUNCTION	1
PARAMETRIC	2
POLAR	3
SEQUENCE	4
3D	5
DIFF_EQUATIONS	6
Split Screen Ratio	13
1:1	1
1:2	2

Downloaded from www.Manualslib.com manuals search engine

Parameter/Mode Setting	Strings
2:1	3
Exact/Approx	14
AUTO	1
EXACT	2
APPROXIMATE	3
Base	15
DEC	1
HEX	2
BIN	3

Downloaded from www.Manualslib.com manuals search engine

setGraph( )

Parameter/Mode Setting	Strings
Coordinates	1
RECT	1
POLAR	2
OFF	3
Graph Order	2
SEQ	1
SIMUL	2
Grid	3
OFF	1
ON	2
Axes	4
In 3D Mode:	
OFF	1
AXES	2
BOX	3
Not in 3D Mode:	
OFF	1

Downloaded from www.Manualslib.com manuals search engine

ON	2
Leading Cursor	5
OFF	1
ON	2
Labels	6
OFF	1
ON	1
Seq Axes	7
TIME	1
WEB	2
Custom	3
Solution Method	8
RK	1
EULER	2
Fields	9
SLPFLD	1
DIRFLD	2
FLDOFF	3
DE Axes	10
TIME	1

Downloaded from www.Manualslib.com manuals search engine

Y1-VS-Y2	2
T-VS-Y'	3
Y-VS-Y'	4
Y1-VS-Y2'	5
Y1'-VS-Y2'	6
XR Style	11
WIRE FRAME	1
HIDDEN SRUFACE	2
CONTOUR LEVELS	3
WIRE AND CONTOUR	4
IMPLICIT PLOT	5

Downloaded from www.Manualslib.com manuals search engine

setTable( )

Parameter/Mode Setting	Strings
Graph <->Table	1
OFF	1
ON	2
Independent	2
AUTO	1
ASK	2
Axes	4

Downloaded from www.Manualslib.com manuals search engine

Appendix D: Service and Warranty Information

Texas Instruments Support and Service

For general information

Home Page:	**education.ti.com** education.ti.com
KnowledgeBase and e-mail inquires:	**education.ti.com/support** education.ti.com/support
Phone:	(800) TI-CARES; (800) 842-2737 For U.S., Canada, Mexico, Puerto Rico, and Virgin Islands only
International information:	**education.ti.com/international** education.ti.com/international

For technical support

KnowledgeBase and support by e-mail:	**education.ti.com/support** education.ti.com/support
Phone (not toll-free):	(972) 917-8324

Downloaded from www.Manualslib.com manuals search engine

For product (hardware) service

Customers in the U.S., Canada, Mexico, Puerto Rico and Virgin Islands: Always contact Texas Instruments Customer Support before returning a product for service.

All other customers: Refer to the leaflet enclosed with this product (hardware) or contact your local Texas Instruments retailer/distributor.

Texas Instruments (TI) Warranty Information

Customers in the U.S. and Canada Only

One-Year Limited Warranty for Commercial Electronic Product

This Texas Instruments ("TI") electronic product warranty extends only to the original purchaser and user of the product.

Warranty Duration. This TI electronic product is warranted to the original purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage. This TI electronic product is warranted against defective materials and construction. **THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT OR UNREASONABLE USE, NEGLECT, IMPROPER SERVICE, OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIALS OR CONSTRUCTION.**

Warranty Disclaimers. ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE ONE-YEAR PERIOD. TEXAS INSTRUMENTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS, EXPENSES, OR DAMAGES INCURRED BY THE CONSUMER OR ANY OTHER USER.

Some states/provinces do not allow the exclusion or limitation of implied warranties or consequential damages, so the above limitations or exclusions may not apply to you.

Legal Remedies. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or province to province.

Downloaded from www.Manualslib.com manuals search engine

Warranty Performance. During the above one (1) year warranty period, your defective product will be either repaired or replaced with a reconditioned model of an equivalent quality (at TI's option) when the product is returned, postage prepaid, to Texas Instruments Service Facility. The warranty of the repaired or replacement unit will continue for the warranty of the original unit or six (6) months, whichever is longer. Other than the postage requirement, no charge will be made for such repair and/or replacement. TI strongly recommends that you insure the product for value prior to mailing.

Software. Software is licensed, not sold. TI and its licensors do not warrant that the software will be free from errors or meet your specific requirements. **All software is provided "AS IS."**

Copyright. The software and any documentation supplied with this product are protected by copyright.

Downloaded from www.Manualslib.com manuals search engine

Australia & New Zealand Customers only

One-Year Limited Warranty for Commercial Electronic Product

This Texas Instruments electronic product warranty extends only to the original purchaser and user of the product.

Warranty Duration. This Texas Instruments electronic product is warranted to the original purchaser for a period of one (1) year from the original purchase date.

Warranty Coverage. This Texas Instruments electronic product is warranted against defective materials and construction. This warranty is void if the product has been damaged by accident or unreasonable use, neglect, improper service, or other causes not arising out of defects in materials or construction.

Warranty Disclaimers. Any implied warranties arising out of this sale, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the above one-year period. Texas Instruments shall not be liable for loss of use of the product or other incidental or consequential costs, expenses, or damages incurred by the consumer or any other user.

Except as expressly provided in the One-Year Limited Warranty for this product, Texas Instruments does not promise that facilities for the repair of this product or parts for the repair of this product will be available.

Some jurisdictions do not allow the exclusion or limitation of implied warranties or consequential damages, so the above limitations or exclusions may not apply to you.

Legal Remedies. This warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.

Warranty Performance. During the above one (1) year warranty period, your defective product will be either repaired or replaced with a new or reconditioned model of an equivalent quality (at TI's option) when the product is returned to the original point of purchase. The repaired or replacement unit will continue for the warranty of the original unit or six (6) months, whichever is longer. Other than your cost to return the product, no charge will be made for such repair and/or replacement. TI strongly recommends that you insure the product for value if you mail it.

Software. Software is licensed, not sold. TI and its licensors do not warrant that the software will be free from errors or meet your specific requirements. **All software is provided "AS IS."**

Copyright. The software and any documentation supplied with this product are protected by copyright.

Downloaded from www.Manualslib.com manuals search engine

All Other Customers

For information about the length and terms of the warranty, refer to your package and/or to the warranty statement enclosed with this product, or contact your local Texas Instruments retailer/distributor.

Battery Precautions

Take these precautions when replacing batteries:

- Do not leave batteries within the reach of children.
- Do not mix new and used batteries. Do not mix brands (or types within brands) of batteries.
- Do not mix rechargeable and non-rechargeable batteries.
- Install batteries according to polarity (+ and –) diagrams.
- Do not place non-rechargeable batteries in a battery recharger.
- Properly dispose of used batteries immediately.
- Do not incinerate or dismantle batteries.

Downloaded from www.Manualslib.com manuals search engine

TI-89 Titanium Shortcut Keys

General

♦ APPS	List of Flash applications
2nd [⇆]	Toggle between last two chosen applications or split screens
♦ −, ♦ +	Lighten or darken contrast
♦ ENTER	Calculate approximate answer
♦ ↑, ♦ ↓	Move cursor to top or bottom (in editors)
⇑ ↑, ⇑ ↓	Scroll tall objects in history
⇑ ←, ⇑ →	Highlight left or right from cursor
2nd ↑, 2nd ↓	Page up or page down (in editors)
2nd ←, 2nd →	Move cursor far left or far right

On-screen Keyboard Map (♦ EE)

Press ESC to exit the map.



The keyboard map displays shortcuts that are not marked on the keyboard. As shown below, press ♦ and then the applicable key.

♦ =	≠
♦ (	Access Greek letters (see next column)
♦)	◉ (comment)
♦ ,	Copy graph coordinates to sysdata
♦ ÷	! (factorial)
♦ ⇑	Display FORMATS dialog box
♦ 1 – ♦ 6	Run programs kbdprgm1( ) through kbdprgm6( )
♦ ×	& (append)
♦ EE	On-screen keyboard map
♦ STO▸	@
♦ ON	Turn off unit so that it returns to current application the next time you turn it on
♦ 0 (zero)	≤
♦ .	≥
♦ (-)	Copy graph coordinates to Home screen history

Alpha Rules

alpha	Type one lowercase letter
⇑	Type one uppercase letter
2nd [a-lock]	Lowercase alpha lock
⇑ alpha	Uppercase alpha lock
alpha	Exit alpha lock


3D Graphing

↑, ↓, ←, →	Animate graph
+, −	Change animation speed
X, Y, Z	View along axis
0	Return to original view
I	Change graph format style
×	Expanded/normal view

Greek Letters

♦ (	To access the Greek character set
♦ (alpha + letter	To access lowercase Greek letters. Example: ♦ (alpha [W] displays ω
♦ (⇑ + letter	To access uppercase Greek letters. Example: ♦ (⇑ [W] displays Ω

If you press a key combination that does not access a Greek letter, you get the normal letter for that key.

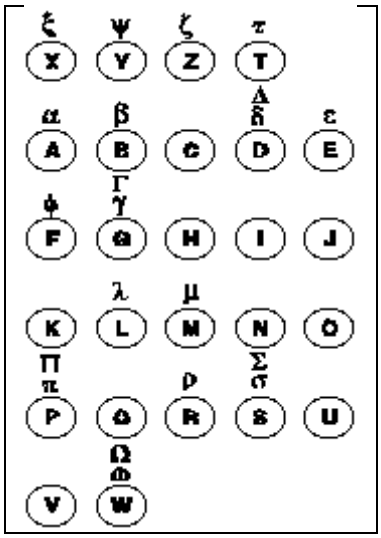

Downloaded from www.Manualslib.com manuals search engine


Voyage™ 200 Shortcut Keys

General

◆ APPS	List of Flash applications (if desktop is off)
2nd [↔]	Toggle between last two chosen applications or split screens
◆ D	Copy graph coordinates to sysdata
◆ F	Display FORMATS dialog box
◆ H	Copy graph coordinates to Home screen history
◆ N	Create new variable
◆ O	Open existing variable
◆ S	Save copy as
◆ −, ◆ +	Lighten or darken contrast
◆ ENTER	Calculate approximate answer
◆ ON	Turn off unit so that it returns to current application the next time you turn it on
◆ 1 – ◆ 6	Run programs kbdprgm1() through kbdprgm6()

On-screen Keyboard Map (◆ [KEY])

Press ESC to exit the map.

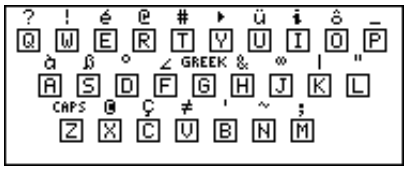

See the table below for shortcuts that are not marked on the Voyage™ 200 keyboard. See the next column for accent marks and Greek letters.

2nd X	© (comment)
◆ =	≠
◆ 0 (zero)	≤
◆ .¶	≥

Editing

◆ ↑	Move cursor to top
◆ ↓	Move cursor to bottom
2nd ←	Move cursor to far left
2nd →	Move cursor to far right
▤ ↑, ▤ ↓	Scroll tall objects in history
2nd ↑, 2nd ↓	Page up and page down
◆ X	Cut
◆ C	Copy
◆ V	Paste

3D Graphing

↑, ↓, ←, →	Animate graph
+, −	Change animation speed
X, Y, Z	View along axis
0 (zero)	Return to original view
F	Change graph format style
X	Expanded/normal view


Accent Marks

2nd A + letter	à, è, ì, ò, ù, À, È, Ì, Ò, Ù
2nd C + letter	ç, Ç
2nd E + letter	á, é, í, ó, ú, ý, Á, É, Í, Ó, Ú, Ý
2nd N + letter	ã, ñ, õ, Ã, Ñ, Õ
2nd O + letter	â, ê, î, ô, û, Â, Ê, Î, Ô, Û
2nd U + letter	ä, ë, ï, ö, ü, ÿ, Ä, Ë, Ï, Ö, Ü

Greek Letters

2nd G	To access the Greek character set
2nd G + letter	To access lowercase Greek letters. Example: 2nd G W displays ω
2nd G ⇧ + letter	To access uppercase Greek letters. Example: 2nd G ⇧ W displays Ω

If you press a key combination that does not access a Greek letter, you get the normal letter for that key.

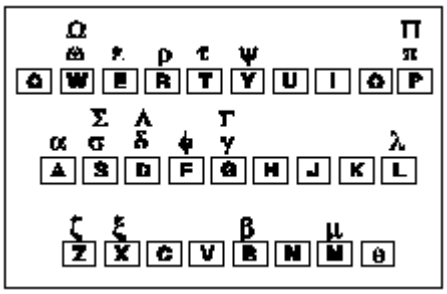

Downloaded from www.Manualslib.com manuals search engine

Keystroke Differences

There are certain differences in keystrokes using the TI-89 Titanium / Voyage™ 200 for various operations. The following table shows the keystrokes for major commands for the two calculators.

FUNCTION	TI-89 Titanium	Voyage 200
LETTERS		
One lowercase letter (a-s, u, v, w)	alpha A-S, U-W	A-S, U-W
One lowercase letter (t, x, y, z)	T, X, Y, Z	T, X, Y, Z
Several lowercase letters	2nd [a-lock]	
End several lowercase letters	alpha	
Several uppercase letters	⇧ [a-lock]	2nd [CAPS]
End several uppercase letters	alpha	2nd [CAPS]
FUNCTION KEYS		
F6	2nd [F6]	F6
F7	2nd [F7]	F7
F8	2nd [F8]	F8
NAVIGATION		
Scroll tall objects up or down in history	⇧ ▲, ⇧ ▼	☜ ▲, ☜ ▼
Move cursor far left or far right on entry line	2nd ◀, 2nd ▶	2nd ◀, 2nd ▶
Diagonal movement	▲ and ◀ ▲ and ▶ ▼ and ◀ ▼ and ▶	▲ and ◀ ▲ and ▶ ▼ and ◀ ▼ and ▶
FUNCTIONS		
Display Home screen	HOME	◆ [CALC HOME]
Cut	◆ [CUT]	◆ X
Copy	◆ [COPY]	◆ C
Paste	◆ [PASTE]	◆ V
Catalog	CATALOG	2nd CATALOG
Display Units dialog box	2nd [UNITS]	◆ [UNITS]
Sin	2nd [SIN]	SIN
Cos	2nd [COS]	COS
Tan	2nd [TAN]	TAN
LN	2nd [LN]	LN
e^x	◆ [e^x]	2nd [e^x]
EE	EE	2nd EE
FUNCTION	**TI-89 Titanium**	**Voyage 200**
SYMBOLS		
▶ (Conversion triangle)	2nd ▶	2nd ▶
_ (Underscore)	◆ [_]	2nd [_]

Downloaded from www.Manualslib.com manuals search engine

θ (Theta)	◆ [θ]	[θ]
| ("With")	[|]	2nd [|]
' (Prime)	2nd [′]	2nd [′]
° (Degree)	2nd [°]	2nd [°]
∠ (Angle)	2nd [∠]	2nd [∠]
Σ (Sigma)	CATALOG Σ (	2nd [Σ]
x[␣] (Reciprocal)	CATALOG ^-1	2nd [x^{-1}]
Space	alpha[_]	Space bar
HIDDEN SHORTCUTS		
Place data in sysdata variable	◆ [,]	◆ D
Greek characters	◆ [(] alpha or ◆ [(] ⬆	◆ G or ◆ G ⬆
Keyboard map	◆ EE	◆ [KEY]
Place data in Home screen history	◆ [(-)]	◆ H
Grave (à, è, ì, ò, ù)	2nd [CHAR] 5	2nd A a, e, i, o, u
Cedilla (ç)	2nd [CHAR] 5 6	2nd C c
Acute (á, é, í, ó, ú, ý)	2nd [CHAR] 5	2nd E a, e, i, o, u, y
Tilde (ã, ñ, õ)	2nd [CHAR] 5 6	2nd N a, n, o
Caret (â, ê, î, ô, û)	2nd [CHAR] 5	2nd O a, e, i, o, u
Umlaut (ä, ë, ï, ö, ü, ÿ)	2nd [CHAR] 5	2nd U a, e, i, o, u, y
? (Question mark)	2nd [CHAR] 3	2nd Q
β (Beta)	2nd [CHAR] 5 6	2nd S
# (Indirection)	2nd [CHAR] 3	2nd T
& (Append)	◆ [×] (times)	2nd H
@ (Arbitrary)	◆ STO▸	2nd R
≠ (Not equal to symbol)	◆ [=]	2nd V
! (Factorial)	◆ [÷]	2nd W
Comment (Circle-C)	◆ [)] ◕	2nd X ©
New	F1 3	◆ N
Open	F1 1	◆ O
Save copy as	F1 2	◆ S
Format dialog box	◆ [|]	◆ F

Downloaded from www.Manualslib.com manuals search engine

Index

Symbols

!, factorial 74, 907
→, store 596, 913
", second notation 911
≠, /=, not equal 604, 906
#, indirection 602, 909
√( ), square root 909
%, percent 905
&, append 602, 908
', minute notation 911
', prime 911
Σ( ), sum 266, 909
∫( ), integrate 80, 240, 242, 243, 247, 266, ... 267, 908
*, multiply 903
∫f(x)dx (graph math tool) 331, 334
+, add 901
F1–F8 (function keys)
  moving among toolbar menus . . . 55
  selecting categories 28, 31
  selecting menus 49
  uses 14
°, degree notation 764, 910, 911
-, negate 905
–, subtract 902
∠, angle 910
.*, dot multiplication 905
.+, dot addition 904
.–, dot subtraction 904
./, dot division 905
.^, dot power 905
/, divide 903
<, less than 604, 906
<<...>>, insufficient display memory . 229
=, equal 604, 906
>, greater than 604, 907
(-) (negation key) 14
@, arbitrary integer 276, 277
Δlist( ), list difference 838
Δtbl, table increment 456
ΔtmpCnv( ), temperature-range conversion 286, 891
Δx window variable 325
Δy window variable 325
^, power 904
_, underscore 911
≤, <=, less than or equal 604, 907
− (subtraction key) 14
≥, >=, greater than or equal 604, 907
◕, comment 581, 913
|, with 80, 83, 239, 249, 913
∞, infinity 277
← / ◆ DEL (delete character) 16
(hand modifier key)
  status 38
2nd (second modifier key)

Downloaded from www.Manualslib.com manuals search engine

description 13
status 38
2nd [MEM] (MEMORY) 17
2nd [EE] (exponent key) 15
2nd [▶] (measurement conversions) . . 16
2nd [RCL] (recall) 17
2nd [CATALOG] (Catalog)
commands 22
description 21
exiting 24
key command 17
2nd [CUSTOM] (Custom)
description 55
example 56
key command 16
2nd [CHAR] (Character)
description 49
entering special characters 10
key command 17
selecting characters 10
2nd [QUIT]
calculator Home screen 24
entering commands 22
exiting the split-screen mode 64
key command 17
turning off the calculator 7
▸, convert 283, 912
▸Bin, display as binary 681, 790
▸Cylind, display as cylindrical vector . 804
▸DD, display as decimal angle 807
▸Dec, display as decimal integer 681, 807
▸DMS, display as degree/minute/second . 813
▸Grad, convert to Gradian angle measure 829
▸Hex, display as hexadecimal . . 681, 830
▸Polar, display as polar vector 855
▸Rad, convert to Radian angle measure . 862
▸Rect, display as rectangular vector . 864
▸Sphere, display as spherical vector . 882
⬆ (shift modifier key)
description 13
status 38
◆ (diamond modifier key)
description 13
status 38
◆ S (SAVE COPY AS)
example 54
STO▸ (store) key 17
◀▶▲▼ (cursor keys)
entering commands 23
opening Apps 28
selecting entry/answer pairs 26
using the CHAR menu 10
-, negate 156
Π( ), product 266, 909
θmax window variable 343
θmin window variable 343
θstep window variable 344
ʳ, radian 910
ᵀ, transpose 886

Downloaded from www.Manualslib.com manuals search engine

(x window variable 941
x^{-1}, reciprocal 912
(y window variable 941

Numerics

009AppB, page = 574 949
0b, binary indicator 914
0h, hexadecimal indicator 914
10^( ), power of ten 912
1Symbols
    #, indirection 944
    ^, power 944
    |, with 944
3D (three-dimensional) mode 38
3D graphing 375–409
    animation 101, 391
    CONTOUR LEVELS 104, 395
    HIDDEN SURFACE 104, 395
    WIRE AND CONTOUR . . . 104, 395
    WIRE FRAME 104, 395
▸ln( ) 838
▸logbase( ) 840

A

ABOUT screen 65
abs( ), absolute value 767, 786
absolute value, abs( ) 767
accent marks
    CHAR menu 17
accented characters 656
accuracy 941
add, + ... 901
Algebra menu 255, 258
algebra operations 782
All category 31
and (Boolean), and 249, 685, 786
and picture, AndPic 628
and, Boolean and 249, 605, 685
AndPic, and picture 787
Angle mode 187, 305, 923
angle mode 18, 38
    status 38
angle( ), angle 787
angle, ∠ 910
ans( ), last answer 789
answer (last), ans( ) 220
APD (Automatic Power Down) 146
APD (Automatic Power Down) feature
    during calculation or program 8
    turning on after 8
append, & 602, 908
APPLICATIONS menu 181
APPLICATIONS menu (APPS) . . . 50, 58
approx( ), approximate 789
Approximate mode . . 166, 188, 203, 241
approximate, approx( ) 256
Apps (calculator software applications)
    deleting 67
    icon highlighted, last open 7
    icons 5
    names 28
    opening 28, 58

Downloaded from www.Manualslib.com manuals search engine

shortcuts 33
switching 64
Apps desktop
calculator Home screen and 24
categories 28, 32
clock 41
date and time 43
initial startup 5
mode 18, 39
parts of 7
split-screen status 37
turning off 39
turning off the calculator 7
arbitrary integer, @ 276, 277
Arc (graph math tool) 331, 337, 346, 353
arc length, arcLen( ) 266
arccosine, $\cos^{-1}$( ) 797
archive variables, Archive . 596, 708, 709
Archive, archive variables . 596, 708, 789
archiving variables 141
arcLen( ), arc length 789
arcsine, $\sin^{-1}$( ) 878
arctangent, $\tan^{-1}$( ), arctangent 888
assembly language 641, 644, 818
asymptotes, faux, detecting 92
augment( ), augment/concatenate . . 747, 790
augment/concatenate, augment( ) . . 747
Auto mode 166, 188, 203, 242, 925
AUTO mode status 38
Automatic Power Down (APD) feature
during calculation or program 8
in OS download mode 69
turning on after 8
automatic simplification 244
automatic tables 459
auto-paste 26, 212, 221
avgRC( ), average rate of change . . . 790
axes (sequence), CUSTOM 363
Axes graph format . . . 316, 415, 434, 435
Axes settings 386, 394

B

backspace (⌫) 16
Base mode 18, 188, 926
BATT message 204, 949, 952
batteries 148, 204, 949, 950, 952
precautions 70, 969
prolonging life 8
replacing 4, 69, 70
binary
display, ▶Bin 681, 790
indicator, 0b 914
rotate, rotate( ) 686
shift, shift( ) 687
BldData, build data 439, 596, 791
Bogacki-Shampine formula 948
Boolean
and, and 249, 605, 685, 786
exclusive or, xor 605, 685, 895
not, not 605, 684, 849
or, or 605, 685

Downloaded from www.Manualslib.com manuals search engine

Box Plot 556
build
data, BldData 439, 596, 791
table, Table 887
web, Build Web 363
Build Web, build web 363, 365
build web, Build Web 365
BUSY 39
BUSY indicator 204, 573
Busy/Pause status 39

C

cables 65, 67, 716, 733, 737
Calc menu 265
calculator Home screen
2nd [QUIT] 17
changing entry/answer pairs 27
custom menu 56
entering commands 22
function keys 14
key command 17
toolbar menus 49
turning off the calculator 7
calculator software applications (Apps) 7
icons 5
Calculator-Based Laboratory system
connecting 68
Calculator-Based Laboratory. See CBL
Calculator-Based Ranger See CBR
Calculator-Based Ranger system
connecting 68
calculus operations 782
Catalog (2nd [CATALOG])
commands 22
description 21
exiting 24
key command 17
CATALOG menu 191
categories
All 31
Apps desktop 32
customizing 33
English 31
example of editing 34
Graphing 32
Math 31
Organizr (organizer) 32
Science 32
selecting 31
selecting empty 32
SocialSt (social studies) 31
CBL
programs 633
statistical data 568, 569
CBL 2 system
activity 761
connecting 68
programs 761
CBL2
get/return, Get 825
send list variable, Send 869
CBR

Downloaded from www.Manualslib.com manuals search engine

get/return, Get 825
programs 633
send list variable, Send 869
statistical data 568, 569
CBR system
connecting 68
programs 761
ceiling( ), ceiling 791
ceiling, ceiling( ) 749
certificate 724, 731, 732, 733, 734, 735, 736
Certificate revision (Cert. Rev.) 234
cFactor( ), complex factor . 257, 773, 792
cFactor(†), complex factor 938
CHAR menu (2nd [CHAR])
description 49
entering special characters 10
key command 17
char( ), character string 792
character string, char( ) 602
characters
deleting 16
Greek 10, 17, 49, 657, 658
international/accented . . . 10, 17, 49
math 10, 17, 49
numeric code, ord( ) 602
punctuation 49
special . . . 10, 17, 49, 655, 656, 658
string, char( ) 602
symbols 658
uppercase 13
uppercase/lowercase 154, 650
checkTmr( ), check timer 792
circle
drawing 493
graphing 86, 89
circle, Circle 631
Circle, draw circle 631, 793
Circular definition error 595
Clean Up menu 189
clear
drawing, ClrDraw 630
error, ClrErr 636
graph, ClrGraph 475, 627, 677
I/O, ClrIO 575, 620
clipboard 212, 653
Clock
dialog box 41
operation 40
turning off 47
turning on 48
ClockOff, turning clock off 793
ClockOn, turning clock on 793
ClrDraw, clear drawing 630, 793
ClrErr, clear error 636, 793
ClrGraph, clear graph 627, 677, 794
ClrHome, clear home 28, 794
ClrIO, clear
I/O 794
ClrIO, clear I/O 575, 620, 794
cobweb plot. See web plots
colDim( ), matrix column dimension . 794

Downloaded from www.Manualslib.com manuals search engine

colNorm( ), matrix column norm 794
combinations, nCr( ) 846
comDenom( ), common denominator 795
command mark 661
command scripts 210, 661, 664
activity 752
commands
Flash Apps 21
Key 10, 12
comment, ◒ 581, 913
common denominator, comDenom( ) 256, ... 257, 264
complex
factor, cFactor( ) 257, 773, 792
factor, cFactor(†) 938
mode, Complex Format . . . 188, 923
modulus surface 402
numbers 73, 74
solve, cSolve( ) 240, 800
solve, cSolve(†) 938
tables 463
zeros, cZeros( ) 240, 257, 804
zeros, cZeros(†) 938
Complex Format mode 188, 923
complex format mode 18
Complex menu 257
conj( ), complex conjugate 795
connecting
TI ViewScreen overhead panel . . 68
TI-Presenter video adapter 68
Constant Memory 146
Constant Memory feature 17
constants 279
predefined 293
contact information 965
contour plots 396, 400, 401
DrwCtour, draw contour 400
contour-level graphing 104, 395, 947
contrast
adjusting 5, 71
initial startup 5
contrast, adjusting 147
convert measurements 16
convert time, timeCnv( ) 890
convert, ▸ 283, 912
Coordinates graph format 315, 344
copy 212, 653
copy variable, CopyVar 596, 703
CopyVar, copy variable 703, 796
cos( ), cosine 796
$\cos^{-1}$( ), arccosine 797
cosh( ), hyperbolic cosine 798
$\cosh^{-1}$( ), hyperbolic arccosine 798
cot( ), cotangent 798
$\cot^{-1}$( ), inverse cotangent 799
coth( ), hyperbolic cotangent 799
$\coth^{-1}$( ), inverse hyperbolic cotangent . . . 799
crossP( ), cross product 799
csc( ), cosecant 799
$\csc^{-1}$( ), inverse cosecant 800
csch( ), hyperbolic cosecant 800

Downloaded from www.Manualslib.com manuals search engine

csch^{-1}( ),inverse hyperbolic cosecant 800
cSolve( ), complex solve 240, 800
cSolve(†), complex solve 938
cubic regression, CubicReg . . . 546, 945
CubicReg, cubic regression . . .546, 802, 945
cumSum( ), cumulative sum . . . 534, 803
Current folder mode 187, 922
Current folder status 38
Current mode 18
cursor
  3D graph 382
  deleting characters 16
  free-moving 319, 345, 352, 361, 381, ... 419
  hidden surface 384
  in the history area 26
  location following APD 8
  moving 172
  off the curve 385
  Selecting a command 23
  trace 321
  Viewing entries 26
cursor keys (◀▶▲▼)
  entering commands 23
  opening Apps 28
  selecting entry/answer pairs 26
  using the CHAR menu 10
CustmOff, custom toolbar off . . 230, 803
CustmOn, custom toolbar on . . 230, 803
CUSTOM (2nd [CUSTOM]) menu 56
  descripton 55
  key command 16
CUSTOM axes (sequence) 363
CUSTOM custom plots . . .357, 434, 435
CUSTOM menu 230
custom plots, CUSTOM . . .357, 434, 435
custom toolbar *See* toolbar
Custom Units mode 189, 926
Custom, define toolbar 621, 803
customer support and service 965
cut 212, 653
cycle picture, CyclePic . . .500, 629, 804
Cycle, cycle 804
CyclePic, cycle picture 629, 804
cylindrical vector display, ▶Cylind . . . 804
cZeros( ), complex zeros . .240, 257, 804
cZeros(†), complex zeros 938

D

d( ), first derivative 79, 247, 265, 267, 806
darker/lighter 147
data (new), NewData 846
data filtering 757
data plots 119
Data/Matrix Editor
  cell width 527
  column header . .528, 531, 532, 533
  filling 525
  list variable 520, 522
  new, NewData 597
  scrolling 525

Downloaded from www.Manualslib.com manuals search engine

shift, shift( ) 875
sorting columns 535
statistical plots 551
values 523, 524
data/matrix editor 469
data▸mat( ) 806
date
reset 48
setting 40
dayOfWk( ), day of week 807
DE (differential equation) mode 38
decimal
angle display, ▸DD 807
integer display, ▸Dec 681, 807
define toolbar, Toolbar 621, 892
Define, define . . 357, 413, 446, 742, 808
define, Define . 224, 271, 309, 350, 357, 378, . 413, 446, 472, 479, 591, 596, 627, ... 742, 808
DEG (degree) mode 38
degree notation, ° 764, 910, 911
degree/minute/second display, ▸DMS 813
delete character (← / ◆ DEL) 16
deleting
folder, DelFold 596, 808
variable, DelVar 238, 270, 596, 600, 809
variables of type 705
deleting variables 143
DelFold, delete folder 596, 808
DelType 809
DelType command 705
DelVar, delete variable . . . 596, 600, 809
denominator 795
derivatives 79
first derivative, d ( ) 806
first derivative, *d*( ) . 79, 247, 265, 267
numeric derivative, nDeriv( ) 266, 846
Derivatives (graph math tool) . 331, 334, 346, ... 353
deSolve( ), solution 266, 444, 809
det( ), matrix determinant 810
diag( ), matrix diagonal 811
dialog box
CLOCK 41
edit categories 33
menu indicator 53
MODE 17
to open Apps 28
dialog box, define, Dialog 621, 811
dialog boxes 179
Dialog, define dialog box 621, 811
Diamond modifier key (◆)
description 13
status 38
differential equations
DIRFLD, direction field 415, 423
first order 425, 444
FLDOFF, field off 415, 424, 451
graphing 410–452
initial conditions 421
second order 427, 444

Downloaded from www.Manualslib.com manuals search engine

SLPFLD, slope field . . 415, 423, 448
solution methods 414, 439, 948
third order 431
troubleshooting 447
diftol window variable 418
dim( ), dimension 811
dimension, dim( ) 602
direction field, DIRFLD . . . 415, 423, 450
DIRFLD, direction field . . . 415, 423, 450
discontinuities
detecting 92
Disp, display I/O screen . . 130, 582, 620, 636, ... 812
DispG, display graph 620, 627, 812
DispHome, display Home screen . . . 620, 812
display
graph, DispG 620, 627, 812
Home screen, DispHome . . 620, 812
I/O screen, Disp 130, 582, 620, 636, 812
table, DispTbl 620, 627, 812
display as
binary, ▸Bin 681, 790
cylindrical vector, ▸Cylind 804
decimal angle, ▸DD 807
decimal integer, ▸Dec 681, 807
degree/minute/second, ▸DMS . . 813
hexadecimal, ▸Hex 681, 830
polar vector, ▸Polar 855
rectangular vector, ▸Rect 864
spherical vector, ▸Sphere 882
Display Digits mode 169, 187, 922
display digits mode 18
DispTbl, display table 812
Distance (graph math tool) 331, 335, 346, ... 353
divide, / 903
domain constraints 253
dot
addition, .+ 904
division, ./ 905
multiplication, .* 905
power, .^ 905
subtraction, .– 904
dotP( ), dot product 813
DrawFunc, draw function . . 487, 632, 813
drawings and drawing
circle, Circle 631, 793
circles 493
clearing, ClrDraw 630, 793
contour, DrwCtour 632, 815
erasing 492
freehand 491
function, DrawFunc . . . 487, 632, 813
horizontal line, LineHorz . . . 632, 836
inverse, DrawInv 488, 632, 813
line, Line 631, 836
lines 492, 494
on a graph 629
parametric, DrawParm 487, 632, 814
Pencil 491

Downloaded from www.Manualslib.com manuals search engine

polar, DrawPol 487, 632, 814
slope, DrawSlp 495, 631, 814
tangent line, LineTan 632, 837
vertical line, LineVert 632, 837
DrawInv, draw inverse . . . 488, 632, 813
DrawParm, draw parametric . . . 487, 632, 814
DrawPol, draw polar 487, 632, 814
DrawSlp, draw slope 495, 631, 814
drop-down menu, DropDown 622
DropDown, drop-down menu . . 622, 814
DrwCtour, draw contour . . 400, 632, 815
dtime window variable 418

E

E, exponent 15, 815
e, natural log base 277
e^( ), *e* to a power 815
editing 172
eigVc( ), eigenvector 816
eigVl( ), eigenvalue 816
else if, ElseIf 478, 607
Else, else 831
else, Else 607
ElseIf, else if 607, 816
end
custom, EndCustm 621, 803
dialog, EndDlog 621, 811
for, EndFor 582, 611, 823
function, EndFunc 587, 824
if, EndIf 582, 606, 831
loop, EndLoop 614, 841
program, EndPrgm . . . 128, 591, 856
toolbar, EndTBar 621, 892
try, EndTry 636, 892
while, EndWhile 613, 895
EndCustm, end custom 621, 803
EndDlog, end dialog 621, 811
EndFor, end for 582, 611, 823
EndFunc, end function 587, 824
EndIf, end if 582, 606, 831
EndLoop, end loop 614, 841
EndPrgm, end program . . . 128, 591, 856
EndTBar, end toolbar 621, 892
EndTry, end try 636, 892
EndWhile, end while 613, 895
English category 31
entry line
clearing the history area 28
cursor rests on 26
inserting commands 22
recalling 26
entry( ), entry 817
entry, entry( ) 219
entry/answer pairs 27
status 39
EOS (Equation Operating System) . . 943
equal, = ... 604, 906
Equation Operating System (EOS) . . 943
equations, solving . . . 666, 670, 674, 675
error conditions after APD 8
errors and troubleshooting 952

Downloaded from www.Manualslib.com manuals search engine

Circular definition 595
clear error, ClrErr 636, 793
Memory error 713, 714
Out-of-memory 273
pass error, PassErr 636, 854
programs 635
transmission 724, 735
warnings 922
Estep window variable 418
Euler method 414, 439
evaluate polynomial, polyEval( ) 855
EXACT mode status 38
exact( ), exact 817
Exact/Approx mode 166, 188, 203, 240, 241, ... 242, 925
exact/approx mode 18
example
changing mode settings 19
editing categories 34
restoring the default custom menu 56
selecting menu options 51
turning off the clock 47
turning on/off the custom menu . . 56
using dialog boxes 54
using the CHAR menu 11
using the keyboard map 12, 13
examples, previews, activities
3D graphing 101, 750
additional graphing topics 110
angle modes 81
baseball 763
CBL 2 program 761
complex factors 773
complex modulus surface 402
complex numbers 73
complex zeroes 766
constants and measurement units 84
converging web plots 366
cos(x)=sin(x) activity 748
cubic polynomial 766
data filtering 757
data/matrix editor 117
decomposing a rational function . 755
derivatives 79
detecting discontinuities 92
differential equations 105
diverging web plots 368
expanding expressions 76
factorial 73
factoring polynomials 259
Fibonacci sequence 373
finding roots 75
function graphing 86, 89
graphing functions 87
implicit derivatives 79
implicit plots 407
integrals 80
log to any base 81
memory management 138
number bases 136
numeric solver 133
oscillating web plots 369

Downloaded from www.Manualslib.com manuals search engine

parametric graphing 94, 764
path of a ball 94
polar rose 96
pole-corner problem 741
population 119
predator-prey model 371, 435
prime factors 73
programming 128, 130, 637
Pythagorean theorem 741
quadratic formula 743
rational factors 773
real factors 773
reducing expressions 76
sampling 775
second-order differential equation . . 427, ... 444
sequence graphing 98
solving inequalities 78
solving linear equations 77, 260
split screen 114, 764
standard annuity 769
statistics 119
symbolic manipulation 82
tables 112
text operations 131
third-order differential equation . 431
time value of money 771
trees and forest 98
tutorial script with the text editor . 752
variable management 138
vectors 80
examples,previews,activities
log to any base 81
exclusive or (Boolean), xor 605, 685, 895
exclusive or picture, XorPic 629, 896
Exec, execute assembly language . 644, 818
execute assembly language, Exec . 644, 818
execute program, Prgm . . . 128, 591, 856
Exit, exit 818
exp▸list( ), expression to list 818
expand( ), expand 76, 745, 766, 818
expand, expand( ) 76, 256, 259, 745, 766
exponent key (2nd EE) 15
exponent, E 15, 815
Exponential Format mode . 170, 188, 923
exponential Format mode 18
exponential regession, ExpReg 546, 820, 945
expr( ), string to expression . . . 601, 602, 620, ... 819
ExpReg, exponential regession 546, 820, 945
expressions 24, 159, 160, 161, 172
expanding 76
expression to list, exp(list( ) 818
reducing 76
string to expression, expr( ) 601, 602, ... 620, 819
Extract menu 257

Downloaded from www.Manualslib.com manuals search engine

eyeϕ z-axis window variable . . .378, 387, 388
eyeθ x-axis window variable . . .378, 387, 388
eyeψ rotation window variable .378, 387, 389

F

factor( ), factor 75, 745, 773, 820
factor, factor( ) . 75, 240, 256, 259, 745, 773
factorial, ! 74, 907
factoring 259
activity 773
false message 275
family of curves 479
FCC statement 2
Fibonacci sequence 373
field off, FLDOFF 415, 424, 451
field picture, fldpic 419
Fill, matrix fill 821
Flash applications . . 181, 195, 273, 689, 690, ... 693
deleting 724
FLASH APPLICATIONS ([♦] [APPS])
accessing Apps not listed 59
description 50
key command 16
Flash, upgrading operating system .731, 732, ... 733
FLDOFF, field off 415, 424, 451
fldpic, field picture 419
fldres window variable 418
floor( ), floor 749, 821
floor, floor( ) 749
fMax( ), function maximum 822
fMin( ), function minimum 822
FnOff, function off 627, 822
FnOn, function on 627, 823
folders 187, 922
delete, DelFold 596, 808
get/return, getFold( ) 826
locking/unlocking 703
new, NewFold 597, 847
pasting name 705, 706
renaming 700, 703
setting, setFold( ) 617, 871
transmitting .719, 720, 721, 722, 723
VARLINK . . 693, 694, 695, 696, 698, 699, ... 700, 701
For, for 823
for, For 582, 611, 823
format string, format( ) 602, 620, 627
format( ), format string 823
FORMATS dialog box . . . 104, 105, 315, 393, ... 395, 397, 657
fpart( ), function part 824
fractions 256, 264, 755, 857
free-moving cursor . 319, 345, 352, 361, 381, ... 419
Frobenius norm, norm( ) 849
full-screen mode

Downloaded from www.Manualslib.com manuals search engine

2nd [QUIT] 17
Apps desktop 37
changing from split-screen 64
displaying Apps in 64
FUNC (function) mode 38
Func, program function 587, 824
function keys (F1–F8)
moving among toolbar menus . . . 55
selecting categories 28, 31
selecting menus 49
functions 21, 159
delayed simplification 247
graphing 302
maximum, fMax( ) . . . 240, 266, 822
minimum, fMin( ) 240, 266, 822
multistatement 477
off, FnOff 311, 627, 822
on, FnOn 311, 627, 823
part, fPart( ) 824
program function, Func . . . 587, 824
user-defined 196, 223, 271, 378, 475, ... 477, 585, 587, 808

G

Garbage collection message . . 709, 710, 711, ... 712, 713
gcd( ), greatest common divisor 824
get time zone, GetTmZn( ) 828
Get, get/return CBL/CBR value 568, 634
Get, get/return CBL2/CBR value . . . 825
get/return
calculator, GetCalc . . 634, 727, 728, 825
CBL/CBR value, Get 568, 634
CBL2/CBR value, Get 825
configuration, getConfg( ) . . 617, 825
denominator, getDenom( ) . 257, 826
folder, getFold( ) 596, 617, 826
key, getKey( ) 619, 826
key, getKey(†) 929, 931
mode, getMode( ) 617, 827
number, getNum( ) 257, 827
type, getType( ) 237, 596, 828
units, getUnits( ) 617, 829
GetCalc, get/return calculator . 634, 727, 728, ... 825
getConfg( ), get/return configuration 617, 825
getDate( ), get date 825
getDenom( ), get/return denominator 826
getDtFmt( ), get date format 826
getDtStr( ), get date string 826
getFold( ), get/return folder 596, 617
getKey( ), get/return key 619, 826
getKey(†), get/return key 929, 931
getMode( ), get/return mode . . . 617, 827
getNum( ), get/return number 827
getTime( ), get time 827
getTmFmt( ), get time format 827
getTmStr( ), get time string 827
getTmZn( ), get time zone 828
getType( ), get/return type 596, 828

Downloaded from www.Manualslib.com manuals search engine

getUnits( ), get/return units 617, 829
global variables 600
go to, Goto 593, 609, 616
Goto, go to 829
GRAD (gradian) mode 38
GRAD(gradian) mode 81
Gradian angle mode 81
gradian,[G] 910
graph
    mode 18, 38
    number mode 38
Graph 2 mode 188, 925
Graph mode . . 187, 203, 304, 342, 349,
    356, ... 377, 412, 922
graph mode status 38
graph number mode status 38
Graph Order graph format 316, 414
Graph, graph 830
graph, Graph 309, 473, 480, 628
Graph<->Table, table-graph 456
graphing category 32
graphs
    number of 62, 64
graphs and graphing
    ∫f(x)dx 331, 334
    3D 375–409
    animation 500
    Arc 331, 337, 346, 353
    clearing, ClrGraph 475, 627, 677, 794
    contour plots 396, 400, 401
    coordinates 87, 319
custom axes 363
custom plots 357, 434, 435
Derivatives 331, 334, 346, 353
differential equations 410–452
Distance 331, 335, 346, 353
drawing 489, 491, 492, 493, 494, 495,
    . . . . . 496, 629
family of curves 479
formats 315, 344, 414
functions 302
functions off, FnOff 627, 822
functions on, FnOn 627, 823
graph databases 503
graph, Graph 473, 628, 830
Home screen 471, 473
implicit plots 404, 407
independent variable 471
Inflection 331, 335
Intersection 331, 333
inverse functions 488
line styles . . 311, 343, 351, 358, 378
math functions 331
matrix data 469
Maximum 331, 333
Minimum 87, 331, 333
modes 187, 203, 304, 342, 349, 356,
    . . . . . 377, 412, 922
native independent variable 471
nested functions 476
operations 782

Downloaded from www.Manualslib.com manuals search engine

overview . . 302, 340, 347, 354, 375, 410
panning 323
parametric 347
pausing 318
pictures 497, 499
piecewise functions 475
pixels 941
polar 340
programs 627
QuickCenter 324
recall graph database, RclGDB . 629, 863
selecting functions . . . 309, 350, 358, 413
sequence 354–374
setting, setGraph( ) . . 617, 628, 871
Shade 332, 337
shading, Shade 632, 875
simultaneous graphs 481
split screen 482, 485, 506
store graph database, StoGDB . 629, 884
style, Style 628, 885
Tangent 331, 336, 346, 353
text 496
time plots 357, 363, 434, 435
trace, Trace 321, 628, 751, 761, 763, ... 766, 892
tracing 87, 321, 324, 346, 353, 362, 381, ... 420
two-graph mode . 482, 483, 484, 506
Value . 331, 332, 346, 353, 362, 382, 420
viewing window . 313, 343, 351, 359, 379
web plots 357, 363, 364
window variables 313, 343, 351, 359, ... 379
Y= editor 86, 89, 305, 343, 349, 356, 377, ... 412, 471
Zero 331, 333
zoom . 325, 345, 353, 362, 381, 628
zoom factors 326, 328
zoom Memory 326, 329
greater than or equal, ≥, >= 604, 907
greater than, > 604, 907
greatest common divisor, gcd( ) 824
Greek characters 10, 657, 658
Grid graph format 316

H

Hand modifier key ([hand])
status 38
Hardware version 234
hexadecimal
display, ▸Hex 681, 830
indicator, 0h 914
hidden surface 104, 384, 395
highlighting
characters when editing 13
to view full name of App 6

Downloaded from www.Manualslib.com manuals search engine

highlighting text 652
Histogram 557
History area
    status 39
history area 207, 208, 664
History indicator 27
Home icon 24
Home screen 205
Home screen. *See* calculator home screen
hyperbolic
    arccosine $\cosh^{-1}$( ) 798
    arcsine, $\sinh^{-1}$( ) 878
    arctangent, $\tanh^{-1}$( ) 889
    cosecant, csch( ) 800
    cosine, cosh( ) 798
    cotangent, coth( ) 799
    secant, sech( ) 869
    sine, sinh( ) 878
    tangent, tanh( ) 888

I

ID list 736, 738
ID number . 233, 731, 732, 733, 736, 738
identity matrix, identity( ) 831
identity( ), identity matrix 831
If, if 831
if, If 478, 582, 606, 607
imag( ), imaginary part 831
ImpDif 832
implicit derivatives 79
implicit plots 404, 407, 947
implied multiplication 160, 350
Independent AUTO/ASK, independent
    auto/ask 459, 464
independent auto/ask, Independent
    AUTO/ASK 457, 459, 464
indirection, # 602, 909, 944
inequalities 78
infinity, ∞ 277
Inflection (graph math tool) 331, 335
initial conditions 421
initial startup 5
input string, InputSt . . 601, 619, 728, 832
Input, input 832
input, Input 619, 628
InputSt, input string . . 601, 619, 728, 832
insert mode (2nd [INS]) 16
inString( ), within string 602, 833
instructions 159
    calculator Home screen 24
    Catalog 21
insufficient display memory, <<...>> . 229
int( ), integer 833
intDiv( ), integer divide 683, 833
integer divide, intDiv( ) 683
integer part, iPart( ) 99, 833
integer, int( ) 833
integrate, ∫( ) 80, 240, 242, 243, 247, 266,
    . . . . . 267, 908
international/accented characters 10
Intersection (graph math tool) . . 331, 333
inverse cosecant, $\csc^{-1}$( ) 800

Downloaded from www.Manualslib.com manuals search engine

inverse cotangent, $cot^{-1}( )$ 799
inverse hyperbolic
cosecant, $csch^{-1}( )$ 800
cotangent, $coth^{-1}( )$ 799
secant, $sech^{-1}( )$ 869
inverse, x^{-1} 912
iPart( ), integer part 833
isArchiv() 833
isArchiv(), is archived 694
isClkOn( ), is clock on 833
isLocked 834
isLocked(), is locked 694
isPrime( ), prime test 834
isVar( ) 834
isVAR(), is variable 694
Item, menu item 622, 624, 834

K

key commands
keyboard map 12
special characters 10
keyboard 148
2nd (second) key 150
⇧ (shift) key 150
◆ (diamond) key 150
alpha (alpha) key 150
key codes 619
map 10, 11, 656, 657
shortcuts 656, 657
keys
function 14
modifier 13

L

label, Lbl 593, 609, 616
Labels graph format 316
Language mode 189, 926
language mode
changing mode setting 19
viewing 18
last answer 153, 164, 217, 220
last entry 153, 217, 218
Lbl, label 834
lcm, least common multiple 835
Leading Cursor graph format 316
least common multiple, lcm 835
left( ), left 835
left, left( ) 257, 602
left-right split screen
setting 59
setting initial Apps 61
status 36
less than or equal, ≠, ... 907
less than or equal, ≤, <= 604
less than, < 604, 906
lighter/darker 147
limit( ), limit 835
limit, limit( ) 247, 266, 268
Line, draw line 631, 836
linear regression, LinReg . 547, 837, 945
LineHorz, draw horizontal line . . 632, 836
LineTan, draw tangent line 632, 837

Downloaded from www.Manualslib.com manuals search engine

LineVert, draw vertical line 632, 837
Link transmission table 740
linking and transmitting 869, 870
calculator to calculator 633, 716, 718, . . . 719, 721, 727, 728, 730, 731
cancelling 724
errors 724, 734, 735
Flash applications . . .719, 720, 721, 726, ... 727
folders 719, 720, 722, 723, 724
get/return CBL/CBR value, Get .568, 634
get/return CBL2/CBR value, Get 825
program 633, 727, 728
send chat, SendChat 727, 728
send list variable, Send . . . 635, 869
send to calculator, SendCalc . . .634, 727, ... 728
variables . . . 719, 720, 721, 722, 723
LinReg, linear regression . 547, 837, 945
list difference, Δlist( ) 838
list to matrix, list▸mat( ) 838
list▸mat( ), list to matrix 532, 838
lists
augment/concatenate, augment( ) . . 790
cross product, crossP( ) 799
cumulative sum, cumSum( ) 803
difference, Δlist( ) 838
dot product, dotP( ) 813
expression to list, exp▸list( ) 818
list to matrix, list▸mat( ) 838
matrix to list, mat▸list( ) 843
maximum, max( ) 843
mid-string, mid( ) 844
minimum, min( ) 845
new data, NewData 597, 846
new, newList( ) 847
operations 782
product, product( ) 856
sort ascending, SortA 882
sort descending, SortD 882
summation, sum( ) 866, 885
table variables 466
variables 516
ln( ), natural logarithm 838
LnReg, logarithmic regression . 547, 839, 946
local variable, Local . .589, 594, 596, 597
Local, local variable 839
lock variable, Lock 597
Lock, lock variable 839
locked/archived variable status 39
log to any base 81
log( ), logarithm 840
logarithm, log( ) 840
logarithmic regression, LnReg . 547, 839, 946
logarithms 838, 840
logistic regression, Logistic 547, 946
Logistic, logistic regression 547, 841, 946
Loop, loop 841

Downloaded from www.Manualslib.com manuals search engine

loop, Loop 614
LU, matrix lower-upper decomposition . . 842

M

mat▸data( ) 842
mat▸list( ), matrix to list 843
math category 31
MATH menu 331
MATH menu (2nd [MATH]) 49
math operations 24, 783
matrices
augment/concatenate, augment( ) . . 747, ... 790
column dimension, colDim( ) . . . 794
column norm, colNorm( ) 794
copying 537
cumulative sum, cumSum( ) 803
data from a graph 469
determinant, det( ) 810
diagonal, diag( ) 811
dimension, dim( ) 811
dot addition, .+ 904
dot division, ./ 905
dot multiplication, .(. 905
dot power, .^ 905
dot subtraction, .– 904
eigenvalue, eigVl( ) 816
eigenvector, eigVc( ) 816
filling, Fill 821
identity, identity( ) 831
list to matrix, list▸mat( ) 838
locking 530
lower-upper decomposition, LU . 842
matrix to list, mat▸list( ) 843
maximum, max( ) 843
minimum, min( ) 845
new data, NewData 597, 846
new, newMat( ) 847
operations 783
pretty print 519
product, product( ) 856
QR factorization, QR 860
random, randMat( ) 747, 863
reduced row echelon form, rref( ) . . . 262, ... 868
row addition, rowAdd( ) 867
row dimension, rowDim( ) 867
row echelon form, ref( ) 864
row multiplication and addition, mRowAdd( ) 845
row norm, rowNorm( ) 867
row operation, mRow( ) 845
row swap, rowSwap( ) 868
submatrix, subMat( ) 885
summation, sum( ) 866, 885
transpose, T 886
matrix to list, mat▸list( ) 843
max( ), maximum 843
Maximum (graph math tool) . . . 331, 333
mean( ), mean 843
measurement

Downloaded from www.Manualslib.com manuals search engine

conversions (2nd [▶]) 16
median( ), median 843
medium-medium line regression, MedMed 547, 844, 946
MedMed, medium-medium line regression 547, 844, 946
memory
archiving, Archive 596, 708, 709, 789
checking 689, 690
insufficient display memory, <<...>> . 229
resetting 689, 690
unarchive, Unarchiv . .597, 708, 709, 893
VARLINK screen 691, 693, 694, 695, . . . 696, 698, 699, 700, 701, 708
MEMORY (2nd [MEM]) 17
Memory (zoom) 326, 329
Memory error 713
menu item, Item 622, 624, 834
Menus
APPLICATIONS (APPS) 50, 58
menus 175
Algebra 255, 258
APPLICATIONS 181
Calc 265
canceling 55
CATALOG 191
CHAR 10, 17, 49
Clean Up 189
Complex 257
CUSTOM 230
custom 623, 626
CUSTOM (2nd [CUSTOM]) . . 16, 55, 56
Extract 257
FLASH APPLICATIONS (◆ APPS) . 16, ... 50, 59
MATH 331
options 13
selecting options 50
submenu options 52
toolbar 175, 230
Trig 257
using 175
messages
BATT 204, 949, 952
false 275
Garbage collection . . 709, 710, 711, 712, ... 713
insufficient display memory, <<...>> . 229
true 275
undef (undefined) 278
messages See also errors and troubleshooting
mid( ), mid-string 844
mid-string, mid( ) 602
min( ), minimum 845
Minimum (graph math tool) . 87, 331, 333
minute notation, ' 911
mod( ), modulo 845
modes 185

Downloaded from www.Manualslib.com manuals search engine

3D (three-dimensional) 38
Angle 18, 38, 187, 305, 923
APPROX 38
Approximate 166, 188, 203, 925
Apps desktop 18
AUTO 38
Auto 166, 188, 203, 242, 925
Base 18, 188, 926
Complex Format 188, 923
complex format 18
current 18
Current folder 187, 922
Custom Units 926
custom units 18
DE (differential equation) 38
DEG (degree) 38
Display Digits 169, 187, 922
display digits 18
EXACT 38
Exact/Approx . . 166, 188, 203, 240, 241, ... 242, 925
exact/approx 18
Exponential Format . . 170, 188, 923
exponential format 18
fullscreen 17, 31, 37, 61, 64
FUNC (function) 38
get/return, getMode( ) 617, 827
GRAD (gradian) 38
Graph 187, 203, 304, 342, 349, 356, 377, ... 412
graph 18
Graph 2 . . . . . 188, 925
graph number 38
graph type 38
grayed out 18
insert (2nd [INS]) 16
Language 189, 926
language 18, 19
Number of Graphs 188, 925
overwrite (2nd [INS]) 16
PAR (parametric) 38
POL (polar) 38
Pretty Print 18, 166, 188, 924
RAD (radian) 38
SEQ (sequence) 38
setting in programs 616
setting, setMode( ) . . . 617, 628, 872
settings 17
Split App 188, 925
Split Screen 188, 924
split screen 6, 18, 31, 36, 38, 59, 61, 62, ... 64
Unit System 189, 926
unit system 18
Vector Format 188, 924
vector format 18
modifier keys (2nd ♦ ⬆ ⬅) 13
status 38
move variable, MoveVar 597
MoveVar, move variable 845
mRow( ), matrix row operation 845

Downloaded from www.Manualslib.com manuals search engine

mRowAdd( ), matrix row multiplication and addition 845
multiply, * 903
multistatement functions 477

N

natural log base, e 277
natural logarithm, ln( ) 838
ncontour window variable 379
nCr( ), combinations 846
ncurves window variable 417
nDeriv( ), numeric derivative . . . 266, 846
negate, - 156, 905
negation key ([_]) 14
negative numbers 14
new
  data, NewData 569, 597, 846
  folder, NewFold 597, 847
  list, newList( ) 847
  matrix, newMat( ) 847
  picture, NewPic 597, 629, 847
  plot, NewPlot 556, 628, 848
  problem, NewProb 190, 848
NewData, new data 518, 531, 569, 597, 846
NewFold, new folder 597, 847
newList( ), new list 847
newMat( ), new matrix 847
NewPic, new picture 597, 629, 847
NewPlot, new plot 556, 628, 847
NewProb, new problem 190, 848
nInt( ), numeric integral 266, 848
nmax window variable 359
nmin window variable 359
norm( ), Frobenius norm 849
not (Boolean), not 684, 849
not equal, ≠, /= 604, 906
not, Boolean not 605, 684, 849
nPr( ), permutations 849
nSolve( ), numeric solution 256, 850
number bases 680
  Boolean operations 684
  conversions 681
  math operations 682
Number of Graphs mode 188, 925
numbers
  irrational 240, 241
  negative 156
  rational 240, 241, 242
numeric
  derivative, nDeriv( ) 266, 846
  integral, nInt( ) 266, 848
  solution, nSolve( ) 256, 850
numeric keypad 14
numeric solver 666, 670, 674, 675
  equations 666, 668, 669
  graphing 675, 676, 677, 678
  split screens 676, 678
  variables 670, 674

O

on/off 145

Downloaded from www.Manualslib.com manuals search engine

OneVar, one-variable statistic 850
operating system 733, 734, 735
operating system (OS)
downloading 69
Operating System (OS) version 234
operating system, upgrading . . 731, 732, 733
operators 159
or (Boolean), or 685
or, Boolean or 605, 685, 851
ord( ), numeric character code . 602, 851
Organizr (organizer) category 32
OS 731, 732, 733
OS (Operating System) version 234
Out-of-memory error 273
Output, output 851
output, Output 620, 627
overwrite mode (2nd [INS]) 16

P

P▸Rx( ), rectangular x coordinate . . . 852
P▸Ry( ), rectangular y coordinate . . . 852
panning 323
PAR (parametric) mode 38
parallelepiped activity 750
parametric graphing 347
parentheses, brackets, and braces . 160, 943
part( ), part 852
pass error, PassErr 636
PassErr, pass error 854
paste 212, 653
PAUSE 39
PAUSE indicator 204
Pause, pause 854
pause, Pause 620, 636
percent, % 905
permutations, nPr( ) 849
pictures 497, 499
and, AndPic 628, 787
cycle, CyclePic 629, 804
deleting 500
exclusive or, XorPic 629, 896
new, NewPic 597, 629, 847
recall, RclPic 629, 863
replace, RplcPic 629, 868
storing, StoPic 629, 884
piecewise functions 475
pixel
change, PxlChg 631, 858
circle, PxlCrcl 631, 858
horizontal line, PxlHorz 632, 858
line, PxlLine 496, 631, 859
off, PxlOff 631, 859
on, PxlOn 496, 631, 859
test, pxlTest( ) 631, 859
text, PxlText 631, 859
vertical line, PxlVert 632, 860
plots
clearing 554
data 119
new, NewPlot 556, 628, 848

Downloaded from www.Manualslib.com manuals search engine

off, PlotsOff 311, 628, 855
on, PlotsOn 311, 628, 855
selecting 553, 560
tracing 562
viewing window 561
Y= Editor 559
PlotsOff, plots off 311, 855
PlotsOn, plots on 311, 855
plotStep window variable 359
plotStrt window variable 359
point
change, PtChg 631, 857
off, PtOff 631, 857
on, PtOn 631, 858
test, ptTest( ) 631, 858
text, PtText 631, 858
POL (polar) mode 38
polar
coordinate, R▸Pθ( ) 862
coordinate, R▸Pr( ) 862
graphing 340
vector display, ▸Polar 855
polyEval( ), evaluate polynomial 855
polynomials 259, 267
activity 766
evaluate, polyEval( ) 855
random, randPoly( ) 863
popup menu, PopUp 619
PopUp, popup menu 619, 856
power of ten, 10^( ) 912
power regression, PowerReg . 547, 856, 946
power, ^ 904, 944
PowerReg, power regression . 547, 856, 946
pretty print 87, 166, 206
Pretty Print mode 18, 166, 188, 924
Prgm, execute program . . . 128, 591, 856
prime number test, isPrime( ) 834
prime numbers 75
prime, ' 911
problems (new), NewProb 190, 848
product ID 233
Product ID (identifier) 234
product( ), product 856
product, Π( ) 266, 909
Program Editor 29
programs and programming 21, 572–644
arguments 584
assembly language 641, 644
branching 582, 606, 609
calling another program 591
CBL 633
CBL 2 system 761
CBR 633
CBR system 761
clear error, ClrErr 636, 793
clear graph, ClrGraph . 475, 627, 794
clear home, ClrHome 794
clear I/O, ClrIO 575, 620, 794
clear table, ClrTable 794

Downloaded from www.Manualslib.com manuals search engine

comment, ◕ 581, 913
conditional tests 603
copying 579
custom toolbar off, CustmOff . . . 230, 621, ... 803
custom toolbar on, CustmOn . . . 230, 621, ... 803
debugging 636
define dialog box Dialog . . . 621, 811
define toolbar, Custom 621, 803
define toolbar, Toolbar 621, 892
define, Define . . . 591, 627, 742, 808
deleting 579
display graph, DispG . 620, 627, 812
display Home screen, DispHome . . . 620, ... 812
display I/O screen, Disp . . . 130, 582, 620, ... 636, 812
display table, DispTbl . 620, 627, 812
drop-down menu, DropDown . . . 622, 814
else if, ElseIf 478, 607, 816
else, Else 607, 831
end custom, EndCustm . . . 621, 803
end dialog, EndDlog 621, 811
end for, EndFor 582, 611, 823
end function, EndFunc 587, 824
end if, EndIf 582, 606, 607, 831
end loop, EndLoop 614, 841
end program, EndPrgm 128, 591, 856
end toolbar, EndTBar 621, 892
end try, EndTry 636, 892
end while, EndWhile 613, 895
entering 576, 579
execute assembly language, Exec . . 644, ... 818
execute program, Prgm . . 128, 591, 856
exit, Exit 818
for, For 582, 611, 823
format string, format( ) 620, 627, 823
function, Func 587, 824
functions 576, 585, 587
get/return configuration, getConfg( ) . 617, ... 825
get/return folder, getFold( ) . 617, 826
get/return from calculator, GetCalc . . 634, ... 727, 728, 825
get/return key, getKey( ) . . . 619, 826
get/return key, getKey(†) . . 929, 931
get/return mode, getMode( ) 617, 827
get/return units, getUnits( ) 829
go to, Goto 593, 609, 616, 829
graphs 627
if, If 478, 582, 606, 607, 831
input 574, 582, 619
input, Input 619, 628, 832
label, Lbl 593, 609, 616, 834
local, Local . 589, 594, 596, 597, 839
loop, Loop 614, 841
looping 582, 611, 613
menu item, Item 622, 624, 834

Downloaded from www.Manualslib.com manuals search engine

menus 622, 626
multicommand lines 580
operations 784
output 574, 582, 620
output, Output 620, 627, 851
pass error, PassErr 636, 854
passing values 584
pause, Pause 620, 636, 854
popup menu, PopUp 619, 856
prompt, Prompt( ) 619, 857
request, Request 620, 622, 865
return, Return 589, 592, 865
running 572
stop, Stop 579, 884
stopping 573
subroutines 591
tables 627
text, Text 621, 622, 890
Then, Then 606, 607, 831
title, Title 622, 890
try, Try 636, 892
variables 593
while, While 613, 895
Prompt( ), prompt 619, 857
prompt, Prompt( ) 619
proper fraction, propFrac . 256, 264, 755
propFrac, proper fraction .256, 264, 755, 857
PtChg, point change 631, 857
PtOff, point off 631, 857
PtOn, point on 631, 858
ptTest( ), point test 631, 858
PtText, point text 631, 858
PxlChg, pixel change 631, 858
PxlCrcl, pixel circle 631, 858
PxlHorz, pixel horizontal line . . . 632, 858
PxlLine, pixel line 496, 631, 859
PxlOff, pixel off 631, 859
PxlOn, pixel on 496, 631, 859
pxlTest( ), pixel test 631, 859
PxlText, pixel text 631, 859
PxlVert, pixel vertical line 632, 860

Q

QR factorization, QR 860
QR, QR factorization 860
quadratic regression, QuadReg 547, 861, 946
QuadReg, quadratic regression 547, 861, 946
quartic regression, QuartReg . 548, 861, 946
QuartReg, quartic regression . 548, 861, 946
QuickCenter 324
Quit ([2nd] [QUIT]) 17

R

r, radian 910
R▸Pθ( ), polar coordinate 862
R▸Pr( ), polar coordinate 862
RAD (radian) mode 38

Downloaded from www.Manualslib.com manuals search engine

radian, r 910
rand( ), random number 862
randMat( ), random matrix 747, 863
randNorm( ), random norm 863
random
matrix, randMat( ) 747, 863
norm, randNorm( ) 863
number seed, RandSeed . . 747, 863
number, rand( ) 862
polynomial, randPoly( ) 863
randPoly( ), random polynomial 863
RandSeed, random number seed . . 747, 863
rational functions activity 755
RclGDB, recall graph database 505, 629, 863
RclPic, recall picture 629, 863
real( ), real 863
recall
graph database, RclGDB . . 505, 629, 863
picture, RclPic 629, 863
Recall (2nd [RCL]) 17
reciprocal, x^{-1} 912
rectangular x coordinate, P▶Rx( ) . . . 852
rectangular y coordinate, P▶Ry( ) . . . 852
rectangular-vector display, ▶Rect . . . 864
reduced row echelon form, rref( ) . . . 262, 747
ref( ), row echelon form 864
regressions 837
cubic, CubicReg 546, 802, 945
exponential, ExpReg . . 546, 820, 945
formulas 945, 947
linear regression, LinReg . 547, 837, 945
logarithmic, LnReg . . . 547, 839, 946
logistic, Logistic 547, 841, 946
medium-medium line, MedMed . 547, 844, ... 946
power regression, PowerReg . . 547, 856, ... 946
quadratic formula activity 743
quadratic, QuadReg . . 547, 861, 946
quartic, QuartReg 548, 861, 946
selecting 546
sinusoidal, SinReg . . . 548, 879, 946
remain( ), remainder 865
Rename, rename 865
rename, Rename 597
replace picture, RplcPic 629, 868
Request, request 865
request, Request 620, 622
reserved names 943
results 24
return *See* get/return
Return, return 865
return, Return 478, 589, 592
right( ), right 866
right, right( ) 257, 603
root 866
roots 75

Downloaded from www.Manualslib.com manuals search engine

rotate( ), rotate 686, 866
rotate, rotate( ) 603, 686
round( ), round 867
row echelon form, ref( ) 864
rowAdd( ), matrix row addition 867
rowDim( ), matrix row dimension . . . 867
rowNorm( ), matrix row norm 867
rowSwap( ), matrix row swap 868
RplcPic, replace picture 629, 868
rref( ), reduced row echelon form . . . 262, 747, ... 868
Runge-Kutta method 414, 435, 948

S

sampling activity 775
SAVE COPY AS (◆ S)
example 54
Scatter plots 555
scientific notation 15, 157
scripts 210, 661, 664
activity 752
tutorial 752
scrolling 26, 228, 463
sec( ), secant 868
sec^{-1}( ), inverse secant 869
secant, sec( ), ... 868
sech( ), hyperbolic secant 869
$sech^{-1}$( ),inverse hyperbolic secant . . 869
Second modifier key (2nd)
description 13
status 38
second notation, ... 911
selecting categories 31
send chat, SendChat 727, 728, 870
send list variable, Send 635, 869
send to calculator, SendCalc . . 634, 727, 728, ... 869
Send, send list variable 635, 869
SendCalc, send to calculator . . 634, 727, 728, ... 869
SendChat, send chat 727, 728, 870
SEQ (sequence) mode 38
seq( ), sequence 870
sequence graphing 354–374
serial number 233
set
folder, setFold( ) 617, 871
graph, setGraph( ) 617, 628
mode, setMode( ) 617, 628
table, setTable( ) 459, 617
units, setUnits( ) 617
Set factors (zoom) 326, 328
setDate( ), set date 870
setDtFmt( ), set date format 870
setFold( ), set folder 617, 871
setGraph( ), set graph 617, 628, 871
setMode( ), set mode 617, 628, 872
setTable( ), set table 459, 617, 873
setTime( ), set time 873
setTmFmt( ), set time format 873
setTmZn( ), set time zone 874
setUnits( ), set units 617, 874

Downloaded from www.Manualslib.com manuals search engine

Shade (graph math tool) 332, 337
Shade, shade 632, 875
shade, Shade 632
Shift modifier key ([⇧])
description 13
status 38
shift( ), shift 533, 603, 687, 875
shift, shift( ) 603, 687
show statistical results, ShowStat . . 548, 876
ShowStat, show statistical results . . 548, 876
sign( ), sign 876
simplification
delayed 247
rules 244
stopping 246
simult( ), simultaneous equations . . . 877
simultaneous equations, simult( ) . . . 262
sin( ), sine 877
$\sin^{-1}$( ), arcsine 878
sinh( ), hyperbolic sine 878
$\sinh^{-1}$( ), hyperbolic arcsine 878
SinReg, sinusoidal regression . 548, 879, 946
sinusoidal regression, SinReg . 548, 879, 946
slope field, SLPFLD 415, 423, 448
SLPFLD, slope field 415, 423, 448
Smart Graph 318
SocialSt (social studies) category 31
software version 233
Solution Method graph format 414
solution, deSolve( ) 266, 444, 809
solve( ), solve 77, 83, 446, 879
solve, solve( ) 77, 83, 240, 242, 243, 247, ... 253, 256, 260, 446
solving linear equations 77, 260
SortA, sort ascending 882
SortD, sort descending 882
special characters 655, 656, 658
spherical vector display, (Sphere . . . 882
Split App mode 188, 925
split screen 482, 485, 663, 676, 678
entry line 512, 514
exiting 509
setting 506
switch, switch( ) 617, 886
switching 512
Split Screen mode 188, 924
split-screen mode
active graph 38
exiting 64
Number of graphs 62
returning from within an App 31
selecting active App 64
setting 59
setting initial Apps 61
specifying Apps displayed 62
Split 1 App 62
Split 2 App 62
status 36

Downloaded from www.Manualslib.com manuals search engine

status and open Apps 6
viewing 18
square root, √( ) 909
standard annuity activity 769
standard deviation, stdDev( ) 883
start timer, startTmr( ) 882
startTmr( ), start timer 882
statistics 540–571
Box Plot 556
Calculation Type 541, 546
categories 565
Category 541, 543
combinations, nCr( ) 846
factorial, ! 74, 907
Freq 541, 543
frequency 563
Histogram plots 557
mean, mean( ) 843
median, median( ) 843
new plot, NewPlot 556, 848
operations 785
overview 540
permutations, nPr( ) 849
plots 551, 553, 554, 558, 560
plots off, PlotsOff 311, 628, 855
plots on, PlotsOn 311, 628, 855
random norm, randNorm( ) 863
random number seed, RandSeed . . 747, ... 863
random number, rand( ) 862
Scatter plots 555
show results, ShowStat 548, 876
standard deviation, stdDev( ) . . . 883
two-variable results, TwoVar . . . 546, 893
variables 548
variance, variance( ) 894
xyline plots 555
statistics. *See also* regressions
status
battery low 71
on Apps desktop 6
split-screen 36
status line 201, 305
command parameters 23
history information 27
stdDev( ), standard deviation 883
stdDevPop 883
StoGDB, store graph database 505, 629, 884
Stop, stop 884
stop, Stop 579
StoPic, store picture 629, 884
stopping a calculation 165
Store (STO▸) key 17
storing
graph database, StoGDB . . 629, 884
picture, StoPic 629, 884
symbol, → 596, 913
string( ), expression to string . . . 603, 884
strings
append, & 602, 908

Downloaded from www.Manualslib.com manuals search engine

character code, ord( ) 602
character string, char( ) . . . 602, 792
dimension, dim( ) 602
expression to string, string( ) . . . 603, 884
format, format( ) . 602, 620, 627, 823
indirection, # 602, 909, 944
inputting, InputSt 601, 619, 728
left, left( ) 602, 835
mid-string, mid( ) 602, 844
operations 600, 602, 785
right, right( ) 603, 866
rotate, rotate( ) 603, 866
shift, shift( ) 603, 875
string to expression, expr( ) 601, 602, ... 620, 819
within, InString 602, 833
Style, style 885
style, Style 313, 628
subMat( ), submatrix 885
submenus 177
substitutions 249, 251, 253
subtract, – 902
subtraction key (⊟) 14
sum( ), summation 866, 885
sum, Σ( ) 266, 909
support and service 965
switch( ), switch 886
switch, switch( ) 617
symbolic manipulation 269
system data, sysData 469, 470
system variables 942, 943

T

ᵀ, transpose 886
t0 window variable 416
TABLE SETUP, table setup 455
Table, build table 887
table-graph, Graph<->Table 456
tables
Δtbl 456
automatic 459
cell width 461, 467
clearing, ClrTable 794
complex numbers 463
differential equations 452
displaying, DispTbl . . . 620, 627, 812
functions 463
generating with sequence 373
graphing, Graph<->Table 456
incrementing, Δtbl 456
Independent AUTO/ASK . . 457, 459, 464
manual 464
overview 454
programs 627
setTable( ) 459
setting, setTable( ) 617, 873
setup 459
setup, TABLE SETUP 455
starting, tblStart 456
tblStart 456

Downloaded from www.Manualslib.com manuals search engine

tan( ), tangent 887
tan^{-1}( ), arctangent 888
Tangent (graph math tool) 331, 336, 346, 353
tangent, tan( ) 887
tanh( ), hyperbolic tangent 888
tanh^{-1}( ), hyperbolic arctangent 889
Taylor polynomial, taylor( ) 266, 269, 889
taylor( ), Taylor polynomial 889
tblStart, table start 456
tCollect( ), trigonometric collection . . 889
temperature conversion, tmpCnv( ) . 286, 891
temperature-range conversion, ΔtmpCnv( ) 286
temperature-range conversion, ΔtmpCnv( ) 891
tExpand( ), trigonometric expansion . 890
text editing 645, 655, 661
cut, copy, paste 212, 653
find 654
highlighting 652
Text, text 890
text, Text 621, 622
Then, Then 606, 607, 831
three-dimensional graphing . . . 375–409
animation 101, 391
CONTOUR LEVELS 104, 395
HIDDEN SURFACE 104, 395
WIRE AND CONTOUR . . . 104, 395
WIRE FRAME 104, 395
TI Connectivity Cable .65, 716, 733, 737
TI ViewScreen overhead panel
connecting 68
TI Connect software 65, 733
time
reset 48
setting 40
time plots, TIME 357, 363, 434, 435
time value of money activity 771
TIME, time plots 357, 434, 435
timeCnv( ), convert time 890
TI-Presenter video adapter
connecting 68
Title, title 890
tmax window variable 351, 416
tmin window variable 351
tmpCnv( ), temperature conversion . 286, 891
toolbar
define, Custom 621, 803
off, CustmOff 230, 803
on, CustmOn 230, 803
Toolbar menus
calculator Home screen 49
moving among 55
replaced by custom menu 56
selecting math operations 14
Toolbar, toolbar 621, 892
top-bottom split screen
setting 59
setting initial Apps 61

Downloaded from www.Manualslib.com manuals search engine

status 36
tplot window variable 417
Trace, trace . . . 751, 761, 763, 766, 892
trace, Trace 321, 628, 751, 761, 763, 766
tracing 87, 321, 324, 346, 353, 362, 381, 420
transmitting. See linking and transmitting
transpose, T 886
Trig menu 257
trigonometric
collection, tCollect( ) 257
expansion, tExpand( ) 257
trigonometric collection, tCollect( ) . . 889
trigonometric expansion, tExpand( ) . 890
true message 275
Try, try 892
try, Try 636
tstep window variable 351, 416
turning clock off, ClockOff 793
turning clock on, ClockOn 793
turning off 7
after APD 8
following inactivity 8
turning on
initial startup 5
TwoVar, two-variable results 546
two-variable results, TwoVar . . 546, 893
typing
file name 29
to scroll through Catalog 22

U

Unarchiv, unarchive variables . 597, 708, 709, ... 893
unarchive variables, Unarchiv . 597, 708, 709, ... 893
undef (undefined) message 278
underscore, _ 911
Unit ID (identifier) 234
Unit System mode 189, 926
unit System mode 18
unit vector, unitV( ) 893
units
converting 283
defaults 287, 293
displaying 287
get/return, getUnits( ) 829
measurement 279
modes 189, 926
setting, setUnits( ) 617, 874
user-defined 290
unit-to-unit cable 70
connecting 68
unitV( ), unit vector 893
Unlock, unlock 893
unlock, Unlock 597
upgrading operating system (OS) . . 731, 732, ... 733
user-defined functions . . . 196, 223, 271, 378, ... 475, 477, 585, 587, 808
user-defined units 290

Downloaded from www.Manualslib.com manuals search engine

V

Value (graph math tool) . .331, 332, 353, 382, ... 420
variables 39, 197, 199
archiving and unarchiving . 707, 708
archiving, Archive 596, 708, 709, 789
clearing 679
copy, CopyVar 596, 703, 796
copying 703
data 517
defined 235, 671
delayed simplification 247
delete, DelVar . 238, 270, 596, 600, 809
deleting 724
DelType 705
in applications 705, 706
local, Local . 589, 594, 596, 597, 839
locking, Lock 597
locking/unlocking 204, 703
matrix 519
moving, MoveVar 597
overriding 239
pasting name 705, 706
recall 17
referring to App files 28
renaming 700
reserved names 942, 943
statistical 544, 548
store 17
system 942, 943
text 210
transmitting 716, 718, 722, 723
unarchive, Unarchiv . 597, 708, 709, 893
undefined 235, 671
unknown, solving for 670, 674
unlocking, Unlock 597
VARLINK . . 691, 693, 694, 695, 696, 698, ... 699, 700, 701, 708
variance( ), variance 894
Vector Format mode 188, 924
vector format mode 18
vectors 80
cross product, crossP( ) 799
cylindrical vector display, ▸Cylind 804
dot product, dotP( ) 813
unit, unitV( ) 893
Vector Format mode 188, 924
viewing angle 386
viewing orbit 391

W

web plots
convergence 366
divergence 368
oscillation 369
WEB 357, 363, 364
WEB, web plots 357, 363, 364
when( ), when 894
when, when( ) 475
While, while 895

Downloaded from www.Manualslib.com manuals search engine

while, While 613
Window Editor 58
window variables
(x 941
(y 941
diftol 418
dtime 418
Estep 418
eyeϕ (z axis) 378, 387, 389
eyeθ (x axis) 378, 387, 389
eyeψ (rotation) 378, 387, 389
fldres 418
ncontour 379
ncurves 417
nmax 359
nmin 359
plotStep 359
plotStrt 359
θmax 343
θmin 343
θstep 344
t0 416
tmax 351, 416
tplot 417
tstep 351, 416
xgrid 379
xmax . 313, 344, 351, 359, 379, 417, 941
xmin . 313, 344, 351, 359, 379, 417, 941
xres 314
xscl 314, 344, 352, 359, 417
ygrid 379
ymax . 313, 344, 351, 359, 379, 417, 941
ymin . 313, 344, 351, 359, 379, 417, 941
yscl 314, 344, 352, 359, 417
zmax 379
zmin 379
wire-and-contour graphing 104, 395
wire-frame graphing 104, 395
with, | 80, 83, 239, 249, 913, 944
within string, inString( ) 602, 833

X

xgrid window variable 379
xmax window variable . . . 313, 344, 351, 359, ... 379, 417, 941
xmin window variable 313, 344, 351, 359, ... 379, 417, 941
xor, Boolean exclusive or . 605, 685, 895
XorPic, exclusive or picture 629, 896
xres window variable 314
xscl window variable 314, 344, 352, 359, 417, ... 941
xyline plots 555

Y

Y= editor 86, 89, 305, 343, 349, 356, 377, ... 412, 471
ygrid window variable 379

Downloaded from www.Manualslib.com manuals search engine

ymax window variable . . .313, 344, 359, 379, ... 417, 941
ymin window variable 313, 344, 351, 359, ... 379, 417, 941
yscl window variable 314, 344, 352, 359, 417

Z

Zero (graph math tool) 331, 333
zeroes
activity 766
zeroes, zeroes( ) 240, 256, 263
zeroes, zeros( ) 743, 896
zeros( ), zeroes 743, 896
zmax window variable 379
zmin window variable 379
zoom
box, ZoomBox 325, 327, 897
data, ZoomData 326, 898
decimal, ZoomDec 325, 898
factors 326, 328
fit, ZoomFit 326, 899
in, ZoomIn 325, 328, 899
integer, ZoomInt 326, 899
Memory 326, 329
out, ZoomOut 325, 328, 900
previous, ZoomPrev 330, 900
recall, ZoomRcl 330, 900
square, ZoomSqr 325, 900
standard, ZoomStd 326, 901
store, ZoomSto 329, 330, 901
trig, ZoomTrig 326, 901
Zoom menu 325
ZoomBox, zoom box 897
ZoomData, zoom data 898
ZoomDec, zoom decimal 898
ZoomFit, zoom fit 899
ZoomIn, zoom in 899
ZoomInt, zoom integer 899
ZoomOut, zoom out 900
ZoomPrev, zoom previous 900
ZoomRcl, zoom recall 900
ZoomSqr, zoom square 900
ZoomStd, zoom standard 901
ZoomSto, zoom store 901
ZoomTrig, zoom trig 901

Downloaded from www.Manualslib.com manuals search engine